# **EDIFIER**

# **MP100**

Portable Speaker Enceinte Portable

User manual | Mode d'emploi

### Important safety instruction

WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture

- 3. Do not use this apparatus near water.
- 4. Clean only with dry cloth.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- other apparatus (including amplifiers) that produce heat.

  6. Only use attachments/accessories specified by the manufacturer.

  7. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.


  8. The maximum ambient temperature is 40 °C .

There is a built-in rechargeable lithium-ion battery in the speaker. Danger of explosion if the speaker is disassembled. The speaker must not be placed close to excessive heat such as fire or the like.

Correct Disposal of this product. This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please terial resources. To return your used device, please use the return and collection systems or contact the tailer where the product was purchased. They can

take this product for environmental safe recycling.

### Box content

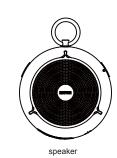


Unpack the box

- - User manual

microUSB connecting cable

### Charge Instructions


### Charge

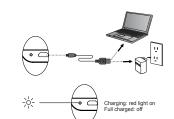

- Connect the speaker to USB power source on a computer or USB connect port (DC5V 1A) with the attached micro USB connecting cable for charging.
- 2. To ensure a full charge and for optimal audio playback, please fully charge the speaker once a
- 3. Please turn off the speaker when in unused.

- 1. You will also hear an indicator tone when the speaker is turned on, connected or disconnected from a Bluetooth device, and when the battery
- 2. Battery playback time (offers up to approximately 20 hours in Bluetooth mode) may vary by music sources and volume settings.
- 3. You will hear a warning indicator tone when the volume in maximum level, please adjust volume to an available level.

### Illustrations

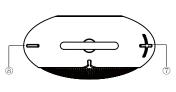

- 1. ON /OFF: press and hold Play/pause: press once
- 2. LED indicator light Orange: microSD card Blue: Bluetooth
- 3. microSD card connector port
- 4. DC IN input
- 5. Charging indicator 6. Microphone
- 7. Volume up: press once
- Next track: press and hold 8. Volume down: press once Previous track: press and hold

### Operational guide

# Bluetooth







- 1. Set your device to search and select "EDIFIER MP100 Connect".
- 2. Pair your device with "EDIFIER MP100 Connect" 3. Play the music on your device and adjust the volume to a desired level.

- 1. Bluetooth connectivity and compatibility may be different between different source devices, depending on the software versions of source
- 2. In Bluetooth mode, "previous/next track" is just effective for supporting AVRCP (Audio/Video Remote Control Profile) protocol device.
- 3. To enjoy the full Bluetooth functions of this product, please ensure your mobile device has AVRCP &A2DP&HFP profile.
- 4. PIN code for connection is "0000" if needed.

### Bluetooth speaker phone






When a phone call comes in while playing music in Bluetooth mode:

- Press () key once to answer the call, again to end
- When you are answering, press and hold <sup>()</sup> key to
- switch conversation to your mobile phone from the speaker

### microSD card mode

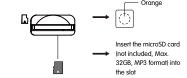

Edifier International Ltd. 16th Floor Tower II

Manual Edition 1.0, Aug. 2015 IB-200-M01000-04

- Lippo Centre Tal: ±852 2522 6080
- Fax: +852 2522 6989 www.edifier-international.com © 2015 Edifier International Limited. All rights reserved. Printed in China

### NOTICE:

For the need of technical improvement and system upgrade, information contained herein may be subject to change from time to time without prior

Products of EDIFIER will be customized for different applications. Pictures and illustrations shown on this manual may be slightly different from actual product. If any difference is found, the actual product precails

Caractéristiques techniques

Réponse en fréquence : 160Hz à 14 KHz (±3dB)

Guide de dépannage

RMS 4.5W

Bluetooth: 600 ± 50mFFS carte microSD/Bluetooth

13/4 pouce (48 mm)

Puissance de sortie :

Rapport signal/bruit :

Type d'entrée :

## Specification

Power output: Signal to noise ratio Frequency response:

Input type:

Speaker units:

RMS 4.5W 160Hz~14KHz (±3dB) Bluetooth: 600 ± 50mFFS microSD card /Bluetooth 13/4inch (48mm)

### Troubleshooting

- Switch the EDIFIER MP100 off then on and reconnect
- to the audio source.
   Ensure Bluetooth function is enabled on your
- Bluetootn devices.

   Move the devices closer and retry the connection.

   Try another Bluetooth device for connection.

   Switch the system off then on and reconnect to the
- Confirm that the system is ON and not in STBY mode.
   Check the master volume and confirm that it is turned
- Check audio source to confirm that it is functioning

# Thank you for purchasing this EDIFIER product. For

warranty information regarding your new purchase please visit www.edifier.com

If you have any further questions or concerns regarding EDIFIER Products anywhere in the world. please visit our website at: www.edifier.com, or email EDIFIER Support for further assistance at:

main@edifier.com.
To contact us by phone: 1-877-EDIFIER (334-3437) in US and Canada; for South America: Please visit www.edifier.com (English) or <a href="https://www.edifierla.com">www.edifierla.com</a> (Spanish/Portuguese) for detailed local contact information

English

### Consignes de securite importantes

AVERTISSEMENT: Afin de diminuer les risques d'incendies ou de chocs électriques, ne pas exposer cet appareil à la pluie ou à l'humidité.

- Conserver ces notices
   Suivre toute s les instructions
   Ne pas utiliser cet appareil à proximité d'eau
   Ne nettoyer qu'ave c un chiffon doux.
   Ne pas installer près de sources de chaleur tels des radiateurs, de bouches d'air chaud, des fours, ou autres appareils (y comp
- 6. N'utiliser que les fixations/accessoires supures par le raunicant.
  7. Confier la réparation à un personnel technique agréé. La réparation est nécessaire lors de tout endommagement de l'appareil, tel les dégâts au cordon d'alimentation ou à la prise, un liquide a été versé ou des objets sont tombés sur l'appareil,
- un injudie à et evise du des objets sont unities sur rapparen, ce dernier a été exposé à la pluie ou l'humidité, ne fonctionne pas normalement ou est tombé.

  8. La température ambiante maximale est de 40 °C.

Nemarque:
Une batterie rechargeable lithium-ion est incorporée dans le haut-parleur. Risque d'explosion si le haut-parleur est démonté.
Le haut-parleur ne doit pas être placé à proximité d'une chaleur excessive tel le feu ou équivalent

Élimination correcte de ce produit. Ce symbole avise qu'en Europe, ce produit ne doit pas être éliminé avec les autres déchets ménagers. Recyclez-le de manière responsable pour promouvoir la réutilisation durable des ressources matérielles et éviter tout risque pour l'environnement ou la santé résultant d'une élimination non contrôlée des déchets. Pour retourner le produit usagé, utilisez les points de retour et de collecte ou contactez le vendeur du produit qui peut prendre en charge ce produit pour un recyclage respectueux de l'environnement.

Français

- ris des amplificateurs) générant de la chaleur. 6. N'utiliser que les fixations/accessoires stipulés par le fabricant.



## Déballage



Contenu du produit

Câble de raccordement microUSB




Français

# Instructions de charge



**Charge** 

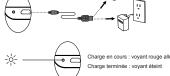



- Branchez le haut-parleur sur la source d'alimentation USB sur un ordinateur ou une prise USB grâce au câble de raccordement micro USB fourni pour la charge.
- Pour assurer une charge complète et une lecture audio optimale, chargez entièrement le haut-parleu rune fois par mois. 3. Éteignez le haut-parleur lorsque vous ne l'utilisez

- Remarque :
  1. L'appareil émet également un son lorsque vous l'éteignez, le connectez ou le déconnectez d'un appareil Bluetooth et lorsque la batterie a une tension faible.
- 3. Vous entendrez un indicateur tonalité d'avertissement lorsque le volume de niveau

maximum, s'il vous plaît régler le volume à un

Français

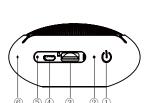

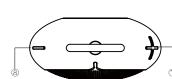

- 2. Témoin DEL Orange: Carte microSD
- 4. Entrée CC (DC IN)
- 7. Volume haut: Appuyez une fois
- 8. Volume bas: Appuyez une fois Piste précédent: Restez appuvé

Français

# Bluetooth







- 1. Sur votre appareil, recherchez et sélectionnez
- Connect".

- Remarque : 1. La connectivité et la compatibilité Bluetooth peuvent differ entre les appareils source, selon la
- en charge le protocole AVRCP (profil de 3. Afi de proflie de toutes les fonctions Bluetooth de
- 4. Le code PIN pour la connexion est "0000" si nécessaire.


## Téléphone et haut-parleur Bluetooth






S'il y a un appel entrant pendant la lecture de musique

- Maintenez la touche (l) enfoncée pour refuser
- Appuyez une fois sur la touche 🔱 pour décrocher. Rappuyez pour raccrocher. Quand vous décrochez, maintenez enfoncé la touché U pour basculer la conversation du
- Mode carte microSD

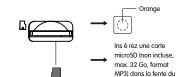

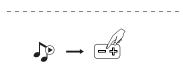

Français

 Assurez-vous que la fonctionnalité Bluetooth soit activée sur votre appareil Bluetooth. appareil Bluetooth.

Approchez votre appareil et ressayez la connexion.

Essayez la connexion avec un autre appareil Bluetooth.

Réallumez le système, puis reconnectez-le à la source audio.

Vérifiez que le système est en marche et non en mode veille.

Vérifiez le volume et assurez-vous qu'il soit activé.

Vérifiez la source audio pour vous assurer qu'elle fonctionne correctement.

• Réglez l'appareil sur EDIFIER MP100, puis reconnectez-le à la source

# Nous yous remercions d'avoir acheté ce produit EDIFIER. Pour plus de

renseignements sur la garantie de votre achat, visitez www.edifier.com Pour toute autre question ou préoccupation concernant les produits EDIFIER partout dans le monde, visitez notre site Web au www.edifier.com ou écrivez-nous par courriel pour recevoir un sou

rechnique a main@ediher.com.

Tontactez-nous par téléphone au 1-877-EDIFIER (334-3437) aux


E-U. et au Canada; pour l'Amérique du Sud : visitez www.edifier.com (en anglais) ou www.edifierla.com (en espagnol et en portugais) pour obtenir des coordonnées locales détaillées.


Français



L'autonomie en lecture de la batterie (jusqu'à 20 heures environ en mode Bluetooth) peut varier selon la source de musique et le réglage du

### Illustrations

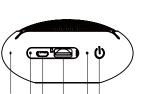

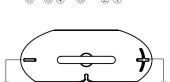

- 1. ON /OFF: Restez appuyé Lecture / pause: Appuyez une fois
- Bleu: Bluetooth 3. Fente pour carte microSD
- 5. Témoin de charge 6. Microphone Piste suivant: Restez appuyé

# Fonctionnement Bluetooth







- "EDIFIER MP100 Connect". 2. Appariez votre appareil avec "EDIFIER MP100
- 3. Lisez la musique sur votre appareil et réglez le volume à votre convenance.
- version du logiciel des appareils source. En mode Bluetooth, "piste précédente/suivante" fonctionne uniquement avec les appareils prenant
- ce produit, vérifiz que votre appareil mobile a le profi AVRCP &A2DP &HFP.

Français

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This device complies with Industry Canada licence-exempt RSS standard(s).

Operation is subject to the following two conditions:

- (1) this device may not cause interference
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables auxappareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre lefonctionnement.