

Cavo di collegamento altoparlanti (2,5M / 8,2ft)

cavo audio da RCA a RCA 1.7M / 5.5ft)

Cavo audio RCA da 3,5mm (1,7M / 5,5ft)

Cavo ingresso fibra ottica (1,5M / 5ft)

2. Muto 8. Ingresso coassiale

3. Abbassare il volume 9. Ingresso Bluetooth

1 ACCENSIONE/SPEGNIMENTO 7. Ingresso ottico

Fare riferimento alla figura per aprire il vano batteria, inserire la

3. Rimuovi le batterie quando non vengono utilizzate per lunghi periodi di tempo.

5. Se la batteria non è sostituita correttamente vi è il pericolo di esplosione. Sostituire

4. La batteria (batteria o batteria o pacco batteria) non deve essere

esposta a calore eccessivo come sole diretto, incendio e simili

esclusivamente con batterie dello stesso tipo o equivalenti.

batteria CR 2025 e chiudere il vano batteria.

1. Non porre il telecomando in luoghi caldi e umidi.


2. Non ricaricare le batterie.


0 10 2


(\$ 4. Aumentare il volume 10. Pausa/riproduzione (solo per Bluetooth)

The state of the s


Solution (300 pc) Bioecount
 Solution (300 pc) Bioecou

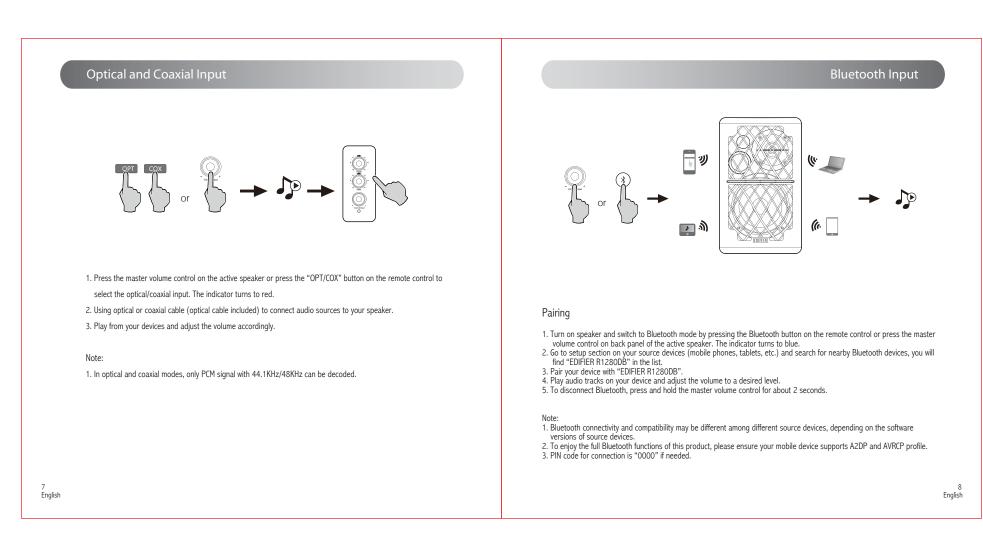


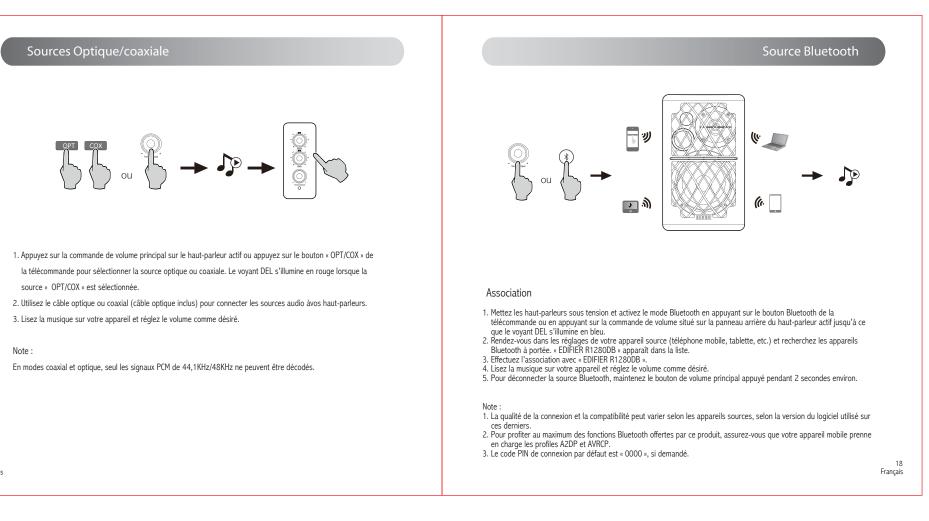

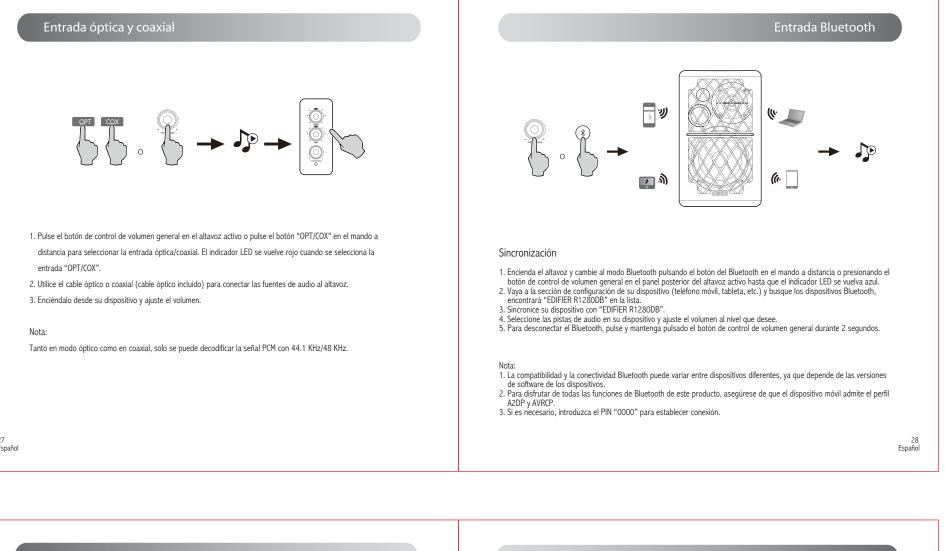



Unidad de bajos:

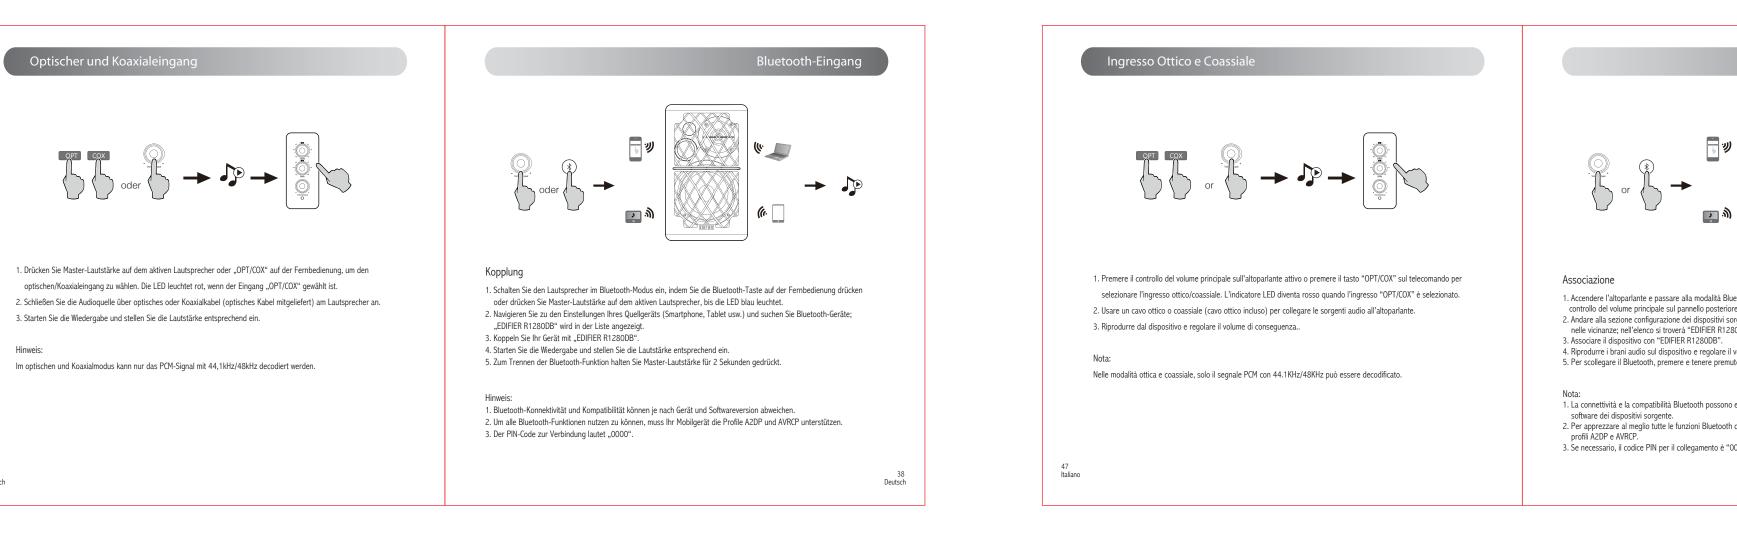


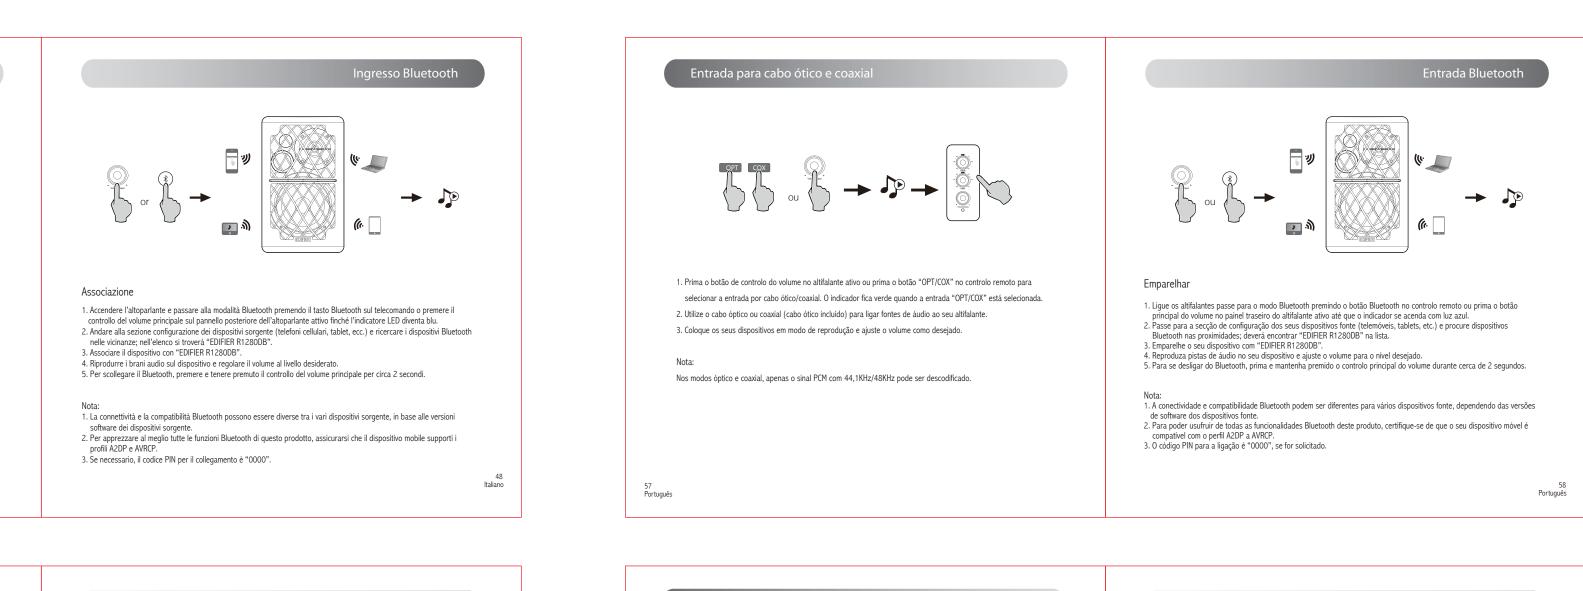



Specifications		Troubleshoot	
Davis satest	L/R: 21W+21W	Problem	Solution
Power output: Signal to noise ratio dB(A):	,	No sound	Check if the power indicator light is ON
110 ФБ(А):	L/R: ≥85dB (A) ≤25dB(A)		<ul> <li>Try to turn up the volume using either the master control or remote control.</li> </ul>
t sensitivity:	LINE IN1: R/L:450±50mV LINE IN2: R/L:550±50mV		Ensure the audio cables are firmly connected and input is set correctly on the speakers.
	OPT/COA R/L: 500±50mFFS		Check if there is signal output from the audio sort
quency response: ss unit: seter unit:	Bluetooth: R/L:700±50mFFS 55Hz-20KHz 4 inch (116mm) Φ13mm silk dome tweeter	Cannot connect via Bluetooth	Make sure the speaker is switched to Bluetooth i other audio input mode Bluetooth can not be pai connected.  Disconnect from any Bluetooth device by press a the volume dial in Bluetooth mode, then try again
			Effective Bluetooth transmission range is 10 mer please make sure operation is within the range.
			Try another Bluetooth device for connection.
		The R1280DB does not turn on	Check if mains power is connected. or if the wall is switched on.
		If you want to find out more about EDI For Edifier warranty queries, please vis section Warranty Terms. USA and Canada: service@edifier.ca	Try another Bluetooth device for connection.  Check if mains power is connected. or if the way.

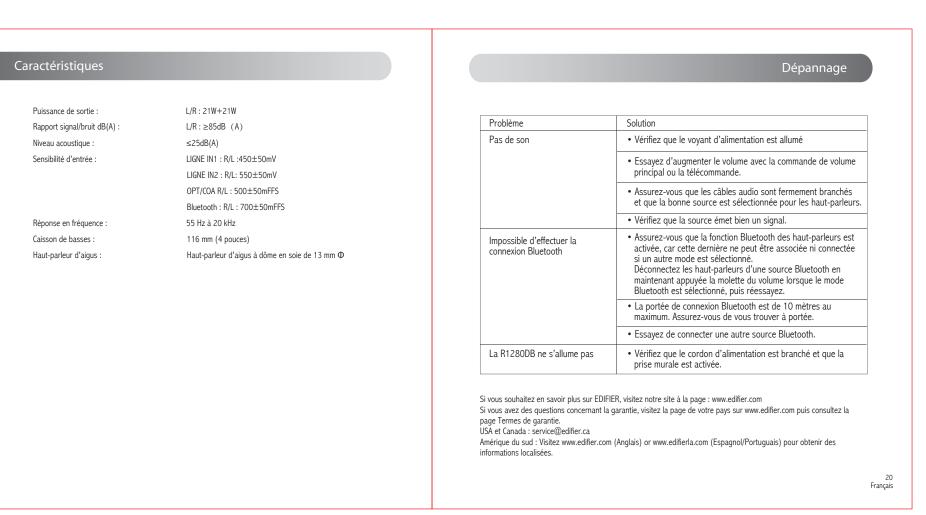

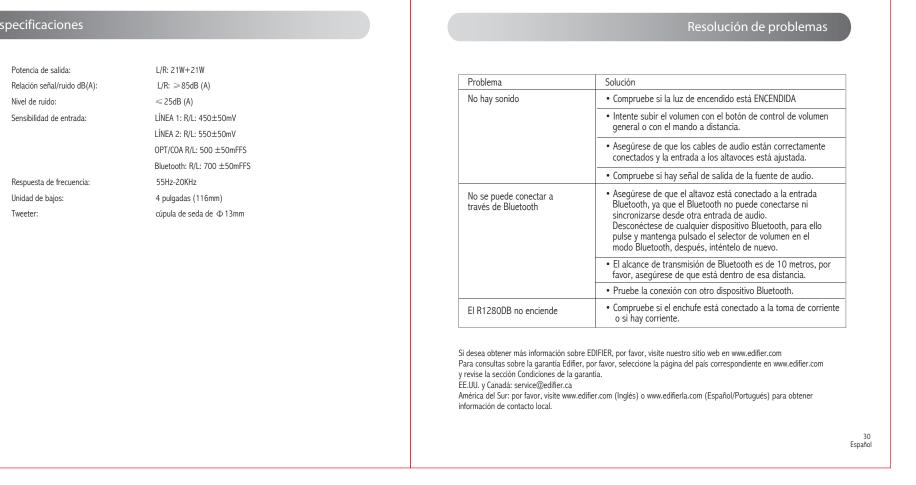

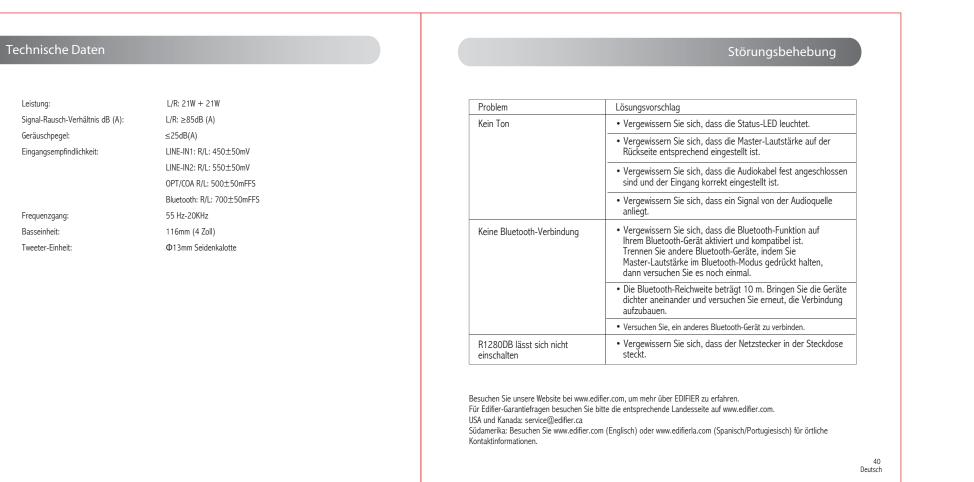

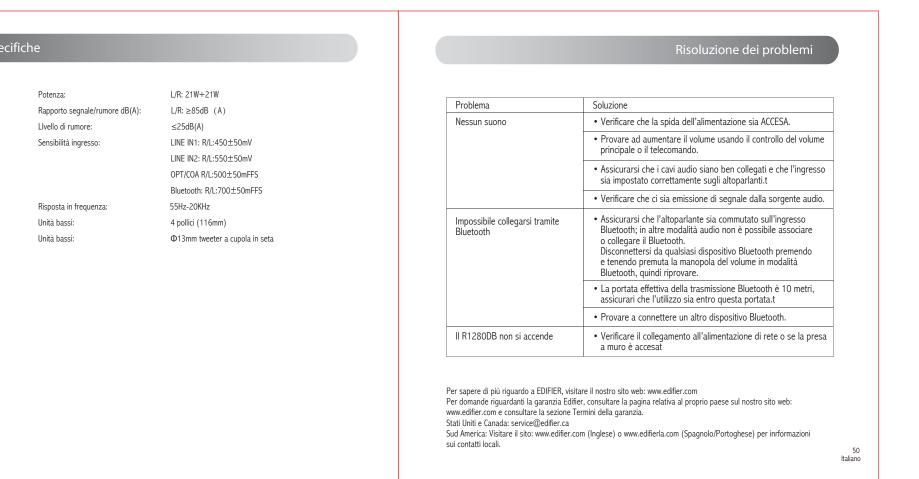

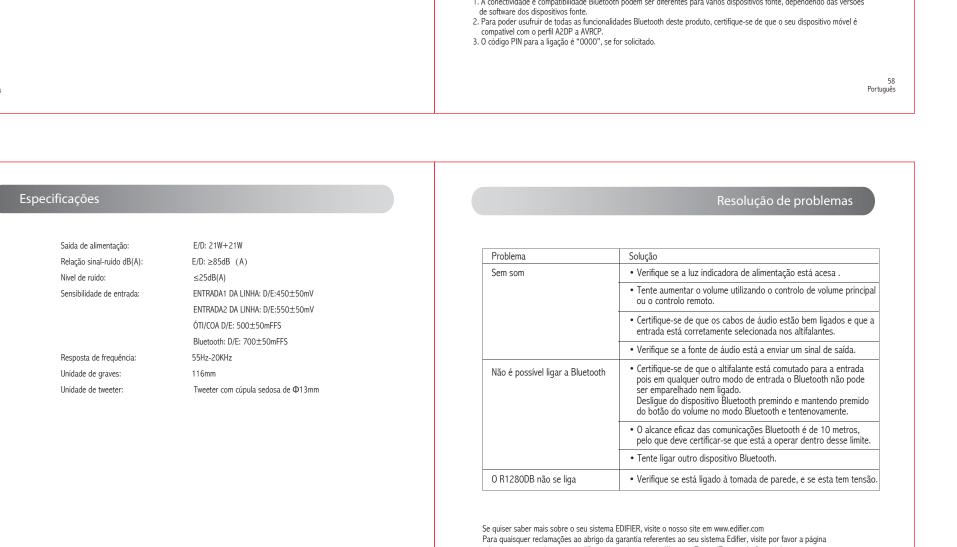

relevante para o país em www.edifier.com e veja a secção Warranty Terms (Termos da Garantia).

informações sobre os contactos locais.

e Canadá: service@edifier.ca rica do Sul: Por favor visite o site www.edifier.com (Inglês) ou www.edifierla.com (Espanhol/Português) para ver

## **EDIFIER**

## FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radiol frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- -Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help.

## IC Caution

- This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:
- (1) This device may not cause interference, and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

This equipment should be installed and operated with a minumum distance of 20 cm between the radiator and your body.

Cet appareil est conforme aux CNR exemptes de licence d'Industrie Canada . Son fonctionnement est soumis aux deux conditions suivantes :

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareildoit accepter tout brouillageradioélectrique subi, mêmesi le brouillage est susceptible d'en compromettre le fonctionnement.

Cet équipement doit être installé et utilisé à une distance minimale de 20 cm entre le radiateur et votre corps.

IB-200-000000-05

名 称:	说明书FCC认证说明		东莞市漫步者科技有限公司
材 质:	80g书纸	版面设计:	
尺 寸:	125×120 (MM)	校 对:	
版本号及料号:	V1. 1/IB-200-000000-05	批 准:	