

Como sostener la Tablet Schok mini:

Pensando en juegos y películas, Schok Mini cuenta con un espacio dedicado para poner los dedos y sostenerla mejor sin interferir con el panel táctil de la Tablet.

Al sostener la Schok mini de una manera comoda y segura, se pueden ver películas por horas o tener el secreto y ventaja en juegos de acción al no crear movimientos falsos al tocar la pantalla por error.



Vista frontal

Schok mini es una Tablet de nueva generación con ocho nucleos de procesamiento y 64 bits de ancho de banda capaz de soportar las aplicaciones más intensas como juegos de acción, hojas de calculo, correos electrónicos, películas, navegar por Internet y gracias a sus dos bocinas de alto rendimineto, la meior experiencia estereofónica.

Nuestro compromiso es que no se necesita gastar cientos de dólares para tener una Tablet confiable, poderoza, fácil de utilizar y con un diseño completamente único. DISFRUTENLA!

Como cargar la batería de la Schok mini:

- 1.- Conectar el cable Micro USB al puerto de carga Micro USB de la tablet.
- 2.- Conectar el cable USB al puerto USB del cargador de pared.
- 3.- Conectar el cargador de pared a la corriente eléctrica.
- 4.- Dejar que la batería sea cargada por completo.

Sugerencia:

Aunque la batería de la Schok mini viene pre-cargada de fábrica, una buena práctica sugiere que antes de que la Tablet sea utilizada por primera vez sea cargada en su totalidad y por lo menos por dos horas continuas.

Como prender la Schok mini:

1.- Oprimir durante tres segundos el botón de "Encendido"

Como apagar la Schok mini:

- 1.- Oprimir durante dos segundos el botón de "Encendido"
- 2.- Se presentarán de manera inmediata dos opciones:

A.- "Apagar"

- B.- "Reiniciar" 3.- Oprima el botón "Apagar"
- 4.- El sistema se apagará por completo en cinco segundos.

Como desbloquear la Schok mini:

Para conservar batería la pantalla se apagará a los 30 segundos y el sistema se bloqueará.

Para desbloquear la pantalla hay que seguir los siguientes pasos:

- 1.- Oprima el botón de "Encendido" por medio segundo. Inmediatamente la Schok mini se despertará y quedará visible la pantalla de bloqueo.
- 2.- Desde el borde inferior central de la pantalla, deslice el dedo tocando primero el candado de seguridad llevándolo hasta la parte superior de la pantalla en un movimiento recto. En ese momento el sistema quedará desbloqueado.

Como bloquear la Tablet Schok mini:

- 1.- Solo oprima el botón de "Encendido" por una fracción de segundo.
- 2.- La Tablet Schok mini entrará de inmediato en modo de bloqueo.

Sugerencia:

Si la Tablet no va a ser utilizada por un tiempo considerable es preferible apagarla por completo. Si sólo se va a dejar de utilizar por algunas horas es recomendable apagar los servicios de "Ubicación, Wi-Fi & Bluetooth, obteniendo como consecuencia un ahorro considerable de batería.

Como conectarse a un acceso inalámbrico de Internet:

La Tablet Schok mini es capaz de conectarse a la gran mayoría de ruteadores y puntos de acceso inalámbricos de 2.4 ghz con el protocolo 802.11 b/g/n. Para lograr esto, hay que hacer los siguientes pasos:

- 1.- Oprima el logotipo de "Configuración" > "Wi-Fi"
- 2.- Active el Wi-Fi.
- 3.- Identifique la red a la que se quiere conectar y escójala.
- 4.- Si la red cuenta con una clave, aparecerá una ventana solicitándole que ingrese la clave de acceso.
- 5.- Introduzca la clave de acceso y oprima el botón que dice "Conectar"
- 6.- El sistema indicara que ya esta conectado.

Sugerencia:

Mientras mas cercano se encuentre al ruteador inalámbrico se obtendrá mayor potencia y velocidad de navegación.

Tanto los hornos de microondas así como los teléfonos inhalámbricos de casa utilizan la frecuencia de 2,4 ghz. Es recomendable que el ruteador inalámbrico no se encuentre cerca de estos dispositivos.

Si no va a utilizar el Wi-Fi de su Schok mini, lo mas recomendable es apagarlos ahorrando energía y obteniendo mayor tiempo de batería.

Como conectar la Schok mini a un monitor externo a través del puerto HDMI

Lo primero que se tiene que hacer es contar con un cable HDMI a mini HDMI (Cable no incluido) Ya con el cable, los siguientes pasos son muy sencillos:

- 1.- Desde su televisor o monitor, seleccione el "input/source" o en su nombre en español "lista de origen" al puerto HDMI que se va a utilizar con la Schok mini.
- 2.- Conecte el cable HDMI al puerto del televisor o monitor que usted escogió. Como ejemplo; HDMI 1.
- 3.- Conecte el lado del cable con el conector "mini HDMI" al puerto "mini HDMI" de la Schok mini.
- 4.- Con la Schok mini y televisor encendido, la imagen de la tablet Schok mini ya debe de estar desplegada en el televisor o monitor.
- Si la imagen no se ve de manera correcta, se puede ajustar el tamaño de la pantalla desde la tablet Schok mini. Para hacer esto:

Ir a "Configuración" > "HDMI" > "Zoom de pantalla" y destice la linea de ajuste hasta que el televisor o monitor despliegue correctamente la imagen o video.

La tablet Schok mini es capaz de desplegar en un monitor externo resoluciones 4K o UHD. Para lograr visualizar video 4K oUHD es necesario contar con un televisor o monitor que contenga esta tecnología.

La tablet Schok mini viene pre-configurada para auto-ajustarse a la resolución del televisor o monitor al que se esta conectando, sin embargo se puede cambiar la resolución de manera manual.

Para hacer esto: Ir a "configuración" > "HDMI" > "resolución HDMI" y se puede escoger la resolución deseada.

ΓIP:

Al momento de visualizar la señal de la tablet al televisor o monitor externo, la Schok mini apagará su pantalla. Sugerimos que antes de visualizar la señal de video en el televisor o monitor se conecte a la tablet un mouse Bluetooth® o con cable USB para poder controlar la tablet.

Para conectar un mouse USB a la tablet Schok mini se necesita contar con un cable USB Tipo "A" femenino a Micro USB. El nombre común de este cable es: "Micro USB OTG cable" (cable no incluido)

Si no hay señal en el televisor existe la posibilidad de que la función "HDMI" este apagada. Para encender esta función, se tiene que ir a "Configuración" > "HDMI" > y revisar que la función este activada.

Si todavía no existe señal, revise de que el "Input/source" o en español "Lista de origen" pre-seleccionado en el televisor o monitor sea el que está conectado al cable HDMI de la tablet Schok mini.

Como accesar a la barra de navegación:

Con ciertas aplicaciones la barra de navegación desaparecerá, para poder accesar de nuevo a esta, lo único que se tiene que hacer es:

Desde el borde inferior central de la pantalla deslizar el dedo hacia arriba, la barra de navegación aparecerá inmediatamente.




La Barra de Navegación:

Para controlar la Schok mini es importante conocer los iconos que se encuentran en la barra de navegación.



Garantia: Todos los productos de Schok son fabricados con la tecnología mas avanzada y con los mejores estándares de calidad para poder ofrecer años de buena operación. Sin embargo, en el supuesto de que la unidad no este trabajando correctamente o tenga algún defecto de fabricación (mano de obra o material), sera reparado o reemplazado (según corresponda) sin costo alguno para el cliente durante los siguientes 12 meses a la fecha de adquisición. Para hacer efectiva la póliza de garantía el usuario debe de presentar esta póliza, el recibo y el producto defectuoso en donde fue adquirido o mandarlo a nuestro centro de acopio. Para enviar el producto a nuestro cento de acopio favor de llamar al teléfono gratuito 1-844-491-2346 o visite nuestra pagina de internet www.schokgear.com/support en donde podrán encontrar las instrucciones completas para envio y recepción del producto. Cualquier garantía, obligación o responsabilidad implícita, incluyendo pero no limitada a la garantía implícita o comerciabilidad y aptitud para una causa en particular, deberá de limitarse a los 12 meses de duración de esta póliza de garantía. Si el producto aun esta bajo el tiempo de garantía, Schok reparará o reemplazará el producto salguno. Si el producto has sido dañado accidentalmente o por no haber seguido las instrucciones de uso en el manual de usuario o por actos de Dios, ha sido adulterado, reparado por un tercero no autorizado o ha sido utilizado de manera errónea esta póliza de garantía, expresa o implícita, Bajo ninguna circunstancia, Schok será responsable por daños especiales, incidentales o como consecuencia del incumplimiento de esta u otra garantía, expresa o implícita,

Glue here Schok Special Edition Card with Serial Number

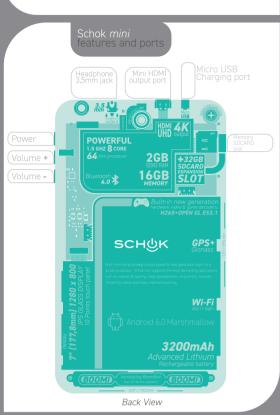

How to hold your Tablet:

Thinking on Games and Movies, Schok Mini has a dedicated space to hold the Tablet without interfering with the touch panel.

Now you can comfortably watch movies for hours or have the edge on vour prefered game.



Front View

Schok mini is a powerful new Tablet built with a new generation eight core, 64 bits processor that supports the most demanding applications such as intense 3D gaming, large spreadsheets, long emails, constant streaming videos and heavy internet browsing.

We dedicated hundreds of hours developing and tuning the very capable Schok mini, our commitment is that you dont need to spend hundreds of dollars to have a reliable, powerful, an easy to use, cool tablet. ENJOY!

How to charge your Schok mini

- 1.- Connect the Micro USB side of the cable to the tablet Micro USB charging port. (The Micro USB side is the smaller tip of the cable
- 2. Connect the USB side of the cable to the wall charger USB port.
- 3.- Connect the Schok mini wall charger to the electric outlet. 4.- Let it fully charge.

Although the Schok mini arrives pre-charged, a good practice dictates that prior to the first time of operation, to let it charge for at least two full hours.

How to Turn it on:

1.- Firmly press and hold the power button for three seconds

How to Turn it off:

- 1.- Firmly press and hold the power button for two seconds.
- 2.- You will be presented with two options
 - a.- To completely turn OFF the system
 - b.- To reboot the system.
- 3.- Click "Power off"
- 4.- System will turn off in approximately five seconds

How to Unlock your Schok mini:

To save battery the display will go off in 30 second and the Tablet will lock itself.

To unlock it you need to follow these easy steps:

1.- Press the power button for half a second. The Schok mini will wake immediately and the lock screen will be visible.

2.- From the center bottom of the screen slide your finger towards the top of the display in a straight line. Now, Have fun!

How to lock your Schok mini:

1.- Your Schok mini will go to sleep and lock itself as soon as you press the power button.

If you are going to put to sleep or lock the screen of your Schok mini for a long time is prefered to turn it OFF. If its for a couple of hours you can save some battery by turning OFF location. WiFi & Bluetooth services.

How to connect to a Wi-Fi access point:

Your Schok mini is able to connect to any wireless router or access point compatible with 2.4ghz 802.11 b/g/n wireless protocols. To do this, you will need to do the following

- 1.- From the Home screen go to "Settings" > "WiFi"
- 2.- Turn ON Wi-Fi.
- 3.- Choose your desired network.
- 4.- If your desired network is password protected, a pop-up screen will appear requesting a password.
- 5 Enter the password and click "Connect"
- 6.- Welcome to the World Wide Web!

The closer to the wireless access point or router the stronger the signal. Be careful with Microwaves ovens and wireless home phones as they can disrupt 2.4ghz wireless signals.

To save the battery of your Schok mini you can turn OFF Wi-Fi.

How to connect an external monitor via HDMI:

Your Schok mini is capable of displaying its video via a monitor connected through its built-in mini HDMI port.

To do this, you need to have a mini HDMI cable to HDMI cable. (Cable not included)

This procedure is simple and straight forward:

- 1.- Change the input or source of your TV to the HDMI port that you are going to use with the Schok mini.
- 2.- Connect the HDMI cable to the TV HDMI port that you decide
- 3.- Connect the mini HDMI connector to the Schok mini, mini HDMI
- 4.- If the image of your Schok mini is not displaying correctly on the external TV or monitor, adjust the size or resolution in the HDMI

For the size of the screen go to "settings" then "HDMI" and then use slider in "Screen Zoom" until the external TV is showing the full image or video.

Depending on the resolution of your external TV or monitor you may need to adjust it via "settings" then "HDMI" then "HDMI resolution".

On an external TV or monitor the Schok mini can display up to 4K UHD signals. To do this, your TV must be capable of displaying this type of technology.

The display of your Schok mini will turn off the moment the external TV or monitor is connected. Due to this fact, we strongly suggest to connect a Bluetooth® mouse or wired mouse. To connect a wired mouse you need to have a female type "A" USB to micro USB cable, the common name of this cable is "Micro USB OTG cable"

If there is no signal to the TV, go to "Settings" > "HDMI" and check that the HDMI feature is "ON"

If there is still no signal, please review that the TV or monitor input corresponds to the HDMI port in which you connect your cable.

The Navigation Bar:

In order to control your Schok mini Tablet you need to understand the icons on the Navigation bar, here we go:



How to bring to screen the Navigation Bar:

On certain applications the navigation bar which is located across the bottom of the screen will dissapear. Bringing it back is very simple.

1.- Slide your finger upwards from the bottom of the screen. The Navigation bar will appear immediately



Glue here Schok Back Cover with phone numbers in the USA and Mexico

Warranty: Schok mini is manufactured with the best quality standards to offer years of trouble-free operation. Nevertheless, In the situation that this unit is r ctly or it is defective in workmanship or materials we will repair or replace it (at our option) free of charge for 12 months from the date of purchase. For easier and faster warranty service, the owner has to present this policy, the original receipt and the defective product to the store or place where it was purchased, if the customer wants to send the defective product to our service and repair center please call our toll free number 1-844-491-2346 or visit our website at www.schokgear.com for detailed instructions. If the product is still in warranty, Schok will be happy to repair or replace the unit free of charge. If the product has been damaged by an accident or failure to follow this instruction manual, acts of God, has been tampered, misused or fixed by any unauthorized personnel, this warranty policy will be void. Any implied warranties, obligations, or liabilities, including but not limited to the implied warranty of merchantability and fitness for a particular purpose, shall be limited in duration to the 24-Mo duration of this written, limited warranty policy. (Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.) In no event shall Schok be liable for any special, incidental, or consequential damages for breach of this or any other warranty, express or implied, whatsoever. (Some state do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the

following measures:
-- Reorient or relocate the receiCving antenna.
-- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

 -- Consult the dealer or an experienced radio/TV technician for help.
- This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End user must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or

transmitter.

The portable device is designed to meet the requirements for exposure to radio waves established by the Federal Communications Commission (USA). These requirements set a SAR limit of 1.6 W/kg averaged over one gram of tissue. The highest SAR value reported under this standard during product certification for use when properly worn on the body