


Enjoy your XFINITY® TV right away!


Program your remote to get started.

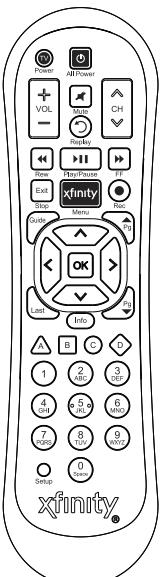

XFINITY XR2
Remote Control
USER'S GUIDE

¡Disfruta de XFINITY® TV ahora mismo!

Programa tu control remoto para comenzar.

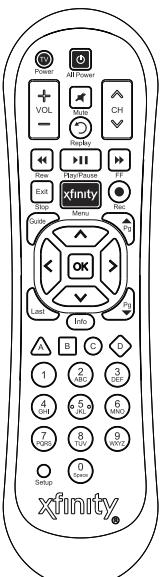

XFINITY XR2
GUÍA DEL USUARIO
para el control remoto

It's simple to program your remote to control your TV.

Your remote control is already programmed to control your digital set-top box or DTA (Digital Transport Adapter). To control your TV functions (**Power**, **VOL+**, **VOL-** and **Mute**), follow the steps below:

HERE'S HOW:

1. Install the batteries.
2. Find the manufacturer's code for your TV (see other side).
3. Turn on your TV and digital set-top box or DTA (Digital Transport Adapter).
4. On your remote, press and hold the **Setup** button for three seconds until the **All Power** button changes from red to green.
5. Enter the first manufacturer's code you found in Step 2. The **All Power** button will flash green twice.
6. Press the **TV Power** button on the remote control. If the TV turns off, you know the code has been accepted. Turn the TV back on and make sure that the **VOL+/-** and **Mute** buttons also work. If so, you're all set!
7. If not, repeat these steps using the next manufacturer's code found in Step 2 (You may need to try several codes to find the one that works for your TV). If you still can't find a code that works, see the "Can't Find Your Code?" section.

CAN'T FIND YOUR CODE?

If you can't program your remote using the codes on the back of this guide, follow the steps below to search for your code.

1. Turn on your TV.
2. On your remote, press and hold the **Setup** button for 3 seconds until the **All Power** button changes from red to green.
3. Enter **9-9-1**. The **All Power** button will flash green, twice.
4. Press the **CH A** button multiple times until the TV turns off.
5. After the TV turns off, press **Setup**.

Helpful Tip: Additional remote control programming support, including code lookup tools and frequently asked questions, can be found at www.xfinity.com/remotes.

Additional Feature: If you would like to place your digital set-top box or DTA out of line of site (for example, in an entertainment center or behind your TV), follow the instructions above to program the remote control for your TV, then refer to the "Installing your digital set-top box or DTA out of sight" instructions on the other side of this instruction sheet.

Digital Transport Adapter Remote Control USER'S GUIDE

SAVE YOUR TV CODE

For future reference, write the valid manufacturer's code for your TV here:



xfinity.com/remotes

Troubleshooting

GENERAL TROUBLESHOOTING

Q: Why does the **All Power** button flash red, but there is no response when I press a key?

A: Make sure the remote is aimed at your TV and is no further than 15 feet away. Also, make sure your digital set-top box or DTA is powered on and in plain sight.

Q: Why does the **All Power** button flash red then green while I am programming my remote?

A: You may have entered the wrong code. Check the code and try programming again.

PAIRED REMOTE TROUBLESHOOTING

Q: When paired, why does the **All Power** button flash green then red when pressing a button on the remote?


A: The device you are paired with may not be powered on or you might be out of communication range. Make sure the device is powered on and move closer to the device. If this does not work, try re-pairing your remote by following the instructions in "Installing your digital set-top box or DTA out of sight."

Q: How can I tell which digital set-top box or DTA my remote control has been paired with?

A: Once paired to a device, the remote will only work with that specific set-top box or DTA. Color-coded stickers have been included in the packaging to make it easier to quickly identify which device is paired with your remote.

Here's what your remote can do.


Esto es lo que tu control remoto puede hacer.

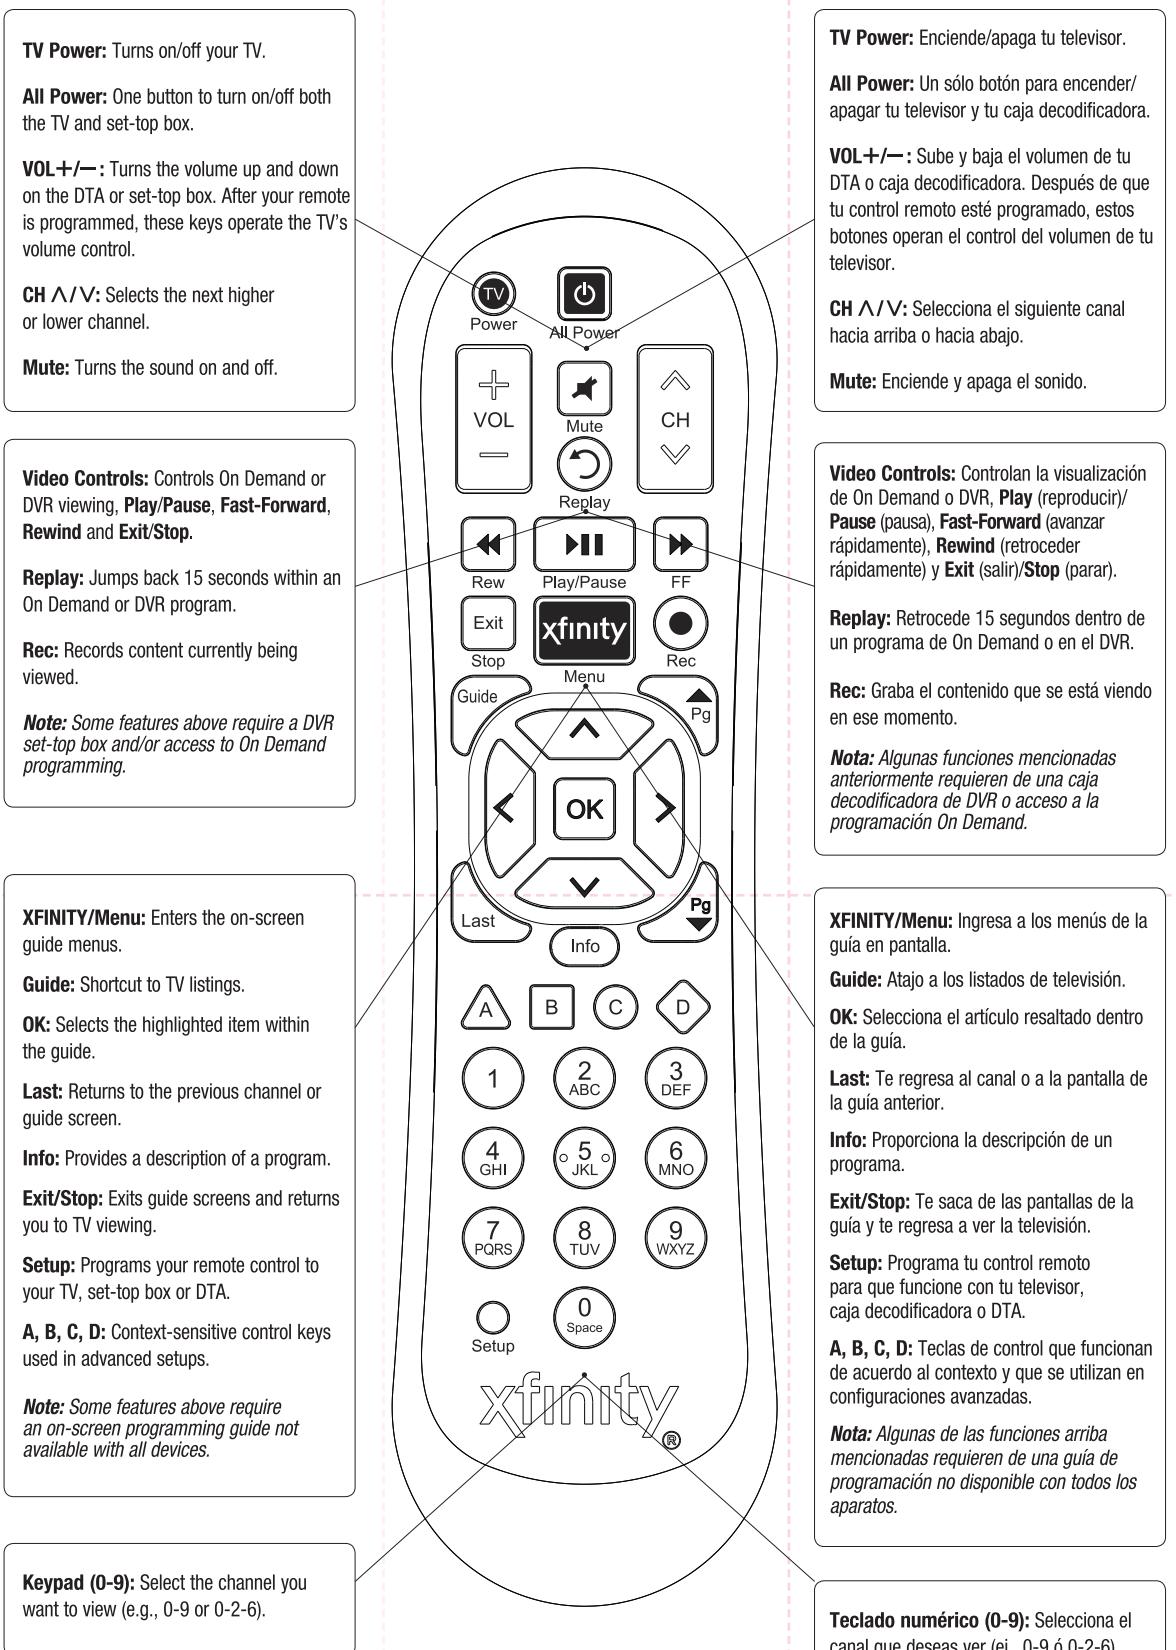

xfinity®

Programar tu control remoto para controlar tu televisor es sencillo.

Programa tu control remoto para comenzar.

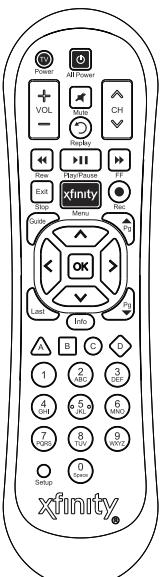

XFINITY XR2
GUÍA DEL USUARIO
para el control remoto

¿NO ENCUENTRAS TU CÓDIGO?

Si no puedes programar tu control remoto con los códigos proporcionados al dorso de esta guía, sigue los pasos de abajo para buscar tu código.

ASÍ ES COMO SE HACE:

1. Instala las baterías.
2. Localiza el código del fabricante de tu televisor (ver al dorso).
3. Enciende tu televisor y tu caja decodificadora digital o DTA (adaptador de transporte digital).
4. En tu control remoto, oprime y sostén el botón **Setup** (configurar) por tres segundos hasta que el botón **All Power** cambie de rojo a verde.
5. Ingresa los números **9-9-1**. El botón **All Power** se encenderá y apagará en color verde, dos veces.
6. Oprime el botón **CH A** varias veces hasta que se apague el televisor.
7. Una vez que se haya apagado el televisor, oprime **Setup**.

Consejo útil: Puedes encontrar asistencia técnica adicional para la programación de tu control remoto, incluyendo herramientas para la búsqueda de códigos y preguntas frecuentes, en www.xfinity.com/remotes.

Función adicional: Si deseas colocar tu caja decodificadora digital o DTA fuera de la línea de vista (por ejemplo, en un centro de entretenimiento o detrás de tu televisor), sigue las instrucciones anteriores para programar el control remoto para que funcione con tu televisor, y después consulta las instrucciones incluidas bajo "Cómo instalar tu caja decodificadora digital o DTA fuera de la línea de vista" al dorso de esta hoja de instrucciones.

GUÍA DEL USUARIO para el control remoto del adaptador de transporte digital

CONSERVA EL CÓDIGO DE TU TELEVISOR

Para referencia futura, escribe aquí el código válido del fabricante de tu televisor:



xfinity.com/remotes

Diagnóstico de problemas

DIAGNÓSTICO GENERAL

P: ¿Por qué el botón **All Power** se enciende y apaga con una luz roja, pero el control no responde cuando oprimo un botón?

R: Asegúrate de que el control remoto esté dirigido hacia tu televisor y que no esté a más de 15 pies de distancia. También, asegúrate de que tu caja decodificadora digital o DTA esté encendida y a plena vista.

P: ¿Por qué el botón **All Power** se enciende y apaga con una luz roja y luego verde mientras estoy programando mi control remoto?

R: Es probable que hayas ingresado el código equivocado. Revisa el código e intenta programarlo de nuevo.

DIAGNÓSTICO DE PROBLEMAS DE CONTROLES

P: Cuando el control está sincronizado, ¿por qué el botón **All Power** se enciende y apaga con una luz verde y luego roja cuando oprimo un botón del control remoto?

R: Es probable que el aparato con el que estás sincronizado no esté encendido o que estés fuera del radio de alcance. Asegúrate de que el aparato esté encendido y acércale al él. Si esto no funciona, intenta volver a reparar tu control remoto siguiendo las instrucciones incluidas bajo "Cómo instalar tu caja decodificadora digital o DTA fuera de la línea de vista" al dorso de esta hoja de instrucciones."

P: ¿Cómo puedo saber con qué caja decodificadora digital o DTA está sincronizado mi control remoto?

R: Una vez sincronizado con un aparato, el control remoto solo funcionará con esa caja decodificadora o DTA específica. Los paquetes incluyen calcomanías codificadas por color para que sea más fácil identificar cuál es el aparato que está sincronizado con tu control remoto.