

FCC WARNING

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must acceptany interference received, including interference that may cause undesired operation.

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCR Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help. ∴ Safety precautions

Please read all Safety precautions before using your device to ensure safe and properuse.

· Do not touch your device with wet hands. · Avoid exposing your device to very cold or very hot temperatures. Extreme temperatures can cause the deformation of the device and reduce the life of your

· Keep your device dry. Humidity and all types of liquids may damage device parts or electronic circuits. When wet, dry your device with a towel and take it to a service center.

 \cdot Do not use or store your device in dusty, dirty areas. Dust can cause your device to · Do not drop or cause an impact to your device. If bent or deformed, your device may be damaged or parts may malfunction.

· Do not disassemble, modify, or repair your device. Any changes or modifications to your device can void your manufacturer's warranty. For service, take your device to a Samsung Service Center.


Do not paint or put stickers on your device. Paint and stickers can dog moving parts and prevent proper operation. If you are allergic to paint or metal parts of the product, you may experience itching, ezcema, or swelling of the skin. When this happens, stop using the product and consult your physician.

When cleaning your device : Wipe your device with a towel or an eraser. \cdot Do not use chemicals or detergents. · Do not use the device for anything other than its intended use.

· Do not allow children to use it as they could hurt themselves and others, damage

Do not use the device during a thunderstorm. Thunderstorms can cause the device to malfunction and increase the risk of electric shock.

Instructional icons

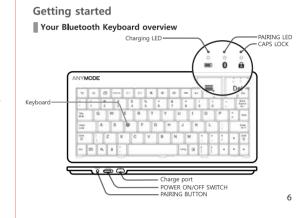

LED description

Charging LED charging : red color charging complete : green color

Pressing the pairing button, blue LED is blinking 2 minutes The pairing is complete, or after 2 minutes the LED is off If you need to charge a lower voltage, every keystroke the LED blinks 5 times When you turn on the power switch, LED blinks 3 seconds

CAPS LOCK Caps lock key is pressed the caps lock led on / off displays

- Components inclued Bluetooth Keyboard, charging cable and manual.

Charging the keyboard

This keyboard has a rechargeable internal battery which is non-removable. Make sure the keyboard is fully charged before using it for the first time.



1. Connect the charger to the charger jack.

Plug the charger in to the wall outlet. During charging, the Power indicator will turn red. If charging does not begin, unplug the charger and plug it in again. When the keyboard is fully charged, the power indicator light changes to green.
 Unplug the charger from the wall outlet and the keyboard.

BLUETOOTH KEYBOARD CHARING TIME and STANDRARD WORKING TIME

Pairing means unique and encrypted wireless connection between two Bluetooth devices when they agree to communicate with each other. In order to pair, a PIN has to be exchanged between the keyboard and tablet.

The battery charging time and working time depend on working circumstances. The battery is supplies. So reduce the working times are getting shorter. 1. Slide the power button ON.

Using your Bluetooth Keyboard Turning the keyboard on or off

To turn the keyboard on Slide the power button ON. To turn the keyboard off To turn the keyboard off

Slide the power button OFF.



Connecting the keyboard to your tablet

Press the pairing button.
 Pairing LED blinks 2 minutes

Connecting the keyboard

- Activate the Bluetooth feature on your tablet and search for the keyboard in order to pair with each other (see your tablet's user manual). 4. Select the keyboard (ABT-I210) from the list of devices found by your tablet. 5. Type in the PIN at your keyboard and press enter to connect to your tablet.

RF Exposure Statement FCC RF warning statement: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

6. Paring led is blown out after connected the keyboard. 7. Try push the pairing button if paring led turn off but did not connected the keyboad.

Using Key functions

Before using the bluetooth keyboard, you should set the language to be used.

r details how to set a lang	uage, refer to your tab	let's user manual.
00000	φ	9 9 9
to the second of	>- d d- d-	▶11 ▶₩1 588 ■ Del
لبلبلبل	بالبالبال	
		A Svit
□ Q \$.	Lang	· · · · ·
АВĊ	р	Ė

0	Return to the previous screen.			
2	Return to the idle screen.			
3	Open the list of recent applications.			
4	Launch the Web browser.			
6	Set the brightness of the display.			
6	Adjust the device's volume.			
0	While playing media files, ▶II : Pause or resume a video, music files, or slideshows. ◄ : Move to the previous file. ► : Move to the next file.			
8	Display android applications.			
9	Show android menu.			

A	Hide/show t	de/show the keypad on the screen.					
В	Launch the Google Search; Open the search input window from any applications.						
С	Launch the Voice Search.						
D	Select a display language. This feature is available only when you have selected more than two languages in your devices language settings.						
E	Hide/show Time, Date and Application indicator.						
Specifications and Description							
Name	of equipment	Bluetooth Mini Keyboard					
Sup	port profi l e	Human Interface Device profile, Device Identification profile					
Certifi	cation Number	KCC-REI-AM3-ABT-I210	Bluetooth version	Ver 2.0			