








Main power switch

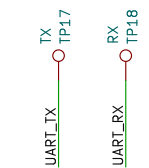


LCD Reset




The diagram shows four push buttons, SW1 through SW4, connected to the microcontroller. SW1 is connected to BTN_UP, SW2 to BTN_DWN, SW3 to BTN_LFT, and SW4 to BTN_RGHT. Each button's other terminal is connected to GND.

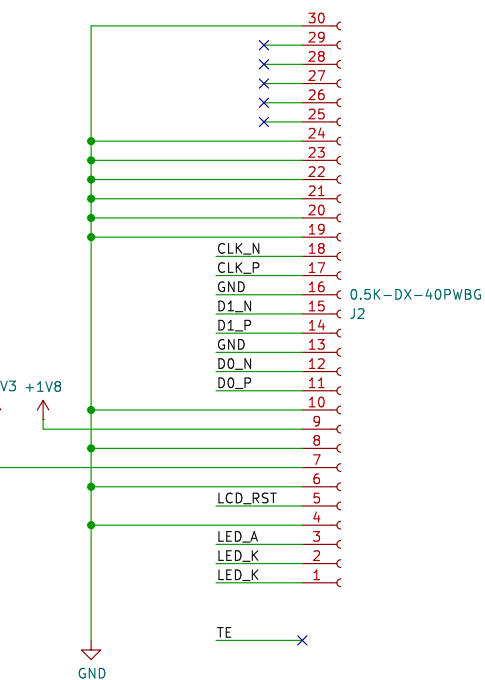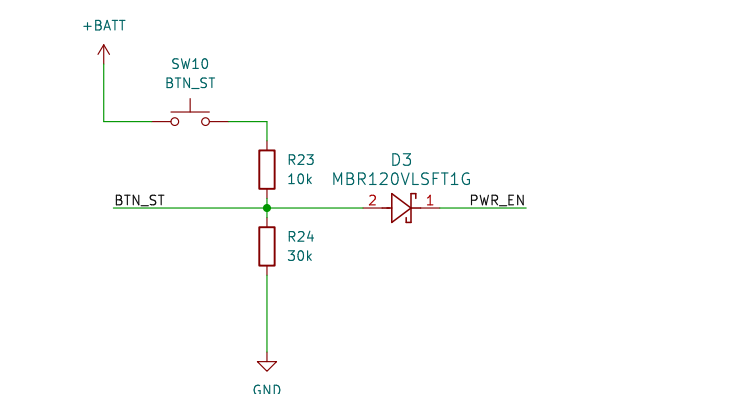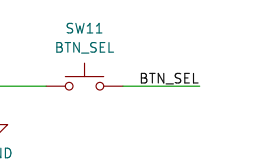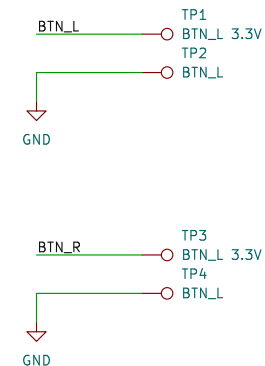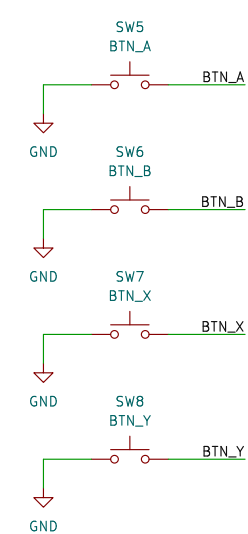


Audio codec/amp

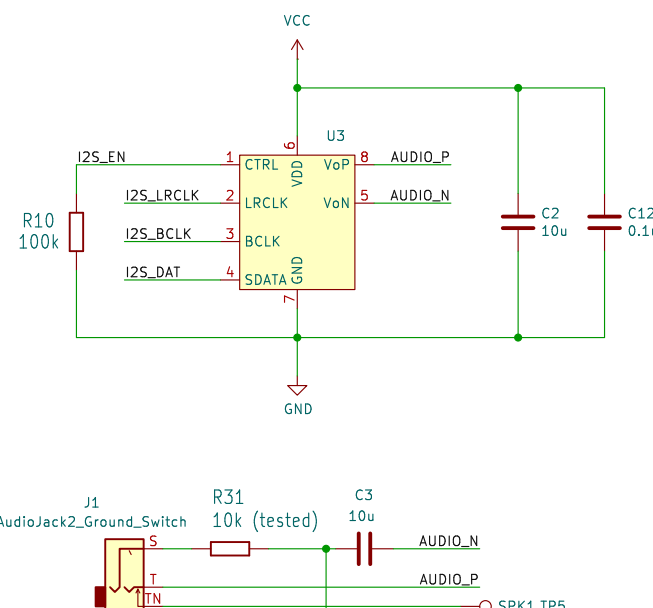

u C

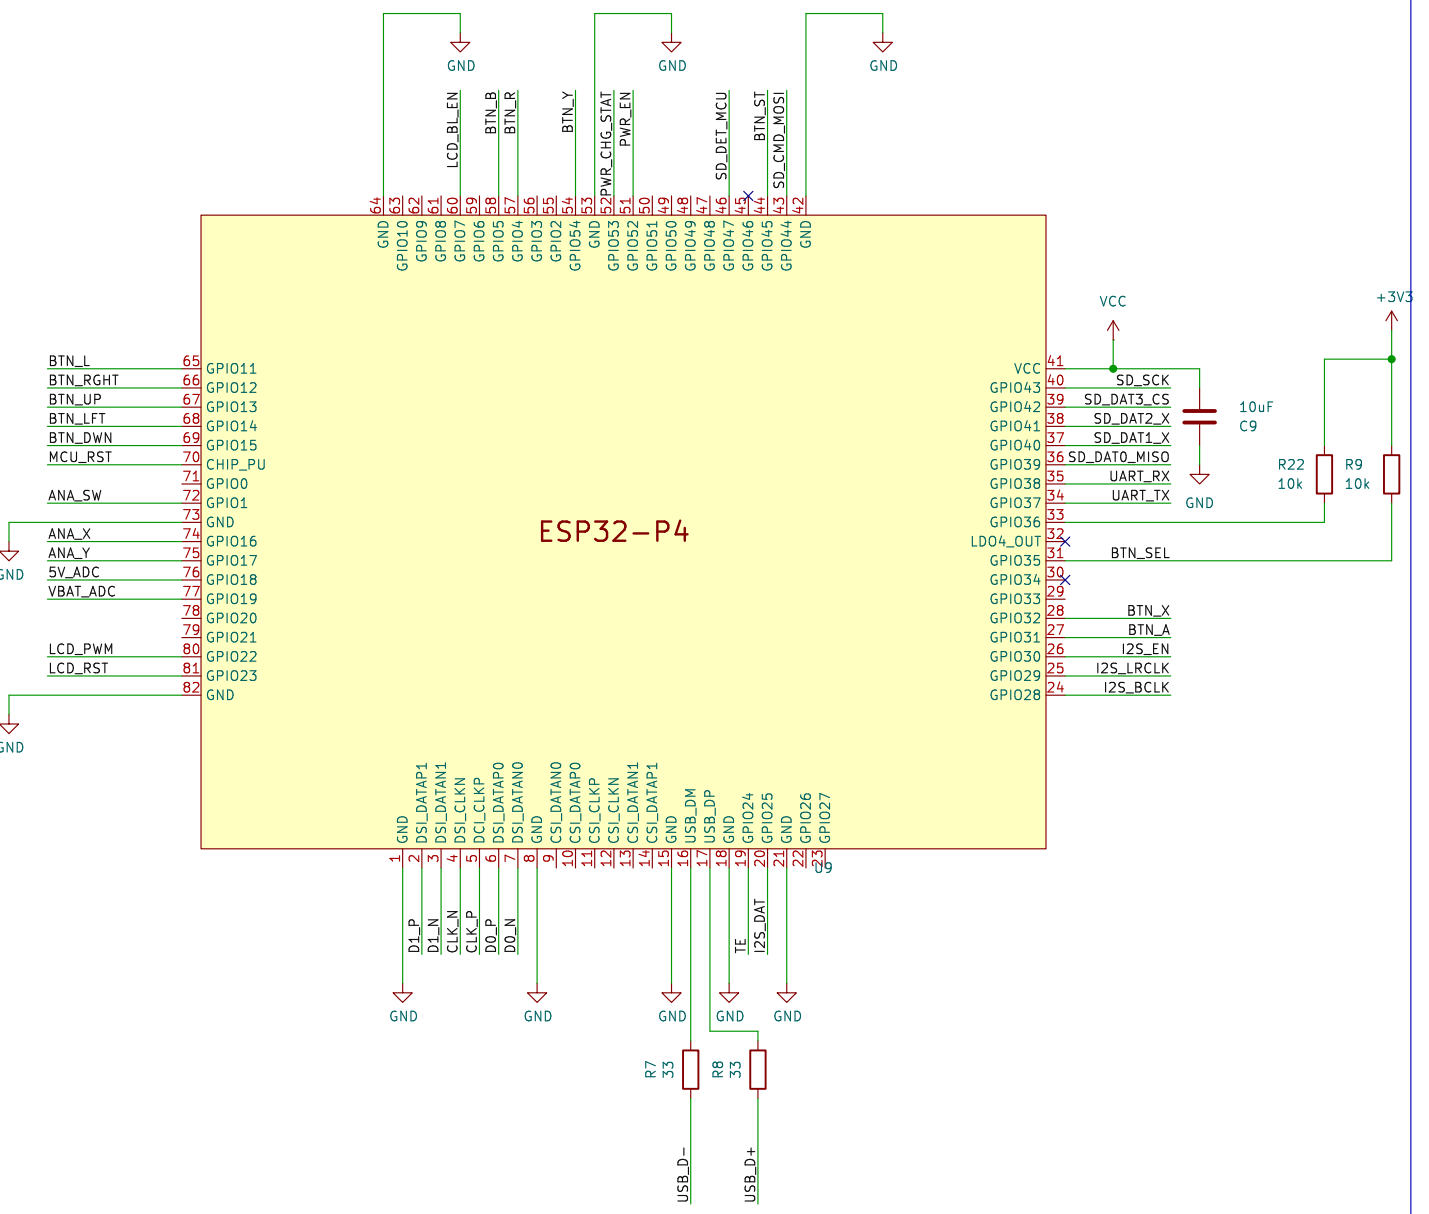

uSD slot

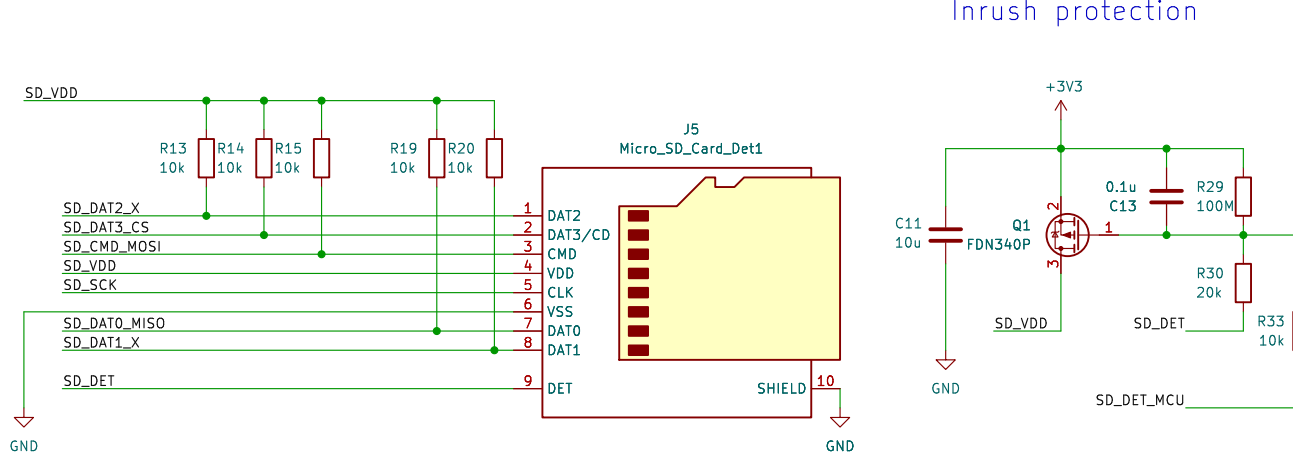

Inrush protection

