

&lt;Home

menu

# Falcon capacitance


Astro |Sun 12 December 2021

## installation steps

1. Fix the copper column on the positioning plate with m1.6\*3 screws

- 2.** Install the gmk steel plate satellite shaft after replacing the steel wire on  
[Home](#) the positioning plate

menu

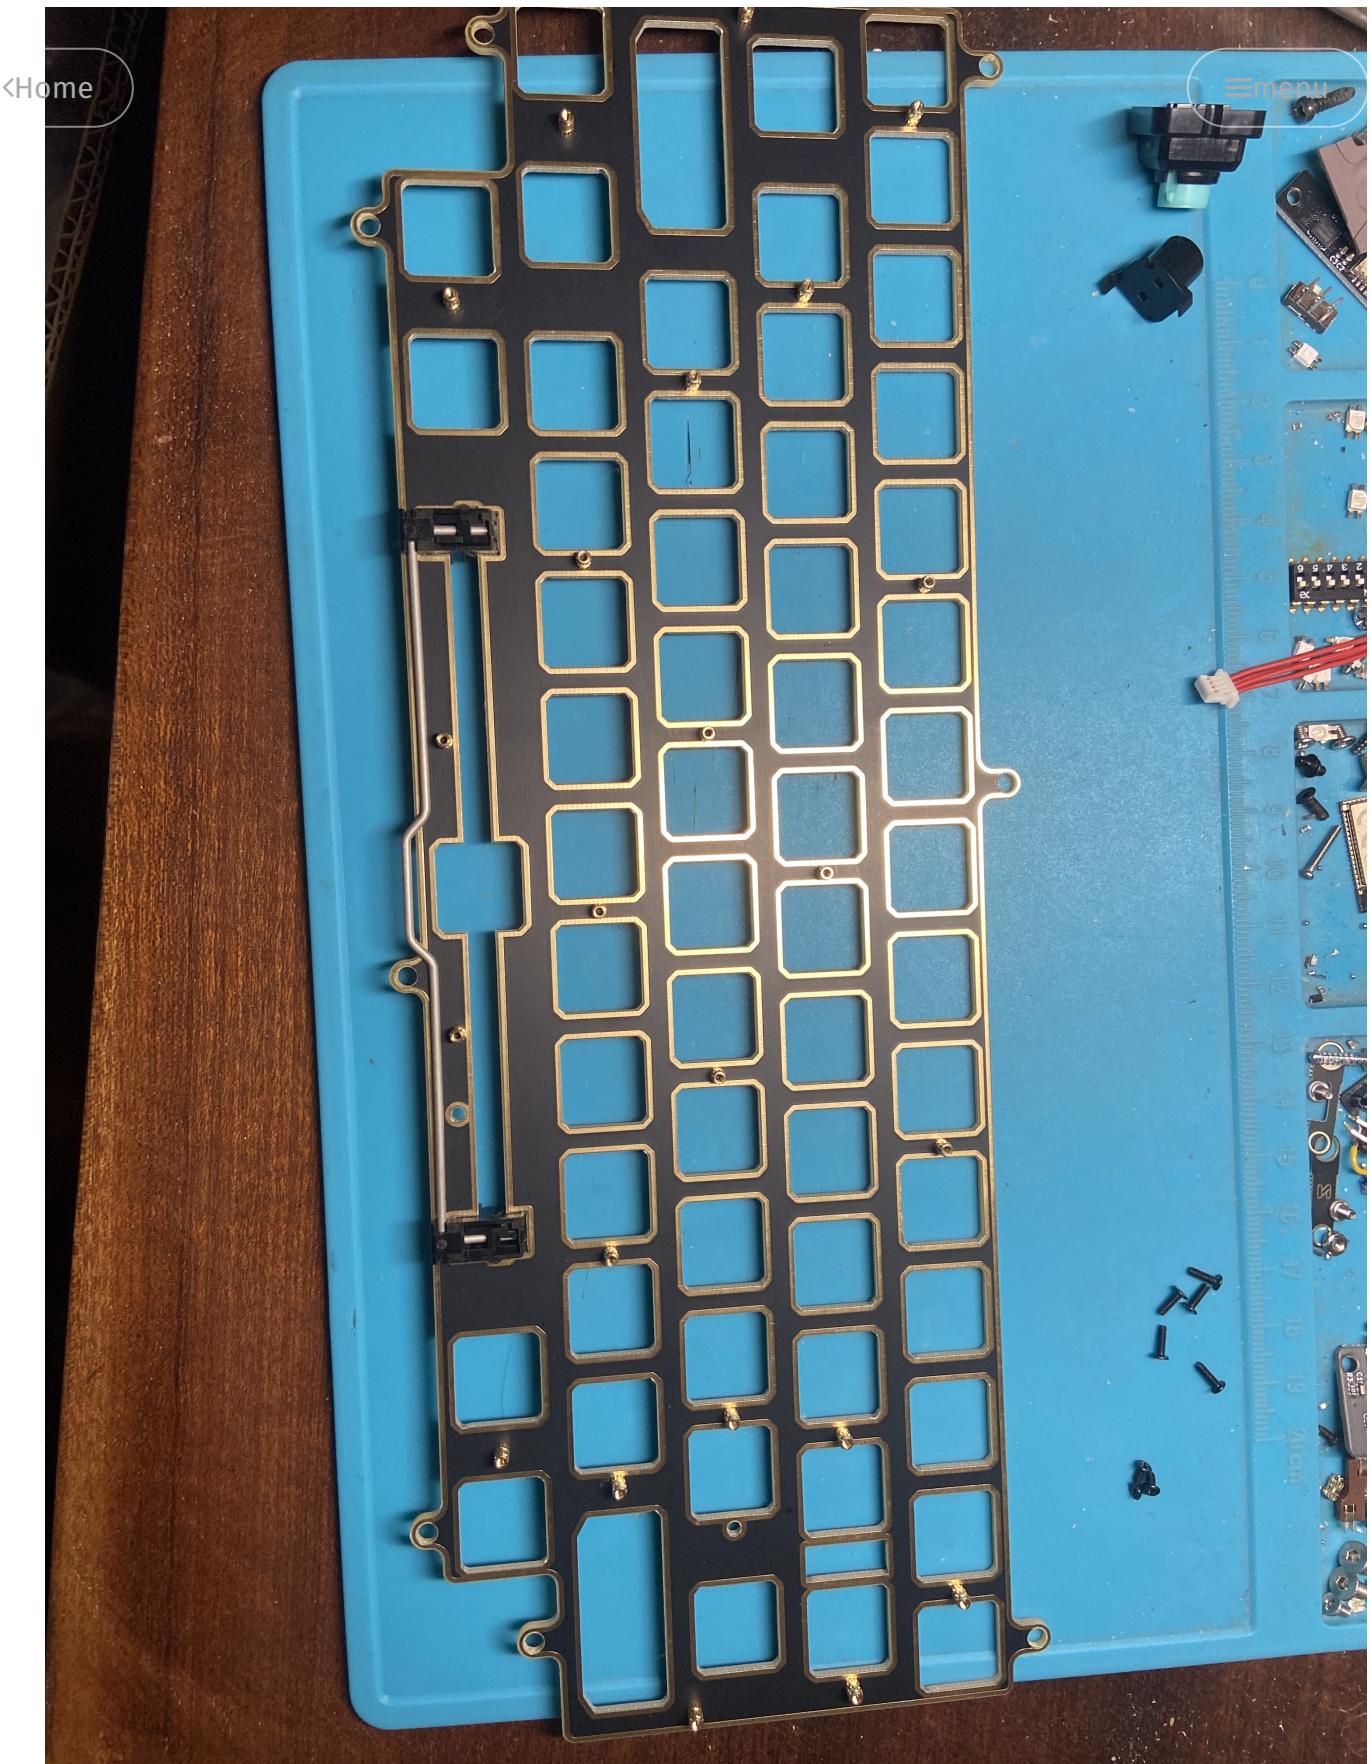

### 3. Install the axle seat

<Home

menu



4. Put the rubber bowl and cone spring, pay attention to the correct position, especially the two big keys


≡menu



5. Fasten the pcb and fix it with m1.6\*4 screws. Note: Do not screw on all the screws, but test the triggering of the buttons after screwing on some screws. If there is any abnormality, you need to readjust the

position of the rubber bowl and the cone spring. If normal, re-tighten  
<Home all screws

≡menu

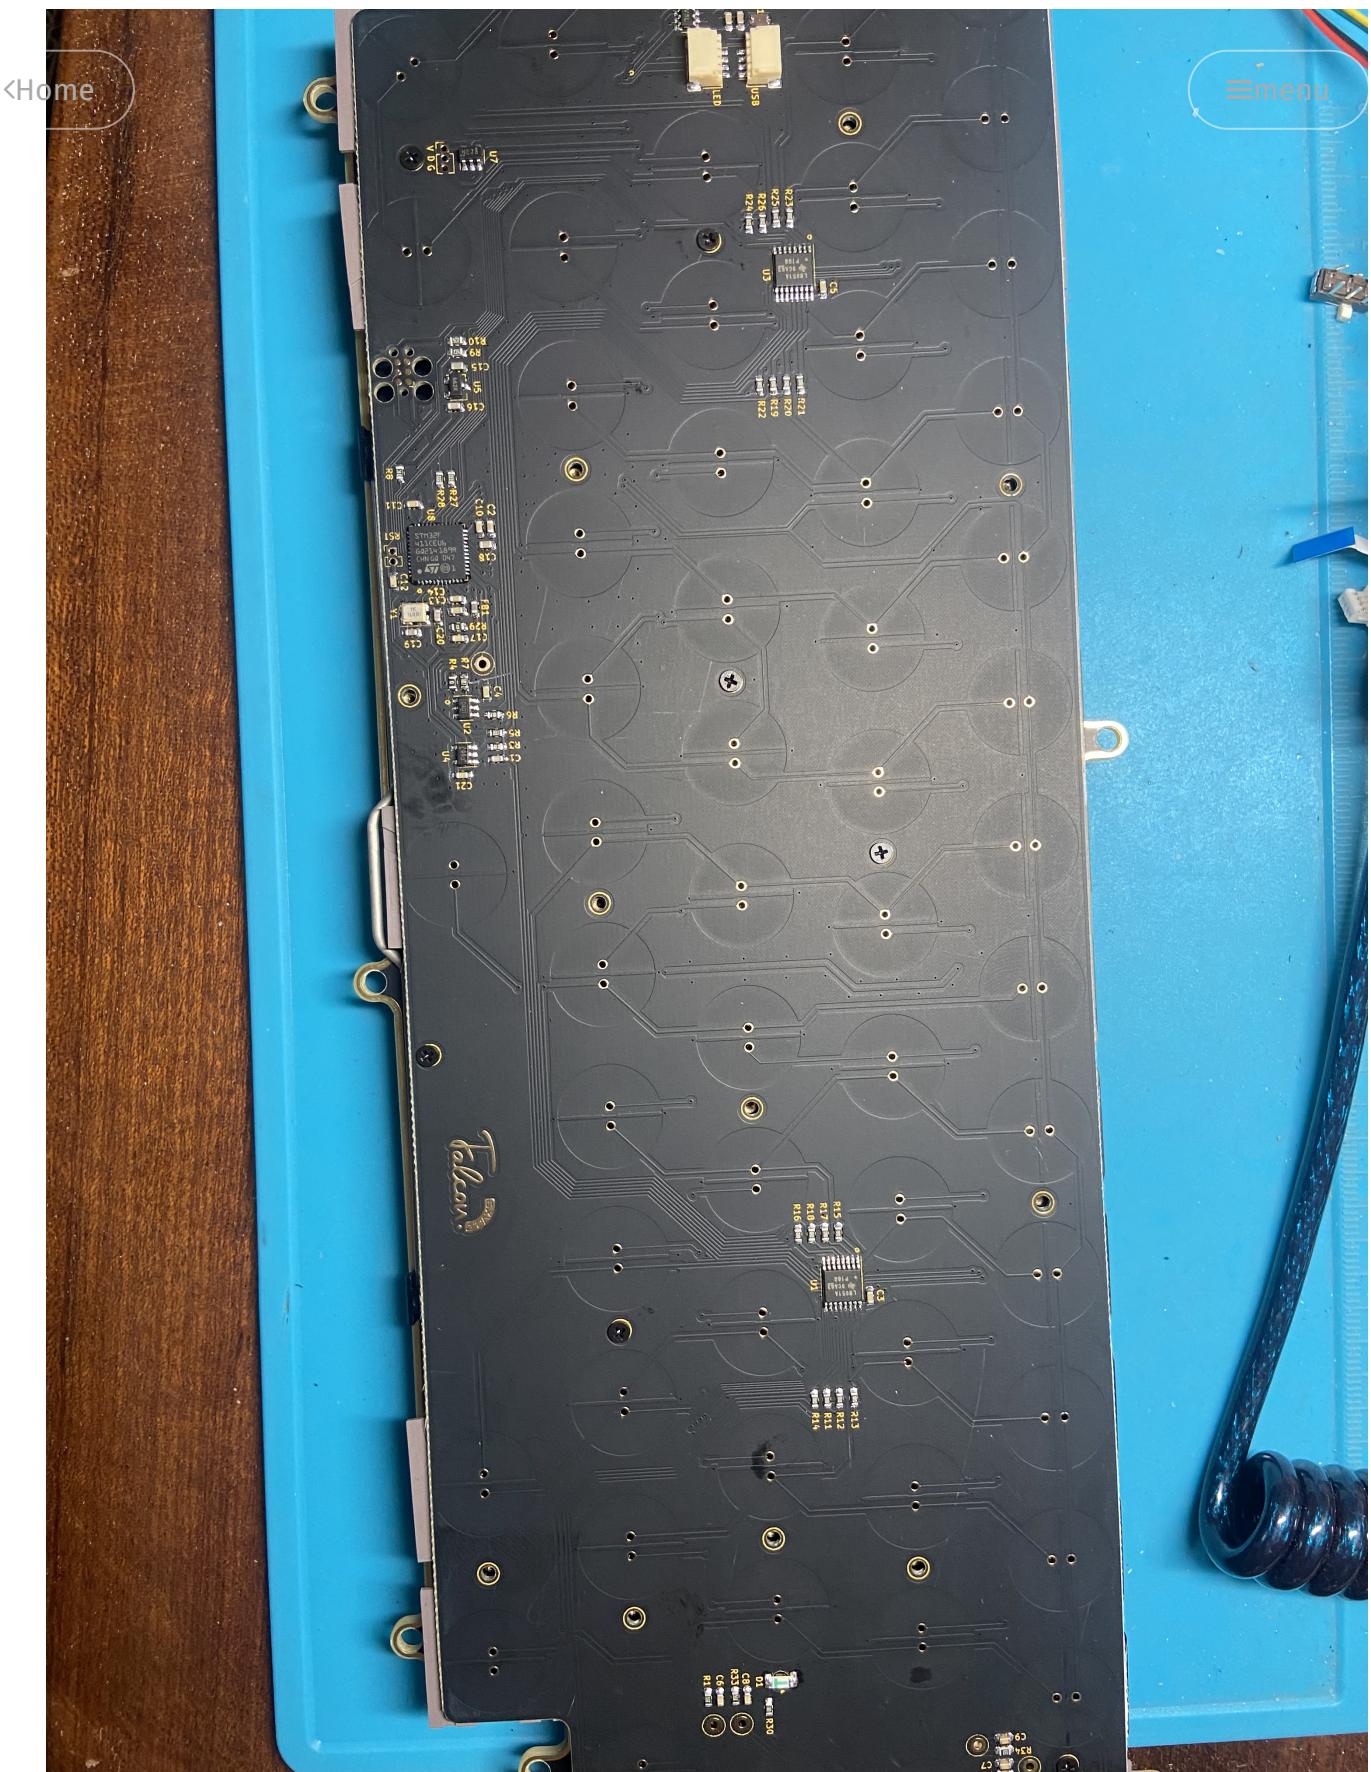

6. Install the liner to the Falcon keyboard normally. Note: Do not screw on the screw in the bottom middle, as it interferes with the steel wire

## of the steel plate satellite shaft

&lt;Home

menu



&lt;Home

menu

# Arrangement production

Make and download firmware using falcon\_ec on **iatkb**

## firmware update

You can enter the U disk mode as follows:

1. Unplug, hold down Esc, plug in
2. Pull out the wire, short the RST on the PCB, plug in the wire
3. Press the RESET function key

After the U disk appears, copy the finished firmware (uf2 format) into it

## Precautions

Since the keyboard firmware will be updated irregularly, if you encounter problems during use, please use the website to recreate the firmware and update it. If the problem still exists, you can find the author to solve it.



Theme Attila

<Home

Published with Pelican

≡menu