



AIRCRAFT MAINTENANCE MANUAL

FAUCET - REMOVAL/INSTALLATION

EFFECTIVITY: ALL

1. General

- A. This section gives the procedures to remove and install the faucet assembly.
- B. The procedures in this section are given in the sequence below. The tasks identified with (♦) are part of the Scheduled Maintenance Requirements Document (SMRD).

TASK NUMBER	DESCRIPTION	EFFECTIVITY
38-10-03-000-801-A	FAUCET ASSEMBLY - REMOVAL	ALL
38-10-03-400-801-A	FAUCET ASSEMBLY - INSTALLATION	ALL



EMB145 – EMB135

AIRCRAFT
MAINTENANCE MANUAL

TASK 38-10-03-000-801-A

EFFECTIVITY: ALL

2. FAUCET ASSEMBLY - REMOVAL

A. General

- (1) This task gives the procedures for the removal of the faucet assembly.

B. References

REFERENCE	DESIGNATION
AMM TASK 12-15-01-600-802-A/300	WATER TANK - DRAINING

C. Zones and Accesses

ZONE	PANEL/DOOR	LOCATION
271		Lavatory
272		Lavatory

D. Tools and Equipment

Not Applicable

E. Auxiliary Items

Not Applicable

F. Consumable Materials

Not Applicable

G. Expandable Parts

Not Applicable

H. Persons Recommended

QTY	FUNCTION	PLACE
1	Does the task	Lavatory

I. Preparation

SUBTASK 841-002-A

- (1) Drain the water tank ([AMM TASK 12-15-01-600-802-A/300](#)).

J. Removal ([Figure 401](#))

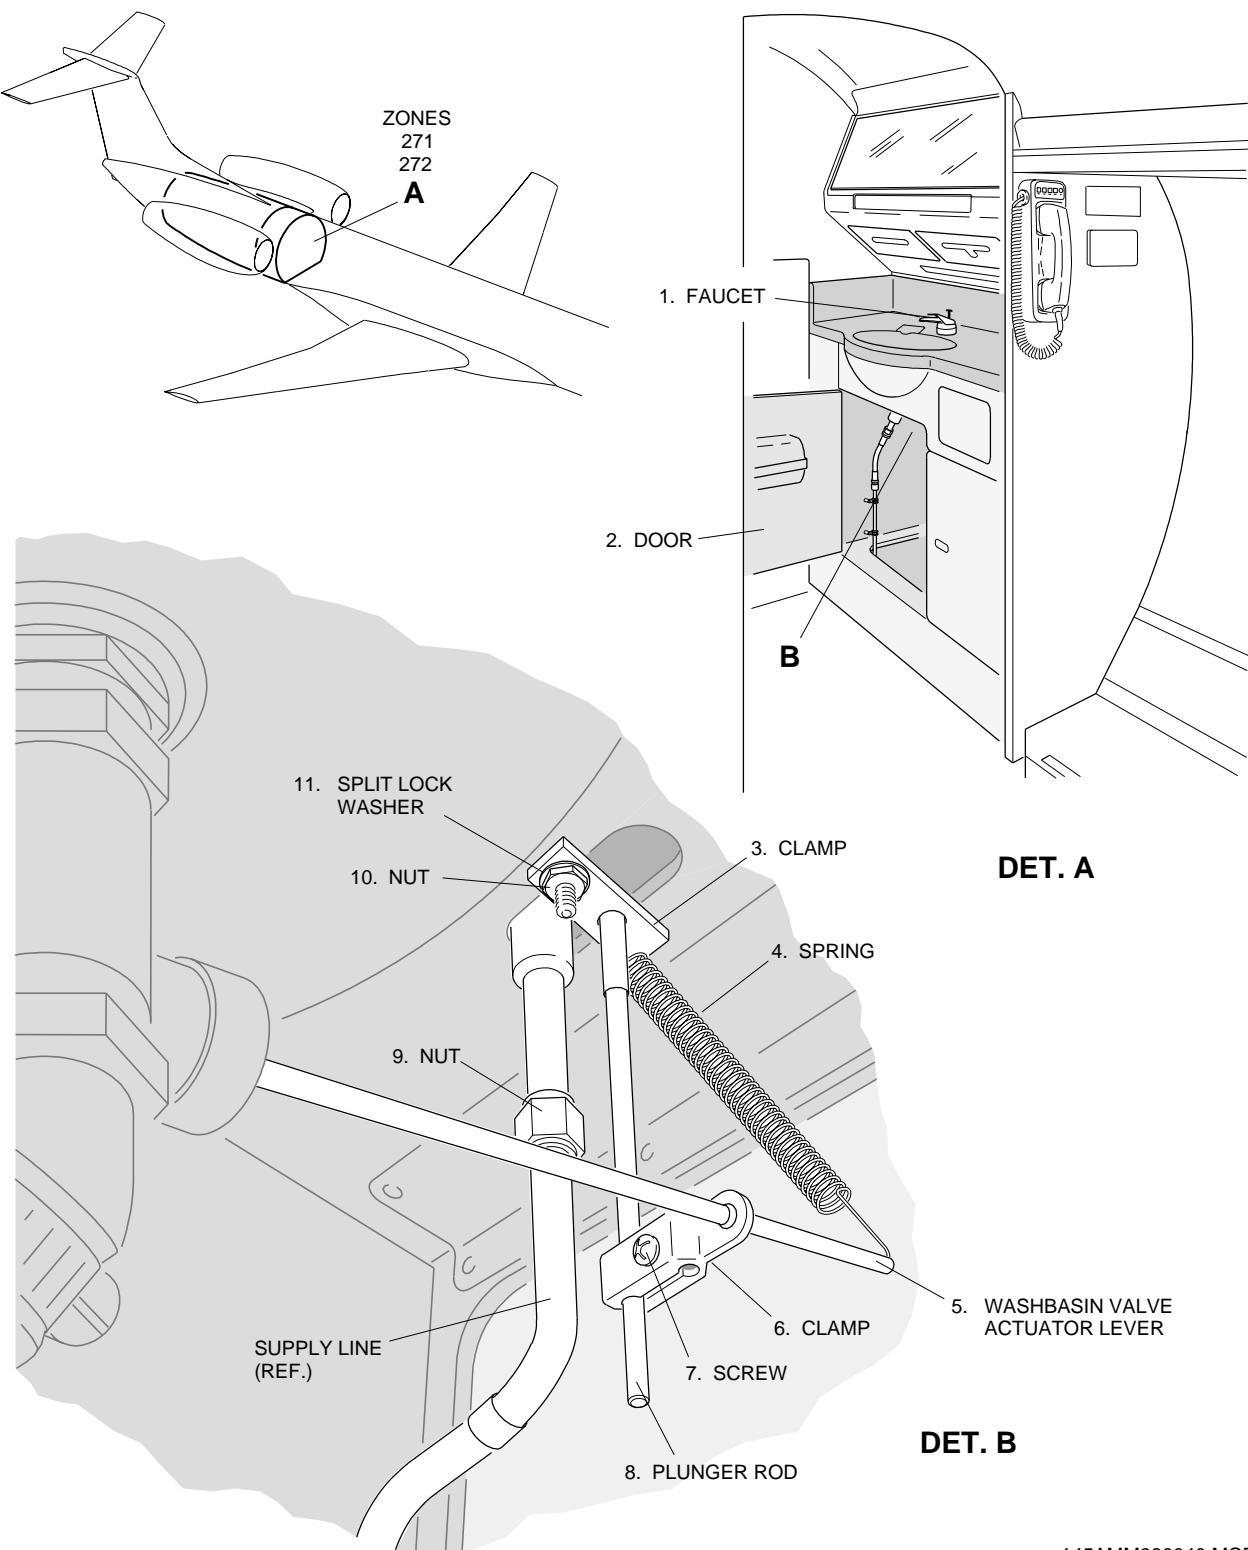
SUBTASK 020-002-A

- (1) Open the door (2).
- (2) Remove the spring (4) from the clamp (3).
- (3) Loosen the screw (7) that attaches the plunger rod (8) to the clamp (6).
- (4) Loosen the nut (9).



**AIRCRAFT
MAINTENANCE MANUAL**

-
- (5) Remove the nut (10) and split lock washer (11) that attach the faucet (1) to the clamp (3).

EFFECTIVITY: ALL
Faucet Assembly - Removal/Installation
Figure 401

DET. B

145AMM380040.MCE



TASK 38-10-03-400-801-A

EFFECTIVITY: ALL

3. FAUCET ASSEMBLY - INSTALLATION

A. General

- (1) This task gives the procedures for the installation of the faucet assembly.

B. References

REFERENCE	DESIGNATION
AMM TASK 12-15-01-600-801-A/300	WATER TANK - FILLING

C. Zones and Accesses

ZONE	PANEL/DOOR	LOCATION
271		Lavatory
272		Lavatory

D. Tools and Equipment

Not Applicable

E. Auxiliary Items

Not Applicable

F. Consumable Materials

Not Applicable

G. Expandable Parts

Not Applicable

H. Persons Recommended

QTY	FUNCTION	PLACE
1	Does the task	Lavatory

I. Installation (Figure 401)

SUBTASK 420-002-A

- (1) Put the faucet (1) in position.
- (2) Put the clamp (3) in position.
- (3) Tighten the nut (10) and split lock washer (11) that attach the faucet (1) to the clamp (3).
- (4) Connect the nut (9) that attaches the faucet (1) to the supply line.
- (5) Tighten the screw (7) that attaches the plunger rod (8) to the clamp (6).
- (6) Attach the spring (4) to the clamp (3).



AIRCRAFT
MAINTENANCE MANUAL

J. Follow-on

SUBTASK 842-002-A

- (1) Do a check for leaks.
- (2) Service the water tank ([AMM TASK 12-15-01-600-801-A/300](#)).