



AIRCRAFT
MAINTENANCE MANUAL

REAR ELECTRONIC COMPARTMENT DOOR - SERVICING

EFFECTIVITY: ALL

1. General

- A. This section gives the procedures to lubricate the Rear-Electronic-Compartment Door.
- B. The procedures in this section are given in the sequence below. The tasks identified with (♦) are part of the Scheduled Maintenance Requirements Document (SMRD).

TASK NUMBER	DESCRIPTION	EFFECTIVITY
12-21-10-600-801-A	REAR-ELECTRONIC-COMPARTMENT DOOR - LUBRICATION	ALL



EMB145 – EMB135

AIRCRAFT
MAINTENANCE MANUAL

TASK 12-21-10-600-801-A

EFFECTIVITY: ALL

2. REAR-ELECTRONIC-COMPARTMENT DOOR - LUBRICATION

A. General

- (1) This procedure helps the door internal mechanism to operate correctly and the door to move freely. This makes the opening/closing operations easier.

B. References

REFERENCE	DESIGNATION
AMM TASK 52-44-01-000-801-A/400	REAR ELECTRONIC-COMPARTMENT DOOR - REMOVAL

C. Zones and Accesses

ZONE	PANEL/DOOR	LOCATION
272	272DR	Fuselage Rear Section I

D. Tools and Equipment

Not Applicable

E. Auxiliary Items

ITEM	DESCRIPTION	PURPOSE	QTY
Commercially available	Brush	To lubricate the rear electronic compartment door	AR

F. Consumable Materials

SPECIFICATION (BRAND)	DESCRIPTION	QTY
MIL-G-23827	Grease	AR

G. Expandable Parts

Not Applicable

H. Persons Recommended

QTY	FUNCTION	PLACE
1	Does the task	Rear-electronic-compartment door

I. Preparation

SUBTASK 841-002-A

- (1) Remove rear-electronic compartment door 272DR ([AMM TASK 52-44-01-000-801-A/400](#)).



AIRCRAFT
MAINTENANCE MANUAL

J. Lubrication ([Figure 301](#))

SUBTASK 610-002-A

- (1) Lubricate the latch pins.

K. Follow-on




SUBTASK 842-002-A

- (1) Install rear-electronic compartment door 272DR ([AMM TASK 52-44-01-000-801-A/400](#)).

EFFECTIVITY: ALL

Lubrication of Rear-Electronic-Compartment Door

Figure 301

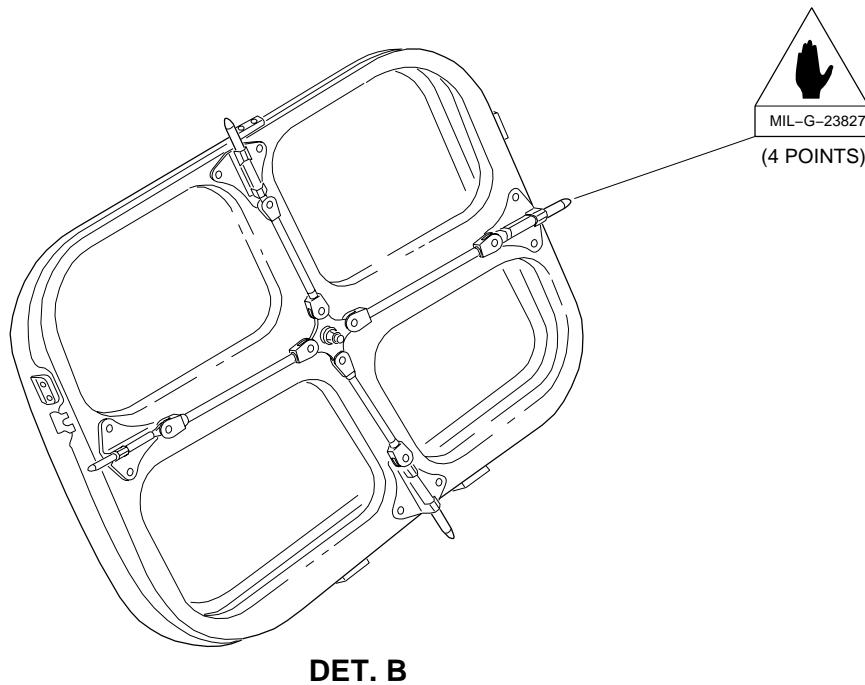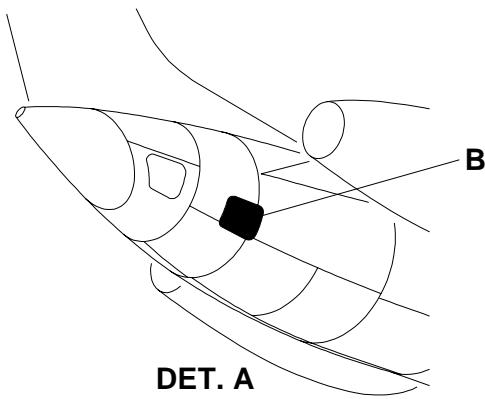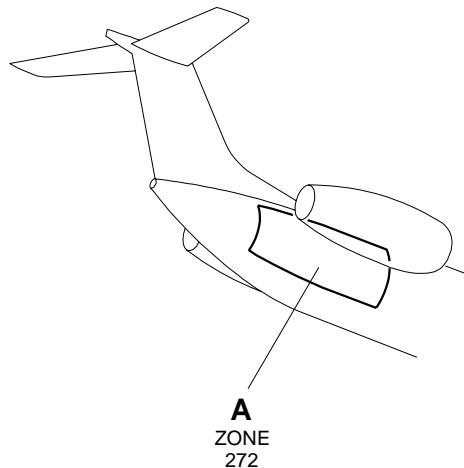

EM145AMM120198A.DGN