

**OPTIONAL FLIGHT ATTENDANT SEAT - REMOVAL/INSTALLATION**

**EFFECTIVITY: AIRCRAFT WITH OPTIONAL ATTENDANT SEAT**

**1. General**

- A. This section gives the procedures to remove/install the optional flight attendant seat.
- B. The optional flight attendant seat is installed in the passenger cabin, at zone 262.
- C. The procedures in this section are given in the sequence below. The tasks identified with (♦) are part of the Scheduled Maintenance Requirements Document (SMRD).

<b>TASK NUMBER</b>	<b>DESCRIPTION</b>	<b>EFFECTIVITY</b>
25-21-03-000-801-A	OPTIONAL FLIGHT ATTENDANT SEAT - REMOVAL	AIRCRAFT WITH OPTIONAL ATTENDANT SEAT
25-21-03-400-801-A	OPTIONAL FLIGHT ATTENDANT SEAT - INSTALLATION	AIRCRAFT WITH OPTIONAL ATTENDANT SEAT
25-21-03-040-801-A	OPTIONAL FLIGHT ATTENDANT SEAT - DEACTIVATION	AIRCRAFT WITH OPTIONAL ATTENDANT SEAT
25-21-03-440-801-A	OPTIONAL FLIGHT ATTENDANT SEAT - REACTIVATION	AIRCRAFT WITH OPTIONAL ATTENDANT SEAT



EMB145 - EMB135

AIRCRAFT  
MAINTENANCE MANUAL

TASK 25-21-03-000-801-A

EFFECTIVITY: AIRCRAFT WITH OPTIONAL ATTENDANT SEAT

2. OPTIONAL FLIGHT ATTENDANT SEAT - REMOVAL

A. General

- (1) This task gives the procedures to remove the optional flight attendant seat.

B. References

REFERENCE	DESIGNATION
AMM TASK 25-21-01-000-801-A/400	-

C. Zones and Accesses

Not Applicable

D. Tools and Equipment

Not Applicable

E. Auxiliary Items

Not Applicable

F. Consumable Materials

Not Applicable

G. Expandable Parts

Not Applicable

H. Persons Recommended

QTY	FUNCTION	PLACE
1	Does the task	Passenger cabin

I. Preparation

*SUBTASK 841-004-A*

- (1) Remove the passenger cabin seats at the last right row. (AMM TASK 25-21-01-000-801-A/400).

J. Removal (Figure 401)

*SUBTASK 020-002-A*


- (1) Remove the optional flight attendant seat (1) as follows:

- (a) Remove the bolts (2), washers (3), and spacers (4 and 5) that attach the optional flight attendant seat (1).
- (b) Lift slowly the optional flight attendant seat (1).

**EFFECTIVITY: AIRCRAFT WITH OPTIONAL ATTENDANT SEAT**

Optional Flight Attendant Seat – Removal/Installation

Figure 401

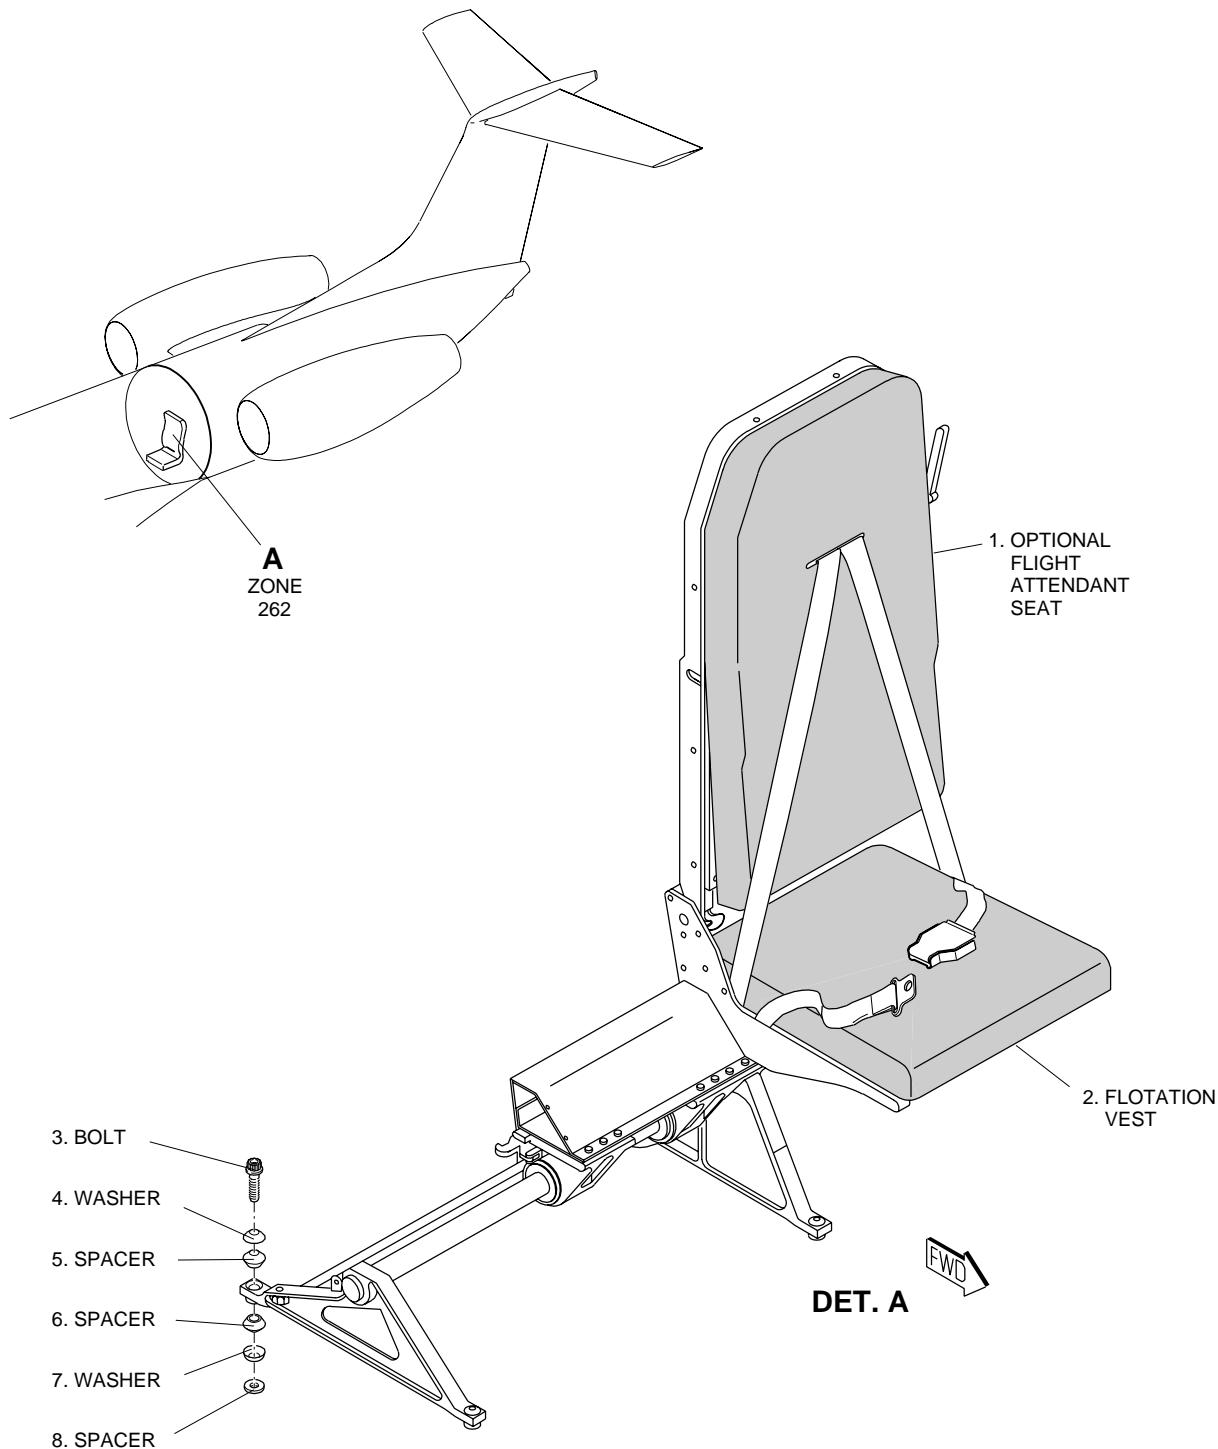

145AMM250360.MCE



# AIRCRAFT MAINTENANCE MANUAL

TASK 25-21-03-400-801-A

EFFECTIVITY: AIRCRAFT WITH OPTIONAL ATTENDANT SEAT

## 3. OPTIONAL FLIGHT ATTENDANT SEAT - INSTALLATION

### A. General

- (1) This task gives the procedures to install the optional flight attendant seat.

### B. References

REFERENCE	DESIGNATION
AMM TASK 25-21-01-400-801-A/400	-

### C. Zones and Accesses

Not Applicable

### D. Tools and Equipment

Not Applicable

### E. Auxiliary Items

Not Applicable

### F. Consumable Materials

Not Applicable

### G. Expandable Parts

Not Applicable

### H. Persons Recommended

QTY	FUNCTION	PLACE
1	Does the task	Passenger cabin

### I. Installation (Figure 401)

#### SUBTASK 420-002-A

- (1) Install the optional flight attendant seat assembly (1) as follows:

(a) Fit the optional flight attendant seat assembly.

(b) Install the optional flight attendant seat assembly with the bolts (2), washers (3) and spacers (4 and 5).

### J. Follow-on

#### SUBTASK 842-002-A

- (1) Install the seats at the last right row (AMM TASK 25-21-01-400-801-A/400).



EMB145 - EMB135

AIRCRAFT  
MAINTENANCE MANUAL

TASK 25-21-03-040-801-A

EFFECTIVITY: AIRCRAFT WITH OPTIONAL ATTENDANT SEAT

4. OPTIONAL FLIGHT ATTENDANT SEAT - DEACTIVATION

A. General

- (1) This task gives the procedure to deactivate the optional flight attendant seat.
- (2) This task refers to item 25-11-04 - Cabin Attendant Seats - of the DDPM
- (3) The aircraft may be dispatched with the Optional Cabin Attendant Seat inoperative provided:
  - (a) Associated seat position(s) is not occupied;
  - (b) Folding-type seat is stowed or secured in the retracted position;

NOTE: • A folding seat that will not stow automatically is considered inoperative.

- A seat with a missing or inoperative lap belt and/or shoulder harness is considered inoperative.

B. Zones and Accesses

Not Applicable

C. Tools and Equipment

Not Applicable

D. Auxiliary Items

Not Applicable

E. Consumable Materials

Not Applicable

F. Expandable Parts

Not Applicable

G. Persons Recommended

QTY	FUNCTION	PLACE
1	Does the task	Cockpit-RH/Cockpit-LH

H. Deactivation

SUBTASK 841-002-A

- (1) Make sure that the aircraft is safe for maintenance.
- (2) Attach an "INOP - DO NOT OCCUPY" placard to the Attendant's seat and also attach a "FOR FLIGHT ATTENDANT ONLY" placard to the assigned passenger seat.
- (3) Make an entry in the aircraft technical logbook to show that you did the deactivation procedure for the optional flight attendant seat.



EMB145 – EMB135

AIRCRAFT  
MAINTENANCE MANUAL

TASK 25-21-03-440-801-A

EFFECTIVITY: AIRCRAFT WITH OPTIONAL ATTENDANT SEAT

5. OPTIONAL FLIGHT ATTENDANT SEAT - REACTIVATION

A. General

- (1) This task gives the procedure to reactivate the optional flight attendant.
- (2) This task refers to item 25-11-04 - Cabin Attendant Seats - of the DDPM

B. References

REFERENCE	DESIGNATION
AMM TASK 25-21-03-200-801-A/600	OPTIONAL FLIGHT ATTENDANT SEAT - INSPECTION

C. Zones and Accesses

Not Applicable

D. Tools and Equipment

Not Applicable

E. Auxiliary Items

Not Applicable

F. Consumable Materials

Not Applicable

G. Expandable Parts

Not Applicable

H. Persons Recommended

QTY	FUNCTION	PLACE
1	Does the task	Cockpit-RH/Cockpit-LH

I. Reactivation

SUBTASK 841-003-A

- (1) Make sure that the aircraft is safe for maintenance.
- (2) Do the troubleshooting and the applicable corrective maintenance procedure for the optional flight attendant seats [AMM TASK 25-21-03-200-801-A/600](#).
- (3) Make an entry in the aircraft technical logbook to show that you did the reactivation procedure for the flight attendant seat.