



AIRCRAFT MAINTENANCE MANUAL

AUTODISCHARGE FIRE EXTINGUISHER BOTTLE - REMOVAL/INSTALLATION

EFFECTIVITY: ALL

1. General

- A. This section gives the procedures for the removal/installation of the autodischarge fire extinguisher.
- B. The procedures in this section are given in the sequence below. The tasks identified with (♦) are part of the Scheduled Maintenance Requirements Document (SMRD).

TASK NUMBER	DESCRIPTION	EFFECTIVITY
26-25-01-000-801-A	AUTODISCHARGE FIRE EXTINGUISHER - ALL REMOVAL	
26-25-01-400-801-A	AUTODISCHARGE FIRE EXTINGUISHER - ALL INSTALLATION	



EMB145 – EMB135

AIRCRAFT
MAINTENANCE MANUAL

TASK 26-25-01-000-801-A

EFFECTIVITY: ALL

2. AUTODISCHARGE FIRE EXTINGUISHER - REMOVAL

A. General

- (1) This task gives procedures for the removal of the autodischarge fire extinguisher.

B. Zones and Accesses

Not Applicable

C. Tools and Equipment

Not Applicable

D. Auxiliary Items

Not Applicable

E. Consumable Materials

Not Applicable

F. Expandable Parts

Not Applicable

G. Persons Recommended

QTY	FUNCTION	PLACE
1	Performs the task	Passenger cabin

H. Removal of the Autodischarge Fire Extinguisher ([Figure 401](#))


SUBTASK 020-002-A

- (1) Open the fire extinguisher door to access the autodischarge fire extinguisher (1).
- (2) Remove the autodischarge fire extinguisher (1) with the bolt (2) and the washers (3).

EFFECTIVITY: ALL

Autodischarge Fire Extinguisher - Removal/Installation

Figure 401

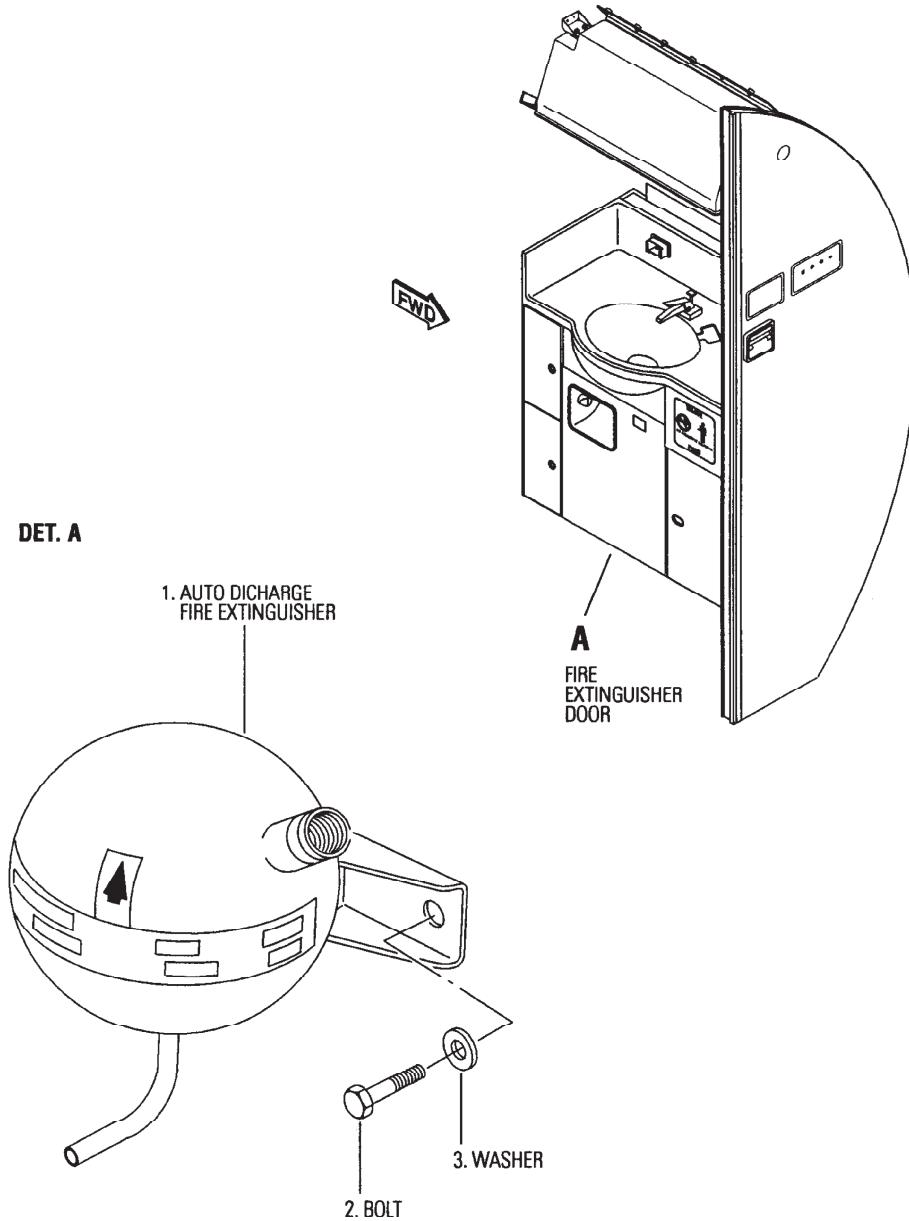

EM145AMM260291B.DGN



EMB145 – EMB135

AIRCRAFT
MAINTENANCE MANUAL

TASK 26-25-01-400-801-A

EFFECTIVITY: ALL

3. AUTODISCHARGE FIRE EXTINGUISHER - INSTALLATION

A. General

(1) This task gives procedures for the installation of the autodischarge fire extinguisher.

B. Zones and Accesses

Not Applicable

C. Tools and Equipment

Not Applicable

D. Auxiliary Items

Not Applicable

E. Consumable Materials

Not Applicable

F. Expandable Parts

Not Applicable

G. Persons Recommended

QTY	FUNCTION	PLACE
1	Performs the task	Passenger cabin

H. Installation of the Autodischarge Fire Extinguisher (Figure 401)

SUBTASK 420-002-A

(1) Install the autodischarge fire extinguisher (1) with the bolts (2) and the washer (3).