


TABLE OF CONTENTS

<u>PAGEBLOCK TASK</u>	<u>REVISION STATUS</u>	<u>REVISION DATE</u>
06-00-00/100 CONFIG-1 <i>EFFECTIVITY: ACFT MODEL(S) EMB-145</i> DIMENSIONS AND AREAS - COMPONENT LOCATION	U	Oct 30/15
06-00-00/100 CONFIG-2 <i>EFFECTIVITY: ACFT MODEL(S) EMB-135</i> DIMENSIONS AND AREAS - COMPONENT LOCATION	U	Oct 30/15
06-10-00/100 CONFIG-1 <i>EFFECTIVITY: ACFT MODEL(S) EMB-145</i> MAIN DIMENSIONS AND AREAS - COMPONENT LOCATION	U	Oct 30/15
06-10-00/100 CONFIG-2 <i>EFFECTIVITY: ACFT MODEL(S) EMB-135</i> MAIN DIMENSIONS AND AREAS - COMPONENT LOCATION	U	Oct 30/15
06-20-00/100 AIRCRAFT STATION DIAGRAM - COMPONENT LOCATION	U	Oct 30/15
06-21-00/100 CONFIG-1 <i>EFFECTIVITY: ACFT MODEL(S) EMB-145</i> BODY STATION DIAGRAM - COMPONENT LOCATION	U	Oct 30/15
06-21-00/100 CONFIG-2 <i>EFFECTIVITY: ACFT MODEL(S) EMB-135</i> BODY STATION DIAGRAM - COMPONENT LOCATION	U	Oct 30/15
06-22-00/100 CONFIG-1 <i>EFFECTIVITY: ACFT MODEL(S) EMB-145</i> VERTICAL STABILIZER STATION DIAGRAM - COMPONENT LOCATION	U	Oct 30/15
06-22-00/100 CONFIG-2 <i>EFFECTIVITY: ACFT MODEL(S) EMB-135</i> VERTICAL STABILIZER STATION DIAGRAM - COMPONENT LOCATION	U	Oct 30/15


Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted

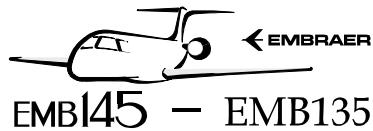

AIRCRAFT
MAINTENANCE MANUAL

<u>PAGEBLOCK TASK</u>	<u>REVISION STATUS</u>	<u>REVISION DATE</u>
06-23-00/100 CONFIG-1 <i>EFFECTIVITY: ACFT MODEL(S) EMB-145</i> HORIZONTAL STABILIZER STATION DIAGRAM - COMPONENT LOCATION	U	Oct 30/15
06-23-00/100 CONFIG-2 <i>EFFECTIVITY: ACFT MODEL(S) EMB-135</i> HORIZONTAL STABILIZER STATION DIAGRAM - COMPONENT LOCATION	U	Oct 30/15
06-24-00/100 CONFIG-1 <i>EFFECTIVITY: ACFT MODEL(S) EMB-145</i> WING STATION DIAGRAM - COMPONENT LOCATION	U	Oct 30/15
06-24-00/100 CONFIG-2 <i>EFFECTIVITY: ACFT MODEL(S) EMB-135</i> WING STATION DIAGRAM - COMPONENT LOCATION	U	Oct 30/15
06-25-00/100 CONFIG-1 <i>EFFECTIVITY: ACFT MODEL(S) EMB-145</i> NACELLE STATION DIAGRAM - COMPONENT LOCATION	U	Oct 30/15
06-25-00/100 CONFIG-2 <i>EFFECTIVITY: ACFT MODEL(S) EMB-135</i> NACELLE STATION DIAGRAM - COMPONENT LOCATION	U	Oct 30/15
06-26-00/100 CONFIG-1 <i>EFFECTIVITY: ACFT MODEL(S) EMB-145</i> PYLON STATION DIAGRAM - COMPONENT LOCATION	U	Oct 30/15
06-26-00/100 CONFIG-2 <i>EFFECTIVITY: ACFT MODEL(S) EMB-135</i> PYLON STATION DIAGRAM - COMPONENT LOCATION	U	Oct 30/15
06-30-00/100 CONFIG-1 <i>EFFECTIVITY: ACFT MODEL(S) EMB-145</i> AIRCRAFT ZONING - COMPONENT LOCATION	U	Oct 30/15
06-30-00/100 CONFIG-2 <i>EFFECTIVITY: ACFT MODEL(S) EMB-135</i> AIRCRAFT ZONING - COMPONENT LOCATION	U	Oct 30/15


Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted

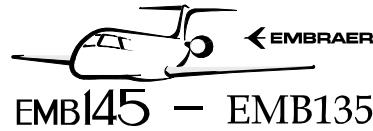

AIRCRAFT
MAINTENANCE MANUAL

PAGEBLOCK TASK	REVISION STATUS	REVISION DATE
06-40-00/100 ACCESS DOORS AND PANELS - COMPONENT LOCATION	U	Oct 30/15
06-41-00/100 CONFIG-1 <i>EFFECTIVITY: ACFT MODEL(S) EMB-145</i> FUSELAGE (MAJOR ZONES 100 AND 200) ACCESS DOORS AND PANELS - COMPONENT LOCATION	U	Feb 16/16
06-41-00/100 CONFIG-2 <i>EFFECTIVITY: ACFT MODEL(S) EMB-135</i> FUSELAGE (MAJOR ZONES 100 AND 200) ACCESS DOORS AND PANELS - COMPONENT LOCATION	U	Feb 16/16
06-41-01/100 CONFIG-1 <i>EFFECTIVITY: ACFT MODEL(S) EMB-145</i> FUSELAGE EXTERNAL ACCESS DOORS AND PANELS - COMPO- NENT LOCATION	U	Oct 30/15
06-41-01/100 CONFIG-2 <i>EFFECTIVITY: ACFT MODEL(S) EMB-135</i> FUSELAGE EXTERNAL ACCESS DOORS AND PANELS - COMPO- NENT LOCATION	U	Oct 30/15
06-41-02/100 CONFIG-1 <i>EFFECTIVITY: ACFT MODEL(S) EMB-145</i> FLOOR PANELS - COMPONENT LOCATION	U	Oct 30/15
06-41-02/100 CONFIG-2 <i>EFFECTIVITY: ACFT MODEL(S) EMB-135</i> FLOOR PANELS - COMPONENT LOCATION	U	Oct 30/15
06-41-03/100 COCKPIT INTERNAL PANELS - COMPONENT LOCATION	U	Oct 30/15
06-41-04/100 CONFIG-1 <i>EFFECTIVITY: ACFT MODEL(S) EMB-145</i> PASSENGER CABIN INTERNAL PANELS - COMPONENT LOCATION	U	Oct 30/15
06-41-04/100 CONFIG-2 <i>EFFECTIVITY: ACFT MODEL(S) EMB-135</i> PASSENGER CABIN INTERNAL PANELS - COMPONENT LOCATION	U	Oct 30/15

Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted

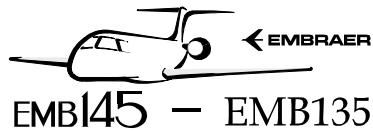

EMB145 - EMB135

AIRCRAFT
MAINTENANCE MANUAL

PAGEBLOCK TASK	REVISION STATUS	REVISION DATE
06-41-05/100 BAGGAGE COMPARTMENT INTERNAL PANELS - COMPONENT LOCATION	U	Oct 30/15
06-42-00/100 CONFIG-1 <i>EFFECTIVITY: ACFT MODEL(S) EMB-145</i> TAIL CONE AND EMPENNAGE GROUP (MAJOR ZONE 300) ACCESS DOORS AND PANELS - COMPONENT LOCATION	U	Oct 31/17
06-42-00/100 CONFIG-2 <i>EFFECTIVITY: ACFT MODEL(S) EMB-135</i> TAIL CONE AND EMPENNAGE GROUP (MAJOR ZONE 300) ACCESS DOORS AND PANELS - COMPONENT LOCATION	U	Oct 31/17
06-43-00/100 POWER PLANT AND NACELLE (MAJOR ZONE 400) ACCESS DOORS AND PANELS - COMPONENT LOCATION	U	Oct 30/15
06-44-00/100 WING (MAJOR ZONES 500 AND 600) - ACCESS DOORS AND PANELS - COMPONENT LOCATION	U	Apr 28/17
06-45-00/100 DOORS (MAJOR ZONE 800) - ACCESS DOORS AND PANELS - COMPONENT LOCATION	U	Oct 30/15

Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted

EMB-145 - AMM 1285

TOC

Chapter 06
Page 4 of 4
Rev 55 - Oct 29/18