

EMB145 - EMB135

AIRCRAFT  
MAINTENANCE MANUAL

## TABLE OF CONTENTS


<u>PAGEBLOCK TASK</u>	<u>REVISION STATUS</u>	<u>REVISION DATE</u>
33-11-00/500 COCKPIT LIGHTS - ADJUSTMENT/TEST	U	Oct 30/15
33-11-00-700-801-A COCKPIT LIGHTS - OPERATIONAL TEST	U	Oct 30/15
33-11-01/400 DOME LIGHT - REMOVAL/INSTALLATION	U	Oct 30/15
33-11-01-000-801-A DOME LIGHT LAMP - REMOVAL	U	Oct 30/15
33-11-01-400-801-A DOME LIGHT LAMP - INSTALLATION	U	Oct 30/15
33-11-02/400 DOME LIGHT REFLECTOR - REMOVAL/INSTALLATION	U	Oct 30/15
33-11-02-000-801-A DOME LIGHT REFLECTOR - REMOVAL	U	Oct 30/15
33-11-02-400-801-A DOME LIGHT REFLECTOR - INSTALLATION	U	Oct 30/15
33-11-03/400 READING LIGHT - REMOVAL/INSTALLATION	U	Oct 30/15
33-11-03-000-801-A READING LIGHT LAMP - REMOVAL	U	Oct 30/15
33-11-03-400-801-A READING LIGHT LAMP - INSTALLATION	U	Oct 30/15
33-11-04/400 READING LIGHT ASSEMBLY - REMOVAL/INSTALLATION	U	Oct 30/15
33-11-04-000-801-A <i>EFFECTIVITY: AIRCRAFT WITHOUT HEAD-UP DISPLAY</i> READING LIGHT MOUNTING BASE - REMOVAL	U	Oct 30/15
33-11-04-400-801-A <i>EFFECTIVITY: AIRCRAFT WITHOUT HEAD-UP DISPLAY</i> READING LIGHT MOUNTING BASE - INSTALLATION	U	Oct 30/15

Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted

EMB-145 - AMM 1285

TOC

Chapter 33  
Page 1 of 24  
Rev 55 - Oct 29/18

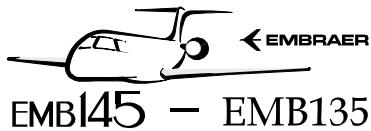

EMB145 - EMB135

AIRCRAFT  
MAINTENANCE MANUAL


PAGEBLOCK TASK	REVISION STATUS	REVISION DATE
33-11-04-000-802-A <i>EFFECTIVITY: AIRCRAFT WITH HEAD-UP DISPLAY READING LIGHT ASSEMBLY - REMOVAL</i>	U	Oct 30/15
33-11-04-400-802-A <i>EFFECTIVITY: AIRCRAFT WITH HEAD-UP DISPLAY READING LIGHT ASSEMBLY - INSTALLATION</i>	U	Oct 30/15
33-11-06/400 CHART HOLDER LAMPS - REMOVAL/INSTALLATION	U	Oct 30/15
33-11-06-000-801-A CHART HOLDER LAMPS - REMOVAL	U	Oct 30/15
33-11-06-400-801-A CHART HOLDER LAMPS - INSTALLATION	U	Oct 30/15
33-12-00/500 INSTRUMENT AND CONTROL PANEL LIGHTS - ADJUSTMENT/TEST	U	Oct 30/15
33-12-00-700-801-A INSTRUMENT AND CONTROL PANEL LIGHTS - OPERATIONAL TEST	U	Oct 30/15
33-12-00-700-802-A <i>EFFECTIVITY: AIRCRAFT WITH PUSHBUTTON-LIGHTING TEST SWITCH COCKPIT PUSHBUTTON LIGHTING - OPERATIONAL CHECK</i>	U	Oct 30/15
33-12-01/400 PANEL LIGHTING DIMMER - REMOVAL/INSTALLATION	U	Oct 30/15
33-12-01-000-801-A DIMMER - REMOVAL	U	Oct 30/15
33-12-01-400-801-A DIMMER - INSTALLATION	U	Oct 30/15
33-15-00/500 FLOOD/STORM LIGHTS - ADJUSTMENT/TEST	U	Oct 30/15
33-15-00-700-801-A FLOOD/STORM LIGHTS - OPERATIONAL CHECK	U	Oct 30/15
33-15-02/400 FLOOD/STORM LIGHT INVERTER - REMOVAL/INSTALLATION	U	Oct 30/15

Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted

EMB-145 - AMM 1285

TOC

Chapter 33  
Page 2 of 24  
Rev 55 - Oct 29/18

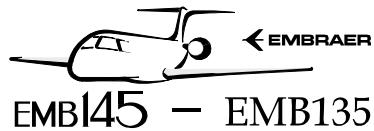

EMB145 - EMB135

AIRCRAFT  
MAINTENANCE MANUAL


PAGEBLOCK TASK	REVISION STATUS	REVISION DATE
33-15-02-000-801-A FLOOD/STORM LIGHT INVERTER - REMOVAL	U	Oct 30/15
33-15-02-400-801-A FLOOD/STORM LIGHT INVERTER - INSTALLATION	U	Oct 30/15
33-15-03/400 FLOOD/STORM LIGHT ASSEMBLY - REMOVAL/INSTALLATION	U	Oct 30/15
33-15-03-000-801-A FLOOD/STORM LIGHT ASSEMBLY - REMOVAL	U	Oct 30/15
33-15-03-400-801-A FLOOD/STORM LIGHT ASSEMBLY - INSTALLATION	U	Oct 30/15
33-21-00/500 PASSENGER CABIN LIGHTS - ADJUSTMENT/TEST	U	Oct 30/15
33-21-00-700-801-A PASSENGER CABIN LIGHTS - OPERATIONAL TEST	U	Oct 30/15
33-21-01/400 CONTROL MODULE ASSEMBLY - REMOVAL/INSTALLATION	U	Oct 30/15
33-21-01-000-801-A CONTROL MODULE ASSEMBLY - REMOVAL	U	Oct 30/15
33-21-01-400-801-A CONTROL MODULE ASSEMBLY - INSTALLATION	U	Oct 30/15
33-21-01/500 CONTROL MODULE ASSEMBLY - ADJUSTMENT/TEST	U	Oct 30/15
33-21-01-700-801-A CONTROL MODULE ASSEMBLY - OPERATIONAL TEST	U	Oct 30/15
33-21-03/400 CONFIG-1 <i>EFFECTIVITY: ACFT MODEL(S) EMB-145</i> LH SIDEWALL BALLASTS - REMOVAL/INSTALLATION	U	Oct 30/15
33-21-03-000-801-A CONFIG-1 <i>EFFECTIVITY: ACFT MODEL(S) EMB-145</i> LH SIDEWALL BALLASTS - REMOVAL	U	Oct 30/15
33-21-03-400-801-A CONFIG-1 <i>EFFECTIVITY: ACFT MODEL(S) EMB-145</i> LH SIDEWALL BALLASTS - INSTALLATION	U	Oct 30/15

Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted

EMB-145 - AMM 1285

TOC


Chapter 33  
Page 3 of 24  
Rev 55 - Oct 29/18

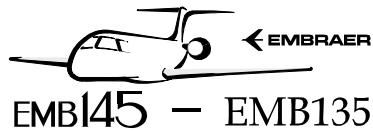

AIRCRAFT  
MAINTENANCE MANUAL

PAGEBLOCK TASK	REVISION STATUS	REVISION DATE
33-21-03/400 CONFIG-2 <i>EFFECTIVITY: ACFT MODEL(S) EMB-135</i> LH SIDEWALL BALLASTS - REMOVAL/INSTALLATION	U	Oct 30/15
33-21-03-000-801-A CONFIG-2 <i>EFFECTIVITY: ACFT MODEL(S) EMB-135</i> LH SIDEWALL BALLASTS - REMOVAL	U	Oct 30/15
33-21-03-400-801-A CONFIG-2 <i>EFFECTIVITY: ACFT MODEL(S) EMB-135</i> LH SIDEWALL BALLASTS - INSTALLATION	U	Oct 30/15
<b>33-21-04/400</b> RH SIDEWALL BALLASTS - REMOVAL/INSTALLATION	U	Oct 30/15
33-21-04-000-801-A RH SIDEWALL BALLASTS - REMOVAL	U	Oct 30/15
<b>33-21-04-400-801-A</b> RH SIDEWALL BALLASTS - INSTALLATION	U	Oct 30/15
33-21-05/400 CONFIG-1 <i>EFFECTIVITY: ACFT MODEL(S) EMB-145</i> CEILING BALLASTS - REMOVAL/INSTALLATION	U	Oct 30/15
33-21-05-000-801-A CONFIG-1 <i>EFFECTIVITY: ACFT MODEL(S) EMB-145</i> CEILING BALLASTS - REMOVAL	U	Oct 30/15
33-21-05-400-801-A CONFIG-1 <i>EFFECTIVITY: ACFT MODEL(S) EMB-145</i> CEILING BALLASTS - INSTALLATION	U	Oct 30/15
33-21-05/400 CONFIG-2 <i>EFFECTIVITY: ACFT MODEL(S) EMB-135</i> CEILING BALLASTS - REMOVAL/INSTALLATION	U	Oct 30/15
33-21-05-000-801-A CONFIG-2 <i>EFFECTIVITY: ACFT MODEL(S) EMB-135</i> CEILING BALLASTS - REMOVAL	U	Oct 30/15
33-21-05-400-801-A CONFIG-2 <i>EFFECTIVITY: ACFT MODEL(S) EMB-135</i> CEILING BALLASTS - INSTALLATION	U	Oct 30/15
<b>33-21-06/400</b> PASSENGER CABIN LIGHT - REMOVAL/INSTALLATION	U	Oct 30/15

Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted

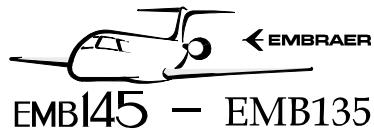


EMB145 - EMB135

AIRCRAFT  
MAINTENANCE MANUAL

PAGEBLOCK TASK	REVISION STATUS	REVISION DATE
33-21-06-000-801-A PASSENGER CABIN LIGHT ASSEMBLIES - REMOVAL	U	Apr 29/16
33-21-06-400-801-A PASSENGER-CABIN LIGHT ASSEMBLIES - INSTALLATION	U	Apr 29/16
33-21-06-000-802-A PASSENGER-CABIN FLUORESCENT LAMPS - REMOVAL	U	Oct 30/15
33-21-06-400-802-A PASSENGER-CABIN FLUORESCENT LAMPS - INSTALLATION	U	Oct 30/15
33-23-00/400 PASSENGER WARNING SIGNS - REMOVAL/INSTALLATION	U	Oct 30/15
33-23-00-000-801-A NO SMOKING/FASTEN SEAT BELT SIGNS - DEACTIVATION	U	Oct 30/15
33-23-00-400-801-A NO SMOKING/FASTEN SEAT BELT SIGNS - REACTIVATION	U	Oct 30/15
33-23-00/500 PASSENGER WARNING SIGNS - ADJUSTMENT/TEST	U	Oct 30/15
33-23-00-700-801-A PASSENGER WARNING SIGNS - OPERATIONAL TEST	U	Oct 30/15
33-23-01/400 NO-SMOKING SWITCH - REMOVAL/INSTALLATION	U	Oct 30/15
33-23-01-000-801-A NO-SMOKING SWITCH - REMOVAL	U	Oct 30/15
33-23-01-400-801-A NO-SMOKING SWITCH - INSTALLATION	U	Oct 30/15
33-23-02/400 NO-SMOKING SIGN - REMOVAL/INSTALLATION	U	Oct 30/15
33-23-02-000-801-A NO SMOKING SIGN - REMOVAL	U	Oct 30/15
33-23-02-400-801-A NO SMOKING SIGN - INSTALLATION	U	Oct 30/15
33-23-03/400 FASTEN-SEAT-BELT SWITCH - REMOVAL/INSTALLATION	U	Oct 30/15

Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted

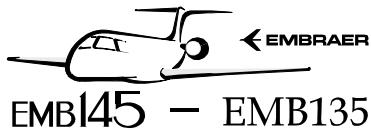

EMB145 - EMB135

AIRCRAFT  
MAINTENANCE MANUAL


PAGEBLOCK TASK	REVISION STATUS	REVISION DATE
33-23-03-000-801-A FASTEN-SEAT-BELT SWITCH - REMOVAL	U	Oct 30/15
33-23-03-400-801-A FASTEN-SEAT-BELT SWITCH - INSTALLATION	U	Oct 30/15
33-23-04/400 FASTEN SEAT BELT SIGN - REMOVAL/INSTALLATION	U	Oct 30/15
33-23-04-000-801-A FASTEN SEAT BELT SIGN - REMOVAL	U	Oct 30/15
33-23-04-400-801-A FASTEN SEAT BELT SIGN - INSTALLATION	U	Oct 30/15
33-23-05/400 RETURN-TO-SEAT SIGN - REMOVAL/INSTALLATION	U	Oct 30/15
33-23-05-000-801-A RETURN-TO-SEAT SIGN LAMP - REMOVAL	U	Oct 30/15
33-23-05-400-801-A RETURN-TO-SEAT SIGN LAMP - INSTALLATION	U	Oct 30/15
33-23-05-000-802-A RETURN-TO-SEAT SIGN ASSEMBLY - REMOVAL	U	Oct 30/15
33-23-05-400-802-A RETURN-TO-SEAT SIGN ASSEMBLY - INSTALLATION	U	Oct 30/15
33-23-06/400 DOOR-LATCH ENGAGE SWITCH - REMOVAL/INSTALLATION	U	Oct 30/15
33-23-06-000-801-A DOOR-LATCH ENGAGE SWITCH - REMOVAL	U	Oct 30/15
33-23-06-400-801-A DOOR-LATCH ENGAGE SWITCH - INSTALLATION	U	Oct 30/15
33-23-07/400 LAVATORY OCCUPIED SIGN - REMOVAL/INSTALLATION	U	Oct 30/15
33-23-07-000-801-A LAVATORY OCCUPIED SIGN - REMOVAL	U	Oct 30/15
33-23-07-400-801-A LAVATORY OCCUPIED SIGN - INSTALLATION	U	Oct 30/15

Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted

EMB-145 - AMM 1285

TOC


Chapter 33  
Page 6 of 24  
Rev 55 - Oct 29/18

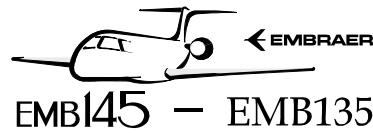

AIRCRAFT  
MAINTENANCE MANUAL

PAGEBLOCK TASK	REVISION STATUS	REVISION DATE
33-23-08/400 <i>EFFECTIVITY: AIRCRAFT WITH STERILE LIGHT</i> STERILE LIGHT - REMOVAL/INSTALLATION	U	Oct 30/15
33-23-08-000-801-A <i>EFFECTIVITY: AIRCRAFT WITH STERILE LIGHT</i> STERILE LIGHT ASSEMBLY AND LAMP - REMOVAL	U	Oct 30/15
33-23-08-400-801-A <i>EFFECTIVITY: AIRCRAFT WITH STERILE LIGHT</i> STERILE LIGHT ASSEMBLY AND LAMP - INSTALLATION	U	Oct 30/15
33-25-00/500 READING AND ATTENDANT CALL LIGHTS - ADJUSTMENT/TEST	U	Oct 30/15
33-25-00-700-801-A READING AND ATTENDANT CALL LIGHTS (1) - OPERATIONAL TEST	U	Oct 30/15
33-25-01/400 PSU SWITCH ASSEMBLY - REMOVAL/INSTALLATION	U	Oct 30/15
33-25-01-000-801-A PSU SWITCH ASSEMBLY - REMOVAL	U	Oct 30/15
33-25-01-400-801-A PSU SWITCH ASSEMBLY - INSTALLATION	U	Oct 30/15
33-25-02/400 PSU READING LIGHT - REMOVAL/INSTALLATION	U	Oct 30/15
33-25-02-000-801-A PSU READING LIGHT LAMP - REMOVAL	U	Oct 30/15
33-25-02-400-801-A PSU READING LIGHT LAMP - INSTALLATION	U	Oct 30/15
33-25-02-000-802-A PSU READING LIGHT ASSEMBLY - REMOVAL	U	Oct 30/15
33-25-02-400-802-A PSU READING LIGHT ASSEMBLY - INSTALLATION	U	Oct 30/15
33-25-03/400 ATTENDANT CALL SWITCH ASSEMBLY - REMOVAL/INSTALLATION	U	Oct 30/15
33-25-03-000-801-A ATTENDANT CALL SWITCH ASSEMBLY - REMOVAL	U	Oct 30/15


Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted

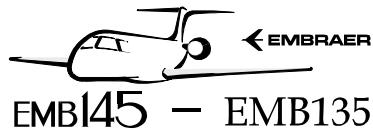

AIRCRAFT  
MAINTENANCE MANUAL

PAGEBLOCK TASK	REVISION STATUS	REVISION DATE
33-25-03-400-801-A ATTENDANT CALL SWITCH ASSEMBLY - INSTALLATION	U	Oct 30/15
33-25-04/400 PSU PRINTED CIRCUIT BOARD (PCB) - REMOVAL/INSTALLATION	U	Oct 30/15
33-25-04-000-801-A PSU PRINTED CIRCUIT BOARD (PCB) - REMOVAL	U	Oct 30/15
33-25-04-400-801-A PSU PRINTED CIRCUIT BOARD (PCB) - INSTALLATION	U	Oct 30/15
33-25-05/400 ZONAL-ATTENDANT-CALL ANNUNCIATOR - REMOVAL/INSTALLA-TION	U	Oct 30/15
33-25-05-000-801-A ZONAL-ATTENDANT-CALL ANNUNCIATOR - REMOVAL	U	Oct 30/15
33-25-05-400-801-A ZONAL-ATTENDANT-CALL ANNUNCIATOR - INSTALLATION	U	Oct 30/15
33-25-07/400 ATTENDANT-CALL PANEL ASSEMBLY - REMOVAL/INSTALLATION	U	Oct 30/15
33-25-07-000-801-A ATTENDANT-CALL PANEL ASSEMBLY - REMOVAL	U	Oct 30/15
33-25-07-400-801-A ATTENDANT CALL-PANEL ASSEMBLY - INSTALLATION	U	Oct 30/15
33-25-08/400 LAVATORY ATTENDANT CALL SWITCH BOX - REMOVAL/INSTALLA-TION	U	Oct 30/15
33-25-08-000-801-A LAVATORY ATTENDANT CALL SWITCH BOX - REMOVAL	U	Oct 30/15
33-25-08-400-801-A LAVATORY ATTENDANT CALL SWITCH BOX - INSTALLATION	U	Oct 30/15
33-26-00/500 COURTESY/STAIR LIGHTS - ADJUSTMENT/TEST	U	Oct 30/15
33-26-00-700-801-A COURTESY/STAIR LIGHTS - OPERATIONAL TEST	U	Oct 30/15

Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted

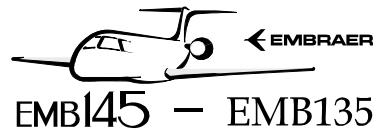


EMB145 - EMB135

AIRCRAFT  
MAINTENANCE MANUAL

PAGEBLOCK <u>TASK</u>	<u>REVISION STATUS</u>	<u>REVISION DATE</u>
33-26-01/400 ENTRANCE PANEL ASSEMBLY - REMOVAL/INSTALLATION	U	Oct 30/15
33-26-01-000-801-A ENTRANCE PANEL - REMOVAL	U	Oct 30/15
33-26-01-400-801-A ENTRANCE PANEL - INSTALLATION	U	Oct 30/15
33-26-03/400 <i>EFFECTIVITY: FOR AIRCRAFT WITH AIRSTAIR DOOR</i> MAIN-DOOR STAIR LIGHT ASSEMBLY - REMOVAL/INSTALLATION	U	Oct 30/15
33-26-03-000-801-A <i>EFFECTIVITY: FOR AIRCRAFT WITH AIRSTAIR DOOR</i> MAIN-DOOR STAIR LIGHT ASSEMBLY - REMOVAL	U	Oct 30/15
33-26-03-400-801-A <i>EFFECTIVITY: FOR AIRCRAFT WITH AIRSTAIR DOOR</i> MAIN-DOOR STAIR LIGHT ASSEMBLY - INSTALLATION	U	Oct 30/15
33-26-03-000-802-A <i>EFFECTIVITY: FOR AIRCRAFT WITH REMOVABLE STAIR LIGHT LENS</i> MAIN-DOOR STAIR LIGHT LENS - REMOVAL	U	Oct 30/15
33-26-03-400-802-A <i>EFFECTIVITY: FOR AIRCRAFT WITH REMOVABLE STAIR LIGHT LENS</i> MAIN-DOOR STAIR LIGHT LENS - INSTALLATION	U	Oct 30/15
33-26-04/400 MAIN-DOOR COURTESY LIGHT - REMOVAL/INSTALLATION	U	Oct 30/15
33-26-04-000-801-A MAIN-DOOR COURTESY-LIGHT LAMP - REMOVAL	U	Oct 30/15
33-26-04-400-801-A MAIN-DOOR COURTESY-LIGHT LAMP - INSTALLATION	U	Oct 30/15
33-26-04-000-802-A MAIN-DOOR COURTESY-LIGHT ASSEMBLY - REMOVAL	U	Oct 30/15
33-26-04-400-802-A MAIN-DOOR COURTESY-LIGHT ASSEMBLY - INSTALLATION	U	Oct 30/15
33-26-05/400 SERVICE-DOOR COURTESY LIGHT - REMOVAL/INSTALLATION	U	Oct 30/15

Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted

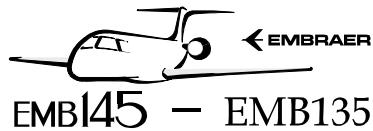

EMB145 - EMB135

AIRCRAFT  
MAINTENANCE MANUAL


PAGEBLOCK TASK	REVISION STATUS	REVISION DATE
33-26-05-000-801-A SERVICE-DOOR COURTESY-LIGHT LAMP - REMOVAL	U	Oct 30/15
33-26-05-400-801-A SERVICE-DOOR COURTESY-LIGHT LAMP - INSTALLATION	U	Oct 30/15
33-26-05-000-802-A SERVICE-DOOR COURTESY-LIGHT ASSEMBLY - REMOVAL	U	Oct 30/15
33-26-05-400-802-A SERVICE-DOOR COURTESY-LIGHT ASSEMBLY - INSTALLATION	U	Oct 30/15
33-26-06/400 COCKPIT STEP LIGHT - REMOVAL/INSTALLATION	U	Oct 30/15
33-26-06-000-801-A COCKPIT STEP LIGHT - REMOVAL	U	Oct 30/15
33-26-06-400-801-A COCKPIT STEP LIGHT - INSTALLATION	U	Oct 30/15
33-26-07/400 COURTESY LIGHT MICROSWITCH - REMOVAL/INSTALLATION	U	Oct 30/15
33-26-07-000-801-A COURTESY-LIGHT MICROSWITCH ASSEMBLY - REMOVAL	U	Oct 30/15
33-26-07-400-801-A COURTESY-LIGHT MICROSWITCH ASSEMBLY - INSTALLATION	U	Oct 30/15
33-28-00/500 LAVATORY LIGHTS - ADJUSTMENT/TEST	U	Oct 30/15
33-28-00-700-801-A LAVATORY LIGHTS - OPERATIONAL TEST	U	Oct 30/15
33-28-01/400 LAVATORY DOME LIGHT - REMOVAL/INSTALLATION	U	Oct 30/15
33-28-01-000-801-A LAVATORY DOME-LIGHT LAMP - REMOVAL	U	Oct 30/15
33-28-01-400-801-A LAVATORY DOME-LIGHT LAMP - INSTALLATION	U	Oct 30/15
33-28-01-000-802-A LAVATORY DOME-LIGHT ASSEMBLY - REMOVAL	U	Oct 30/15

Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted

EMB-145 - AMM 1285

TOC

Chapter 33  
Page 10 of 24  
Rev 55 - Oct 29/18

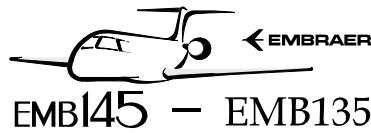

EMB145 - EMB135

AIRCRAFT  
MAINTENANCE MANUAL


PAGEBLOCK TASK	REVISION STATUS	REVISION DATE
33-28-01-400-802-A LAVATORY DOME-LIGHT ASSEMBLY - INSTALLATION	U	Oct 30/15
33-28-02/400 LAVATORY LIGHT BALLAST - REMOVAL/INSTALLATION	U	Oct 30/15
33-28-02-000-801-A LAVATORY LIGHT BALLAST - REMOVAL	U	Oct 30/15
33-28-02-400-801-A LAVATORY LIGHT BALLAST - INSTALLATION	U	Oct 30/15
33-28-03/400 LAVATORY LIGHTS - REMOVAL/INSTALLATION	U	Oct 30/15
33-28-03-000-801-A LAVATORY LIGHTS - REMOVAL	U	Oct 30/15
33-28-03-400-801-A LAVATORY LIGHTS - INSTALLATION	U	Oct 30/15
33-29-00/500 GALLEY LIGHTS - ADJUSTMENT/TEST	U	Oct 30/15
33-29-00-700-801-A GALLEY LIGHTS - OPERATIONAL TEST	U	Oct 30/15
33-29-01/400 GALLEY CONTROL MODULE - REMOVAL/INSTALLATION	U	Oct 30/15
33-29-01-000-801-A GALLEY CONTROL MODULE - REMOVAL	U	Oct 30/15
33-29-01-400-801-A GALLEY CONTROL MODULE - INSTALLATION	U	Oct 30/15
33-29-03/400 GALLEY LIGHTS - REMOVAL/INSTALLATION	U	Oct 30/15
33-29-03-000-801-A GALLEY LIGHT LAMP - REMOVAL	U	Oct 30/15
33-29-03-400-801-A GALLEY LIGHT LAMP - INSTALLATION	U	Oct 30/15
33-29-03-000-802-A GALLEY LIGHT ASSEMBLY - REMOVAL	U	Oct 30/15

Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted

EMB-145 - AMM 1285

TOC


Chapter 33  
Page 11 of 24  
Rev 55 - Oct 29/18

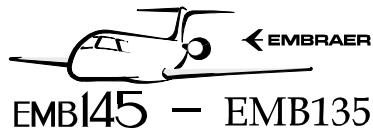

AIRCRAFT  
MAINTENANCE MANUAL

PAGEBLOCK <u>TASK</u>	<u>REVISION STATUS</u>	<u>REVISION DATE</u>
33-29-03-400-802-A GALLEY LIGHT ASSEMBLY - INSTALLATION	U	Oct 30/15
33-29-05/400 GALLEY LIGHT BALLASTS - REMOVAL/INSTALLATION	U	Oct 30/15
33-29-05-000-801-A GALLEY LIGHT BALLASTS - REMOVAL	U	Oct 30/15
33-29-05-400-801-A GALLEY LIGHT BALLASTS - INSTALLATION	U	Oct 30/15
33-30-00/500 BAGGAGE AND SERVICE COMPARTMENTS - ADJUSTMENT/TEST	U	Oct 30/15
33-30-00-700-801-A BAGGAGE AND SERVICE COMPARTMENT LIGHTS - OPERATIONAL TEST	U	Oct 30/15
33-30-01/400 COMPARTMENT LIGHT ASSEMBLY LAMP - REMOVAL/INSTALLATION	U	Oct 30/15
33-30-01-000-801-A COMPARTMENT LIGHT ASSEMBLY LAMP - REMOVAL (TYPICAL)	U	Oct 30/15
33-30-01-400-801-A COMPARTMENT LIGHT ASSEMBLY LAMP - INSTALLATION (TYPICAL)	U	Oct 30/15
33-30-02/400 COMPARTMENT LIGHT SWITCH REFLECTOR - REMOVAL/INSTALLATION	U	Oct 30/15
33-30-02-000-801-A COMPARTMENT LIGHT REFLECTOR - REMOVAL (TYPICAL)	U	Oct 30/15
33-30-02-400-801-A COMPARTMENT LIGHT ASSEMBLY REFLECTOR - INSTALLATION (TYPICAL)	U	Oct 30/15
33-31-01/400 BAGGAGE LIGHT - REMOVAL/INSTALLATION	U	Oct 30/15
33-31-01-000-801-A BAGGAGE LIGHT LAMP - REMOVAL	U	Oct 30/15


Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted

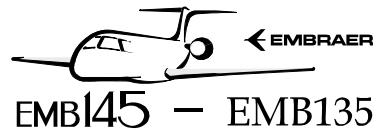

AIRCRAFT  
MAINTENANCE MANUAL

PAGEBLOCK TASK	REVISION STATUS	REVISION DATE
33-31-01-400-801-A BAGGAGE LIGHT LAMP - INSTALLATION	U	Oct 30/15
33-31-01-000-802-A BAGGAGE LIGHT ASSEMBLY - REMOVAL	U	Oct 30/15
33-31-01-400-802-A BAGGAGE LIGHT ASSEMBLY - INSTALLATION	U	Oct 30/15
33-31-02/400 <i>EFFECTIVITY: AIRCRAFT WITH BAGGAGE-DOOR EXTERNAL LIGHT</i> BAGGAGE-DOOR EXTERNAL LIGHT - REMOVAL/INSTALLATION	U	Oct 30/15
33-31-02-000-801-A <i>EFFECTIVITY: AIRCRAFT WITH BAGGAGE-DOOR EXTERNAL LIGHT</i> BAGGAGE-DOOR EXTERNAL LIGHT - REMOVAL	U	Oct 30/15
33-31-02-400-801-A <i>EFFECTIVITY: AIRCRAFT WITH BAGGAGE-DOOR EXTERNAL LIGHT</i> BAGGAGE-DOOR EXTERNAL LIGHT - INSTALLATION	U	Oct 30/15
33-31-05/400 <i>EFFECTIVITY: FOR AIRCRAFT WITH BAGGAGE COMPARTMENT LIGHT</i> LAVATORY SWITCH BAGGAGE COMPARTMENT LIGHT LAVATORY SWITCH - REMOVAL/ INSTALLATION	U	Oct 30/15
33-31-05-000-801-A <i>EFFECTIVITY: FOR AIRCRAFT WITH BAGGAGE COMPARTMENT</i> LIGHT LAVATORY SWITCH BAGGAGE COMPARTMENT LIGHT LAVATORY SWITCH - REMOVAL	U	Oct 30/15
33-31-05-400-801-A <i>EFFECTIVITY: FOR AIRCRAFT WITH BAGGAGE COMPARTMENT</i> LIGHT LAVATORY SWITCH BAGGAGE COMPARTMENT LIGHT LAVATORY SWITCH - INSTALLA- TION	U	Oct 30/15
33-41-00/500 LANDING LIGHTS - ADJUSTMENT/TEST	U	Oct 30/15
33-41-00-700-801-A LANDING LIGHTS - OPERATIONAL TEST	U	Oct 30/15
33-41-02/400 LANDING LIGHT LAMP - REMOVAL/INSTALLATION	U	Oct 30/15


Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted

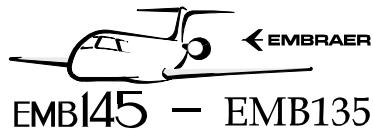

AIRCRAFT  
MAINTENANCE MANUAL

PAGEBLOCK TASK	REVISION STATUS	REVISION DATE
33-41-02-000-801-A LANDING LIGHT LAMP - REMOVAL	U	Oct 30/15
33-41-02-400-801-A LANDING LIGHT LAMP - INSTALLATION	U	Oct 30/15
33-41-02-000-802-A LANDING LIGHT ASSEMBLY - REMOVAL	U	Oct 30/15
33-41-02-400-802-A LANDING LIGHT ASSEMBLY - INSTALLATION	U	Oct 30/15
33-41-03/400 LANDING LIGHT CONTACTOR - REMOVAL/INSTALLATION	U	Oct 30/15
33-41-03-000-801-A LANDING LIGHT CONTACTOR - REMOVAL	U	Oct 30/15
33-41-03-400-801-A LANDING LIGHT CONTACTOR - INSTALLATION	U	Oct 30/15
33-42-00/500 TAXI LIGHTS - ADJUSTMENT/TEST	U	Oct 30/15
33-42-00-700-801-A TAXI LIGHTS - OPERATIONAL TEST	U	Oct 30/15
33-42-02/400 NOSE LANDING GEAR TAXI LIGHT - REMOVAL/INSTALLATION	U	Oct 30/15
33-42-02-000-801-A NOSE-LANDING-GEAR TAXI LIGHT LAMP - REMOVAL	U	Oct 30/15
33-42-02-400-801-A NOSE-LANDING-GEAR TAXI LIGHT LAMP - INSTALLATION	U	Oct 30/15
33-42-02-000-802-A NOSE-LANDING-GEAR TAXI LIGHT ASSEMBLY - REMOVAL	U	Oct 30/15
33-42-02-400-802-A NOSE-LANDING-GEAR TAXI LIGHT ASSEMBLY - INSTALLATION	U	Oct 30/15
33-42-03/400 TAXI LIGHT CONTACTOR - REMOVAL/INSTALLATION	U	Oct 30/15
33-42-03-000-801-A TAXI LIGHT CONTACTOR - REMOVAL	U	Oct 30/15


Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted

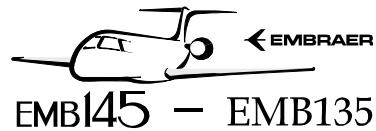

AIRCRAFT  
MAINTENANCE MANUAL

PAGEBLOCK TASK	REVISION STATUS	REVISION DATE
33-42-03-400-801-A TAXI LIGHT CONTACTOR - INSTALLATION	U	Oct 30/15
33-43-00/500 NAVIGATION LIGHTS - ADJUSTMENT/TEST	U	Oct 30/15
33-43-00-700-801-A NAVIGATION LIGHTS - OPERATIONAL TEST	U	Oct 30/15
33-43-03/400 MAIN/STANDBY WING NAVIGATION LIGHTS - REMOVAL/INSTALLA- TION	U	Oct 30/15
33-43-03-000-801-A MAIN/STANDBY WING NAVIGATION LIGHT LAMPS - REMOVAL	U	Oct 30/15
33-43-03-400-801-A MAIN/STANDBY WING NAVIGATION LIGHT LAMPS - INSTALLATION	U	Oct 30/15
33-43-03-000-802-A MAIN/STANDBY WING NAVIGATION LIGHT ASSEMBLIES - REMOV- AL	U	Oct 30/15
33-43-03-400-802-A MAIN/STANDBY WING NAVIGATION LIGHT ASSEMBLIES - INSTAL- LATION	U	Oct 30/15
33-43-05/400 MAIN/STANDBY REAR NAVIGATION LIGHTS - REMOVAL/INSTALLA- TION	U	Oct 30/15
33-43-05-000-801-A MAIN/STANDBY REAR NAVIGATION LIGHT LAMPS - REMOVAL	U	Oct 30/15
33-43-05-400-801-A MAIN/STANDBY REAR NAVIGATION LIGHT LAMPS - INSTALLATION	U	Oct 30/15
33-43-05-000-802-A MAIN/STANDBY REAR NAVIGATION LIGHT ASSEMBLIES - REMOV- AL	U	Oct 30/15
33-43-05-400-802-A MAIN/STANDBY REAR NAVIGATION LIGHT ASSEMBLIES - INSTAL- LATION	U	Oct 30/15
33-44-00/500 INSPECTION LIGHTS - ADJUSTMENT/TEST	U	Oct 30/15

Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted

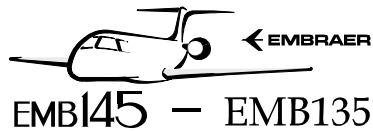


AIRCRAFT  
MAINTENANCE MANUAL

PAGEBLOCK TASK	REVISION STATUS	REVISION DATE
33-44-00-700-801-A INSPECTION LIGHTS - OPERATIONAL TEST	U	Oct 30/15
33-44-02/400 INSPECTION LIGHTS - REMOVAL/INSTALLATION	U	Oct 30/15
33-44-02-000-801-A INSPECTION LIGHTS - REMOVAL	U	Oct 30/15
33-44-02-400-801-A INSPECTION LIGHTS - INSTALLATION	U	Oct 30/15
33-46-00/500 LOGOTYPE LIGHTS - ADJUSTMENT/TEST	U	Oct 30/15
33-46-00-700-801-A LOGOTYPE LIGHTS - OPERATIONAL TEST	U	Oct 30/15
33-46-02/400 LOGOTYPE LIGHT LAMP - REMOVAL/INSTALLATION	U	Oct 30/15
33-46-02-000-801-A LOGOTYPE LIGHTS - REMOVAL	U	Oct 30/15
33-46-02-400-801-A LOGOTYPE LIGHTS - INSTALLATION	U	Oct 30/15
33-47-00/500 ANTICOLLISION LIGHTS - ADJUSTMENT/TEST	U	Oct 30/15
33-47-00-700-801-A ANTICOLLISION LIGHTS - OPERATIONAL TEST	U	Oct 30/15
33-47-02/400 STROBE LIGHT POWER SUPPLY - REMOVAL/INSTALLATION	U	Oct 30/15
33-47-02-000-801-A STROBE LIGHT POWER SUPPLIES - REMOVAL	U	Oct 30/15
33-47-02-400-801-A STROBE-LIGHT POWER SUPPLIES - INSTALLATION	U	Oct 30/15
33-47-03/400 STROBE LIGHTS - REMOVAL/INSTALLATION	U	Oct 30/15
33-47-03-000-801-A STROBE LIGHTS - REMOVAL	U	Oct 30/15

Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted

<b>PAGEBLOCK TASK</b>	<b>REVISION STATUS</b>	<b>REVISION DATE</b>
33-47-03-400-801-A STROBE LIGHTS - INSTALLATION	U	Oct 30/15
33-47-03/500 STROBE LIGHTS - ADJUSTMENT/TEST	U	Oct 30/15
33-47-03-700-801-A STROBE LIGHTS - FUNCTIONAL CHECK	U	Oct 30/15
33-47-05/400 RED BEACON LIGHTS - REMOVAL/INSTALLATION	U	Oct 30/15
33-47-05-000-801-A RED BEACON LIGHT ASSEMBLY - REMOVAL	U	Apr 29/16
33-47-05-400-801-A RED BEACON LIGHT ASSEMBLY - INSTALLATION	U	Apr 29/16
33-47-05-000-802-A RED BEACON LIGHT LENS - REMOVAL	U	Oct 30/15
33-47-05-400-802-A RED BEACON LIGHT LENS - INSTALLATION	U	Oct 30/15
33-47-05-000-803-A RED BEACON LIGHT LAMP REFLECTOR ASSEMBLY - REMOVAL	U	Oct 30/15
33-47-05-400-803-A RED BEACON LIGHT LAMP REFLECTOR ASSEMBLY - INSTALLATION	U	Oct 30/15
33-50-00/500 EMERGENCY LIGHTING - ADJUSTMENT/TEST	U	Oct 30/15
33-50-00-700-801-A EMERGENCY LIGHTS - OPERATIONAL CHECK	R	Oct 29/18
33-50-04/400 BATTERY POWER SUPPLY - REMOVAL/INSTALLATION	U	Oct 30/15
33-50-04-000-801-A BATTERY POWER SUPPLY - REMOVAL	U	Oct 31/17
33-50-04-400-801-A BATTERY POWER SUPPLY - INSTALLATION	U	Oct 31/17
33-50-04-000-802-A BATTERY PACK - REMOVAL	U	Oct 31/17

**Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted**

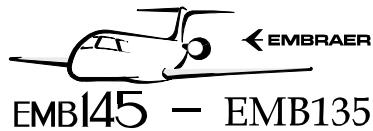

EMB145 - EMB135

AIRCRAFT  
MAINTENANCE MANUAL


PAGEBLOCK <u>TASK</u>	<u>REVISION STATUS</u>	<u>REVISION DATE</u>
33-50-04-400-802-A BATTERY PACK - INSTALLATION	U	Oct 31/17
33-50-04/500 BATTERY POWER SUPPLY - ADJUSTMENT/TEST	U	Oct 30/15
33-50-04-700-801-A BATTERY PACK - FUNCTIONAL CHECK	U	Oct 30/15
33-50-05/400 COCKPIT EMERGENCY LIGHT - REMOVAL/INSTALLATION	U	Oct 30/15
33-50-05-000-801-A COCKPIT EMERGENCY LIGHT LAMP - REMOVAL	U	Oct 30/15
33-50-05-400-801-A COCKPIT EMERGENCY LIGHT LAMP - INSTALLATION	U	Oct 30/15
33-50-05-000-802-A COCKPIT EMERGENCY LIGHT ASSEMBLY - REMOVAL	U	Oct 30/15
33-50-05-400-802-A COCKPIT EMERGENCY LIGHT ASSEMBLY - INSTALLATION	U	Oct 30/15
33-50-06/400 MAIN-DOOR EMERGENCY LIGHT - REMOVAL/INSTALLATION	U	Oct 30/15
33-50-06-000-801-A MAIN-DOOR EMERGENCY-LIGHT LAMP - REMOVAL	U	Oct 30/15
33-50-06-400-801-A MAIN-DOOR EMERGENCY-LIGHT LAMP - INSTALLATION	U	Oct 30/15
33-50-06-000-802-A MAIN-DOOR EMERGENCY-LIGHT ASSEMBLY - REMOVAL	U	Oct 30/15
33-50-06-400-802-A MAIN-DOOR EMERGENCY-LIGHT ASSEMBLY - INSTALLATION	U	Oct 30/15
33-50-07/400 OVERWING EMERGENCY LIGHT - REMOVAL/INSTALLATION	U	Oct 30/15
33-50-07-000-801-A OVERWING EMERGENCY-LIGHT LAMP - REMOVAL	U	Oct 30/15
33-50-07-400-801-A OVERWING EMERGENCY-LIGHT LAMP - INSTALLATION	U	Oct 30/15

Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted

EMB-145 - AMM 1285

TOC

Chapter 33  
Page 18 of 24  
Rev 55 - Oct 29/18

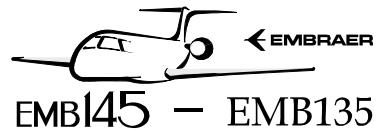

EMB145 - EMB135

AIRCRAFT  
MAINTENANCE MANUAL


PAGEBLOCK TASK	REVISION STATUS	REVISION DATE
33-50-07-000-802-A OVERWING EMERGENCY-LIGHT ASSEMBLY - REMOVAL	U	Oct 30/15
33-50-07-400-802-A OVERWING EMERGENCY-LIGHT ASSEMBLY - INSTALLATION	U	Oct 30/15
33-50-08/400 AISLE EMERGENCY LIGHT - REMOVAL/INSTALLATION	U	Oct 30/15
33-50-08-000-801-A AISLE EMERGENCY-LIGHT LAMP - REMOVAL	U	Oct 30/15
33-50-08-400-801-A AISLE EMERGENCY-LIGHT LAMP - INSTALLATION	U	Oct 30/15
33-50-08-000-802-A AISLE EMERGENCY-LIGHT ASSEMBLY - REMOVAL	U	Oct 30/15
33-50-08-400-802-A AISLE EMERGENCY-LIGHT ASSEMBLY - INSTALLATION	U	Oct 30/15
33-50-09/400 SERVICE-DOOR EMERGENCY LIGHT - REMOVAL/INSTALLATION	U	Oct 30/15
33-50-09-000-801-A SERVICE-DOOR EMERGENCY-LIGHT LAMP - REMOVAL	U	Oct 30/15
33-50-09-400-801-A SERVICE-DOOR EMERGENCY-LIGHT LAMP - INSTALLATION	U	Oct 30/15
33-50-09-000-802-A SERVICE-DOOR EMERGENCY-LIGHT ASSEMBLY - REMOVAL	U	Oct 30/15
33-50-09-400-802-A SERVICE-DOOR EMERGENCY-LIGHT ASSEMBLY - INSTALLATION	U	Oct 30/15
33-50-10/400 EXTERNAL EMERGENCY LIGHTS - REMOVAL/INSTALLATION	U	Oct 30/15
33-50-10-000-801-A EXTERNAL EMERGENCY LIGHTS - REMOVAL	U	Oct 30/15
33-50-10-400-801-A EXTERNAL EMERGENCY LIGHTS - INSTALLATION	U	Oct 30/15
33-50-11/400 EMERGENCY LIGHT DC/AC INVERTER - REMOVAL/INSTALLATION	U	Oct 30/15

Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted

EMB-145 - AMM 1285

TOC

Chapter 33  
Page 19 of 24  
Rev 55 - Oct 29/18

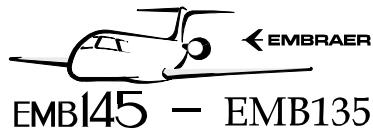

EMB145 - EMB135

AIRCRAFT  
MAINTENANCE MANUAL


PAGEBLOCK TASK	REVISION STATUS	REVISION DATE
33-50-11-000-801-A EMERGENCY LIGHT DC/AC INVERTER - REMOVAL	U	Oct 30/15
33-50-11-400-801-A EMERGENCY LIGHT DC/AC INVERTER - INSTALLATION	U	Oct 30/15
33-50-12/200 CONFIG-1 <i>EFFECTIVITY: FOR AIRCRAFT WITH PHOTOLUMINESCENT STRIP LIGHTS</i> FLOOR PROXIMITY STRIP LIGHTS - MAINTENANCE PRACTICES	U	Oct 30/15
33-50-12-900-801-A CONFIG-1 <i>EFFECTIVITY: FOR AIRCRAFT WITH PHOTOLUMINESCENT STRIP LIGHTS</i> PHOTOLUMINESCENT FLOOR-PROXIMITY STRIP LIGHTS - DISPOSAL	U	Oct 30/15
33-50-12/200 CONFIG-2 <i>EFFECTIVITY: ACFT MODEL(S) EMB-135</i> FLOOR PROXIMITY STRIP LIGHTS - MAINTENANCE PRACTICES	U	Oct 30/15
33-50-12-900-801-A CONFIG-2 <i>EFFECTIVITY: FOR AIRCRAFT WITH PHOTOLUMINESCENT FLOOR-PROXIMITY STRIP LIGHTS</i> PHOTOLUMINESCENT FLOOR-PROXIMITY STRIP LIGHTS - DISPOSAL	U	Oct 30/15
33-50-12/400 CONFIG-1 <i>EFFECTIVITY: ACFT MODEL(S) EMB-145</i> FLOOR PROXIMITY STRIP LIGHTS - REMOVAL/INSTALLATION	U	Oct 30/15
33-50-12-000-801-A CONFIG-1 <i>EFFECTIVITY: FOR AIRCRAFT WITH ELECTROLUMINESCENT FLOOR-PROXIMITY STRIP LIGHTS</i> FLOOR PROXIMITY STRIP LIGHTS - REMOVAL	U	Oct 30/15
33-50-12-400-801-A CONFIG-1 <i>EFFECTIVITY: FOR AIRCRAFT WITH ELECTROLUMINESCENT FLOOR-PROXIMITY STRIP LIGHTS</i> FLOOR PROXIMITY STRIP LIGHT - INSTALLATION	U	Oct 30/15
33-50-12-000-802-A CONFIG-1 <i>EFFECTIVITY: FOR AIRCRAFT WITH PHOTOLUMINESCENT STRIP LIGHTS</i> PHOTOLUMINESCENT FLOOR-PROXIMITY STRIP LIGHT - REMOVAL	U	Oct 30/15

Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted

EMB-145 - AMM 1285

TOC

Chapter 33  
Page 20 of 24  
Rev 55 - Oct 29/18

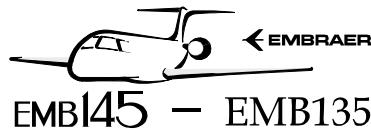

EMB145 - EMB135

AIRCRAFT  
MAINTENANCE MANUAL


PAGEBLOCK TASK	REVISION STATUS	REVISION DATE
33-50-12-400-802-A CONFIG-1  <i>EFFECTIVITY: FOR AIRCRAFT WITH PHOTOLUMINESCENT STRIP LIGHTS</i> PHOTOLUMINESCENT FLOOR-PROXIMITY STRIP LIGHT - INSTALLATION	U	Oct 30/15
33-50-12-000-803-A CONFIG-1  <i>EFFECTIVITY: ACFT MODEL(S) EMB-145</i> FLOOR SIDEWALL ASSEMBLY - REMOVAL	U	Oct 30/15
33-50-12-400-803-A CONFIG-1  <i>EFFECTIVITY: ACFT MODEL(S) EMB-145</i> FLOOR SIDEWALL ASSEMBLY - INSTALLATION	U	Oct 30/15
33-50-12/400 CONFIG-2  <i>EFFECTIVITY: ACFT MODEL(S) EMB-135</i> FLOOR PROXIMITY STRIP LIGHTS - REMOVAL/INSTALLATION	U	Oct 30/15
33-50-12-000-801-A CONFIG-2  <i>EFFECTIVITY: FOR AIRCRAFT WITH ELECTROLUMINESCENT FLOOR-PROXIMITY STRIP LIGHTS</i> FLOOR PROXIMITY STRIP LIGHTS - REMOVAL	U	Oct 30/15
33-50-12-400-801-A CONFIG-2  <i>EFFECTIVITY: FOR AIRCRAFT WITH ELECTROLUMINESCENT FLOOR-PROXIMITY STRIP LIGHTS</i> FLOOR PROXIMITY STRIP LIGHT - INSTALLATION	U	Oct 30/15
33-50-12-000-802-A CONFIG-2  <i>EFFECTIVITY: FOR AIRCRAFT WITH PHOTOLUMINESCENT FLOOR-PROXIMITY STRIP LIGHTS</i> PHOTOLUMINESCENT FLOOR-PROXIMITY STRIP LIGHT - REMOVAL	U	Oct 30/15
33-50-12-400-802-A CONFIG-2  <i>EFFECTIVITY: FOR AIRCRAFT WITH PHOTOLUMINESCENT FLOOR-PROXIMITY STRIP LIGHTS</i> PHOTOLUMINESCENT FLOOR-PROXIMITY STRIP LIGHT - INSTALLATION	U	Oct 30/15
33-50-12-000-803-A CONFIG-2  <i>EFFECTIVITY: ACFT MODEL(S) EMB-135</i> FLOOR SIDEWALL ASSEMBLY - REMOVAL	U	Oct 30/15
33-50-12-400-803-A CONFIG-2  <i>EFFECTIVITY: ACFT MODEL(S) EMB-135</i> FLOOR SIDEWALL ASSEMBLY - INSTALLATION	U	Oct 30/15

Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted

EMB-145 - AMM 1285

TOC

Chapter 33  
Page 21 of 24  
Rev 55 - Oct 29/18

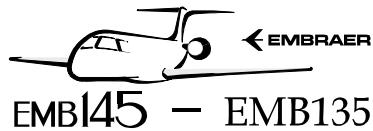

EMB145 – EMB135

AIRCRAFT  
MAINTENANCE MANUAL


PAGEBLOCK TASK	REVISION STATUS	REVISION DATE
33-50-12/500 CONFIG-1 <i>EFFECTIVITY: FOR AIRCRAFT WITH PHOTOLUMINESCENT STRIP LIGHTS</i> FLOOR PROXIMITY STRIP LIGHTS - ADJUSTMENT/TEST	U	Oct 30/15
33-50-12-700-801-A CONFIG-1 <i>EFFECTIVITY: FOR AIRCRAFT WITH PHOTOLUMINESCENT STRIP LIGHTS</i> PHOTOLUMINESCENT FLOOR-PROXIMITY STRIP LIGHTS - OPERATIONAL TEST	U	Oct 30/15
33-50-12-700-802-A CONFIG-1 <i>EFFECTIVITY: FOR AIRCRAFT WITH PHOTOLUMINESCENT FLOOR-PROXIMITY STRIP LIGHTS</i> PHOTOLUMINESCENT FLOOR-PROXIMITY STRIP LIGHTS - FUNCTIONAL TEST	U	Oct 30/15
33-50-12-700-803-A CONFIG-1 <i>EFFECTIVITY: FOR AIRCRAFT WITH PHOTOLUMINESCENT FLOOR-PROXIMITY STRIP LIGHTS</i> PHOTOLUMINESCENT SAMPLE - FUNCTIONAL TEST	U	Oct 30/15
33-50-12/500 CONFIG-2 <i>EFFECTIVITY: ACFT MODEL(S) EMB-135</i> FLOOR PROXIMITY STRIP LIGHTS - ADJUSTMENT/TEST	U	Oct 30/15
33-50-12-700-801-A CONFIG-2 <i>EFFECTIVITY: FOR AIRCRAFT WITH PHOTOLUMINESCENT FLOOR-PROXIMITY STRIP LIGHTS</i> PHOTOLUMINESCENT FLOOR-PROXIMITY STRIP LIGHTS - OPERATIONAL TEST	U	Oct 30/15
33-50-12-700-802-A CONFIG-2 <i>EFFECTIVITY: FOR AIRCRAFT WITH PHOTOLUMINESCENT FLOOR-PROXIMITY STRIP LIGHTS</i> PHOTOLUMINESCENT FLOOR-PROXIMITY STRIP LIGHTS - FUNCTIONAL TEST	U	Oct 30/15
33-50-12-700-803-A CONFIG-2 <i>EFFECTIVITY: FOR AIRCRAFT WITH PHOTOLUMINESCENT FLOOR-PROXIMITY STRIP LIGHTS</i> PHOTOLUMINESCENT SAMPLE - FUNCTIONAL TEST	U	Oct 30/15
33-50-12/600 CONFIG-1 <i>EFFECTIVITY: FOR AIRCRAFT WITH PHOTOLUMINESCENT STRIP LIGHTS</i> FLOOR PROXIMITY STRIP LIGHTS - INSPECTION/CHECK	U	Oct 30/15

Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted

EMB-145 - AMM 1285

TOC

Chapter 33  
Page 22 of 24  
Rev 55 - Oct 29/18

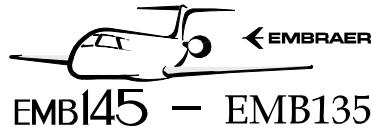

EMB145 - EMB135

AIRCRAFT  
MAINTENANCE MANUAL


PAGEBLOCK TASK	REVISION STATUS	REVISION DATE
33-50-12-200-801-A CONFIG-1  <i>EFFECTIVITY: FOR AIRCRAFT WITH PHOTOLUMINESCENT STRIP LIGHTS</i> PHOTOLUMINESCENT FLOOR-PROXIMITY STRIP LIGHTS - INSPECTION	U	Oct 30/15
33-50-12/600 CONFIG-2  <i>EFFECTIVITY: ACFT MODEL(S) EMB-135</i> FLOOR PROXIMITY STRIP LIGHTS - INSPECTION/CHECK	U	Oct 30/15
33-50-12-200-801-A CONFIG-2  <i>EFFECTIVITY: FOR AIRCRAFT WITH PHOTOLUMINESCENT FLOOR-PROXIMITY STRIP LIGHTS</i> PHOTOLUMINESCENT FLOOR-PROXIMITY STRIP LIGHTS - INSPECTION	U	Oct 30/15
33-50-12/700 CONFIG-1  <i>EFFECTIVITY: FOR AIRCRAFT WITH PHOTOLUMINESCENT STRIP LIGHTS</i> FLOOR PROXIMITY STRIP LIGHTS - CLEANING/PAINTING	U	Oct 30/15
33-50-12-100-801-A CONFIG-1  <i>EFFECTIVITY: FOR AIRCRAFT WITH PHOTOLUMINESCENT STRIP LIGHTS</i> PHOTOLUMINESCENT FLOOR-PROXIMITY STRIP LIGHTS - CLEANING	U	Oct 30/15
33-50-12/700 CONFIG-2  <i>EFFECTIVITY: ACFT MODEL(S) EMB-135</i> FLOOR PROXIMITY STRIP LIGHTS - CLEANING/PAINTING	U	Oct 30/15
33-50-12-100-801-A CONFIG-2  <i>EFFECTIVITY: FOR AIRCRAFT WITH PHOTOLUMINESCENT FLOOR-PROXIMITY STRIP LIGHTS</i> PHOTOLUMINESCENT FLOOR-PROXIMITY STRIP LIGHTS - CLEANING	U	Oct 30/15
33-50-13/400 EXIT IDENTIFIER SIGNS - REMOVAL/INSTALLATION	U	Oct 30/15
33-50-13-000-801-A EXIT IDENTIFIER SIGN - REMOVAL	U	Oct 30/15
33-50-13-400-801-A EXIT IDENTIFIER SIGN - INSTALLATION	U	Oct 30/15

Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted

EMB-145 - AMM 1285

TOC

Chapter 33  
Page 23 of 24  
Rev 55 - Oct 29/18

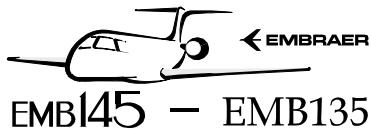

## AIRCRAFT MAINTENANCE MANUAL

<u>PAGEBLOCK TASK</u>	<u>REVISION STATUS</u>	<u>REVISION DATE</u>
33-50-14/400 EXIT MARKING SIGN ASSEMBLY - REMOVAL/INSTALLATION	U	Oct 30/15
33-50-14-000-801-A EXIT MARKING SIGN ASSEMBLY - REMOVAL	U	Oct 30/15
33-50-14-400-801-A EXIT MARKING SIGN ASSEMBLY - INSTALLATION	U	Oct 30/15
33-50-15/400 EXIT LOCATING SIGN ASSEMBLY - REMOVAL/INSTALLATION	U	Oct 30/15
33-50-15-000-801-A EXIT LOCATING SIGN ASSEMBLY - REMOVAL	U	Oct 30/15
33-50-15-400-801-A EXIT LOCATING SIGN ASSEMBLY - INSTALLATION	U	Oct 30/15
33-50-16/400 FLASHLIGHT ASSEMBLY - REMOVAL/INSTALLATION	U	Oct 30/15
33-50-16-000-801-A FLASHLIGHT ASSEMBLY - REMOVAL	U	Oct 30/15
33-50-16-400-801-A FLASHLIGHT ASSEMBLY - INSTALLATION	U	Oct 30/15
33-51-01/500 FLASHLIGHT - ADJUSTMENT/TEST	U	Oct 30/15
33-51-01-700-802-A <i>EFFECTIVITY: AIRCRAFT WITH RECHARGEABLE FLASHLIGHT</i> FLASHLIGHTS - FUNCTIONAL CHECK	U	Oct 30/15
33-51-01-700-803-A <i>EFFECTIVITY: AIRCRAFT WITH NON-RECHARGEABLE FLASHLIGHT</i> FLASHLIGHTS - FUNCTIONAL CHECK	U	Oct 30/15

Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted

EMB-145 - AMM 1285

**TOC**

Chapter 33  
Page 24 of 24  
Rev 55 - Oct 29/18