


TABLE OF CONTENTS

<u>PAGEBLOCK</u>	<u>TASK</u>	<u>REVISION STATUS</u>	<u>REVISION DATE</u>
78-00-00/200	EXHAUST - MAINTENANCE PRACTICES	U	Oct 30/15
78-00-01/400	FIRESHIELD BLANKET - REMOVAL/INSTALLATION	U	Oct 30/15
78-00-01-000-801-A	ENGINE EXHAUST FIRESHIELD BLANKET - REMOVAL	U	Oct 30/15
78-00-01-400-801-A	ENGINE EXHAUST FIRESHIELD BLANKET - INSTALLATION	U	Oct 30/15
78-10-00/200	COLLECTOR/NOZZLE - MAINTENANCE PRACTICES	U	Oct 30/15
78-10-01/600	<i>EFFECTIVITY: FOR AIRCRAFT WITH PLAIN EXHAUST ASSEMBLY</i> PLAIN EXHAUST ASSEMBLY - INSPECTION/CHECK	U	Oct 30/15
78-10-01-200-801-A	<i>EFFECTIVITY: FOR AIRCRAFT WITH PLAIN EXHAUST ASSEMBLY</i> PLAIN EXHAUST ASSY - VISUAL INSPECTION	U	Oct 30/15
78-11-01/400	EXHAUST NOZZLE - REMOVAL/INSTALLATION	U	Oct 30/15
78-11-01-000-801-A	ENGINE EXHAUST NOZZLE - REMOVAL	U	Oct 30/15
78-11-01-400-801-A	ENGINE EXHAUST NOZZLE - INSTALLATION	U	Oct 30/15
78-11-02/400	EXHAUST CONE - REMOVAL/INSTALLATION	U	Oct 30/15
78-11-02-000-801-A	EXHAUST CONE - REMOVAL	U	Oct 30/15
78-11-02-400-801-A	EXHAUST CONE - INSTALLATION	U	Oct 30/15
78-11-03/400	EXHAUST FORCED MIXER - REMOVAL/INSTALLATION	U	Oct 30/15

Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted

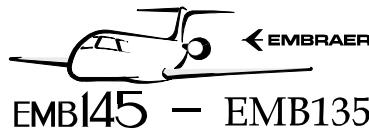

EMB145 - EMB135

AIRCRAFT
MAINTENANCE MANUAL


PAGEBLOCK TASK	REVISION STATUS	REVISION DATE
78-11-03-000-801-A EXHAUST FORCED MIXER - REMOVAL	U	Oct 30/15
78-11-03-400-801-A EXHAUST FORCED MIXER - INSTALLATION	U	Oct 30/15
78-11-03/600 EXHAUST FORCED MIXER - INSPECTION/CHECK	U	Oct 30/15
78-11-03-200-801-A EXHAUST FORCED MIXER - INSPECTION	U	Oct 30/15
78-30-00/200 THRUST REVERSER - MAINTENANCE PRACTICES	U	Oct 30/15
78-30-00/500 THRUST REVERSER - ADJUSTMENT/TEST	U	Oct 30/15
78-30-00-700-801-A FADEC/THRUST REVERSER INTERFACE INTEGRITY - TEST	U	Oct 30/15
78-31-00/600 THRUST REVERSER STRUCTURE - INSPECTION/CHECK	U	Oct 30/15
78-31-00-200-801-A THRUST REVERSER STRUCTURE - DETAILED INSPECTION	U	Oct 30/15
78-31-00-200-802-A THRUST REVERSER STRUCTURE - VISUAL INSPECTION	U	Oct 30/15
78-31-01/200 TR EXHAUST - MAINTENANCE PRACTICES	U	Oct 30/15
78-31-01-940-801-A THRUST REVERSER - OPENING PROCEDURE	U	Oct 30/15
78-31-01-940-802-A THRUST REVERSER - CLOSURE PROCEDURE	U	Oct 30/15
78-31-01-980-801-A LOCK/UNLOCK THE TR EXHAUST DOOR - STOWED POSITION	U	Oct 30/15
78-31-01-980-802-A LOCK/UNLOCK THE TR EXHAUST DOOR - DEPLOYED POSITION	U	Oct 30/15

Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted

EMB-145 - AMM 1285

TOC


Chapter 78
Page 2 of 11
Rev 55 - Oct 29/18

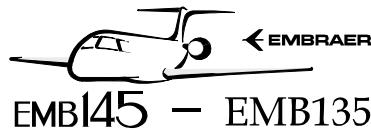

AIRCRAFT
MAINTENANCE MANUAL

PAGEBLOCK TASK	REVISION STATUS	REVISION DATE
78-31-01-980-803-A THRUST REVERSER HYDRAULIC SYSTEM - ISOLATION PROCEDURE	U	Oct 30/15
78-31-01/400 TR EXHAUST - REMOVAL/INSTALLATION	U	Oct 30/15
78-31-01-000-801-A THRUST REVERSER - REMOVAL	U	Oct 30/15
78-31-01-400-801-A THRUST REVERSER - INSTALLATION	U	Apr 27/18
78-31-01/500 TR EXHAUST - ADJUSTMENT/TEST	U	Oct 31/16
78-31-01-700-801-A THRUST REVERSER - OPERATIONAL CHECK	U	Oct 30/15
78-31-01-820-801-A THRUST REVERSER - RIGGING PROCEDURE	U	Oct 31/16
78-31-01-820-802-A THRUST REVERSER - MANUAL RIGGING PROCEDURE	U	Oct 31/16
78-31-02/400 UPPER DOOR - REMOVAL/INSTALLATION	U	Oct 30/15
78-31-02-000-801-A THRUST-REVERSER UPPER DOOR - REMOVAL	U	Oct 30/15
78-31-02-400-801-A THRUST-REVERSER UPPER DOOR - INSTALLATION	U	Oct 30/15
78-31-03/400 LOWER DOOR - REMOVAL/INSTALLATION	U	Oct 30/15
78-31-03-000-801-A THRUST-REVERSER LOWER DOOR - REMOVAL	U	Oct 30/15
78-31-03-400-801-A THRUST-REVERSER LOWER DOOR - INSTALLATION	U	Oct 30/15
78-31-04/400 RUBBER SEALS - REMOVAL/INSTALLATION	U	Oct 30/15


Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted

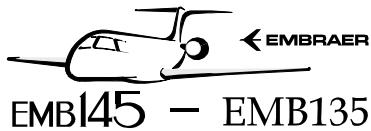

AIRCRAFT
MAINTENANCE MANUAL

PAGEBLOCK TASK	REVISION STATUS	REVISION DATE
78-31-04-000-801-A THRUST-REVERSER RUBBER SEALS - REMOVAL	U	Oct 31/17
78-31-04-400-801-A THRUST-REVERSER RUBBER SEALS - INSTALLATION	U	Oct 31/17
78-31-04/600 RUBBER SEALS - INSPECTION/CHECK	U	Oct 30/15
78-31-04-200-801-A ENGINE THRUST-REVERSER RUBBER SEALS - INSPECTION/ CHECK	U	Oct 30/15
78-31-04/800 RUBBER SEALS - REPAIR	U	Oct 30/15
78-31-04-300-801-A RUBBER SEALS - REPAIR	U	Oct 30/15
78-31-05/400 PIVOT BOLTS - REMOVAL/INSTALLATION	U	Oct 30/15
78-31-05-000-801-A THRUST-REVERSER PIVOT BOLTS - REMOVAL	U	Oct 30/15
78-31-05-400-801-A THRUST-REVERSER PIVOT BOLTS - INSTALLATION	U	Oct 30/15
78-31-06/400 PIVOT DOOR BEARING - REMOVAL/INSTALLATION	U	Oct 30/15
78-31-06-000-801-A PIVOT DOOR BEARING- REMOVAL	U	Oct 30/15
78-31-06-400-801-A PIVOT DOOR BEARING - INSTALLATION	U	Oct 30/15
78-31-06/600 PIVOT DOOR BEARING - INSPECTION/CHECK	U	Oct 30/15
78-31-06-200-801-A <i>EFFECTIVITY: AIRCRAFT WITH PIVOT DOOR BEARING P/N RBF12DAT</i> PIVOT DOOR BEARING - INSPECTION/CHECK	U	Oct 30/15
78-31-06-200-802-A PIVOT DOOR BEARING BORE - INSPECTION/CHECK	U	Oct 30/15


Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted

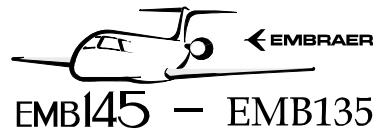

AIRCRAFT MAINTENANCE MANUAL

PAGEBLOCK <u>TASK</u>	<u>REVISION STATUS</u>	<u>REVISION DATE</u>
78-32-00/500 THRUST REVERSER ACTUATION - ADJUSTMENT/TEST	U	Oct 30/15
78-32-00-700-801-A THRUST REVERSER (TR) SECONDARY (2RY) AND TERTIARY (3RY) LOCKS - OPERATIONAL CHECK	U	Oct 30/15
78-32-00/600 THRUST REVERSER ACTUATION - INSPECTION/CHECK	U	Oct 30/15
78-32-00-200-801-A THRUST REVERSER PRIMARY (1RY) AND TERTIARY (3RY) LOCKS - VISUAL CHECK	U	Oct 30/15
78-32-01/200 THRUST-REVERSER DOOR ACTUATOR - MAINTENANCE PRACTICES	U	Oct 30/15
78-32-01-980-801-A ENGINE THRUST-REVERSER ACTUATOR (SECONDARY LOCK) - UNLOCK PROCEDURE	U	Oct 30/15
78-32-01-980-802-A ENGINE THRUST-REVERSER ACTUATOR (SECONDARY LOCK) - LOCK PROCEDURE	U	Oct 30/15
78-32-01/400 THRUST-REVERSER DOOR ACTUATOR - REMOVAL/INSTALLATION	U	Oct 30/15
78-32-01-000-801-A THRUST-REVERSER DOOR ACTUATOR - REMOVAL	U	Oct 30/15
78-32-01-400-801-A THRUST-REVERSER DOOR ACTUATOR - INSTALLATION	U	Apr 27/18
78-32-01-000-802-A THRUST-REVERSER ACTUATOR ROD END - REMOVAL	U	Oct 30/15
78-32-01-400-802-A THRUST-REVERSER ACTUATOR ROD END - INSTALLATION	U	Oct 30/15
78-32-01/500 THRUST-REVERSER DOOR ACTUATOR - ADJUSTMENT/TEST	U	Oct 30/15
78-32-01-700-801-A THRUST-REVERSER ACTUATOR - FUNCTIONAL TEST	U	Oct 30/15


Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted

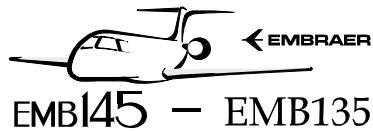

AIRCRAFT
MAINTENANCE MANUAL

PAGEBLOCK TASK	REVISION STATUS	REVISION DATE
78-32-01-820-801-A THRUST-REVERSER ACTUATOR - ADJUSTMENT	U	Oct 30/15
78-32-01/600 THRUST-REVERSER DOOR ACTUATOR - INSPECTION/CHECK	U	Oct 30/15
78-32-01-200-801-A THRUST REVERSER ACTUATOR - INSPECTION	U	Oct 30/15
78-32-01-200-802-A THRUST-REVERSER ACTUATOR LEAKAGE - INSPECTION	U	Oct 30/15
78-32-02/200 THRUST-REVERSER DOOR PRIMARY-LOCK ACTUATOR - MAINTENANCE PRACTICES	U	Oct 30/15
78-32-02-980-801-A ENGINE THRUST-REVERSER DOOR PRIMARY LOCK ACTUATOR - UNLOCK PROCEDURE	U	Oct 30/15
78-32-02/400 THRUST-REVERSER DOOR PRIMARY-LOCK ACTUATOR - REMOVAL/INSTALLATION	U	Oct 30/15
78-32-02-000-801-A ENGINE THRUST-REVERSER DOOR PRIMARY LOCK ACTUATOR - REMOVAL	U	Oct 30/15
78-32-02-400-801-A ENGINE THRUST-REVERSER DOOR PRIMARY LOCK ACTUATOR - INSTALLATION	U	Oct 30/15
78-32-03/400 THRUST-REVERSER DOOR PRIMARY-LOCK S-HOOK - REMOVAL/INSTALLATION	U	Oct 30/15
78-32-03-000-801-A THRUST-REVERSER DOOR PRIMARY-LOCK S-HOOK - REMOVAL	U	Oct 30/15
78-32-03-400-801-A THRUST-REVERSER DOOR PRIMARY-LOCK S-HOOK - INSTALLATION	U	Oct 30/15
78-32-04/400 THRUST-REVERSER DOOR PRIMARY-LOCK HOOK - REMOVAL/INSTALLATION	U	Oct 30/15


Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted

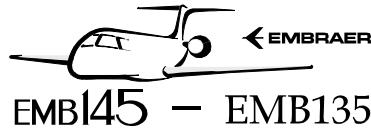

AIRCRAFT
MAINTENANCE MANUAL

PAGEBLOCK TASK	REVISION STATUS	REVISION DATE
78-32-04-000-801-A THRUST-REVERSER DOOR PRIMARY-LOCK HOOK - REMOVAL	U	Oct 30/15
78-32-04-400-801-A THRUST-REVERSER DOOR PRIMARY-LOCK HOOK - INSTALLATION	U	Oct 30/15
78-32-04/500 THRUST-REVERSER DOOR PRIMARY-LOCK HOOK - ADJUSTMENT/ TEST	U	Oct 30/15
78-32-04-700-801-A ENGINE THRUST-REVERSER DOOR PRIMARY-LOCK HOOK - FUNCTIONAL TEST	U	Oct 30/15
78-32-04-820-801-A ENGINE THRUST-REVERSER DOOR PRIMARY-LOCK HOOK - AD- JUSTMENT	U	Oct 30/15
78-32-04/600 THRUST-REVERSER DOOR PRIMARY-LOCK HOOK - INSPECTION/ CHECK	U	Oct 30/15
78-32-04-200-801-A ENGINE THRUST-REVERSER DOOR PRIMARY-LOCK HOOK - IN- SPECTION/CHECK	U	Oct 30/15
78-32-05/200 THRUST-REVERSER DOOR TERTIARY-LOCK ACTUATOR - MAINTE- NANCE PRACTICES	U	Oct 30/15
78-32-05-980-801-A ENGINE THRUST-REVERSER ACTUATOR (TERTIARY LOCK) - MAN- UAL OPERATION	U	Oct 30/15
78-32-05/400 THRUST-REVERSER DOOR TERTIARY-LOCK ACTUATOR - REMOV- AL/INSTALLATION	U	Oct 30/15
78-32-05-000-801-A ENGINE THRUST-REVERSER DOOR TERTIARY-LOCK ACTUATOR - REMOVAL	U	Oct 30/15
78-32-05-400-801-A ENGINE THRUST-REVERSER DOOR TERTIARY-LOCK ACTUATOR - INSTALLATION	U	Oct 30/15


Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted

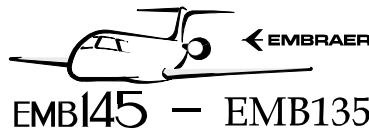

AIRCRAFT MAINTENANCE MANUAL

PAGEBLOCK <u>TASK</u>	<u>REVISION STATUS</u>	<u>REVISION DATE</u>
78-32-06/400 THRUST-REVERSER DOOR TERTIARY-LOCK ENGAGING ROLLER - REMOVAL/INSTALLATION	U	Oct 30/15
78-32-06-000-801-A ENGINE THRUST-REVERSER DOOR TERTIARY-LOCK ENGAGING ROLLER AND BRACKET ASSEMBLY - REMOVAL	U	Oct 30/15
78-32-06-400-801-A ENGINE THRUST-REVERSER DOOR TERTIARY-LOCK ENGAGING ROLLER AND BRACKET ASSEMBLY - INSTALLATION	U	Oct 30/15
78-33-00/500 THRUST REVERSER CONTROL - ADJUSTMENT/TEST	U	Oct 31/17
78-33-00-700-801-A AIR/GROUND INPUT SIGNAL TO THRUST REVERSER (TR) SYSTEM - OPERATIONAL CHECK	U	Oct 30/15
78-33-00-700-802-A WHEEL-SPEED INPUT SIGNAL TO THE THRUST REVERSER SYS- TEM - OPERATIONAL CHECK	U	Oct 30/15
78-33-00-700-803-A THRUST-REVERSER (TR) CONTROL LEVER MICROSWITCHES - FUNCTIONAL CHECK	U	Oct 30/15
78-33-01/200 ISOLATION CONTROL UNIT (ICU) - MAINTENANCE PRACTICES	U	Oct 30/15
78-33-01-980-801-A ISOLATION CONTROL UNIT - INHIBITION PROCEDURES	U	Oct 30/15
78-33-01/400 ISOLATION CONTROL UNIT (ICU) - REMOVAL/INSTALLATION	U	Oct 30/15
78-33-01-000-801-A ISOLATION CONTROL UNIT (ICU) - REMOVAL	U	Oct 30/15
78-33-01-400-801-A ISOLATION CONTROL UNIT (ICU) - INSTALLATION	U	Oct 30/15
78-33-01/500 ISOLATION CONTROL UNIT (ICU) - ADJUSTMENT/TEST	U	Oct 30/15
78-33-01-700-801-A ISOLATION CONTROL UNIT (ICU) - OPERATIONAL CHECK	U	Oct 30/15


Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted

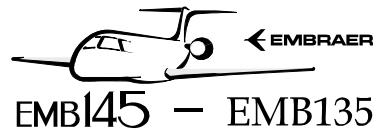

AIRCRAFT
MAINTENANCE MANUAL

PAGEBLOCK <u>TASK</u>	<u>REVISION STATUS</u>	<u>REVISION DATE</u>
78-33-02/400 ICU INHIBITION MICROSWITCH - REMOVAL/INSTALLATION	U	Oct 30/15
78-33-02-000-801-A ICU INHIBITION MICROSWITCH - REMOVAL	U	Oct 30/15
78-33-02-400-801-A ICU INHIBITION MICROSWITCH - INSTALLATION	U	Oct 30/15
78-33-02/500 ICU INHIBITION MICROSWITCH - ADJUSTMENT/TEST	U	Oct 30/15
78-33-02-820-801-A ICU INHIBITION MICROSWITCH - ADJUSTMENT/TEST	U	Oct 30/15
78-33-03/400 ICU FILTER ELEMENT - REMOVAL/INSTALLATION	U	Oct 30/15
78-33-03-000-801-A ICU FILTER ELEMENT - REMOVAL	U	Oct 30/15
78-33-03-400-801-A ICU FILTER ELEMENT - INSTALLATION	U	Oct 30/15
78-33-05/400 DIRECTION CONTROL UNIT (DCU) - REMOVAL/INSTALLATION	U	Oct 30/15
78-33-05-000-801-A DIRECTION CONTROL UNIT - DCU - REMOVAL	U	Oct 30/15
78-33-05-400-801-A DIRECTION CONTROL UNIT - DCU - INSTALLATION	U	Oct 30/15
78-33-06/400 SEQUENCE VALVE - REMOVAL/INSTALLATION	U	Oct 30/15
78-33-06-000-801-A SEQUENCE VALVE - REMOVAL	U	Oct 30/15
78-33-06-400-801-A SEQUENCE VALVE - INSTALLATION	U	Oct 30/15
78-34-00/500 THRUST REVERSER INDICATING - ADJUSTMENT/TEST	U	Oct 30/15


Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted

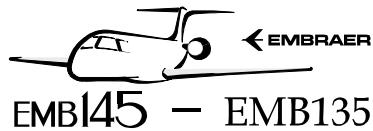

AIRCRAFT
MAINTENANCE MANUAL

PAGEBLOCK TASK	REVISION STATUS	REVISION DATE
78-34-00-700-801-A THRUST-REVERSER (TR) INDICATING SYSTEM - OPERATIONAL CHECK	U	Apr 27/18
78-34-01/400 THRUST REVERSER MICROSWITCH (STOW/TRANSIT) - REMOVAL/INSTALLATION	U	Oct 30/15
78-34-01-000-801-A THRUST-REVERSER MICROSWITCH (STOW/TRANSIT) - REMOVAL	U	Oct 30/15
78-34-01-400-801-A THRUST-REVERSER MICROSWITCH (STOW/TRANSIT) - INSTALLATION	U	Oct 30/15
78-34-01/500 THRUST REVERSER MICROSWITCH (STOW/TRANSIT) - ADJUSTMENT/TEST	U	Oct 31/16
78-34-01-700-801-A STOW/TRANSIT MICROSWITCH - FUNCTIONAL TEST	U	Oct 30/15
78-34-01-700-802-A <i>EFFECTIVITY: FOR STOW/TRANSIT MICROSWITCHES P/Ns 83-990-137, 83-990-152 AND 83-990-166</i> STOW/TRANSIT MICROSWITCH - ELECTRICAL TEST	U	Oct 31/16
78-34-01-820-801-A STOW/TRANSIT MICROSWITCH - ADJUSTMENT	U	Oct 30/15
78-34-02/400 THRUST REVERSER MICROSWITCH (DEPLOY) - REMOVAL/INSTALLATION	U	Oct 30/15
78-34-02-000-801-A ENGINE THRUST-REVERSER MICROSWITCH (DEPLOY) - REMOVAL	U	Oct 30/15
78-34-02-400-801-A ENGINE THRUST-REVERSER MICROSWITCH (DEPLOY) - INSTALLATION	U	Oct 30/15
78-34-02/600 THRUST REVERSER MICROSWITCH (DEPLOY) - INSPECTION/CHECK	U	Oct 30/15
78-34-02-200-801-A DEPLOY MICROSWITCH - INSPECTION/CHECK	U	Oct 30/15

Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted

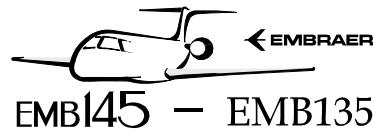

EMB145 - EMB135

AIRCRAFT
MAINTENANCE MANUAL

PAGEBLOCK TASK	REVISION STATUS	REVISION DATE
78-34-03/400 <i>EFFECTIVITY: AIRCRAFT POST-MOD SB 145-78-0032</i> DEPLOY MICROSWITCH STRIKER - REMOVAL/INSTALLATION	U	Oct 30/15
78-34-03-000-801-A <i>EFFECTIVITY: AIRCRAFT POST-MOD SB 145-78-0032</i> DEPLOY MICROSWITCH STRIKER - REMOVAL	U	Oct 30/15
78-34-03-400-801-A <i>EFFECTIVITY: AIRCRAFT POST-MOD SB 145-78-0032</i> DEPLOY MICROSWITCH STRIKER - INSTALLATION	U	Oct 30/15
78-34-03/600 DEPLOY MICROSWITCH STRIKER - INSPECTION/CHECK	U	Oct 30/15
78-34-03-200-801-A THRUST-REVERSER DEPLOY MICROSWITCH STRIKER - INSPEC- TION/CHECK	U	Oct 30/15
78-35-01/400 THRUST REVERSER HARNESS - REMOVAL/INSTALLATION	U	Oct 30/15
78-35-01-000-801-A THRUST REVERSER HARNESS - REMOVAL	U	Oct 30/15
78-35-01-400-801-A THRUST REVERSER HARNESS - INSTALLATION	U	Oct 30/15
78-36-01/400 THRUST REVERSER PLUMBING - REMOVAL/INSTALLATION	U	Oct 30/15
78-36-01-000-801-A THRUST REVERSER PLUMBING - REMOVAL	U	Oct 30/15
78-36-01-400-801-A THRUST REVERSER PLUMBING - INSTALLATION	U	Oct 30/15

Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted

EMB-145 - AMM 1285

TOC

Chapter 78
Page 11 of 11
Rev 55 - Oct 29/18

