


TABLE OF CONTENTS

<u>PAGEBLOCK</u>		<u>REVISION</u>	<u>REVISION</u>
<u>TASK</u>		<u>STATUS</u>	<u>DATE</u>
24-00-01/400	ELECTRICAL CONTROL PANEL - REMOVAL/INSTALLATION	U	Oct 30/15
24-00-01-000-801-A	ELECTRICAL POWER CONTROL PANEL - REMOVAL	U	Oct 30/15
24-00-01-400-801-A	ELECTRICAL POWER CONTROL PANEL - INSTALLATION	U	Oct 30/15
24-00-02/600	LEADING EDGE HARNESS ASSEMBLY - INSPECTION/CHECK	U	Oct 30/15
24-00-02-200-801-A	LEADING-EDGE HARNESS ASSEMBLY - INSPECTION	U	Oct 30/15
24-00-03/600	TRAILING EDGE HARNESS ASSEMBLY - INSPECTION/CHECK	U	Oct 30/15
24-00-03-200-801-A	TRAILING-EDGE HARNESS ASSEMBLY - INSPECTION	U	Oct 30/15
24-00-04/600	WING STUB HARNESS ASSEMBLY - INSPECTION/CHECK	U	Oct 30/15
24-00-04-200-801-A	WING-STUB HARNESS ASSEMBLY - INSPECTION	U	Oct 30/15
24-20-00/500	<i>EFFECTIVITY: FOR AIRCRAFT WITH AC STATIC INVERTER INSTALLED</i> AC GENERATION - ADJUSTMENT/TEST	U	Oct 30/15
24-20-00-700-801-A	<i>EFFECTIVITY: FOR AIRCRAFT WITH AC STATIC INVERTER INSTALLED</i> LED AC GENERATION SYSTEM - OPERATIONAL TEST	U	Oct 30/15
24-20-01/400	<i>EFFECTIVITY: FOR AIRCRAFT WITH AC STATIC INVERTER INSTALLED</i> AC STATIC INVERTER - REMOVAL/INSTALLATION	U	Oct 30/15
24-20-01-000-801-A	<i>EFFECTIVITY: FOR AIRCRAFT WITH AC STATIC INVERTER INSTALLED</i> AC STATIC INVERTER - REMOVAL	U	Oct 30/15


Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted

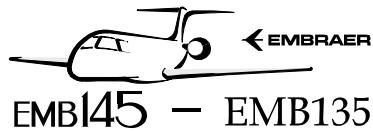

AIRCRAFT MAINTENANCE MANUAL

PAGEBLOCK TASK	REVISION STATUS	REVISION DATE
24-20-01-400-801-A <i>EFFECTIVITY: FOR AIRCRAFT WITH AC STATIC INVERTER INSTALLED</i> AC STATIC INVERTER - INSTALLATION	U	Oct 30/15
24-20-01/500 <i>EFFECTIVITY: FOR AIRCRAFT WITH AC STATIC INVERTER INSTALLED</i> AC STATIC INVERTER - ADJUSTMENT/TEST	U	Oct 30/15
24-20-01-700-801-A <i>EFFECTIVITY: FOR AIRCRAFT WITH AC STATIC INVERTER INSTALLED</i> AC STATIC INVERTER FAN - OPERATIONAL TEST	U	Oct 30/15
24-31-00/500 MAIN GENERATION - ADJUSTMENT/TEST	U	Oct 30/15
24-31-00-700-801-A MAIN-GENERATION OVERCURRENT-PROTECTION CIRCUIT - OPERATIONAL CHECK	U	Oct 30/15
24-31-00-700-802-A MAIN-GENERATION SWITCHING-CIRCUIT - OPERATIONAL CHECK	U	Oct 30/15
24-31-00-700-803-A MAIN GENERATION SYSTEM - OPERATIONAL TEST	U	Oct 30/15
24-31-01/200 MAIN GENERATOR - MAINTENANCE PRACTICES	U	Oct 30/15
24-31-01-900-801-A MAIN GENERATOR - RESTORE	U	Oct 30/15
24-31-01/400 MAIN GENERATOR - REMOVAL/INSTALLATION	U	Oct 30/15
24-31-01-000-801-A MAIN GENERATOR - REMOVAL	U	Oct 30/15
24-31-01-400-801-A MAIN GENERATOR - INSTALLATION	U	Oct 30/15
24-31-01/600 MAIN GENERATOR - INSPECTION/CHECK	U	Oct 30/15
24-31-01-200-801-A MAIN GENERATOR INSTALLATION - VISUAL INSPECTION	U	Oct 30/15


Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted

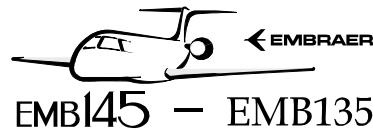

AIRCRAFT
MAINTENANCE MANUAL

PAGEBLOCK <u>TASK</u>	<u>REVISION STATUS</u>	<u>REVISION DATE</u>
24-31-02/400 GENERATOR CONTROL UNIT (GCU) - REMOVAL/INSTALLATION	U	Oct 30/15
24-31-02-000-801-A MAIN GENERATOR CONTROL UNIT (GCU) - REMOVAL	U	Oct 30/15
24-31-02-400-801-A MAIN GENERATOR CONTROL UNIT (GCU) - INSTALLATION	U	Oct 30/15
24-31-02-080-801-A MAIN GCU TROUBLESHOOTING SOFTWARE - DISCONNECTION	U	Oct 30/15
24-31-02-480-801-A MAIN GCU TROUBLESHOOTING SOFTWARE - CONNECTION	U	Oct 30/15
24-31-02/500 GENERATOR CONTROL UNIT (GCU) - ADJUSTMENT/TEST	U	Oct 30/15
24-31-02-820-802-A MAIN GCU VOLTAGE - ADJUSTMENT	U	Oct 30/15
24-31-03/400 GENERATOR LINE CONTACTOR (GLC) - REMOVAL/INSTALLATION	U	Oct 30/15
24-31-03-000-801-A GENERATOR LINE CONTACTORS (GLCS) - REMOVAL	U	Oct 30/15
24-31-03-400-801-A GENERATOR LINE CONTACTORS (GLCS) - INSTALLATION	U	Oct 30/15
24-31-04/400 GENERATOR DUCT ASSEMBLY - REMOVAL/INSTALLATION	U	Oct 30/15
24-31-04-000-801-A GENERATOR DUCT ASSEMBLY - REMOVAL	U	Oct 30/15
24-31-04-400-801-A GENERATOR DUCT ASSEMBLY - INSTALLATION	U	Oct 30/15
24-31-05/400 FEEDER PROTECTION RLY - REMOVAL/INSTALLATION	U	Oct 30/15
24-31-05-000-801-A FEEDER PROTECTION RLY - REMOVAL	U	Oct 30/15
24-31-05-400-801-A FEEDER PROTECTION RLY - INSTALLATION	U	Oct 30/15

Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted

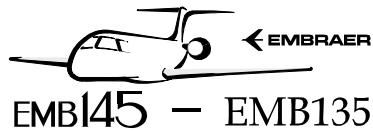


EMB145 - EMB135

AIRCRAFT
MAINTENANCE MANUAL

PAGEBLOCK <u>TASK</u>		<u>REVISION STATUS</u>	<u>REVISION DATE</u>
24-31-06/400		U	Oct 30/15
MAIN GENERATOR SHUNT - REMOVAL/INSTALLATION			
24-31-06-000-801-A		U	Oct 30/15
MAIN GENERATOR SHUNT - REMOVAL			
24-31-06-400-801-A		U	Oct 30/15
MAIN GENERATOR SHUNT - INSTALLATION			
24-34-00/500		U	Oct 30/15
APU GENERATION - ADJUSTMENT/TEST			
24-34-00-700-801-A		U	Oct 30/15
APU GENERATION OVERCURRENT-PROTECTION CIRCUIT - OPERATIONAL CHECK			
24-34-00-700-802-A		U	Oct 30/15
APU GENERATION SWITCHING CIRCUIT - OPERATIONAL CHECK			
24-34-00-700-803-A		U	Oct 30/15
APU GENERATION SYSTEM - OPERATIONAL TEST			
24-34-01/200		U	Oct 30/15
APU STARTER/GENERATOR - MAINTENANCE PRACTICES			
24-34-01-900-801-A		U	Oct 30/15
APU STARTER/GENERATOR - RESTORE			
24-34-01-960-802-A		U	Oct 30/15
APU STARTER/GENERATOR - BRUSHES DISCARD			
24-34-01/400		U	Oct 30/15
APU STARTER/GENERATOR - REMOVAL/INSTALLATION			
24-34-01-000-801-A		U	Oct 30/15
APU STARTER/GENERATOR - REMOVAL			
24-34-01-400-801-A		U	Oct 30/15
APU STARTER GENERATOR - INSTALLATION			
24-34-01/600		U	Oct 30/15
APU STARTER/GENERATOR - INSPECTION/CHECK			
24-34-01-200-801-A		U	Oct 30/15
APU STARTER/GENERATOR BRUSHES - DETAILED VISUAL INSPECTION			

Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted

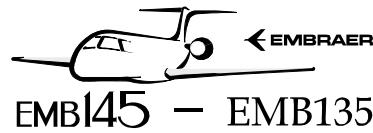


EMB145 - EMB135

AIRCRAFT
MAINTENANCE MANUAL

PAGEBLOCK TASK	REVISION STATUS	REVISION DATE
24-34-01-200-802-A APU STARTER/GENERATOR INSTALLATION - VISUAL INSPECTION	U	Oct 30/15
24-34-02/400 APU GENERATOR CONTROL UNIT (GCU) - REMOVAL/INSTALLATION	U	Oct 30/15
24-34-02-000-801-A APU GCU - REMOVAL	U	Oct 30/15
24-34-02-400-801-A APU GCU - INSTALLATION	U	Oct 30/15
24-34-02-080-801-A APU GCU TROUBLESHOOTING SOFTWARE - DISCONNECTION	U	Oct 30/15
24-34-02-480-801-A APU GCU TROUBLESHOOTING SOFTWARE - CONNECTION	U	Oct 30/15
24-34-02/500 APU GENERATOR CONTROL UNIT (GCU) - ADJUSTMENT/TEST	U	Oct 30/15
24-34-02-820-802-A APU GCU - VOLTAGE ADJUSTMENT	U	Oct 30/15
24-34-03/400 APU LINE CONTACTOR (ALC) - REMOVAL/INSTALLATION	U	Oct 30/15
24-34-03-000-801-A APU LINE CONTACTOR (ALC) - REMOVAL	U	Oct 30/15
24-34-03-400-801-A APU LINE CONTACTOR (ALC) - INSTALLATION	U	Oct 30/15
24-34-04/400 APU STARTING CONTACTOR (ASC) - REMOVAL/INSTALLATION	U	Oct 30/15
24-34-04-000-801-A APU STARTER CONTACTOR (ASC) - REMOVAL	U	Oct 30/15
24-34-04-400-801-A APU STARTER CONTACTOR (ASC) - INSTALLATION	U	Oct 30/15
24-34-05/400 APU SHUNT - REMOVAL/INSTALLATION	U	Oct 30/15
24-34-05-000-801-A APU SHUNT COVER - REMOVAL	U	Oct 30/15

Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted

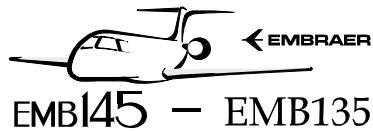

EMB145 – EMB135

AIRCRAFT
MAINTENANCE MANUAL


PAGEBLOCK TASK	REVISION STATUS	REVISION DATE
24-34-05-400-801-A APU SHUNT COVER - INSTALLATION	U	Oct 30/15
24-34-05-000-802-A APU SHUNT - REMOVAL	U	Oct 30/15
24-34-05-400-802-A APU SHUNT - INSTALLATION	U	Oct 30/15
24-35-00/500 BACKUP BATTERY SYSTEM - ADJUSTMENT/TEST	U	Oct 30/15
24-35-00-700-801-A BACK-UP BATTERY SYSTEM - OPERATIONAL TEST	U	Oct 30/15
24-35-01/200 BACKUP BATTERY - MAINTENANCE PRACTICES	U	Oct 30/15
24-35-01-900-801-A BACK-UP BATTERY - RESTORE	U	Oct 30/15
24-35-01/400 BACKUP BATTERY - REMOVAL/INSTALLATION	U	Oct 30/15
24-35-01-000-801-A BACKUP BATTERY - REMOVAL	U	Oct 30/15
24-35-01-400-801-A BACKUP BATTERY - INSTALLATION	U	Oct 30/15
24-35-01/500 BACKUP BATTERY - ADJUSTMENT/TEST	U	Oct 30/15
24-35-01-700-801-A BACK-UP BATTERY - FUNCTIONAL CHECK	U	Oct 30/15
24-35-02/400 BACKUP BATTERY RELAY BOX - REMOVAL/INSTALLATION	U	Oct 30/15
24-35-02-000-801-A BACKUP-BATTERY RELAY BOX - REMOVAL	U	Oct 30/15
24-35-02-400-801-A BACKUP-BATTERY RELAY BOX - INSTALLATION	U	Oct 30/15
24-36-00/500 MAIN BATTERY SYSTEM - ADJUSTMENT/TEST	U	Oct 30/15

Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted

EMB-145 - AMM 1285

TOC


Chapter 24
Page 6 of 11
Rev 55 - Oct 29/18

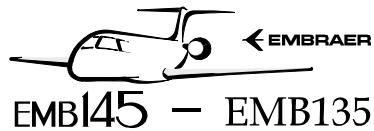

AIRCRAFT MAINTENANCE MANUAL

PAGEBLOCK TASK	REVISION STATUS	REVISION DATE
24-36-00-700-801-A MAIN BATTERY SYSTEM - OPERATIONAL TEST	U	Oct 30/15
24-36-01/200 MAIN BATTERY - MAINTENANCE PRACTICES	U	Oct 30/15
24-36-01-900-801-A <i>EFFECTIVITY: AIRCRAFT WITH SAFT MAIN BATTERY</i> MAIN BATTERY - RESTORE	U	Oct 30/15
24-36-01-900-802-A <i>EFFECTIVITY: AIRCRAFT WITH MARATHON MAIN BATTERY</i> MAIN BATTERY - RESTORE	U	Oct 30/15
24-36-01/400 MAIN BATTERY - REMOVAL/INSTALLATION	U	Oct 30/15
24-36-01-000-801-A MAIN BATTERY - REMOVAL	U	Oct 30/15
24-36-01-400-801-A MAIN BATTERY - INSTALLATION	U	Oct 30/15
24-36-01/500 <i>EFFECTIVITY: FOR AIRCRAFT WITH MAIN BATTERY SAFT PART NUMBER 442CH1</i> MAIN BATTERY - ADJUSTMENT/TEST	U	Oct 30/15
24-36-01-700-801-A <i>EFFECTIVITY: FOR AIRCRAFT WITH MAIN BATTERY SAFT PART NUMBER 442CH1</i> MAIN BATTERY - FUNCTIONAL CHECK	U	Oct 30/15
24-36-01/600 MAIN BATTERY - INSPECTION/CHECK	U	Oct 30/15
24-36-01-600-801-A MAIN BATTERY - SERVICE	U	Oct 30/15
24-36-02/400 MAIN BATTERY 1 RELAY BOX - REMOVAL/INSTALLATION	U	Oct 30/15
24-36-02-000-801-A MAIN BATTERY 1 RELAY BOX - REMOVAL	U	Oct 30/15
24-36-02-400-801-A MAIN BATTERY 1 RELAY BOX - INSTALLATION	U	Oct 30/15

Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted

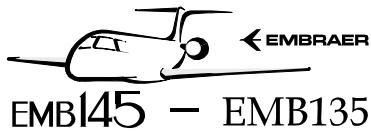

EMB145 - EMB135

AIRCRAFT
MAINTENANCE MANUAL


PAGEBLOCK <u>TASK</u>	<u>REVISION STATUS</u>	<u>REVISION DATE</u>
24-36-03/400 MAIN BATTERY 2 RELAY BOX - REMOVAL/INSTALLATION	U	Oct 30/15
24-36-03-000-801-A MAIN BATTERY 2 RELAY BOX - REMOVAL	U	Oct 30/15
24-36-03-400-801-A MAIN BATTERY 2 RELAY BOX - INSTALLATION	U	Oct 30/15
24-37-00/500 CONFIG-1 <i>EFFECTIVITY: FOR AIRCRAFT WITH DC/DC POWER CONVERSION SYSTEM</i> DC/DC CONVERSION SYSTEM - ADJUSTMENT/TEST	U	Oct 30/15
24-37-00-700-801-A CONFIG-1 <i>EFFECTIVITY: FOR AIRCRAFT WITH DC/DC POWER CONVERSION SYSTEM</i> DC/DC POWER CONVERSION SYSTEM - FUNCTIONAL TEST	U	Oct 30/15
24-37-01/400 CONFIG-1 <i>EFFECTIVITY: FOR AIRCRAFT WITH DC/DC POWER CONVERSION SYSTEM</i> COCKPIT DC/DC CONVERTER - REMOVAL/INSTALLATION	U	Oct 30/15
24-37-01-000-801-A CONFIG-1 <i>EFFECTIVITY: FOR AIRCRAFT WITH DC/DC POWER CONVERSION SYSTEM</i> COCKPIT DC/DC CONVERTER - REMOVAL	U	Oct 30/15
24-37-01-400-801-A CONFIG-1 <i>EFFECTIVITY: FOR AIRCRAFT WITH DC/DC POWER CONVERSION SYSTEM</i> COCKPIT DC/DC CONVERTER - INSTALLATION	U	Oct 30/15
24-37-02/400 CONFIG-1 <i>EFFECTIVITY: FOR AIRCRAFT WITH DC/DC POWER CONVERSION SYSTEM</i> COCKPIT 12 V DC ELECTRICAL OUTLET - REMOVAL/INSTALLATION	U	Oct 30/15
24-37-02-000-801-A CONFIG-1 <i>EFFECTIVITY: FOR AIRCRAFT WITH DC/DC POWER CONVERSION SYSTEM</i> COCKPIT 12 V DC ELECTRICAL OUTLET - REMOVAL	U	Oct 30/15
24-37-02-400-801-A CONFIG-1 <i>EFFECTIVITY: FOR AIRCRAFT WITH DC/DC POWER CONVERSION SYSTEM</i> COCKPIT 12 V DC ELECTRICAL OUTLET - INSTALLATION	U	Oct 30/15

Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted

EMB-145 - AMM 1285

TOC

Chapter 24
Page 8 of 11
Rev 55 - Oct 29/18

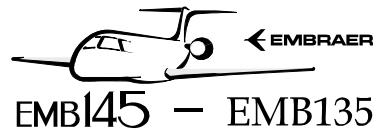

EMB145 - EMB135

AIRCRAFT
MAINTENANCE MANUAL


PAGEBLOCK <u>TASK</u>	<u>REVISION STATUS</u>	<u>REVISION DATE</u>
24-40-00/500 EXTERNAL POWER - ADJUSTMENT/TEST	U	Oct 30/15
24-40-00-700-801-A GPU OVERVOLTAGE PROTECTION - FUNCTIONAL CHECK	U	Apr 27/18
24-40-01/400 EXTERNAL POWER RECEPTACLE - REMOVAL/INSTALLATION	U	Oct 30/15
24-40-01-000-801-A EXTERNAL POWER RECEPTACLE - REMOVAL	U	Oct 30/15
24-40-01-400-801-A EXTERNAL POWER RECEPTACLE - INSTALLATION	U	Oct 30/15
24-60-00/500 DC ELECTRICAL LOAD DISTRIBUTION - ADJUSTMENT/TEST	U	Oct 30/15
24-60-00-700-801-A ELECTRICAL EMERGENCY TRANSFER CIRCUIT - OPERATIONAL CHECK	U	Oct 30/15
24-60-00-700-802-A ELEC EMERG ABNORM ALARM - OPERATIONAL CHECK	U	Oct 30/15
24-60-01/400 BUS TIE CONTACTOR (BTC) - REMOVAL/INSTALLATION	U	Oct 30/15
24-60-01-000-801-A BUS TIE CONTACTORS (BTCS) - REMOVAL	U	Oct 30/15
24-60-01-400-801-A BUS TIE CONTACTORS (BTCS) - INSTALLATION	U	Oct 30/15
24-60-02/400 SHED BUS CONTACTOR (SBC) - REMOVAL/INSTALLATION	U	Oct 30/15
24-60-02-000-801-A SHED BUS CONTACTORS (SBCS) - REMOVAL	U	Oct 30/15
24-60-02-400-801-A SHED BUS CONTACTORS (SBCS) - INSTALLATION	U	Oct 30/15
24-60-03/400 ESSENTIAL BUS CONTACTOR (EBC) - REMOVAL/INSTALLATION	U	Oct 30/15

Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted

EMB-145 - AMM 1285

TOC

Chapter 24
Page 9 of 11
Rev 55 - Oct 29/18

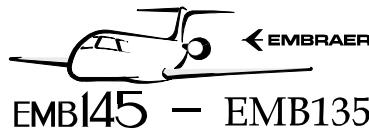

AIRCRAFT MAINTENANCE MANUAL


PAGEBLOCK TASK	REVISION STATUS	REVISION DATE
24-60-03-000-801-A ESSENTIAL BUS CONTACTOR (EBC) - REMOVAL	U	Oct 30/15
24-60-03-400-801-A ESSENTIAL BUS CONTACTOR (EBC) - INSTALLATION	U	Oct 30/15
24-60-04/400 ESSENTIAL INTERCONNECTION CONTACTOR (EIC) - REMOVAL/ INSTALLATION	U	Oct 30/15
24-60-04-000-801-A ESSENTIAL INTERCONNECTION CONTACTOR (EIC) - REMOVAL	U	Oct 30/15
24-60-04-400-801-A ESSENTIAL INTERCONNECTION CONTACTOR (EIC) - INSTALLA- TION	U	Oct 30/15
24-61-00/500 GROUND SERVICE BUSES - ADJUSTMENT/TEST	U	Oct 30/15
24-61-00-700-801-A GROUND SERVICE BUSES - OPERATIONAL TEST	U	Oct 30/15
24-61-01/400 CONFIG-1 <i>EFFECTIVITY: FOR AIRCRAFT WITH PASSENGER-CABIN ELECTRIC OUTLET</i> PASSENGER-CABIN ELECTRIC OUTLET (SOCKET) - REMOVAL/ INSTALLATION	U	Oct 30/15
24-61-01-000-801-A CONFIG-1 <i>EFFECTIVITY: FOR AIRCRAFT WITH PASSENGER-CABIN ELECTRIC OUTLET</i> ELECTRICAL OUTLET (SOCKET) - REMOVAL	U	Oct 30/15
24-61-01-400-801-A CONFIG-1 <i>EFFECTIVITY: FOR AIRCRAFT WITH PASSENGER-CABIN ELECTRIC OUTLET</i> ELECTRICAL OUTLET (SOCKET) - INSTALLATION	U	Oct 30/15
24-62-00/500 AVIONICS MASTER SYSTEM - ADJUSTMENT/TEST	U	Oct 30/15
24-62-00-700-801-A AVIONICS MASTER SYSTEM - OPERATIONAL TEST	U	Oct 30/15

Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted

EMB-145 - AMM 1285

TOC

Chapter 24
Page 10 of 11
Rev 55 - Oct 29/18

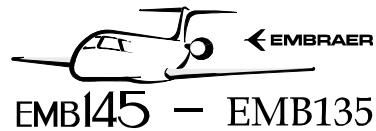

AIRCRAFT
MAINTENANCE MANUAL

<u>PAGEBLOCK TASK</u>	<u>REVISION STATUS</u>	<u>REVISION DATE</u>
24-65-00/400 LEFT POWER CONTROL/DISTRIBUTION BOX - REMOVAL/INSTALLATION	U	Oct 30/15
24-65-00-000-801-A LEFT POWER CONTROL/DISTRIBUTION BOX - REMOVAL	U	Feb 16/16
24-65-00-400-801-A LEFT POWER CONTROL/DISTRIBUTION BOX - INSTALLATION	U	Feb 16/16
24-65-01/400 RIGHT POWER CONTROL/DISTRIBUTION BOX - REMOVAL/INSTALLATION	U	Oct 30/15
24-65-01-000-801-A RIGHT POWER CONTROL/DISTRIBUTION BOX - REMOVAL	U	Oct 30/15
24-65-01-400-801-A RIGHT POWER CONTROL/DISTRIBUTION BOX - INSTALLATION	U	Oct 30/15

Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted

