

**TABLE OF CONTENTS**

<b>PAGEBLOCK TASK</b>	<b>REVISION STATUS</b>	<b>REVISION DATE</b>
<b>52-00-00/200</b> <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR DOORS - MAINTENANCE PRACTICES</i>	U	Oct 30/15
<b>52-00-00-910-801-A</b> <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR MAIN-DOOR - SUPPORTING</i>	U	Oct 30/15
<b>52-00-00/600</b> <i>DOORS - INSPECTION/CHECK</i>	U	Oct 30/15
<b>52-00-00-200-801-A</b> <i>DOOR RED MARKS - INSPECTION</i>	U	Oct 30/15
<b>52-00-01/800</b> <i>RUBBER TRIM SEAL FILLER STRIP - REPAIR</i>	U	Oct 30/15
<b>52-00-01-300-801-A</b> <i>FILLER STRIP - REPAIR / REPLACEMENT</i>	U	Oct 30/15
<b>52-00-04/600</b> <i>RUBBER TRIM SEAL - INSPECTION/CHECK</i>	U	Oct 31/16
<b>52-00-04-200-801-A</b> <i>DOOR RUBBER SEAL - INSPECTION</i>	U	Oct 30/15
<b>52-00-04/800</b> <i>RUBBER TRIM SEAL - REPAIR</i>	U	Oct 30/15
<b>52-00-04-300-801-A</b> <i>RUBBER TRIM SEAL - REPAIR</i>	U	Oct 30/15
<b>52-00-05/400</b> <i>EFFECTIVITY: AIRCRAFT WITH DOOR LOCK DOOR KEYLOCK - REMOVAL/INSTALLATION</i>	U	Oct 30/15
<b>52-00-05-000-801-A</b> <i>EFFECTIVITY: AIRCRAFT WITH DOOR LOCK DOOR KEYLOCK - REMOVAL</i>	U	Oct 30/15
<b>52-00-05-400-801-A</b> <i>EFFECTIVITY: AIRCRAFT WITH DOOR LOCK DOOR KEYLOCK - INSTALLATION</i>	U	Oct 30/15

**Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted**



EMB145 - EMB135

AIRCRAFT  
MAINTENANCE MANUAL


PAGEBLOCK TASK	REVISION STATUS	REVISION DATE
52-00-06/200 CONFIG-2 <i>EFFECTIVITY: ACFT MODEL(S) EMB-135</i> PASSENGER CABIN ESCAPE HATCHES SAFETY PIN - MAINTENANCE PRACTICES	U	Oct 30/15
52-00-06-910-801-A CONFIG-2 <i>EFFECTIVITY: POST-MOD SB 145-52-0040</i> PASSENGER-CABIN ESCAPE-HATCH SAFETY PINS - INSTALLATION AND REMOVAL	U	Oct 30/15
52-10-01/400 <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR</i> MAIN DOOR - REMOVAL/INSTALLATION	U	Oct 30/15
52-10-01-000-801-A <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR</i> MAIN DOOR - REMOVAL	U	Oct 30/15
52-10-01-400-801-A <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR</i> MAIN DOOR - INSTALLATION	U	Oct 30/15
52-10-01/500 <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR</i> MAIN DOOR - ADJUSTMENT/TEST	U	Oct 30/15
52-10-01-820-801-A <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR</i> MAIN DOOR INTERNAL ACTUATING HANDLE - TEST	U	Oct 30/15
52-10-01-820-802-A <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR</i> MAIN-DOOR STEP ACTUATING MECHANISM - ADJUSTMENT	U	Oct 30/15
52-10-01-820-803-A <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR</i> MAIN-DOOR INTERCONNECTING RODS - ADJUSTMENT	U	Oct 30/15
52-10-01-820-804-A <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR</i> MAIN-DOOR LOCKING-MECHANISM CAMS - TEST	U	Oct 30/15
52-10-01-820-805-A <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR</i> MAIN DOOR CABLES - ADJUSTMENT	U	Oct 30/15
52-10-01-820-806-A <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR</i> MAIN DOOR ROLLERS - ADJUSTMENT	U	Oct 30/15

Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted

EMB-145 - AMM 1285

TOC

Chapter 52  
Page 2 of 37  
Rev 55 - Oct 29/18

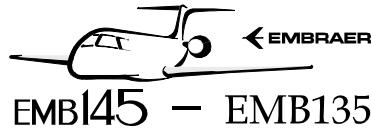

EMB145 - EMB135

AIRCRAFT  
MAINTENANCE MANUAL

PAGEBLOCK TASK	REVISION STATUS	REVISION DATE
52-10-01-820-807-A <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR MAIN DOOR-TO-FUSELAGE SKIN GAP - ADJUSTMENT</i>	U	Oct 30/15
52-10-01-820-808-A <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR MAIN DOOR-TO-FUSELAGE SKIN STEP - ADJUSTMENT</i>	U	Oct 30/15
52-10-01-820-809-A <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR MAIN DOOR STOPS - ADJUSTMENT</i>	U	Oct 30/15
52-10-01-820-810-A <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR MAIN-DOOR FOLDING FLAP EDGE - ADJUSTMENT</i>	U	Oct 30/15
52-10-01-820-811-A <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR MAIN-DOOR FOLDING FLAP - ADJUSTMENT</i>	U	Oct 30/15
52-10-02/400 <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR MAIN-DOOR STEPTREAD LINING PANEL - REMOVAL/INSTALLATION</i>	U	Oct 30/15
52-10-02-000-801-A <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR MAIN-DOOR STEP-TREAD LINING PANEL - REMOVAL</i>	U	Oct 30/15
52-10-02-400-801-A <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR MAIN-DOOR STEP-TREAD LINING PANEL - INSTALLATION</i>	U	Oct 30/15
52-10-03/400 <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR MAIN DOOR STEPS - REMOVAL/INSTALLATION</i>	U	Oct 30/15
52-10-03-000-801-A <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR MAIN DOOR FIRST SECOND AND THIRD STEPS - REMOVAL</i>	U	Apr 29/16
52-10-03-400-801-A <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR MAIN DOOR FIRST SECOND AND THIRD STEPS - INSTALLATION</i>	U	Oct 30/15
52-10-03/700 <i>MAIN DOOR STEPS - CLEANING/PAINTING</i>	U	Oct 30/15
52-10-03-370-801-A <i>MAIN DOOR STEPS - PAINTING</i>	U	Oct 30/15

Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted

EMB-145 - AMM 1285

TOC

Chapter 52  
Page 3 of 37  
Rev 55 - Oct 29/18



EMB145 - EMB135

AIRCRAFT  
MAINTENANCE MANUAL


PAGEBLOCK TASK	REVISION STATUS	REVISION DATE
52-10-04/200 <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS MAIN DOOR MAIN-DOOR RUBBER TRIM SEAL - MAINTENANCE PRACTICES</i>	U	Oct 30/15
52-10-04-960-801-A <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS MAIN DOOR RUBBER TRIM SEAL OF THE MAIN DOOR - REPLACEMENT</i>	U	Oct 30/15
52-10-04/400 <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR MAIN-DOOR RUBBER TRIM SEAL - REMOVAL/INSTALLATION</i>	U	Oct 30/15
52-10-04-000-801-A <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR MAIN-DOOR RUBBER TRIM SEAL - REMOVAL</i>	U	Oct 30/15
52-10-04-400-801-A <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR MAIN-DOOR RUBBER TRIM SEAL - INSTALLATION</i>	U	Oct 30/15
52-10-05/400 <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR MAIN DOOR HANDRAIL - REMOVAL/INSTALLATION</i>	U	Oct 30/15
52-10-05-000-801-A <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR MAIN DOOR HANDRAIL - REMOVAL</i>	U	Oct 30/15
52-10-05-400-801-A <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR MAIN DOOR HANDRAIL - INSTALLATION</i>	U	Oct 30/15
52-10-07/400 <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR OR ALL, EXCEPT A/C WITH SIDE-HINGED MAIN DOOR, OR PRE-MOD SB 145-52-0005 MAIN-DOOR STEP SPRINGS - REMOVAL/INSTALLATION</i>	U	Oct 30/15
52-10-07-000-801-A <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR OR ALL, EXCEPT A/C WITH SIDE-HINGED MAIN DOOR, OR PRE-MOD SB 145-52-0005 MAIN-DOOR STEP SPRINGS - REMOVAL</i>	U	Oct 30/15
52-10-07-400-801-A <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR OR ALL, EXCEPT A/C WITH SIDE-HINGED MAIN DOOR, OR PRE-MOD SB 145-52-0005 MAIN-DOOR STEP SPRINGS - INSTALLATION</i>	U	Oct 30/15

Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted

EMB-145 - AMM 1285

TOC

Chapter 52  
Page 4 of 37  
Rev 55 - Oct 29/18

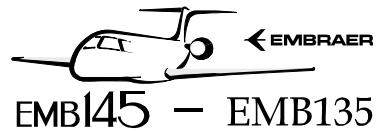

EMB145 - EMB135

AIRCRAFT  
MAINTENANCE MANUAL

PAGEBLOCK TASK	REVISION STATUS	REVISION DATE
52-11-00/300 <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR MAIN-DOOR ACTUATING AND LOCKING MECHANISM - SERVICING</i>	U	Oct 30/15
52-11-00-600-801-A <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR MAIN-DOOR ACTUATING AND LOCKING MECHANISM - LUBRICATION</i>	U	Oct 30/15
52-11-00/500 <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR MAIN-DOOR ACTUATING AND LOCKING MECHANISM - ADJUSTMENT/TEST</i>	U	Oct 30/15
52-11-00-700-801-A <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR MAIN-DOOR ACTUATING LATCHING AND LOCKING MECHANISM - FUNCTIONAL CHECK</i>	U	Oct 30/15
52-11-01/400 <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR MAIN-DOOR INTERNAL ACTUATING HANDLE - REMOVAL/INSTALLATION</i>	U	Oct 30/15
52-11-01-000-801-A <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR MAIN DOOR INTERNAL ACTUATING-HANDLE - REMOVAL</i>	U	Oct 30/15
52-11-01-400-801-A <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR MAIN DOOR INTERNAL ACTUATING HANDLE - INSTALLATION</i>	U	Oct 30/15
52-11-02/400 <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR MAIN-DOOR EXTERNAL ACTUATING HANDLE - REMOVAL/INSTALLATION</i>	U	Oct 30/15
52-11-02-000-801-A <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR MAIN-DOOR EXTERNAL ACTUATING-HANDLE - REMOVAL</i>	U	Oct 30/15
52-11-02-400-801-A <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR MAIN-DOOR EXTERNAL ACTUATING-HANDLE - INSTALLATION</i>	U	Oct 30/15

Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted

EMB-145 - AMM 1285

TOC

Chapter 52  
Page 5 of 37  
Rev 55 - Oct 29/18



EMB145 - EMB135

AIRCRAFT  
MAINTENANCE MANUAL


PAGEBLOCK TASK	REVISION STATUS	REVISION DATE
52-11-03/400 <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR MAIN-DOOR ROTATING ARM - REMOVAL/INSTALLATION</i>	U	Oct 30/15
52-11-03-000-801-A <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR MAIN DOOR ROTATING ARM - REMOVAL</i>	U	Oct 30/15
52-11-03-400-801-A <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR MAIN DOOR ROTATING ARM - INSTALLATION</i>	U	Oct 30/15
52-11-04/400 <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR MAIN-DOOR FOLDING FLAP - REMOVAL/INSTALLATION</i>	U	Oct 30/15
52-11-04-000-801-A <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR MAIN-DOOR FOLDING FLAP - REMOVAL</i>	U	Oct 30/15
52-11-04-400-801-A <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR MAIN-DOOR FOLDING FLAP - INSTALLATION</i>	U	Oct 30/15
52-11-05/400 <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR MAIN-DOOR INTERNAL ACTUATING-HANDLE TORQUE TUBE - RE- MOVAL/INSTALLATION</i>	U	Oct 30/15
52-11-05-000-801-A <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR MAIN-DOOR INTERNAL ACTUATING-HANDLE TORQUE TUBE - RE- MOVAL</i>	U	Oct 30/15
52-11-05-400-801-A <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR MAIN DOOR INTERNAL ACTUATING HANDLE TORQUE TUBE - IN- STALLATION</i>	U	Oct 30/15
52-11-06/400 <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR LOCK OF MAIN-DOOR LOCKING MECHANISM - REMOVAL/INSTALLA- TION</i>	U	Oct 30/15
52-11-06-000-801-A <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR LOCK OF MAIN-DOOR LOCKING MECHANISM - REMOVAL</i>	U	Oct 30/15

Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted

EMB-145 - AMM 1285

TOC

Chapter 52  
Page 6 of 37  
Rev 55 - Oct 29/18

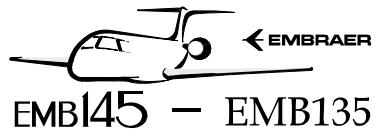

AIRCRAFT  
MAINTENANCE MANUAL

PAGEBLOCK TASK	REVISION STATUS	REVISION DATE
52-11-06-400-801-A <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR LOCK OF MAIN-DOOR LOCKING MECHANISM - INSTALLATION</i>	U	Oct 30/15
52-11-08/400 <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR MAIN-DOOR INTERCONNECTING RODS - REMOVAL/INSTALLATION</i>	U	Oct 30/15
52-11-08-000-801-A <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR MAIN-DOOR INTERCONNECTING RODS - REMOVAL</i>	U	Oct 30/15
52-11-08-400-801-A <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR MAIN-DOOR INTERCONNECTING RODS - INSTALLATION</i>	U	Oct 30/15
52-11-09/400 <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR MAIN-DOOR INTERMEDIATE TORQUE TUBE - REMOVAL/INSTALLA- TION</i>	U	Oct 30/15
52-11-09-000-801-A <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR INTERMEDIATE TORQUE TUBE - REMOVAL</i>	U	Oct 30/15
52-11-09-400-801-A <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR INTERMEDIATE TORQUE TUBE - INSTALLATION</i>	U	Oct 30/15
52-11-10/400 <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR MAIN-DOOR CONNECTION CABLES - REMOVAL/INSTALLATION</i>	U	Oct 30/15
52-11-10-000-801-A <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR MAIN DOOR CABLES - REMOVAL</i>	U	Oct 30/15
52-11-10-400-801-A <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR MAIN DOOR CABLES - INSTALLATION</i>	U	Oct 30/15
52-12-00/400 <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR MAIN-DOOR HYDRAULIC ACTUATION SYSTEM - REMOVAL/INSTAL- LATION</i>	U	Oct 30/15

Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted



## AIRCRAFT MAINTENANCE MANUAL


PAGEBLOCK TASK	REVISION STATUS	REVISION DATE
52-12-00-040-801-A <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR MAIN-DOOR HYDRAULIC ACTUATION SYSTEM - DEACTIVATION PROCEDURE</i>	U	Oct 30/15
52-12-00-440-801-A <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR MAIN-DOOR HYDRAULIC ACTUATION SYSTEM - REACTIVATION PROCEDURE</i>	U	Oct 30/15
52-12-00/500 <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR MAIN-DOOR HYDRAULIC ACTUATION SYSTEM - ADJUSTMENT/TEST</i>	U	Oct 30/15
52-12-00-700-801-A <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR MAIN-DOOR ALTERNATIVE OPENING SYSTEM - OPERATIONAL CHECK</i>	U	Oct 30/15
52-12-00-700-802-A <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR LANDING-GEAR AND MAIN-DOOR HYDRAULIC ACCUMULATOR - INSPECTION</i>	U	Oct 30/15
52-12-01/400 <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR MAIN-DOOR SOLENOID VALVE - REMOVAL/INSTALLATION</i>	U	Oct 30/15
52-12-01-000-801-A <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR MAIN-DOOR-ACTUATION SYSTEM SOLENOID VALVE - REMOVAL</i>	U	Oct 30/15
52-12-01-400-801-A <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR MAIN-DOOR-ACTUATION SYSTEM SOLENOID VALVE - INSTALLA- TION</i>	U	Oct 30/15
52-12-03/400 <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR MAIN-DOOR ACTUATION-SYSTEM PRESSURE SWITCH - REMOVAL/ INSTALLATION</i>	U	Oct 30/15
52-12-03-000-801-A <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR MAIN-DOOR ACTUATION-SYSTEM PRESSURE SWITCH - REMOVAL</i>	U	Oct 30/15

Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted

EMB-145 - AMM 1285

TOC

Chapter 52  
Page 8 of 37  
Rev 55 - Oct 29/18

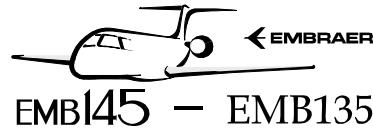

EMB145 - EMB135

AIRCRAFT  
MAINTENANCE MANUAL

PAGEBLOCK TASK	REVISION STATUS	REVISION DATE
52-12-03-400-801-A <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR</i> MAIN-DOOR ACTUATION-SYSTEM PRESSURE SWITCH - INSTALLATION	U	Oct 30/15
52-12-03/500 <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR</i> MAIN-DOOR ACTUATION-SYSTEM PRESSURE SWITCH - ADJUSTMENT/TEST	U	Oct 30/15
52-12-03-700-801-A <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR</i> MAIN-DOOR ACTUATION-SYSTEM PRESSURE SWITCH - OPERATIONAL TEST	U	Oct 30/15
52-12-04/400 <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR</i> MAIN-DOOR ACTUATION-SYSTEM SPRING ACCUMULATOR - REMOVAL/INSTALLATION	U	Oct 30/15
52-12-04-000-801-A <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR</i> MAIN-DOOR ACTUATION-SYSTEM SPRING ACCUMULATOR - REMOVAL	U	Oct 30/15
52-12-04-400-801-A <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR</i> MAIN-DOOR ACTUATION-SYSTEM SPRING ACCUMULATOR - INSTALLATION	U	Oct 30/15
52-12-04/500 <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR</i> MAIN-DOOR ACTUATION-SYSTEM SPRING ACCUMULATOR - ADJUSTMENT/TEST	U	Oct 30/15
52-12-04-700-801-A <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR</i> MAIN-DOOR ACTUATION SYSTEM SPRING ACCUMULATOR - FUNCTIONAL TEST	U	Oct 30/15
52-12-04/600 <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR</i> MAIN-DOOR ACTUATION-SYSTEM SPRING ACCUMULATOR - INSPECTION/CHECK	U	Oct 30/15

Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted

EMB-145 - AMM 1285

TOC

Chapter 52  
Page 9 of 37  
Rev 55 - Oct 29/18



EMB145 – EMB135

AIRCRAFT  
MAINTENANCE MANUAL


PAGEBLOCK TASK	REVISION STATUS	REVISION DATE
52-12-04-200-801-A <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR</i> SPRING-ACCUMULATOR HYDRAULIC-FLUID LEVEL - INSPECTION	U	Oct 30/15
52-12-05/400 <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR</i> MAIN-DOOR ACTUATION-SYSTEM SHUT-OFF VALVE - REMOVAL/ INSTALLATION	U	Oct 30/15
52-12-05-000-801-A <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR</i> MAIN-DOOR ACTUATION-SYSTEM SHUT-OFF VALVE - REMOVAL	U	Oct 30/15
52-12-05-400-801-A <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR</i> MAIN-DOOR ACTUATION-SYSTEM SHUT-OFF VALVE - INSTALLA- TION	U	Oct 30/15
52-12-06/400 MAIN-DOOR ACTUATION-SYSTEM DISCHARGE VALVE - REMOVAL/ INSTALLATION	U	Feb 16/16
52-12-06-000-801-A <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR</i> MAIN-DOOR ACTUATION-SYSTEM DISCHARGE VALVE - REMOVAL	U	Feb 16/16
52-12-06-400-801-A <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR</i> MAIN-DOOR ACTUATION-SYSTEM DISCHARGE VALVE - INSTALLA- TION	U	Feb 16/16
52-12-07/400 <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR</i> MAIN-DOOR ACTUATION-SYSTEM RELIEF VALVE - REMOVAL/ INSTALLATION	U	Oct 30/15
52-12-07-000-801-A <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR</i> MAIN-DOOR ACTUATION-SYSTEM RELIEF VALVE - REMOVAL	U	Oct 30/15
52-12-07-400-801-A <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR</i> MAIN-DOOR ACTUATION-SYSTEM RELIEF VALVE - INSTALLATION	U	Oct 30/15
52-12-07/500 <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR</i> MAIN-DOOR ACTUATION-SYSTEM RELIEF VALVE - ADJUSTMENT/ TEST	U	Oct 30/15

Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted

EMB-145 - AMM 1285

TOC


Chapter 52  
Page 10 of 37  
Rev 55 - Oct 29/18

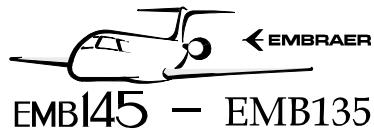

AIRCRAFT  
MAINTENANCE MANUAL

PAGEBLOCK TASK	REVISION STATUS	REVISION DATE
52-12-07-700-801-A <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR MAIN-DOOR ACTUATION-SYSTEM RELIEF VALVE - OPERATIONAL TEST</i>	U	Oct 30/15
52-12-08/400 <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR MAIN DOOR ACTUATOR - REMOVAL/INSTALLATION</i>	U	Oct 30/15
52-12-08-000-801-A <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR MAIN-DOOR ACTUATOR - REMOVAL</i>	U	Oct 30/15
52-12-08-400-801-A <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR MAIN-DOOR ACTUATOR - INSTALLATION</i>	U	Oct 30/15
52-12-08/500 <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR MAIN DOOR ACTUATOR - ADJUSTMENT/TEST</i>	U	Oct 30/15
52-12-08-700-801-A <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR MAIN DOOR ACTUATOR - OPERATIONAL TEST</i>	U	Oct 30/15
52-12-08-820-801-A <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR MAIN DOOR ACTUATOR - ADJUSTMENT</i>	U	Oct 30/15
52-12-09/400 <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR MAIN-DOOR CONTROL MICROSWITCH - REMOVAL/INSTALLATION</i>	U	Oct 30/15
52-12-09-000-801-A <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR MAIN-DOOR CONTROL MICROSWITCH - REMOVAL</i>	U	Oct 30/15
52-12-09-400-801-A <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR MAIN-DOOR CONTROL MICROSWITCH - INSTALLATION</i>	U	Oct 30/15
52-12-09/500 <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR MAIN-DOOR CONTROL MICROSWITCH - ADJUSTMENT/TEST</i>	U	Oct 30/15
52-12-09-820-802-A <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR MAIN-DOOR CONTROL MICROSWITCH - ADJUSTMENT</i>	U	Oct 30/15

Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted

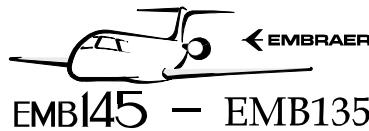

EMB145 - EMB135

AIRCRAFT  
MAINTENANCE MANUAL


PAGEBLOCK <u>TASK</u>	<u>REVISION STATUS</u>	<u>REVISION DATE</u>
52-12-11/400 <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR</i> MAIN-DOOR ACTUATION-SYSTEM EMERGENCY VALVE - REMOVAL/ INSTALLATION	U	Oct 30/15
52-12-11-000-801-A <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR</i> MAIN-DOOR ACTUATION-SYSTEM EMERGENCY VALVE - REMOV- AL	U	Oct 30/15
52-12-11-400-801-A <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR</i> MAIN-DOOR ACTUATION-SYSTEM EMERGENCY VALVE - INSTAL- LATION	U	Oct 30/15
52-12-12/400 <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR</i> MAIN-DOOR ACTUATION-SYSTEM CHARGING VALVE - REMOVAL/ INSTALLATION	U	Oct 30/15
52-12-12-000-801-A <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR</i> MAIN-DOOR ACTUATION-SYSTEM CHARGING VALVE - REMOVAL	U	Oct 30/15
52-12-12-400-801-A <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR</i> MAIN-DOOR ACTUATION-SYSTEM CHARGING VALVE - INSTALLA- TION	U	Oct 30/15
52-12-13/400 <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR</i> MAIN-DOOR ACTUATION-SYSTEM PRESSURE GAUGE - REMOVAL/ INSTALLATION	U	Oct 30/15
52-12-13-000-801-A <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR</i> MAIN-DOOR ACTUATION-SYSTEM PRESSURE GAGE - REMOVAL	U	Oct 30/15
52-12-13-400-801-A <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR</i> MAIN-DOOR ACTUATION-SYSTEM PRESSURE GAGE - INSTALLA- TION	U	Oct 30/15
52-12-14/400 <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR</i> MAIN-DOOR ACTUATION-SYSTEM CHECK VALVE - REMOVAL/ INSTALLATION	U	Oct 30/15

Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted

EMB-145 - AMM 1285

TOC

Chapter 52  
Page 12 of 37  
Rev 55 - Oct 29/18

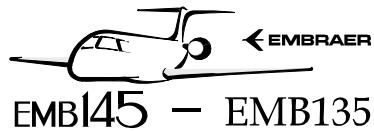

AIRCRAFT  
MAINTENANCE MANUAL

PAGEBLOCK TASK	REVISION STATUS	REVISION DATE
52-12-14-000-801-A <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR MAIN-DOOR ACTUATION-SYSTEM CHECK VALVE - REMOVAL</i>	U	Oct 30/15
52-12-14-400-801-A <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR MAIN-DOOR ACTUATION-SYSTEM CHECK VALVE - INSTALLATION</i>	U	Oct 30/15
52-12-15/400 <i>EFFECTIVITY: AIRCRAFT LR MODEL WITH AIRSTAIRS DOOR MAIN-DOOR ACTUATION-SYSTEM RESTRICTOR VALVE - REMOVAL/ INSTALLATION</i>	U	Oct 30/15
52-12-15-000-801-A <i>EFFECTIVITY: AIRCRAFT LR MODEL WITH AIRSTAIRS DOOR MAIN-DOOR ACTUATION-SYSTEM RESTRICTOR VALVE - REMOV- AL</i>	U	Oct 30/15
52-12-15-400-801-A <i>EFFECTIVITY: AIRCRAFT LR MODEL WITH AIRSTAIRS DOOR MAIN-DOOR ACTUATION-SYSTEM RESTRICTOR VALVE - INSTAL- LATION</i>	U	Oct 30/15
52-13-01/400 <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR MAIN-DOOR STEP GAS ACTUATOR - REMOVAL/INSTALLATION</i>	U	Oct 30/15
52-13-01-000-801-A <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR MAIN-DOOR STEP GAS ACTUATOR - REMOVAL</i>	U	Oct 30/15
52-13-01-400-801-A <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR MAIN-DOOR STEP GAS ACTUATOR - INSTALLATION</i>	U	Oct 30/15
52-13-02/400 <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR MAIN-DOOR STEP FOLD-OUT BACKSTOP - REMOVAL/INSTALLATION</i>	U	Oct 30/15
52-13-02-000-801-A <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR MAIN DOOR STEP FOLD-OUT BACKSTOP - REMOVAL</i>	U	Oct 30/15
52-13-02-400-801-A <i>EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR MAIN DOOR STEP FOLD-OUT BACKSTOP - INSTALLATION</i>	U	Oct 30/15

Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted



EMB145 - EMB135

AIRCRAFT  
MAINTENANCE MANUAL


PAGEBLOCK <u>TASK</u>	<u>REVISION STATUS</u>	<u>REVISION DATE</u>
52-14-00/600 MAIN DOOR DRAIN HOLES - INSPECTION/CHECK	U	Oct 30/15
52-14-00-200-801-A MAIN DOOR DRAINS - INSPECTION/CHECK	U	Oct 30/15
52-14-01/500 MAIN DOOR DRAIN VALVES - ADJUSTMENT/TEST	U	Oct 30/15
52-14-01-700-801-A MAIN DOOR DRAINS VALVES - OPERATIONAL CHECK	U	Oct 30/15
52-14-01/600 MAIN DOOR DRAIN VALVES - INSPECTION/CHECK	U	Oct 30/15
52-14-01-200-801-A MAIN DOOR DRAINS - INSPECTION/CHECK	U	Oct 30/15
52-18-00/300 <i>EFFECTIVITY: AIRCRAFT WITH SIDE-HINGED MAIN DOOR</i> SIDE-HINGED MAIN DOOR - SERVICING	U	Oct 30/15
52-18-00-600-801-A <i>EFFECTIVITY: AIRCRAFT WITH SIDE-HINGED MAIN DOOR</i> SIDE-HINGED MAIN-DOOR ACTUATING AND LOCKING MECHANISM - LUBRICATION	U	Oct 30/15
52-18-00/400 <i>EFFECTIVITY: AIRCRAFT WITH SIDE-HINGED MAIN DOOR</i> SIDE-HINGED MAIN DOOR - REMOVAL/INSTALLATION	U	Oct 30/15
52-18-00-000-801-A <i>EFFECTIVITY: AIRCRAFT WITH SIDE-HINGED MAIN DOOR</i> SIDE-HINGED MAIN DOOR - REMOVAL	U	Oct 30/15
52-18-00-400-801-A <i>EFFECTIVITY: AIRCRAFT WITH SIDE-HINGED MAIN DOOR</i> SIDE-HINGED MAIN DOOR - INSTALLATION	U	Oct 30/15
52-18-00/500 <i>EFFECTIVITY: AIRCRAFT WITH SIDE-HINGED MAIN DOOR</i> SIDE-HINGED MAIN DOOR - ADJUSTMENT/TEST	U	Oct 31/16
52-18-00-820-801-A <i>EFFECTIVITY: AIRCRAFT WITH SIDE-HINGED MAIN DOOR</i> MAIN-DOOR INTERNAL ACTUATING HANDLE - TEST	U	Oct 30/15

Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted

EMB-145 - AMM 1285

TOC

Chapter 52  
Page 14 of 37  
Rev 55 - Oct 29/18

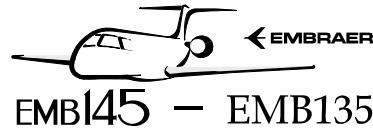

EMB145 - EMB135

AIRCRAFT  
MAINTENANCE MANUAL


PAGEBLOCK TASK	REVISION STATUS	REVISION DATE
52-18-00-820-802-A <i>EFFECTIVITY: AIRCRAFT WITH SIDE-HINGED MAIN DOOR MAIN-DOOR INTERCONNECTING RODS - ADJUSTMENT</i>	U	Oct 30/15
52-18-00-820-803-A <i>EFFECTIVITY: AIRCRAFT WITH SIDE-HINGED MAIN DOOR MAIN-DOOR LOCKING-MECHANISM CAMS - TEST</i>	U	Oct 30/15
52-18-00-820-804-A <i>EFFECTIVITY: AIRCRAFT WITH SIDE-HINGED MAIN DOOR MAIN DOOR CABLES - ADJUSTMENT</i>	U	Oct 30/15
52-18-00-820-805-A <i>EFFECTIVITY: AIRCRAFT WITH SIDE-HINGED MAIN DOOR MAIN DOOR ROLLERS - ADJUSTMENT</i>	U	Oct 30/15
52-18-00-820-806-A <i>EFFECTIVITY: AIRCRAFT WITH SIDE-HINGED MAIN DOOR MAIN DOOR-TO-FUSELAGE SKIN GAP - ADJUSTMENT</i>	U	Oct 30/15
52-18-00-820-807-A <i>EFFECTIVITY: AIRCRAFT WITH SIDE-HINGED MAIN DOOR MAIN DOOR-TO-FUSELAGE SKIN STEP - ADJUSTMENT</i>	U	Oct 30/15
52-18-00-820-808-A <i>EFFECTIVITY: AIRCRAFT WITH SIDE-HINGED MAIN DOOR MAIN DOOR STOPS - ADJUSTMENT</i>	U	Oct 30/15
52-18-00-820-809-A <i>EFFECTIVITY: AIRCRAFT WITH SIDE-HINGED MAIN DOOR MAIN-DOOR FOLDING FLAP EDGE - ADJUSTMENT</i>	U	Oct 30/15
52-18-00-820-810-A <i>EFFECTIVITY: AIRCRAFT WITH SIDE-HINGED MAIN DOOR MAIN-DOOR FOLDING FLAP - ADJUSTMENT</i>	U	Oct 30/15
52-18-01/400 <i>EFFECTIVITY: AIRCRAFT WITH SIDE-HINGED MAIN DOOR SIDE-HINGED MAIN-DOOR ACTUATING CAM - REMOVAL/INSTALLA- TION</i>	U	Oct 30/15
52-18-01-000-801-A <i>EFFECTIVITY: AIRCRAFT WITH SIDE-HINGED MAIN DOOR SIDE-HINGED MAIN-DOOR ACTUATING CAM - REMOVAL</i>	U	Oct 30/15
52-18-01-400-801-A <i>EFFECTIVITY: AIRCRAFT WITH SIDE-HINGED MAIN DOOR SIDE-HINGED MAIN-DOOR ACTUATING CAM - INSTALLATION</i>	U	Oct 30/15

Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted

EMB-145 - AMM 1285

TOC

Chapter 52  
Page 15 of 37  
Rev 55 - Oct 29/18

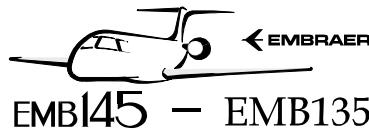

EMB145 - EMB135

AIRCRAFT  
MAINTENANCE MANUAL


PAGEBLOCK TASK	REVISION STATUS	REVISION DATE
52-18-02/400 <i>EFFECTIVITY: AIRCRAFT WITH SIDE-HINGED MAIN DOOR SIDE-HINGED MAIN-DOOR FOLDING-FLAP ACTUATING CAM - REMOVAL/INSTALLATION</i>	U	Oct 30/15
52-18-02-000-801-A <i>EFFECTIVITY: AIRCRAFT WITH SIDE-HINGED MAIN DOOR SIDE-HINGED MAIN-DOOR FOLDING-FLAP ACTUATING CAM - REMOVAL</i>	U	Oct 30/15
52-18-02-400-801-A <i>EFFECTIVITY: AIRCRAFT WITH SIDE-HINGED MAIN DOOR SIDE-HINGED MAIN-DOOR FOLDING-FLAP ACTUATING CAM - INSTALLATION</i>	U	Oct 30/15
52-18-03/400 <i>EFFECTIVITY: AIRCRAFT WITH SIDE-HINGED MAIN DOOR SIDE-HINGED MAIN-DOOR FOLDING FLAP - REMOVAL/INSTALLATION</i>	U	Oct 30/15
52-18-03-000-801-A <i>EFFECTIVITY: AIRCRAFT WITH SIDE-HINGED MAIN DOOR SIDE-HINGED MAIN-DOOR FOLDING FLAP - REMOVAL</i>	U	Oct 30/15
52-18-03-400-801-A <i>EFFECTIVITY: AIRCRAFT WITH SIDE-HINGED MAIN DOOR SIDE-HINGED MAIN-DOOR FOLDING FLAP - INSTALLATION</i>	U	Oct 30/15
52-18-04/200 <i>EFFECTIVITY: AIRCRAFT WITH SIDE-HINGED MAIN DOOR SIDE-HINGED MAIN-DOOR RUBBER TRIM SEAL - MAINTENANCE PRACTICES</i>	U	Oct 30/15
52-18-04-960-801-A <i>EFFECTIVITY: AIRCRAFT WITH SIDE-HINGED MAIN DOOR RUBBER TRIM SEAL OF THE MAIN DOOR - REPLACEMENT</i>	U	Oct 30/15
52-18-04/400 <i>EFFECTIVITY: AIRCRAFT WITH SIDE-HINGED MAIN DOOR SIDE-HINGED MAIN-DOOR RUBBER TRIM SEAL - REMOVAL/INSTALLATION</i>	U	Oct 30/15
52-18-04-000-801-A <i>EFFECTIVITY: AIRCRAFT WITH SIDE-HINGED MAIN DOOR SIDE-HINGED MAIN-DOOR RUBBER TRIM SEAL - REMOVAL</i>	U	Oct 30/15

Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted

EMB-145 - AMM 1285

TOC

Chapter 52  
Page 16 of 37  
Rev 55 - Oct 29/18

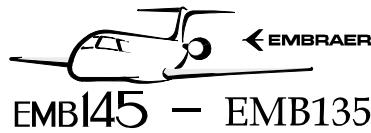

EMB145 - EMB135

AIRCRAFT  
MAINTENANCE MANUAL


PAGEBLOCK TASK	REVISION STATUS	REVISION DATE
52-18-04-400-801-A <i>EFFECTIVITY: AIRCRAFT WITH SIDE-HINGED MAIN DOOR SIDE-HINGED MAIN-DOOR RUBBER TRIM SEAL - INSTALLATION</i>	U	Oct 30/15
52-18-05/400 <i>EFFECTIVITY: AIRCRAFT WITH SIDE-HINGED MAIN DOOR SIDE-HINGED MAIN-DOOR INTERNAL ACTUATING HANDLE - RE- MOVAL/INSTALLATION</i>	U	Oct 30/15
52-18-05-000-801-A <i>EFFECTIVITY: AIRCRAFT WITH SIDE-HINGED MAIN DOOR SIDE-HINGED MAIN-DOOR INTERNAL ACTUATING HANDLE - RE- MOVAL</i>	U	Oct 30/15
52-18-05-400-801-A <i>EFFECTIVITY: AIRCRAFT WITH SIDE-HINGED MAIN DOOR SIDE-HINGED MAIN-DOOR INTERNAL ACTUATING HANDLE - IN- STALLATION</i>	U	Oct 30/15
52-18-06/400 <i>EFFECTIVITY: AIRCRAFT WITH SIDE-HINGED MAIN DOOR SIDE-HINGED MAIN-DOOR ACTUATING AND LOCKING MECHANISM - REMOVAL/INSTALLATION</i>	U	Oct 30/15
52-18-06-000-801-A <i>EFFECTIVITY: AIRCRAFT WITH SIDE-HINGED MAIN DOOR SIDE-HINGED MAIN-DOOR ACTUATING AND LOCKING MECHANISM - REMOVAL</i>	U	Oct 30/15
52-18-06-400-801-A <i>EFFECTIVITY: AIRCRAFT WITH SIDE-HINGED MAIN DOOR SIDE-HINGED MAIN-DOOR ACTUATING AND LOCKING MECHANISM - INSTALLATION</i>	U	Oct 30/15
52-18-06/500 <i>EFFECTIVITY: AIRCRAFT WITH SIDE-HINGED MAIN DOOR SIDE-HINGED MAIN-DOOR ACTUATING AND LOCKING MECHANISM - ADJUSTMENT/TEST</i>	U	Oct 30/15
52-18-06-700-801-A <i>EFFECTIVITY: AIRCRAFT WITH SIDE-HINGED MAIN DOOR SIDE-HINGED MAIN DOOR ACTUATING LATCHING AND LOCKING MECHANISM- FUNCTIONAL CHECK</i>	U	Oct 30/15

Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted

EMB-145 - AMM 1285

TOC


Chapter 52  
Page 17 of 37  
Rev 55 - Oct 29/18

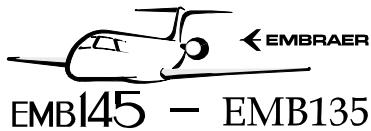

AIRCRAFT  
MAINTENANCE MANUAL

PAGEBLOCK TASK	REVISION STATUS	REVISION DATE
52-18-07/400 <i>EFFECTIVITY: AIRCRAFT WITH SIDE-HINGED MAIN DOOR SIDE-HINGED MAIN-DOOR EXTERNAL ACTUATING HANDLE - REMOVAL/INSTALLATION</i>	U	Oct 30/15
52-18-07-000-801-A <i>EFFECTIVITY: AIRCRAFT WITH SIDE-HINGED MAIN DOOR SIDE-HINGED MAIN-DOOR EXTERNAL ACTUATING HANDLE - REMOVAL</i>	U	Oct 30/15
52-18-07-400-801-A <i>EFFECTIVITY: AIRCRAFT WITH SIDE-HINGED MAIN DOOR SIDE-HINGED MAIN-DOOR EXTERNAL ACTUATING HANDLE - INSTALLATION</i>	U	Oct 30/15
52-18-08/400 <i>EFFECTIVITY: AIRCRAFT WITH SIDE-HINGED MAIN DOOR SIDE-HINGED MAIN-DOOR WINDOW - REMOVAL/INSTALLATION</i>	U	Oct 30/15
52-18-08-000-801-A <i>EFFECTIVITY: AIRCRAFT WITH SIDE-HINGED MAIN DOOR SIDE-HINGED MAIN-DOOR WINDOW - REMOVAL</i>	U	Oct 30/15
52-18-08-400-801-A <i>EFFECTIVITY: AIRCRAFT WITH SIDE-HINGED MAIN DOOR SIDE-HINGED MAIN-DOOR WINDOW - INSTALLATION</i>	U	Oct 30/15
52-18-09/400 <i>EFFECTIVITY: AIRCRAFT WITH SIDE-HINGED MAIN DOOR SIDE-HINGED MAIN-DOOR CONNECTION CABLES - REMOVAL/INSTALLATION</i>	U	Oct 30/15
52-18-09-000-801-A <i>EFFECTIVITY: AIRCRAFT WITH SIDE-HINGED MAIN DOOR SIDE-HINGED MAIN-DOOR CABLES - REMOVAL</i>	U	Oct 30/15
52-18-09-400-801-A <i>EFFECTIVITY: AIRCRAFT WITH SIDE-HINGED MAIN DOOR SIDE-HINGED MAIN-DOOR CABLES - INSTALLATION</i>	U	Oct 30/15
52-18-10/400 <i>EFFECTIVITY: AIRCRAFT WITH SIDE-HINGED MAIN-DOOR SIDE-HINGED MAIN-DOOR EXTERNAL HANDLE GRIP - REMOVAL/INSTALLATION</i>	U	Feb 16/16
52-18-10-000-801-A <i>EFFECTIVITY: AIRCRAFT WITH SIDE-HINGED MAIN-DOOR EXTERNAL HANDLE GRIP - REMOVAL</i>	U	Feb 16/16

Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted

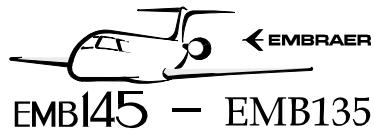

EMB145 - EMB135

AIRCRAFT  
MAINTENANCE MANUAL


PAGEBLOCK TASK	REVISION STATUS	REVISION DATE
52-18-10-400-801-A <i>EFFECTIVITY: AIRCRAFT WITH SIDE-HINGED MAIN-DOOR EXTERNAL HANDLE GRIP - INSTALLATION</i>	U	Feb 16/16
52-21-00/300 PASSENGER-CABIN ESCAPE HATCHES - SERVICING	U	Oct 30/15
52-21-00-600-801-A PASSENGER-CABIN ESCAPE HATCHES - LUBRICATION	U	Oct 30/15
52-21-00/400 PASSENGER-CABIN ESCAPE HATCHES - REMOVAL/INSTALLATION	U	Oct 30/15
52-21-00-000-801-A PASSENGER-CABIN ESCAPE HATCHES - REMOVAL	U	Oct 31/17
52-21-00-400-801-A PASSENGER-CABIN ESCAPE HATCHES - INSTALLATION	U	Oct 30/15
52-21-00/500 PASSENGER-CABIN ESCAPE HATCHES - ADJUSTMENT/TEST	U	Oct 30/15
52-21-00-700-801-A PASSENGER-CABIN ESCAPE HATCHES - OPERATIONAL CHECK	U	Apr 29/16
52-21-00-820-801-A PASSENGER-CABIN ESCAPE-HATCH SUPPORT PINS - ADJUST- MENT	U	Oct 30/15
52-21-01/400 PASSENGER-CABIN ESCAPE HATCH RUBBER TRIM SEAL - REMOV- AL/INSTALLATION	U	Oct 30/15
52-21-01-000-801-A PASSENGER-CABIN ESCAPE-HATCH RUBBER TRIM SEAL - RE- MOVAL	U	Oct 30/15
52-21-01-400-801-A PASSENGER-CABIN ESCAPE-HATCH RUBBER TRIM SEAL - IN- STALLATION	U	Oct 30/15
52-30-01/400 BAGGAGE DOOR - REMOVAL/INSTALLATION	U	Oct 30/15
52-30-01-000-801-A BAGGAGE DOOR - REMOVAL	U	Oct 30/15

Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted

EMB-145 - AMM 1285

TOC

Chapter 52  
Page 19 of 37  
Rev 55 - Oct 29/18

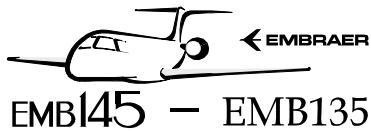

EMB145 - EMB135

AIRCRAFT  
MAINTENANCE MANUAL


PAGEBLOCK TASK	REVISION STATUS	REVISION DATE
52-30-01-400-801-A BAGGAGE DOOR - INSTALLATION	U	Oct 30/15
52-30-02/400 BAGGAGE-DOOR RUBBER-TRIM SEAL - REMOVAL/INSTALLATION	U	Oct 30/15
52-30-02-000-801-A BAGGAGE-DOOR RUBBER-TRIM SEAL - REMOVAL	U	Oct 30/15
52-30-02-400-801-A BAGGAGE-DOOR RUBBER-TRIM SEAL - INSTALLATION	U	Oct 30/15
52-31-00/300 BAGGAGE-DOOR ACTUATING AND LOCKING MECHANISM - SERVIC- ING	U	Oct 30/15
52-31-00-600-801-A BAGGAGE DOOR - LUBRICATION	U	Oct 30/15
52-31-00/400 BAGGAGE-DOOR ACTUATING AND LOCKING MECHANISM - REMOV- AL/INSTALLATION	U	Oct 30/15
52-31-00-000-801-A BAGGAGE-DOOR ACTUATING AND LOCKING MECHANISM - RE- MOVAL	U	Apr 27/18
52-31-00-400-801-A BAGGAGE-DOOR ACTUATING AND LOCKING MECHANISM - IN- STALLATION	U	Apr 27/18
52-31-00/500 BAGGAGE-DOOR ACTUATING AND LOCKING MECHANISM - ADJUST- MENT/TEST	U	Oct 30/15
52-31-00-700-801-A BAGGAGE-DOOR ACTUATING AND LOCKING MECHANISM - OP- ERATIONAL TEST/ADJUSTMENT	U	Oct 30/15
52-31-01/400 BAGGAGE-DOOR BELLCRANK ROLLER - REMOVAL/INSTALLATION	U	Oct 30/15
52-31-01-000-801-A BAGGAGE-DOOR BELLCRANK ROLLER - REMOVAL	U	Oct 30/15
52-31-01-400-801-A BAGGAGE-DOOR BELLCRANK ROLLER - INSTALLATION	U	Oct 30/15

Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted

EMB-145 - AMM 1285

TOC


Chapter 52  
Page 20 of 37  
Rev 55 - Oct 29/18

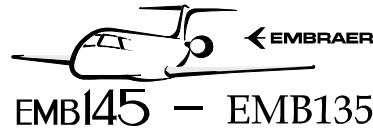

## AIRCRAFT MAINTENANCE MANUAL

<u>PAGEBLOCK TASK</u>	<u>REVISION STATUS</u>	<u>REVISION DATE</u>
52-31-02/400 BAGGAGE DOOR LOCK - REMOVAL/INSTALLATION	U	Oct 30/15
52-31-02-000-801-A BAGGAGE DOOR LOCK - REMOVAL	U	Oct 30/15
52-31-02-400-801-A BAGGAGE DOOR LOCK - INSTALLATION	U	Oct 30/15
52-31-04/400 <i>EFFECTIVITY: AIRCRAFT WITH DOOR LOCK</i> BAGGAGE DOOR SKIN PROTECTION - REMOVAL/INSTALLATION	U	Oct 30/15
52-31-04-000-801-A <i>EFFECTIVITY: AIRCRAFT WITH DOOR LOCK</i> BAGGAGE-DOOR SKIN PROTECTION - REMOVAL	U	Oct 30/15
52-31-04-400-801-A <i>EFFECTIVITY: AIRCRAFT WITH DOOR LOCK</i> BAGGAGE-DOOR SKIN PROTECTION - INSTALLATION	U	Oct 30/15
52-32-00/400 BAGGAGE-DOOR LIFTING AND LOWERING MECHANISM - REMOVAL/ INSTALLATION	U	Oct 30/15
52-32-00-000-801-A BAGGAGE-DOOR LIFTING AND LOWERING MECHANISM - REMOV- AL	U	Oct 30/15
52-32-00-400-801-A BAGGAGE-DOOR LIFTING AND LOWERING MECHANISM - INSTAL- LATION	U	Oct 30/15
52-32-00/500 BAGGAGE-DOOR LIFTING AND LOWERING MECHANISM - ADJUST- MENT/TEST	U	Oct 30/15
52-32-00-820-801-A BAGGAGE-DOOR LIFTING AND LOWERING MECHANISM - ADJUST- MENT/TEST	U	Oct 30/15
52-32-00/600 BAGGAGE-DOOR LIFTING AND LOWERING MECHANISM - INSPEC- TION/CHECK	U	Oct 30/15


Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted

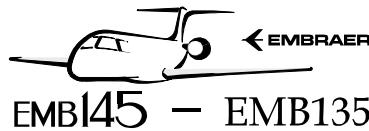

AIRCRAFT  
MAINTENANCE MANUAL

PAGEBLOCK TASK	REVISION STATUS	REVISION DATE
52-32-00-200-801-A BAGGAGE DOOR LIFTING AND LOWERING MECHANISM FOR GENERAL CONDITION AND TORSION BAR FOR TORSION - INSPECTION/CHECK	U	Oct 30/15
52-40-01/400 FORWARD FUSELAGE ACCESS DOOR/PANELS - REMOVAL/INSTALLATION	U	Oct 30/15
52-40-01-000-801-A FORWARD FUSELAGE ACCESS DOORS - REMOVAL	U	Oct 30/15
52-40-01-400-801-A FORWARD FUSELAGE ACCESS DOORS - INSTALLATION	U	Oct 30/15
52-40-01-000-802-A FORWARD FUSELAGE ACCESS PANELS - REMOVAL	U	Oct 30/15
52-40-01-400-802-A FORWARD FUSELAGE ACCESS PANELS - INSTALLATION	U	Oct 30/15
52-40-01-000-803-A OXYGEN EXTERNAL CHARGING DOOR - REMOVAL	U	Oct 30/15
52-40-01-400-803-A OXYGEN EXTERNAL CHARGING DOOR - INSTALLATION	U	Oct 30/15
52-40-02/400 WING TO FUSELAGE ACCESS DOOR/PANELS - REMOVAL/INSTALLATION	U	Oct 30/15
52-40-02-000-801-A WING-TO-FUSELAGE ATTACHMENT FAIRING ACCESS DOORS - REMOVAL	U	Oct 30/15
52-40-02-400-801-A WING-TO-FUSELAGE ACCESS DOORS - INSTALLATION	U	Oct 30/15
52-40-02-000-802-A WING-TO-FUSELAGE ATTACHMENT FAIRING ACCESS DOORS WITH BONDING STRAP - REMOVAL	U	Oct 30/15
52-40-02-400-802-A WING-TO-FUSELAGE ATTACHMENT FAIRING ACCESS DOORS WITH BONDING STRAP - INSTALLATION	U	Oct 30/15
52-40-02-000-803-A WING-TO-FUSELAGE ACCESS PANELS - REMOVAL	U	Feb 16/16


Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted

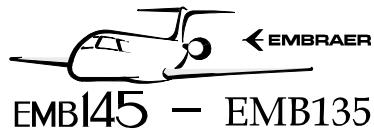

AIRCRAFT  
MAINTENANCE MANUAL

PAGEBLOCK TASK	REVISION STATUS	REVISION DATE
52-40-02-400-803-A WING-TO-FUSELAGE ATTACHMENT FAIRING ACCESS PANELS - INSTALLATION	U	Feb 16/16
52-40-02-000-804-A WING-TO-FUSELAGE ATTACHMENT FAIRING INSPECTION LIGHT ACCESS PANELS - REMOVAL	U	Oct 30/15
52-40-02-400-804-A WING-TO-FUSELAGE INSPECTION LIGHT ACCESS PANELS - IN- STALLATION	U	Oct 30/15
52-40-03/400 REAR FUSELAGE ACCESS DOOR/PANELS - REMOVAL/INSTALLA- TION	U	Oct 30/15
52-40-03-000-801-A REAR FUSELAGE ACCESS DOORS - REMOVAL	U	Oct 30/15
52-40-03-400-801-A REAR FUSELAGE ACCESS DOORS - INSTALLATION	U	Oct 30/15
52-40-04/400 STABILIZERS - ACCESS DOOR/PANELS - REMOVAL/INSTALLATION	U	Oct 30/15
52-40-04-000-801-A TAIL CONE ACCESS DOOR - REMOVAL	U	Oct 30/15
52-40-04-400-801-A TAIL CONE ACCESS DOOR - INSTALLATION	U	Oct 30/15
52-40-04-000-802-A TAIL CONE ACCESS PANELS - REMOVAL	U	Oct 30/15
52-40-04-400-802-A TAIL CONE ACCESS PANELS - INSTALLATION	U	Oct 30/15
52-40-04-000-803-A TAIL CONE APU AIR ACCESS PANEL - REMOVAL	U	Oct 30/15
52-40-04-400-803-A TAIL CONE APU AIR ACCESS PANEL - INSTALLATION	U	Oct 30/15
52-40-04-000-804-A TAIL CONE APU COMPARTMENT ACCESS PANEL - REMOVAL	U	Oct 30/15
52-40-04-400-804-A TAIL CONE APU COMPARTMENT ACCESS PANEL - INSTALLATION	U	Oct 30/15

Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted

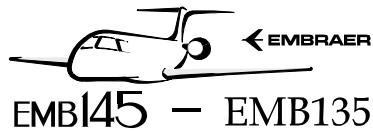

EMB145 - EMB135

AIRCRAFT  
MAINTENANCE MANUAL


PAGEBLOCK <u>TASK</u>	<u>REVISION STATUS</u>	<u>REVISION DATE</u>
52-40-04-000-805-A TAIL CONE FAIRING - REMOVAL	U	Oct 30/15
52-40-04-400-805-A TAIL CONE FAIRING - INSTALLATION	U	Oct 30/15
52-40-04-000-806-A VERTICAL STABILIZER AND RUDDER ACCESS DOORS AND PANELS - REMOVAL	U	Oct 30/15
52-40-04-400-806-A VERTICAL STABILIZER AND RUDDER ACCESS DOORS AND PANELS - INSTALLATION	U	Oct 30/15
52-40-04-000-807-A HORIZONTAL STABILIZER AND ELEVATOR ACCESS DOORS AND PANELS - REMOVAL	U	Oct 30/15
52-40-04-400-807-A HORIZONTAL STABILIZER AND ELEVATOR ACCESS DOORS AND PANELS - INSTALLATION	U	Oct 30/15
52-40-05/400 NACELLE AND PYLON - ACCESS DOOR/PANELS - REMOVAL/INSTALLATION	U	Oct 30/15
52-40-05-000-801-A NACELLES ACCESS PANELS - REMOVAL	U	Oct 30/15
52-40-05-400-801-A NACELLE ACCESS PANELS - INSTALLATION	U	Oct 30/15
52-40-05-000-802-A PYLON ACCESS PANELS- REMOVAL	U	Oct 30/15
52-40-05-400-802-A PYLON ACCESS PANELS - INSTALLATION	U	Oct 30/15
52-40-05-000-803-A THRUST REVERSE ACCESS PANELS- REMOVAL	U	Oct 30/15
52-40-05-400-803-A THRUST REVERSE ACCESS PANELS - INSTALLATION	U	Oct 30/15
52-41-00/400 HYDRAULIC COMPARTMENT&BATTERY COMPARTMENT ACCESS DOORS - REMOVAL/INSTALLATION	U	Oct 30/15

Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted

EMB-145 - AMM 1285

TOC

Chapter 52  
Page 24 of 37  
Rev 55 - Oct 29/18

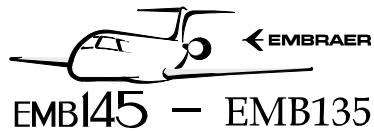


EMB145 - EMB135

AIRCRAFT  
MAINTENANCE MANUAL

PAGEBLOCK TASK	REVISION STATUS	REVISION DATE
52-41-00-000-801-A HYDRAULIC COMPARTMENT & BATTERY COMPARTMENT ACCESS DOORS - REMOVAL	U	Oct 30/15
52-41-00-400-801-A HYDRAULIC COMPARTMENT & BATTERY COMPARTMENT ACCESS DOORS - INSTALLATION	U	Oct 30/15
52-42-01/400 COCKPIT-UNDERFLOOR ACCESS HATCH - REMOVAL/INSTALLATION	U	Oct 30/15
52-42-01-000-801-A COCKPIT UNDERFLOOR ACCESS HATCH - REMOVAL	U	Oct 30/15
52-42-01-400-801-A COCKPIT UNDERFLOOR ACCESS HATCH - INSTALLATION	U	Oct 30/15
52-42-01/500 COCKPIT-UNDERFLOOR ACCESS HATCH - ADJUSTMENT/TEST	U	Oct 30/15
52-42-01-720-801-A COCKPIT UNDERFLOOR ACCESS HATCH - OPERATIONAL CHECK	U	Oct 30/15
52-42-01-820-801-A COCKPIT UNDERFLOOR ACCESS HATCH - ADJUSTMENT	U	Oct 30/15
52-42-01/600 COCKPIT-UNDERFLOOR ACCESS HATCH - INSPECTION/CHECK	U	Oct 30/15
52-42-01-200-801-A COCKPIT UNDERFLOOR ACCESS-HATCH MECHANISM - DETAILED INSPECTION	U	Oct 30/15
52-42-02/400 COCKPIT UNDERFLOOR ACCESS HATCH RUBBER SEAL - REMOV- AL/INSTALLATION	U	Oct 30/15
52-42-02-000-801-A COCKPIT UNDERFLOOR ACCESS HATCH RUBBER SEAL - REMOV- AL	U	Oct 30/15
52-42-02-400-801-A COCKPIT UNDERFLOOR ACCESS HATCH RUBBER SEAL - INSTAL- LATION	U	Oct 30/15
52-43-00/300 SERVICE DOOR - SERVICING	U	Oct 30/15

Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted

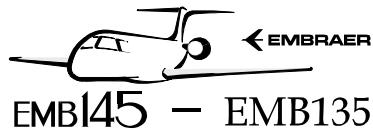

EMB145 - EMB135

AIRCRAFT  
MAINTENANCE MANUAL


PAGEBLOCK TASK	REVISION STATUS	REVISION DATE
52-43-00-600-801-A SERVICE-DOOR ACTUATING AND LOCKING MECHANISM - LUBRICATION	U	Oct 30/15
52-43-00/400 SERVICE DOOR - REMOVAL/INSTALLATION	U	Oct 30/15
52-43-00-000-801-A SERVICE DOOR - REMOVAL	U	Oct 30/15
52-43-00-400-801-A SERVICE DOOR - INSTALLATION	U	Oct 30/15
52-43-01/400 SERVICE-DOOR ELEVATION CAM - REMOVAL/INSTALLATION	U	Oct 30/15
52-43-01-000-801-A SERVICE DOOR ELEVATION CAM - REMOVAL	U	Oct 30/15
52-43-01-400-801-A SERVICE DOOR ELEVATION CAM - INSTALLATION	U	Oct 30/15
52-43-02/400 ACTUATING CAM OF THE SERVICE-DOOR FOLDING FLAP - REMOVAL/INSTALLATION	U	Oct 30/15
52-43-02-000-801-A ACTUATING CAM OF THE SERVICE DOOR FOLDING FLAP - REMOVAL	U	Oct 30/15
52-43-02-400-801-A ACTUATING CAM OF THE SERVICE DOOR FOLDING FLAP - INSTALLATION	U	Oct 30/15
52-43-03/400 SERVICE DOOR - REMOVAL/INSTALLATION	U	Oct 30/15
52-43-03-000-801-A SERVICE DOOR FOLDING FLAP - REMOVAL	U	Oct 30/15
52-43-03-400-801-A SERVICE DOOR FOLDING FLAP - INSTALLATION	U	Oct 30/15
52-43-03/500 SERVICE DOOR - ADJUSTMENT/TEST	U	Oct 30/15

Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted

EMB-145 - AMM 1285

TOC

Chapter 52  
Page 26 of 37  
Rev 55 - Oct 29/18

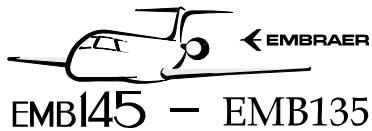


EMB145 - EMB135

AIRCRAFT  
MAINTENANCE MANUAL

PAGEBLOCK TASK	REVISION STATUS	REVISION DATE
52-43-03-820-810-A SERVICE-DOOR FOLDING FLAP EDGE - ADJUSTMENT	U	Oct 30/15
52-43-04/400 SERVICE-DOOR RUBBER-TRIM SEAL - REMOVAL/INSTALLATION	U	Oct 30/15
52-43-04-000-801-A SERVICE-DOOR RUBBER-TRIM SEAL - REMOVAL	U	Oct 30/15
52-43-04-400-801-A SERVICE-DOOR RUBBER-TRIM SEAL - INSTALLATION	U	Oct 30/15
52-43-05/400 SERVICE DOOR INTERNAL ACTUATING HANDLE - REMOVAL/ INSTALLATION	U	Oct 30/15
52-43-05-000-801-A SERVICE DOOR INTERNAL ACTUATING HANDLE - REMOVAL	U	Oct 30/15
52-43-05-400-801-A SERVICE DOOR INTERNAL ACTUATING HANDLE - INSTALLATION	U	Oct 30/15
52-43-06/400 LOCK OF SERVICE-DOOR LOCKING MECHANISM - REMOVAL/ INSTALLATION	U	Oct 30/15
52-43-06-000-801-A LOCK OF SERVICE DOOR LOCKING MECHANISM - REMOVAL	U	Oct 30/15
52-43-06-400-801-A LOCK OF SERVICE DOOR LOCKING MECHANISM - INSTALLATION	U	Oct 30/15
52-43-06/500 LOCK OF SERVICE-DOOR LOCKING MECHANISM - ADJUSTMENT/ TEST	U	Oct 30/15
52-43-06-700-801-A SERVICE-DOOR ACTUATING AND LOCKING MECHANISM - FUNC- TIONAL CHECK	U	Apr 29/16
52-43-07/400 SERVICE DOOR EXTERNAL ACTUATING HANDLE - REMOVAL/ INSTALLATION	U	Oct 30/15
52-43-07-000-801-A SERVICE DOOR EXTERNAL ACTUATING HANDLE - REMOVAL	U	Oct 30/15

Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted

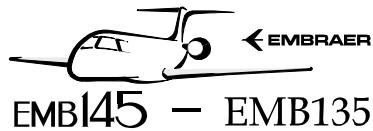

## AIRCRAFT MAINTENANCE MANUAL

PAGEBLOCK <u>TASK</u>	<u>REVISION STATUS</u>	<u>REVISION DATE</u>
52-43-07-400-801-A SERVICE DOOR EXTERNAL ACTUATING HANDLE - INSTALLATION	U	Oct 30/15
52-43-08/400 SERVICE DOOR WINDOW - REMOVAL/INSTALLATION	U	Oct 30/15
52-43-08-000-801-A SERVICE DOOR WINDOW - REMOVAL	U	Oct 30/15
52-43-08-400-801-A SERVICE DOOR WINDOW - INSTALLATION	U	Oct 30/15
52-43-09/400 SERVICE DOOR CONNECTION CABLES - REMOVAL/INSTALLATION	U	Oct 30/15
52-43-09-000-801-A SERVICE DOOR CABLES - REMOVAL	U	Oct 30/15
52-43-09-400-801-A SERVICE DOOR CABLES - INSTALLATION	U	Oct 30/15
52-43-09/500 SERVICE DOOR CONNECTION CABLES - ADJUSTMENT/TEST	U	Oct 30/15
52-43-09-820-801-A SERVICE DOOR CABLES - ADJUSTMENT	U	Oct 30/15
52-44-01/400 REAR ELECTRONIC-COMPARTMENT DOOR - REMOVAL/INSTALLATION	U	Oct 30/15
52-44-01-000-801-A REAR ELECTRONIC-COMPARTMENT DOOR - REMOVAL	U	Oct 30/15
52-44-01-400-801-A REAR ELECTRONIC-COMPARTMENT DOOR - INSTALLATION	U	Apr 28/17
52-44-01/500 REAR ELECTRONIC-COMPARTMENT DOOR - ADJUSTMENT/TEST	U	Oct 30/15
52-44-01-720-801-A REAR ELECTRONIC-COMPARTMENT DOOR - OPERATIONAL CHECK	U	Oct 30/15
52-44-01-820-801-A REAR ELECTRONIC-COMPARTMENT DOOR - ADJUSTMENT	U	Oct 30/15

Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted



EMB145 - EMB135

AIRCRAFT  
MAINTENANCE MANUAL


PAGEBLOCK <u>TASK</u>	<u>REVISION STATUS</u>	<u>REVISION DATE</u>
52-44-01/600 REAR ELECTRONIC-COMPARTMENT DOOR - INSPECTION/CHECK	U	Oct 30/15
52-44-01-200-801-A REAR ELECTRONIC-COMPARTMENT DOOR - DETAILED INSPEC- TION	U	Oct 30/15
52-44-02/400 REAR ELECTRONIC COMPARTMENT DOOR RUBBER SEAL - REMOV- AL/INSTALLATION	U	Oct 30/15
52-44-02-000-801-A REAR ELECTRONIC COMPARTMENT DOOR RUBBER SEAL - RE- MOVAL	U	Oct 30/15
52-44-02-400-801-A REAR ELECTRONIC COMPARTMENT DOOR RUBBER SEAL - IN- STALLATION	U	Oct 30/15
52-44-03/400 CONFIG-2 <i>EFFECTIVITY: ACFT MODEL(S) EMB-135</i> REAR ELECTRONIC-COMPARTMENT VENT DOOR - REMOVAL/ INSTALLATION	U	Oct 30/15
52-44-03-000-801-A CONFIG-2 <i>EFFECTIVITY: ACFT MODEL(S) EMB-135</i> VENT DOOR - REMOVAL	U	Oct 30/15
52-44-03-400-801-A CONFIG-2 <i>EFFECTIVITY: ACFT MODEL(S) EMB-135</i> REAR ELECTRONIC-COMPARTMENT DOOR - INSTALLATION	U	Oct 30/15
52-44-04/400 CONFIG-2 <i>EFFECTIVITY: ACFT MODEL(S) EMB-135</i> REAR ELECTRONIC-COMPARTMENT VENT-DOOR RUBBER SEAL - REMOVAL/INSTALLATION	U	Oct 30/15
52-44-04-000-801-A CONFIG-2 <i>EFFECTIVITY: ACFT MODEL(S) EMB-135</i> REAR ELECTRONIC-COMPARTMENT VENT-DOOR RUBBER SEAL - REMOVAL	U	Oct 30/15
52-44-04-400-801-A CONFIG-2 <i>EFFECTIVITY: ACFT MODEL(S) EMB-135</i> REAR ELECTRONIC-COMPARTMENT VENT-DOOR RUBBER SEAL - INSTALLATION	U	Oct 30/15

Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted

EMB-145 - AMM 1285

TOC

Chapter 52  
Page 29 of 37  
Rev 55 - Oct 29/18

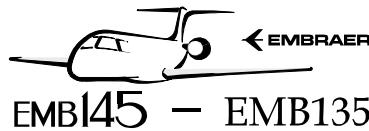

EMB145 - EMB135

AIRCRAFT  
MAINTENANCE MANUAL


PAGEBLOCK TASK	REVISION STATUS	REVISION DATE
52-45-00/400 FUELING-CONTROL-PANEL&PRESSURE-REFUELING-ADAPTER COMPARTMENT ACCESS DOOR - REMOVAL/INSTALLATION	U	Oct 30/15
52-45-00-000-801-A FUELING CONTROL PANEL & PRESSURE REFUELING ADAPTER COMPARTMENT ACCESS DOOR - REMOVAL	U	Oct 30/15
52-45-00-400-801-A FUELING CONTROL PANEL & PRESSURE REFUELING ADAPTER COMPARTMENT ACCESS DOOR - INSTALLATION	U	Oct 30/15
52-45-01/400 FUELING-CONTROL-PANEL&PRESSURE-REFUELING-ADAPTER COMPARTMENT LINING - REMOVAL/INSTALLATION	U	Oct 30/15
52-45-01-000-801-A FUELING-CONTROL-PANEL & PRESSURE-REFUELING-ADAPTER COMPARTMENT LINING - REMOVAL	U	Oct 30/15
52-45-01-400-801-A FUELING-CONTROL-PANEL & PRESSURE-REFUELING-ADAPTER COMPARTMENT LINING - INSTALLATION	U	Oct 30/15
52-45-02/400 FUELING CONTROL PANEL&PRESSURE REFUELING ADAPTER COMPARTMENT ACCESS DOOR FINGER - REMOVAL/INSTALLATION	U	Oct 30/15
52-45-02-000-801-A FUELING-CONTROL-PANEL & PRESSURE-REFUELING-ADAPTER COMPARTMENT ACCESS DOOR FINGER - REMOVAL	U	Oct 30/15
52-45-02-400-801-A FINGER OF THE FUELING-CONTROL-PANEL & PRESSURE-REFU- ELING-ADAPTER COMPARTMENT ACCESS DOOR - INSTALLATION	U	Oct 30/15
52-45-02/500 FUELING CONTROL PANEL&PRESSURE REFUELING ADAPTER COMPARTMENT ACCESS DOOR FINGER - ADJUSTMENT/TEST	U	Oct 30/15
52-45-02-700-801-A FINGER OF THE FUELING-CONTROL-PANEL AND PRESSURE-RE- FUELING-ADAPTER COMPARTMENT ACCESS DOOR - OPERA-TION- AL TEST	U	Oct 30/15

Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted

EMB-145 - AMM 1285

TOC


Chapter 52  
Page 30 of 37  
Rev 55 - Oct 29/18

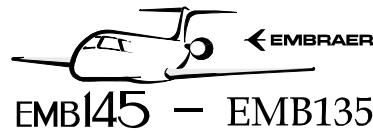

AIRCRAFT  
MAINTENANCE MANUAL

PAGEBLOCK TASK	REVISION STATUS	REVISION DATE
52-45-02-800-801-A FINGER OF THE FUELING-CONTROL-PANEL AND PRESSURE-REFUELING-ADAPTER COMPARTMENT ACCESS DOOR - ADJUSTMENT	U	Oct 30/15
52-46-00/400 FORWARD ELECTRONIC COMPARTMENT ACCESS DOOR - REMOVAL/INSTALLATION	U	Oct 30/15
52-46-00-000-801-A FORWARD-ELECTRONIC-COMPARTMENT ACCESS DOOR - REMOVAL	U	Oct 30/15
52-46-00-400-801-A FORWARD-ELECTRONIC-COMPARTMENT DOOR - INSTALLATION	U	Oct 30/15
52-51-01/400 CONFIG-1 <i>EFFECTIVITY: ACFT MODEL(S) EMB-145</i> COCKPIT DOOR - REMOVAL/INSTALLATION	U	Oct 30/15
52-51-01-000-801-A CONFIG-1 <i>EFFECTIVITY: ACFT MODEL(S) EMB-145</i> COCKPIT DOOR - REMOVAL	U	Oct 30/15
52-51-01-400-801-A CONFIG-1 <i>EFFECTIVITY: ACFT MODEL(S) EMB-145</i> COCKPIT DOOR - INSTALLATION	U	Oct 30/15
52-51-01/400 CONFIG-2 <i>EFFECTIVITY: ACFT MODEL(S) EMB-135</i> COCKPIT DOOR - REMOVAL/INSTALLATION	U	Oct 30/15
52-51-01-000-801-A CONFIG-2 <i>EFFECTIVITY: ACFT MODEL(S) EMB-135</i> COCKPIT DOOR - REMOVAL	U	Oct 30/15
52-51-01-400-801-A CONFIG-2 <i>EFFECTIVITY: ACFT MODEL(S) EMB-135</i> COCKPIT DOOR - INSTALLATION	U	Oct 30/15
52-51-01/500 <i>EFFECTIVITY: FOR AIRCRAFT WITH REINFORCED COCKPIT DOOR</i> COCKPIT DOOR - ADJUSTMENT/TEST	U	Oct 30/15
52-51-01-700-801-A <i>EFFECTIVITY: FOR AIRCRAFT WITH REINFORCED COCKPIT DOOR</i> COCKPIT DOOR - ADJUSTMENT TEST	U	Oct 30/15

Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted

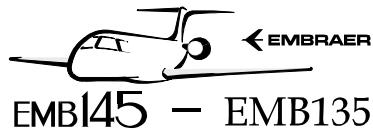

EMB145 - EMB135

AIRCRAFT  
MAINTENANCE MANUAL


PAGEBLOCK TASK	REVISION STATUS	REVISION DATE
52-51-01-700-802-A <i>EFFECTIVITY: FOR AIRCRAFT WITH REINFORCED COCKPIT DOOR REINFORCED COCKPIT DOOR - ADJUSTMENT TEST</i>	U	Oct 30/15
52-70-00/400 DOOR WARNING - REMOVAL/INSTALLATION	U	Oct 30/15
52-70-00-040-801-A DOOR WARNING - DEACTIVATION PROCEDURE	U	Oct 30/15
52-70-00-440-801-A DOOR WARNING - REACTIVATION PROCEDURE	U	Oct 30/15
52-71-00/500 FORWARD ELECTRONIC-COMPARTMENT-DOOR WARNING - ADJUSTMENT/TEST	U	Oct 30/15
52-71-00-700-801-A FORWARD ELECTRONIC-COMPARTMENT-DOOR WARNING - OPERATIONAL CHECK	U	Oct 30/15
52-71-01/400 FORWARD ELECTRONIC-COMPARTMENT DOOR-WARNING MICROSWITCH - REMOVAL/INSTALLATION	U	Oct 30/15
52-71-01-000-801-A FORWARD ELECTRONIC COMPARTMENT DOOR WARNING MICROSWITCH - REMOVAL	U	Oct 30/15
52-71-01-400-801-A FORWARD ELECTRONIC COMPARTMENT DOOR WARNING MICROSWITCH - INSTALLATION	U	Oct 30/15
52-72-00/500 COCKPIT UNDERFLOOR-ACCESS-HATCH WARNING - ADJUSTMENT/TEST	U	Oct 30/15
52-72-00-700-801-A COCKPIT UNDERFLOOR ACCESS HATCH WARNING - OPERATIONAL CHECK	U	Oct 30/15
52-72-01/400 COCKPIT UNDERFLOOR-ACCESS-HATCH WARNING MICROSWITCH - REMOVAL/INSTALLATION	U	Oct 30/15

Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted

EMB-145 - AMM 1285

TOC


Chapter 52  
Page 32 of 37  
Rev 55 - Oct 29/18

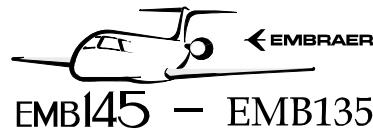

AIRCRAFT  
MAINTENANCE MANUAL

PAGEBLOCK TASK	REVISION STATUS	REVISION DATE
52-72-01-000-801-A COCKPIT UNDERFLOOR ACCESS HATCH WARNING MICRO-SWITCH - REMOVAL	U	Oct 30/15
52-72-01-400-801-A COCKPIT UNDERFLOOR ACCESS HATCH WARNING MICRO-SWITCH - INSTALLATION	U	Oct 30/15
52-73-00/500 MAIN DOOR WARNING - ADJUSTMENT/TEST	U	Oct 30/15
52-73-00-700-801-A AIRSTAIRS MAIN DOOR WARNING MESSAGE - OPERATIONALY CHECK	U	Oct 30/15
52-73-00-700-802-A SIDE-HINGED MAIN DOOR WARNING MESSAGE - OPERATIONALY CHECK	U	Oct 30/15
52-73-01/400 MAIN-DOOR WARNING MICROSWITCHES - REMOVAL/INSTALLATION	U	Oct 30/15
52-73-01-000-801-A AIRSTAIRS MAIN DOOR WARNING MICROSWITCHES - REMOVAL	U	Oct 30/15
52-73-01-400-801-A AIRSTAIRS MAIN DOOR WARNING MICROSWITCHES - INSTALLATION	U	Oct 30/15
52-73-01-000-802-A SIDE-HINGED MAIN DOOR WARNING MICROSWITCHES - REMOV-AL	U	Oct 30/15
52-73-01-400-802-A SIDE-HINGED MAIN DOOR WARNING MICROSWITCHES - INSTAL-LATION	U	Oct 30/15
52-73-01/500 MAIN-DOOR WARNING MICROSWITCHES - ADJUSTMENT/TEST	U	Oct 30/15
52-73-01-700-801-A AIRSTAIRS MAIN-DOOR WARNING MICROSWITCHES - FUNCTION-AL TEST	U	Oct 30/15
52-73-01-700-802-A SIDE-HINGED MAIN-DOOR WARNING MICROSWITCHES - FUNC-TIONAL TEST	U	Oct 30/15

Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted

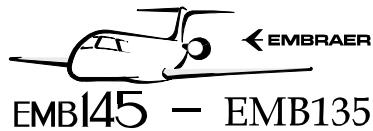

## AIRCRAFT MAINTENANCE MANUAL


PAGEBLOCK TASK	REVISION STATUS	REVISION DATE
52-73-01-820-801-A AIRSTAIRS MAIN-DOOR WARNING MICROSWITCHES - ADJUSTMENT	U	Oct 30/15
52-73-01-820-802-A SIDE-HINGED MAIN-DOOR WARNING MICROSWITCHES - ADJUSTMENT	U	Oct 30/15
52-74-00/500 SERVICE DOOR WARNING - ADJUSTMENT/TEST	U	Oct 30/15
52-74-00-700-801-A SERVICE DOOR WARNING MESSAGE - OPERATIONAL CHECK	U	Oct 30/15
52-74-01/400 SERVICE-DOOR WARNING MICROSWITCHES - REMOVAL/INSTALLATION	U	Oct 30/15
52-74-01-000-801-A SERVICE DOOR WARNING MICROSWITCHES - REMOVAL	U	Oct 30/15
52-74-01-400-801-A SERVICE DOOR WARNING MICROSWITCHES - INSTALLATION	U	Oct 30/15
52-74-01/500 SERVICE-DOOR WARNING MICROSWITCHES - ADJUSTMENT/TEST	U	Oct 30/15
52-74-01-700-801-A SERVICE DOOR WARNING MICROSWITCHES - FUNCTIONAL TEST	U	Oct 30/15
52-74-01-820-801-A SERVICE DOOR WARNING MICROSWITCHES - ADJUSTMENT	U	Oct 30/15
52-75-00/500 PASSENGER-CABIN ESCAPE-HATCH WARNING - ADJUSTMENT/TEST	U	Oct 30/15
52-75-00-700-801-A PASSENGER CABIN ESCAPE HATCH WARNING SYSTEM - OPERATIONAL CHECK	U	Oct 30/15
52-75-01/400 PASSENGER-CABIN ESCAPE-HATCH WARNING MICROSWITCHES - REMOVAL/INSTALLATION	U	Oct 30/15

Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted

EMB-145 - AMM 1285

TOC

Chapter 52  
Page 34 of 37  
Rev 55 - Oct 29/18

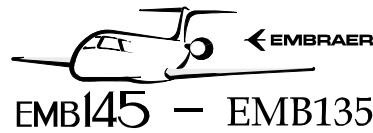

EMB145 - EMB135

AIRCRAFT  
MAINTENANCE MANUAL

PAGEBLOCK TASK	REVISION STATUS	REVISION DATE
52-75-01-000-801-A PASSENGER CABIN ESCAPE HATCH WARNING MICROSWITCHES - REMOVAL	U	Oct 30/15
52-75-01-400-801-A PASSENGER CABIN ESCAPE HATCH WARNING MICROSWITCHES - INSTALLATION	U	Oct 30/15
52-75-01/500 PASSENGER-CABIN ESCAPE-HATCH WARNING MICROSWITCHES - ADJUSTMENT/TEST	U	Oct 30/15
52-75-01-700-801-A PASSENGER - CABIN ESCAPE - HATCH CAUTION MICROSWITCHES - OPERATIONAL TEST	U	Oct 30/15
52-76-00/500 BAGGAGE DOOR WARNING - ADJUSTMENT/TEST	U	Oct 30/15
52-76-00-700-801-A BAGGAGE DOOR WARNING MESSAGE - OPERATIONAL CHECK	U	Oct 30/15
52-76-01/400 BAGGAGE-DOOR WARNING MICROSWITCHES - REMOVAL/INSTALLATION	U	Oct 30/15
52-76-01-000-801-A BAGGAGE DOOR WARNING MICROSWITCHES - REMOVAL	U	Apr 27/18
52-76-01-400-801-A BAGGAGE DOOR WARNING MICROSWITCHES - INSTALLATION	U	Apr 27/18
52-76-01/500 BAGGAGE-DOOR WARNING MICROSWITCHES - ADJUSTMENT/TEST	U	Oct 30/15
52-76-01-700-801-A BAGGAGE DOOR WARNING MICROSWITCHES - OPERATIONAL TEST	U	Oct 30/15
52-76-01-820-801-A BAGGAGE DOOR WARNING MICROSWITCHES - ADJUSTMENT	U	Oct 30/15
52-77-00/500 REAR ELECTRONIC-COMPARTMENT ACCESS HATCH WARNING - ADJUSTMENT/TEST	U	Oct 30/15

Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted

EMB-145 - AMM 1285

TOC

Chapter 52  
Page 35 of 37  
Rev 55 - Oct 29/18



EMB145 - EMB135

AIRCRAFT  
MAINTENANCE MANUAL


PAGEBLOCK TASK	REVISION STATUS	REVISION DATE
52-77-00-700-801-A REAR ELECTRONIC COMPARTMENT ACCESS HATCH WARNING MESSAGE - OPERATIONAL CHECK	U	Oct 30/15
52-77-01/400 REAR ELECTRONIC-COMPARTMENT ACCESS-HATCH WARNING MICROSWITCH - REMOVAL/INSTALLATION	U	Oct 30/15
52-77-01-000-801-A REAR ELECTRONIC COMPARTMENT ACCESS HATCH CAUTION MICROSWITCH - REMOVAL	U	Oct 30/15
52-77-01-400-801-A REAR ELECTRONIC COMPARTMENT ACCESS HATCH CAUTION MICROSWITCH - INSTALLATION	U	Apr 28/17
52-77-01/500 REAR ELECTRONIC-COMPARTMENT ACCESS-HATCH WARNING MICROSWITCH - ADJUSTMENT/TEST	U	Oct 30/15
52-77-01-700-801-A REAR - ELECTRONIC - COMPARTMENT ACCESS HATCH CAUTION MICROSWITCH -OPERATIONAL TEST	U	Oct 30/15
52-78-00/500 FUELING-CONTROL-PANEL&PRESSURE-REFUELING-ADAPTER ACCESS-DOOR WARNING - ADJUSTMENT/TEST	U	Oct 30/15
52-78-00-700-801-A FUELING CONTROL PANEL AND PRESSURE REFUELING ADAPTER ACCESS DOOR CAUTION MESSAGE - OPERATIONAL TEST	U	Oct 30/15
52-78-01/400 FUELING-CONTROL-PANEL&PRESSURE-REFUELING-ADAPTER COMPARTMENT ACCESS-DOOR MICROSWITCH - REMOVAL/INSTALLATION	U	Oct 30/15
52-78-01-000-801-A FUEL CONTROL PANEL AND PRESSURE REFUELING ADAPTER COMPARTMENT ACCESS DOOR CAUTION MICROSWITCH - RE- MOVAL	U	Oct 30/15
52-78-01-400-801-A FUEL CONTROL PANEL AND PRESSURE REFUELING ADAPTER COMPARTMENT ACCESS DOOR CAUTION MICROSWITCH - IN- STALLATION	U	Oct 30/15

Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted

EMB-145 - AMM 1285

TOC

Chapter 52  
Page 36 of 37  
Rev 55 - Oct 29/18

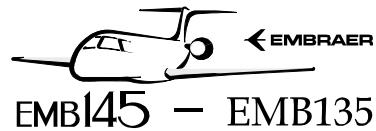

AIRCRAFT  
MAINTENANCE MANUAL

PAGEBLOCK TASK	REVISION STATUS	REVISION DATE
52-78-01-040-801-A MICROSWITCH OF THE ACCESS DOOR OF THE FUELING-CON-TROL-PANEL AND PRESSURE-REFUELING-ADAPTER COMPART-MENT - DEACTIVATION PROCEDURE	U	Oct 30/15
52-78-01-440-801-A MICROSWITCH OF THE ACCESS DOOR OF THE FUELING-CON-TROL-PANEL AND PRESSURE-REFUELING-ADAPTER COMPART-MENT - REACTIVATION PROCEDURE	U	Oct 30/15

Revision Status: U - Unchanged, R - Revised, N - New, D - Deleted

EMB-145 - AMM 1285

TOC

Chapter 52  
Page 37 of 37  
Rev 55 - Oct 29/18

