



AIRCRAFT MAINTENANCE MANUAL

OPTIONAL FLIGHT ATTENDANT SEAT - INSPECTION/CHECK

EFFECTIVITY: ALL

1. General

- A. This section gives the procedures to inspect/check the optional flight attendant seat.
- B. The procedures in this section are given in the sequence below. The tasks identified with (♦) are part of the Scheduled Maintenance Requirements Document (SMRD).

TASK NUMBER	DESCRIPTION	EFFECTIVITY
25-21-03-200-801-A ♦	OPTIONAL FLIGHT ATTENDANT SEAT - INSPECTION	ALL



EMB145 – EMB135

AIRCRAFT
MAINTENANCE MANUAL

TASK 25-21-03-200-801-A

EFFECTIVITY: ALL

2. OPTIONAL FLIGHT ATTENDANT SEAT - INSPECTION

A. General

- (1) The function of this inspection is to make sure that the optional flight attendant seat operate correctly.

B. Zones and Accesses

Not Applicable

C. Tools and Equipment

Not Applicable

D. Auxiliary Items

Not Applicable

E. Consumable Materials

Not Applicable

F. Expandable Parts

Not Applicable

G. Persons Recommended

QTY	FUNCTION	PLACE
1	Does the task	Passenger cabin

H. Preparation

SUBTASK 841-002-A

- (1) To do the detailed inspection of the optional flight attendant seat, have a direct source of good lighting to make the lighting conditions in the cabin better.

I. Inspect (Detailed Inspection) Optional Flight Attendant Seat harness, Inertial Reel for Condition and the Seat Bottom for Freedom of Movement and Returning Back to Upright Position

SUBTASK 220-002-A

- (1) Do a detailed inspection of the optional flight attendant seat, as follows:

- (a) Do a folding-out sequence operational check as follows ([Figure 601](#)):

- 1 Move the control handle rearward and move the optional flight attendant seat assembly to your right side until it stops.
- 2 Move the seat bottom and back assembly forward and down until it locks.
- 3 Turn down the control handle and move the seat back rearward until it locks (in-use position).

- (b) Do an inspection of the optional flight attendant seat assembly as follows:

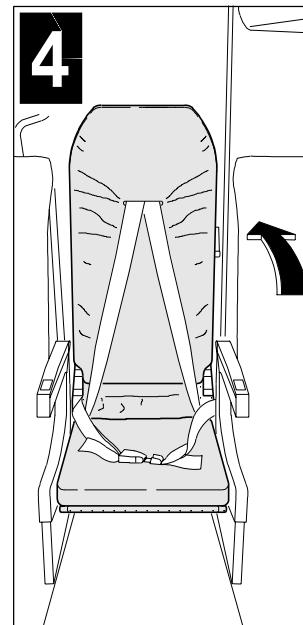
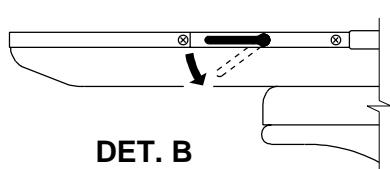
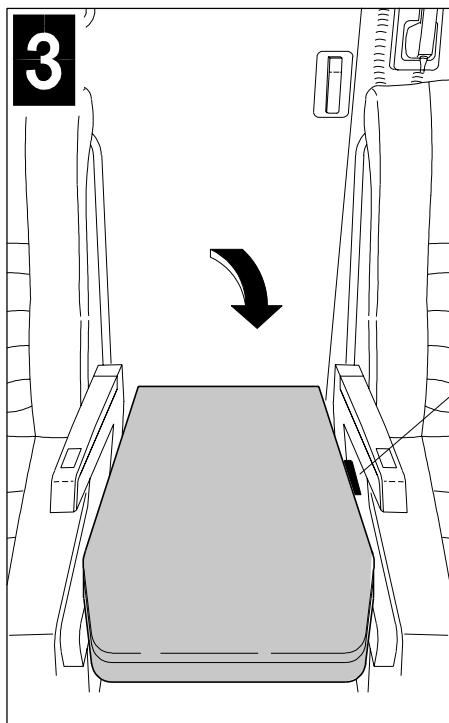
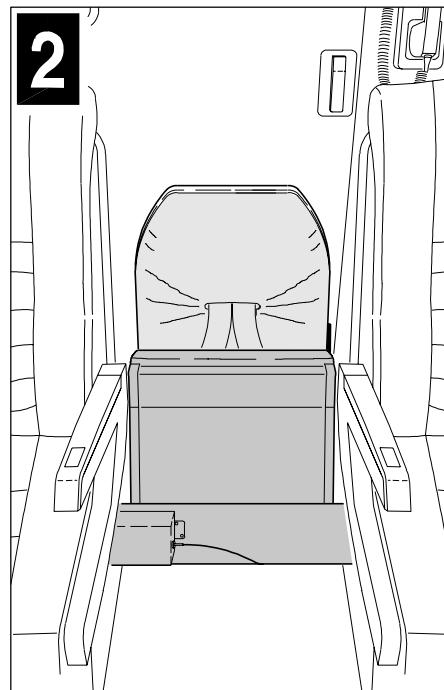
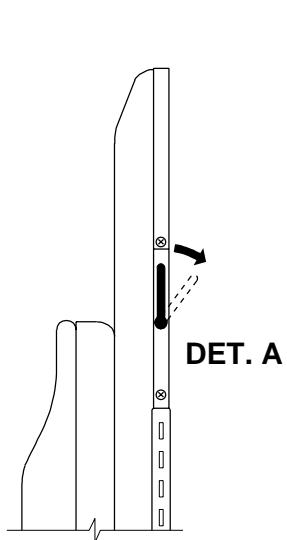
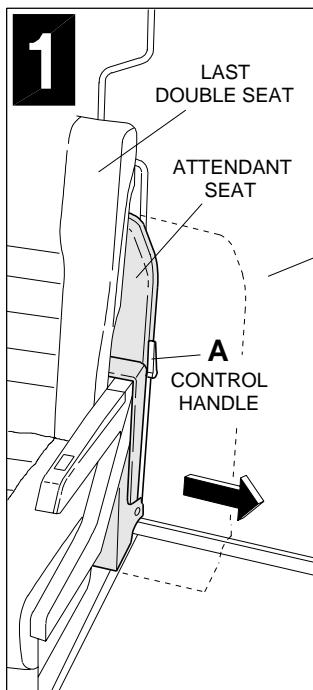


AIRCRAFT MAINTENANCE MANUAL

- 1 Examine the seat harness for general conditions, easily seen degradation, damage and failure.
 - 2 Examine the harness adjustments.
 - 3 Close and open the seat belt buckle two or three times to make sure that it operates correctly.
 - 4 Make sure that the harness assembly extends and retracts freely. Also make sure that the seat belts lock when you suddenly pull them.
- (c) Do a folding-in sequence operational check as follows ([Figure 602](#)):
- 1 Move the control handle forwards and move the seat back forward and down until it locks.
 - 2 Lift the control handle and move the seat bottom and back assembly rearward.
 - 3 Move the optional flight attendant seat assembly to your left side until it latches correctly (stowed position).

EFFECTIVITY: ALL

Optional Flight Attendant Seat - Folding-Out Sequence - Inspection
Figure 601

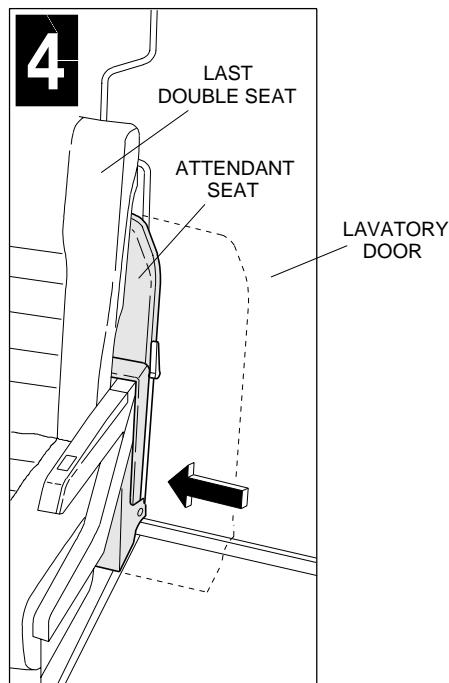
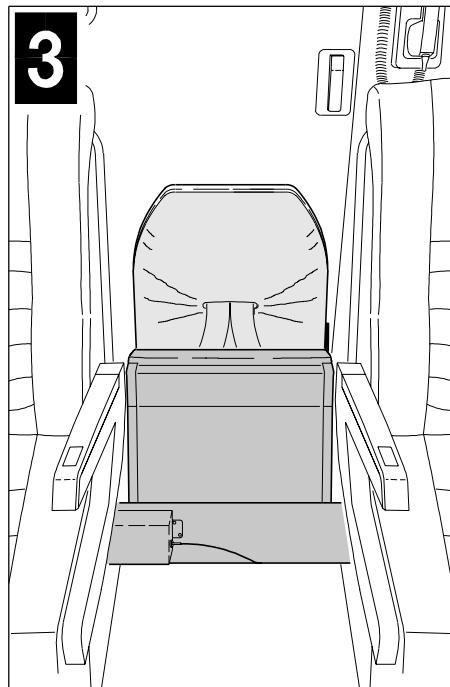
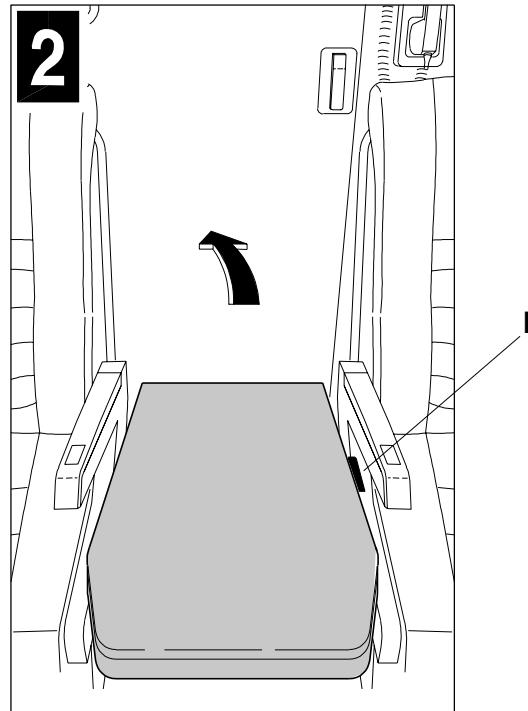
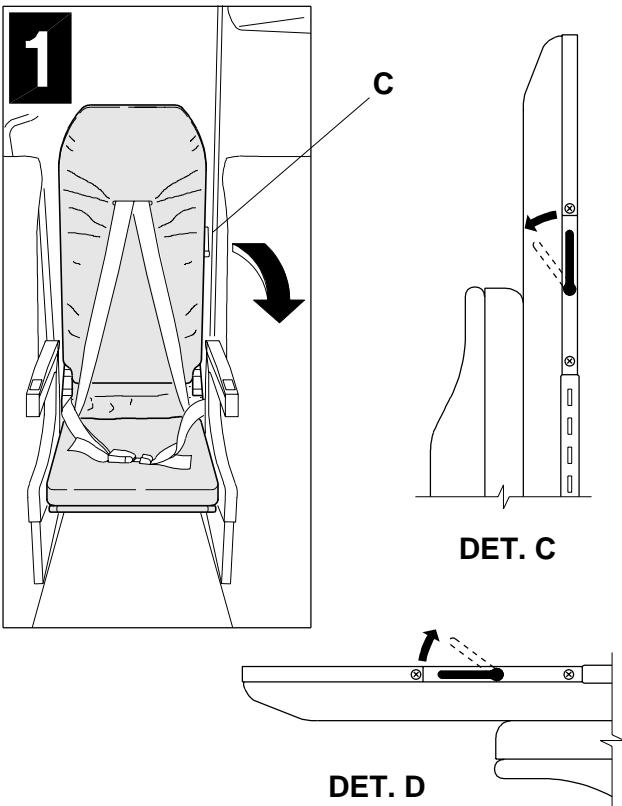
FOLDING-OUT SEQUENCE


145AMM250052.MCE

EFFECTIVITY: ALL

Optional Flight Attendant Seat - Folding-In Sequence - Inspection

Figure 602

FOLDING-IN SEQUENCE


145AMM250053.MCE

