



# AIRCRAFT MAINTENANCE MANUAL

## OVERRIDE SWITCH - REMOVAL/INSTALLATION

EFFECTIVITY: ALL

### 1. General

- A. This section gives the procedures to remove and install the Override Switch.
- B. The procedures in this section are given in the sequence below. The tasks identified with (♦) are part of the Scheduled Maintenance Requirements Document (SMRD).

TASK NUMBER	DESCRIPTION	EFFECTIVITY
32-34-01-000-801-A	OVERRIDE SWITCH - REMOVAL	ALL
32-34-01-400-801-A	OVERRIDE SWITCH - INSTALLATION	ALL

**TASK 32-34-01-000-801-A**
**EFFECTIVITY: ALL**
**2. OVERRIDE SWITCH - REMOVAL**
**A. General**

- (1) This procedure gives the instructions to remove the Override Switch.

**B. References**

<i>REFERENCE</i>	<i>DESIGNATION</i>
AMM MPP 06-41-02/100	-
<a href="#">AMM TASK 25-11-01-000-801-A/400</a>	PILOT SEAT - REMOVAL

**C. Zones and Accesses**

<i>ZONE</i>	<i>PANEL/DOOR</i>	<i>LOCATION</i>
124	222EF	Area below the cockpit floor, on the RH side

**D. Tools and Equipment**

Not Applicable

**E. Auxiliary Items**

Not Applicable

**F. Consumable Materials**

Not Applicable

**G. Expandable Parts**

Not Applicable

**H. Persons Recommended**

<i>QTY</i>	<i>FUNCTION</i>	<i>PLACE</i>
1	Does the task	On the cockpit RH side

**I. Preparation**
**SUBTASK 841-002-A**

- (1) On the circuit breaker panel, open the DOWN OVRD circuit breaker and attach a DO-NOT-CLOSE tag to it.
- (2) Remove the copilot's seat ([AMM TASK 25-11-01-000-801-A/400](#)).
- (3) Open access door 222EF (AMM MPP 06-41-02/100).

**J. Removal (Figure 401)**
**SUBTASK 020-002-A**

- (1) Remove the nut (7), washer (6) and switch guard (1).





AIRCRAFT  
MAINTENANCE MANUAL

- (2) Remove the override switch (4) from the support (2) with the tab washer (3).
- (3) Identify and disconnect the electrical terminals (5).
- (4) Remove the override switch (4).

**EFFECTIVITY: ALL**

Override Switch - Removal/Installation

Figure 401

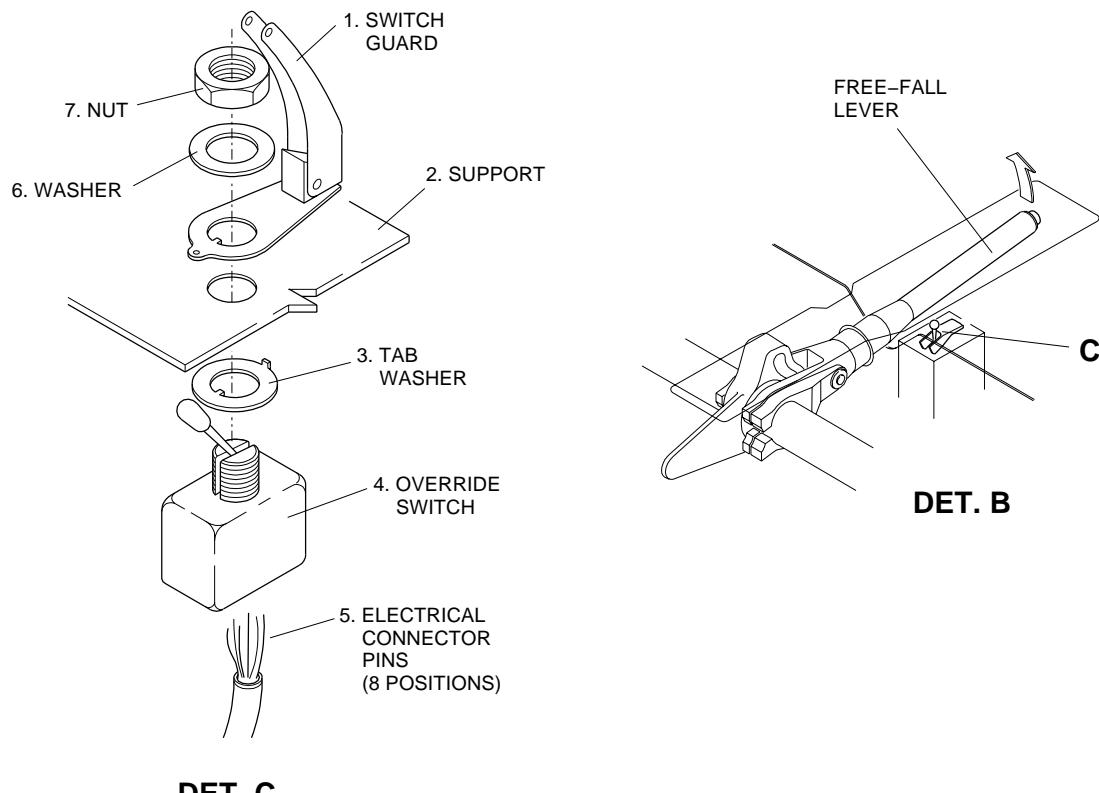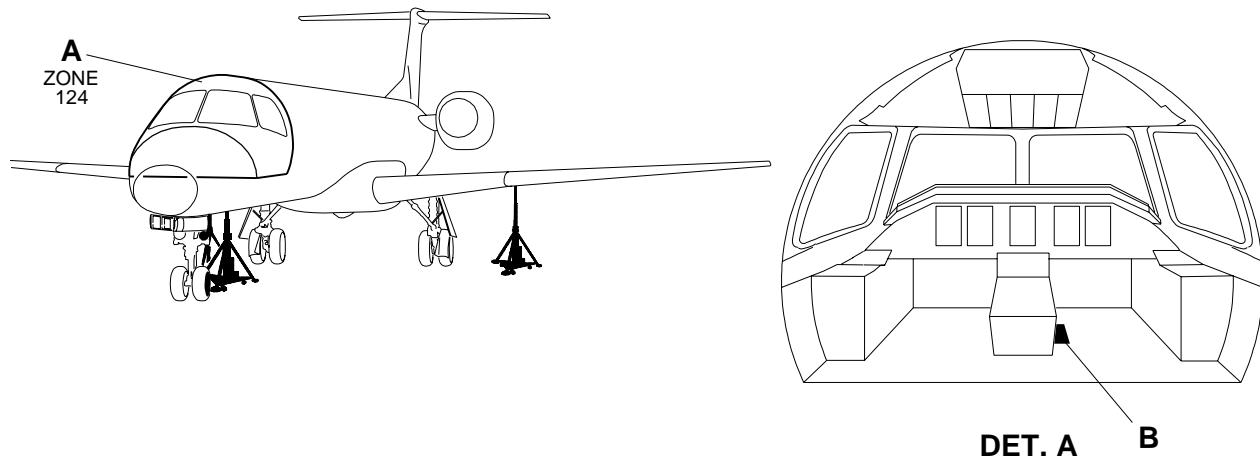

**DET. C**

145AMM320249.MCE B



TASK 32-34-01-400-801-A

EFFECTIVITY: ALL

3. OVERRIDE SWITCH - INSTALLATION

A. General

- (1) This procedure gives the instructions to install the Override Switch.

B. References

REFERENCE	DESIGNATION
AMM MPP 06-41-02/100	-
AMM TASK 25-11-01-400-801-A/400	PILOT SEAT - INSTALLATION

C. Zones and Accesses

ZONE	PANEL/DOOR	LOCATION
124	222EF	Area below the cockpit floor, on the RH side

D. Tools and Equipment

Not Applicable

E. Auxiliary Items

Not Applicable

F. Consumable Materials

Not Applicable

G. Expandable Parts

Not Applicable

H. Persons Recommended

QTY	FUNCTION	PLACE
1	Does the task	On the cockpit RH side

I. Installation (Figure 401)

SUBTASK 420-002-A

- (1) Connect the electrical terminals (5) on the override switch (4).
- (2) Install the override switch (4) to the support (2) with the tab washer (3).
- (3) Install the switch guard (1), washer (6) and nut (7).

J. Follow-on

SUBTASK 842-002-A

- (1) On the circuit breaker panel, close the DOWN OVRD circuit breaker and remove the DO-NOT-CLOSE tags from it.



## AIRCRAFT MAINTENANCE MANUAL

- (2) Close the access door 222EF (AMM MPP 06-41-02/100).
- (3) Install the copilot's seat ([AMM TASK 25-11-01-400-801-A/400](#)).