



## AIRCRAFT MAINTENANCE MANUAL

### GALLEY CONTROL MODULE - REMOVAL/INSTALLATION

EFFECTIVITY: ALL

#### 1. General

- A. This section gives the procedures to remove and install the galley control module.
- B. The galley control module is installed at the galley and controls the galley area lights.
- C. The procedures in this section are given in the sequence below. The tasks identified with (♦) are part of the Scheduled Maintenance Requirements Document (SMRD).

TASK NUMBER	DESCRIPTION	EFFECTIVITY
33-29-01-000-801-A	GALLEY CONTROL MODULE - REMOVAL	ALL
33-29-01-400-801-A	GALLEY CONTROL MODULE - INSTALLA- TION	ALL



EMB145 – EMB135

AIRCRAFT  
MAINTENANCE MANUAL

TASK 33-29-01-000-801-A

EFFECTIVITY: ALL

2. GALLEY CONTROL MODULE - REMOVAL

A. General

- (1) This task gives the procedures to remove the galley control module.

B. References

REFERENCE	DESIGNATION
AMM SDS 24-60-00/1	

C. Zones and Accesses

Not Applicable

D. Tools and Equipment

Not Applicable

E. Auxiliary Items

Not Applicable

F. Consumable Materials

Not Applicable

G. Expandable Parts

Not Applicable

H. Persons Recommended

QTY	FUNCTION	PLACE
1	Does the task	Passenger cabin

I. Preparation


*SUBTASK 841-002-A*

- (1) On the RH electrical-power control/distribution box (AMM SDS 24-60-00/1), open the circuit breakers below and attach a DO-NOT-CLOSE tag to them.
- GALLEY (Location Tip: RB SHED DC BUS 2/GALLEY).
  - GALLEY (Location Tip: RB SERVBUS/GALLEY).

J. Removal

*SUBTASK 020-002-A*

- (1) For the removal of the aft galley control module and the forward galley control module, do as follows (Figure 401) (Figure 402):
- (a) Release the three Dzus fasteners (2).
  - (b) Carefully pull the galley control module (3).
  - (c) Disconnect the electrical connector (1).

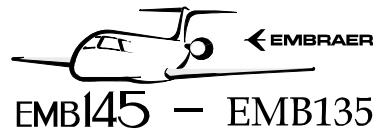


EMB145 – EMB135

AIRCRAFT  
MAINTENANCE MANUAL

- (d) Remove the galley control module (3).
- (2) For the removal of the outboard galley control module, do as follows ([Figure 403](#)):
  - (a) Release the four Dzus fasteners (2).
  - (b) Carefully pull the galley control module (3).
  - (c) Disconnect the electrical connector (1).
  - (d) Remove the galley control module (3).

**EFFECTIVITY: AIRCRAFT WITH AFT GALLEY**  
**Aft Galley Control Module - Removal/Installation**  
**Figure 401**

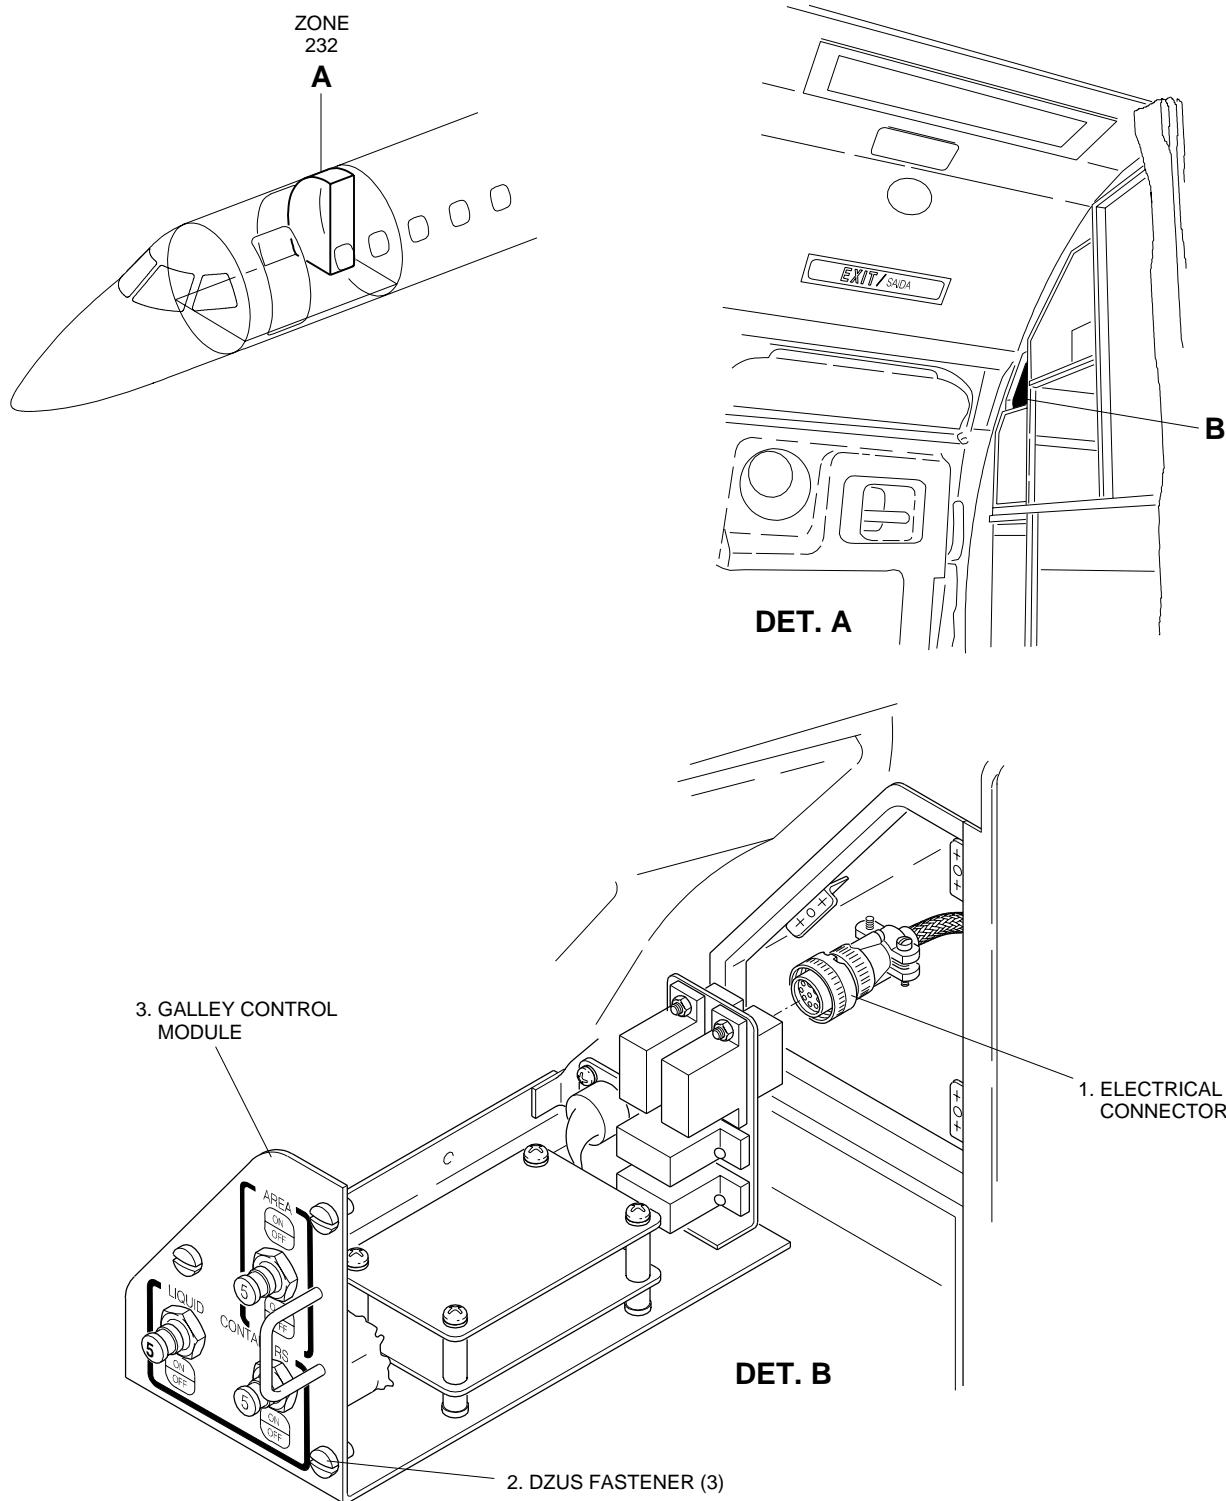


145AMM330170.MCE A

**EFFECTIVITY: AIRCRAFT WITH RH WINDSCREEN**

Fwd Galley Control Module - Removal/Installation

Figure 402

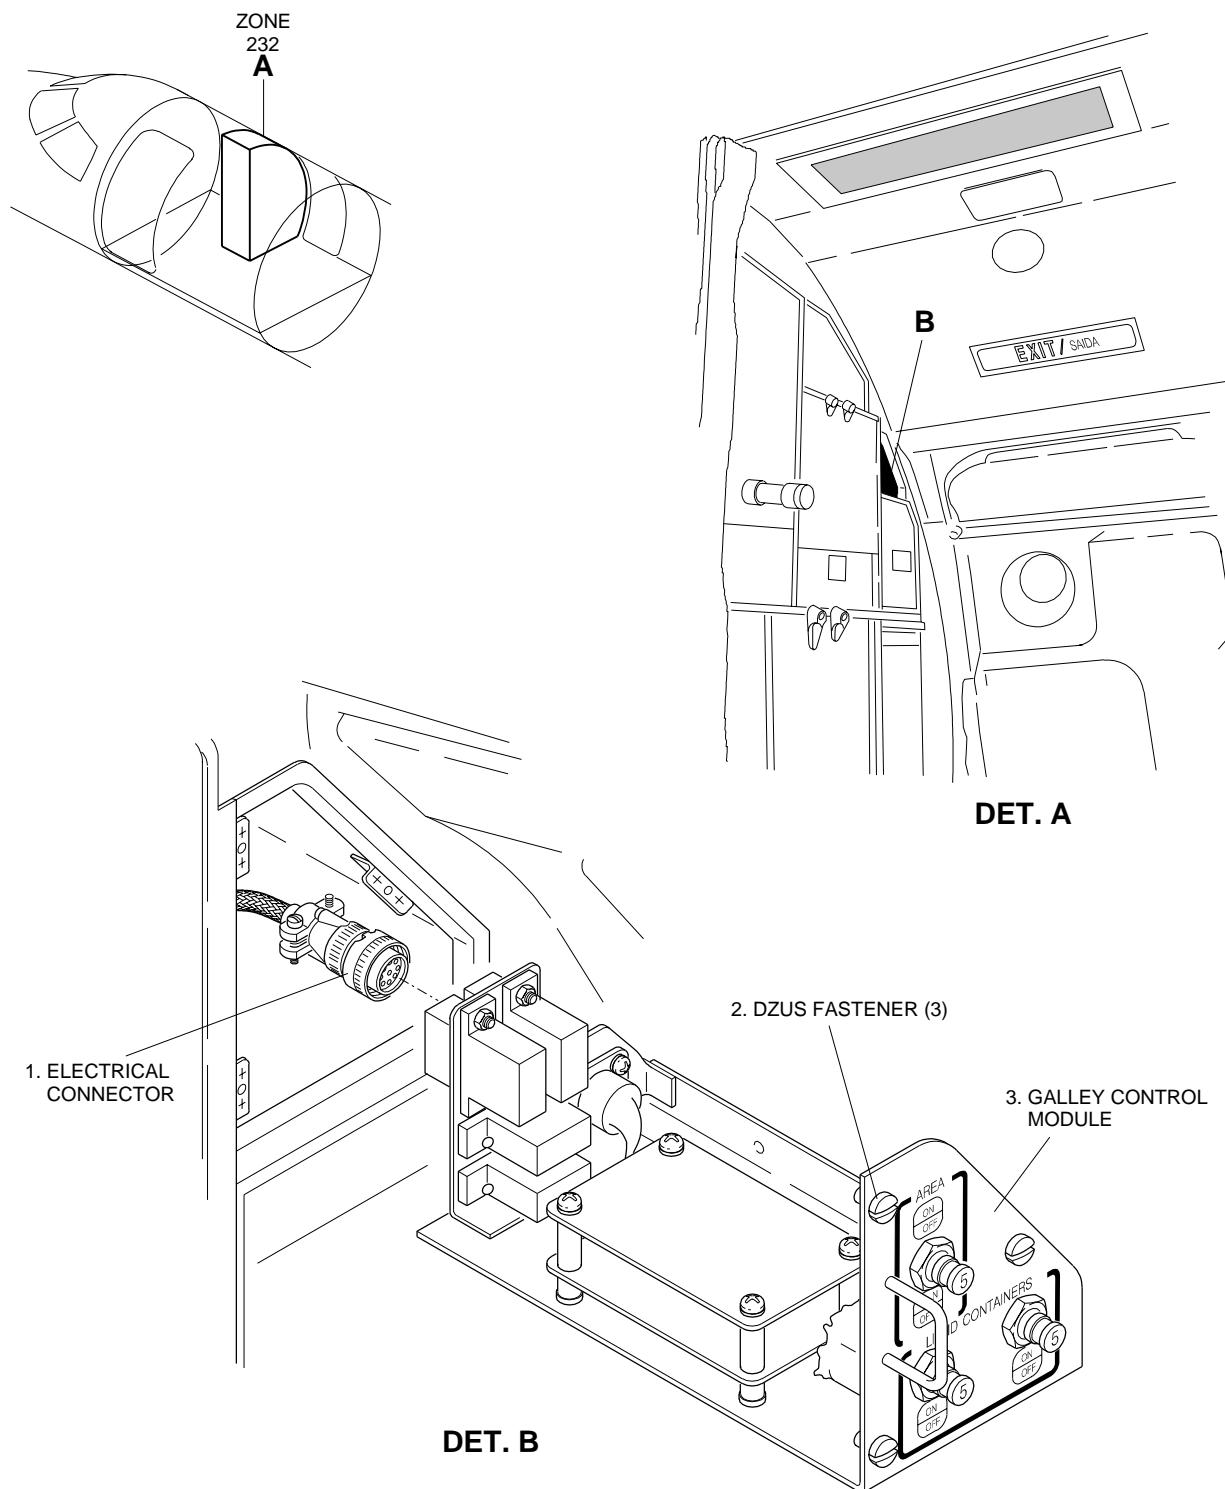


145AMM330209.MCE


**EFFECTIVITY: AIRCRAFT WITH OUTBOARD GALLEY**

Outboard Galley Control Module - Removal/Installation


Figure 403

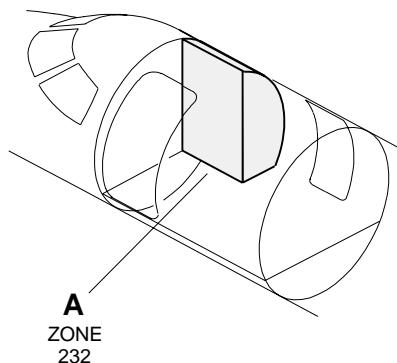

**A**  
ZONE  
232

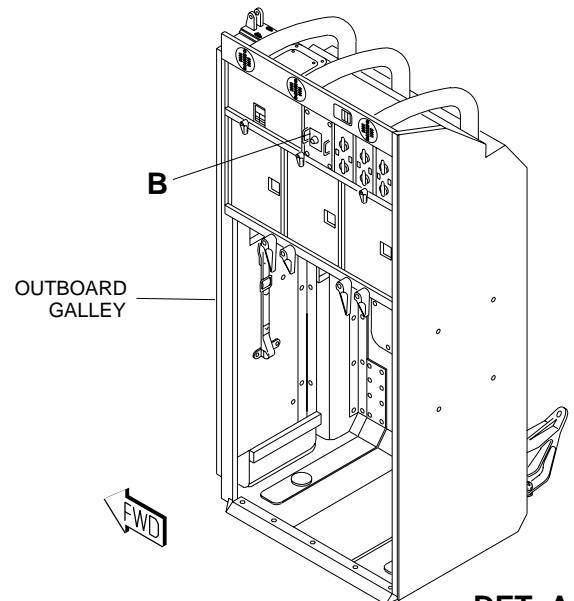

**DET. A**

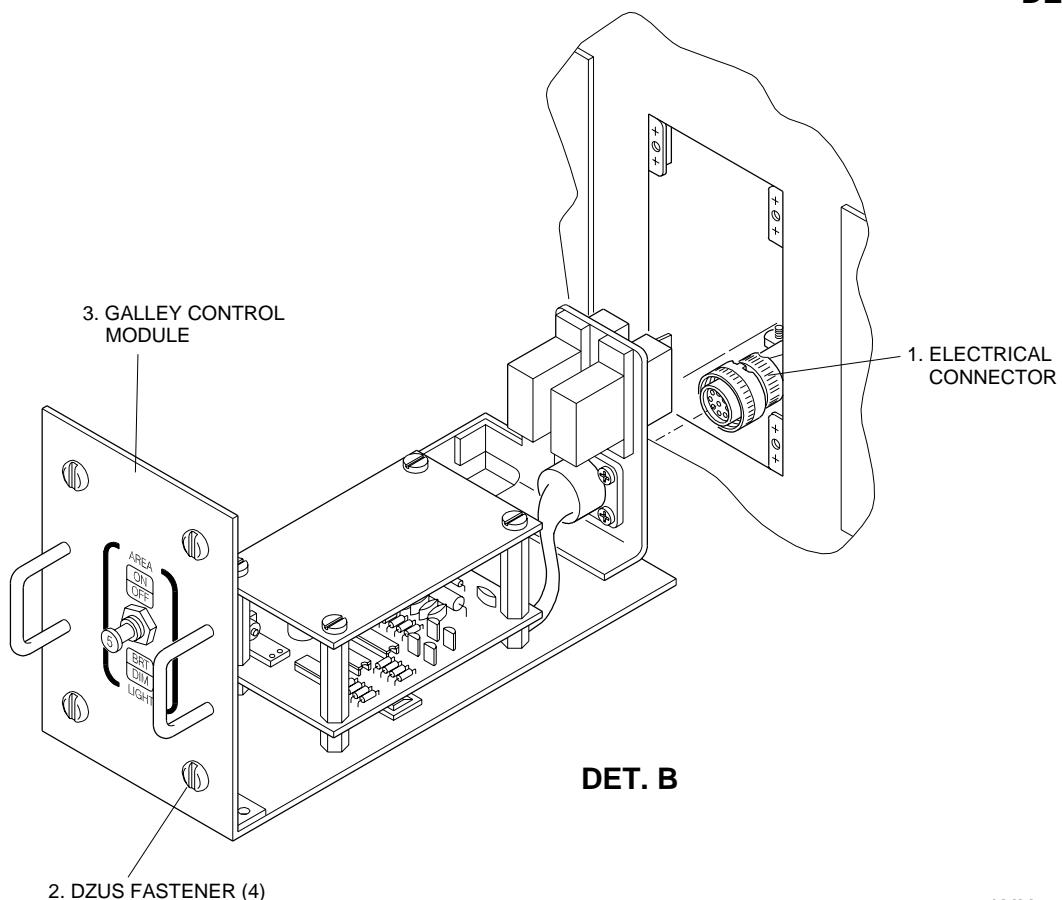

145AMM330203.MCE



EMB145 - EMB135

AIRCRAFT  
MAINTENANCE MANUAL

---

TASK 33-29-01-400-801-A

EFFECTIVITY: ALL

3. GALLEY CONTROL MODULE - INSTALLATION

## A. General

- (1) This task gives the procedures to install the galley control module.

## B. References

REFERENCE	DESIGNATION
AMM SDS 24-60-00/1	
AMM TASK 33-29-00-700-801-A/500	GALLEY LIGHTS - OPERATIONAL TEST

## C. Zones and Accesses

Not Applicable

## D. Tools and Equipment

Not Applicable

## E. Auxiliary Items

Not Applicable

## F. Consumable Materials

Not Applicable

## G. Expandable Parts

Not Applicable


## H. Persons Recommended

QTY	FUNCTION	PLACE
1	Does the task	Passenger cabin

## I. Installation

## SUBTASK 420-002-A

- (1) For the installation of the aft galley control module and the forward galley control module, do as follows (Figure 401) (Figure 402):
- Connect the electrical connector (1).
  - Put the galley control module (3) in its installation position.
  - Attach the three Dzus fasteners (2).
- (2) For the installation of the outboard galley control module, do as follows (Figure 403):
- Connect the electrical connector (1).
  - Put the galley control module (3) in its installation position.
  - Attach the three Dzus fasteners (2).

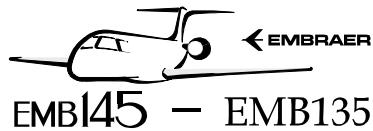

EMB145 - EMB135

AIRCRAFT  
MAINTENANCE MANUAL

J. Follow-on

SUBTASK 842-002-A

- (1) On the RH electrical-power control/distribution box ([AMM SDS 24-60-00/1](#)), close the circuit breakers below and remove the DO-NOT-CLOSE tag from them.
  - GALLEY (Location Tip: RB SHED DC BUS 2/GALLEY).
  - GALLEY (Location Tip: RB SERVBUS/GALLEY).
- (2) Do the Galley Lights test ([AMM TASK 33-29-00-700-801-A/500](#)).