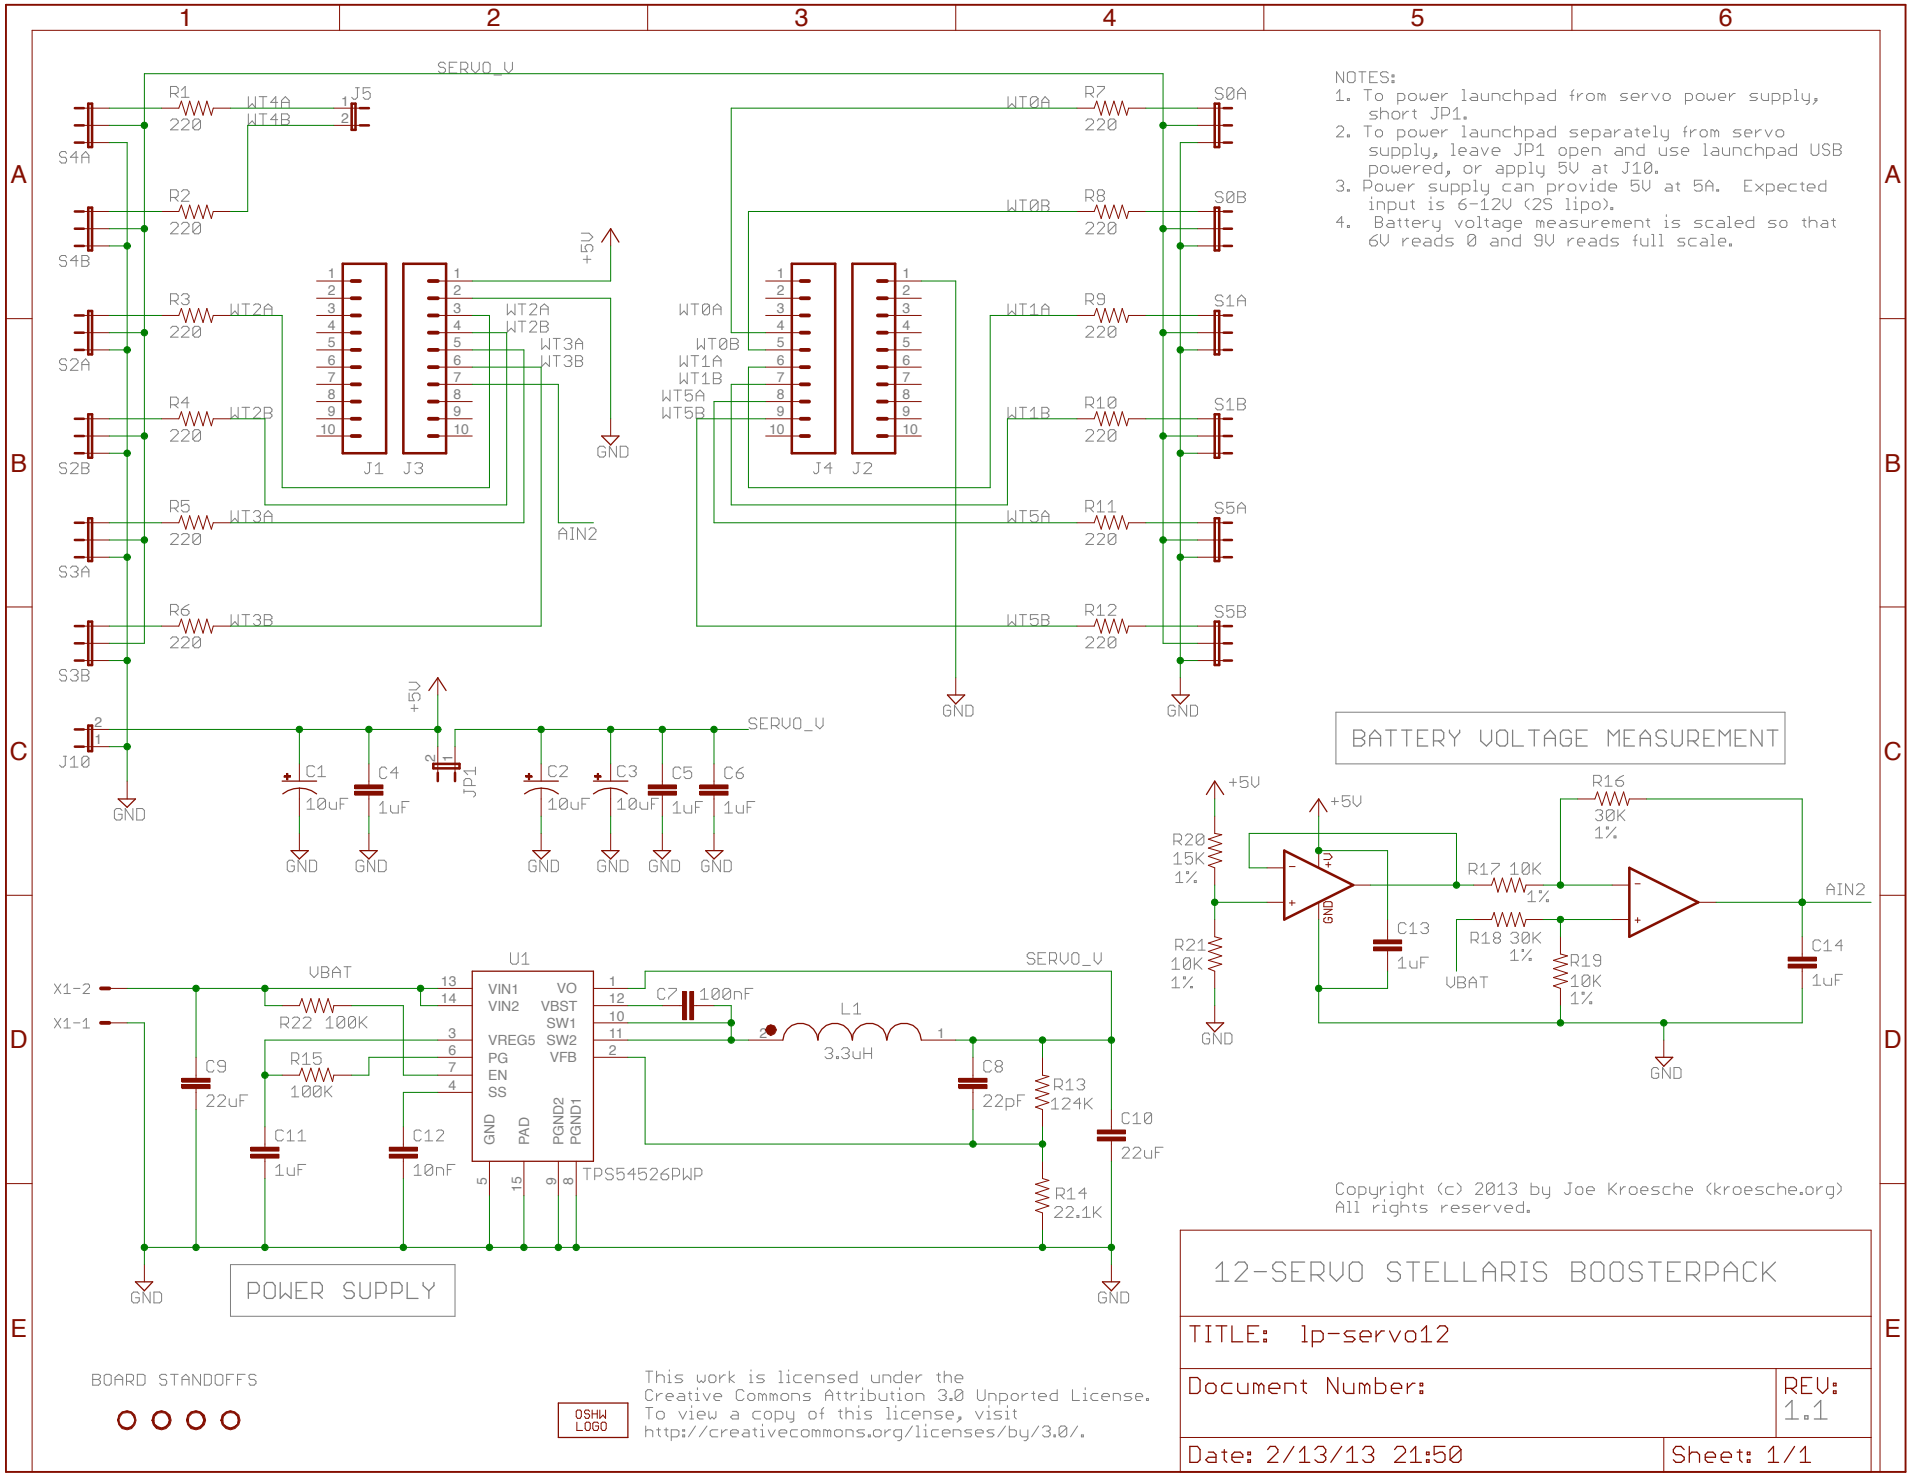

NOTES:
1. To power launchpad from servo power supply, short JP1.
2. To power launchpad separately from servo supply, leave JP1 open and use launchpad USB powered, or apply 5V at J10.
3. Power supply can provide 5V at 5A. Expected input is 6-12V (2S lipo).
4. Battery voltage measurement is scaled so that 6V reads 0 and 9V reads full scale.

Copyright (c) 2013 by Joe Kroesche (kroesche.org)
All rights reserved.

This work is licensed under the
Creative Commons Attribution 3.0 Unported License.
To view a copy of this license, visit
http://creativecommons.org/licenses/by/3.0/.

OSHW LOGO

12-SERVO STELLARIS BOOSTERPACK	
TITLE: lp-servo12	
Document Number:	REV: 1.1
Date: 2/13/13 21:50	Sheet: 1/1