SOLOVIA

Solovia Smart Toilet

Please read the instructions carefully before installing. Our company will not be held responsible for problems caused by not following original instructions.

NOTICE BEFORE INSTALLATION

WATER PRESSURE

- **Water pressure standard**

  Water pressure standard rate: 0.15MPa-0.55MPa. Open the valve and let water run into a bucket with volume measure for 15 seconds. If water in the bucket is more than 4 L, minimum water pressure is met. Please adjust the angle to fit in using when the water pressure is too high.

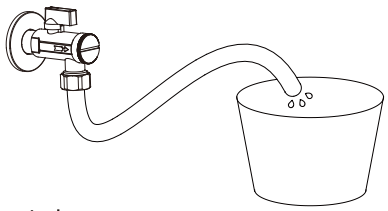

- **Drainage operation**

  Turn on the angle valve and drain off water over 2 minutes before installing inlet tube onto angle valve.

INSTALLATION SPACE

- Ensure there is enough space around the unit, confirm the bathroom door or shower door will not hit the unit when they open.
- Ensure the minimum distance from the wall to the center of the floor drain is 305mm or 12” long.
- A GFCI plug is required close to the unit.

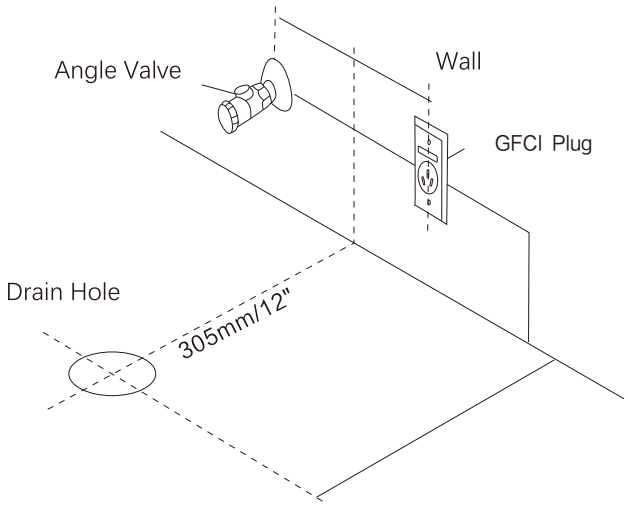

INSTALLATION DRAWING PLAN

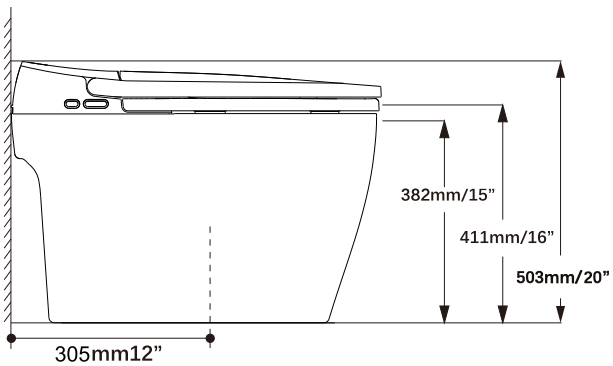

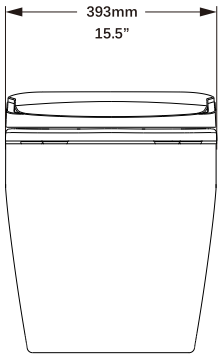

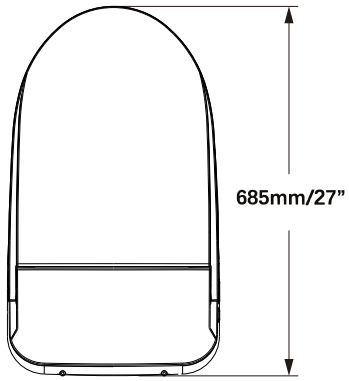

CAUTION

- The drawing plan is not the actual scale of the unit.
- When doing the installation in cold weather, leave the unit in room temperature for at least four hours before installing.

INSTALLATION STEPS

1.For the bathroom newly installing a toilet , a flange with bolts shall be added.

Note: You need to install the flange according to the size and position of the two bolt holes at the bottom of the ceramic.

See Figure 1

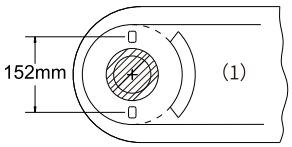

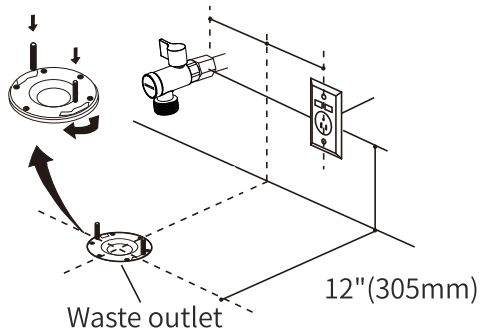

2.Lift the flip lid assembly from the toilet, up from the inside.

Note: Do not pull the lid roughly when lifting the toilet flip lid

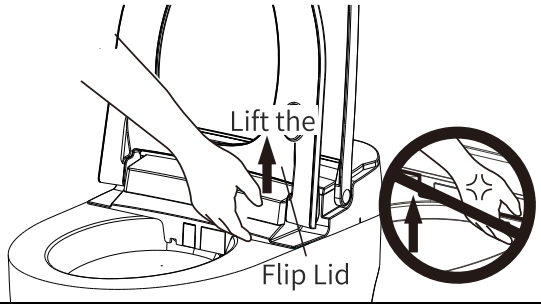

3.Install a flange under the toilet.

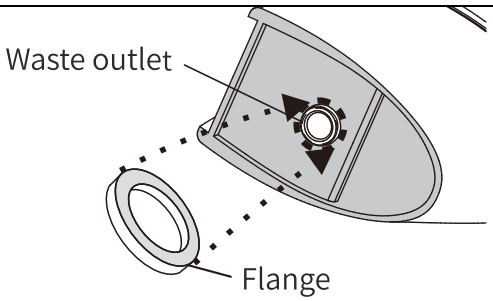

4.Put the toilet on the flange, making sure the bolts line up with the holes in the toilet. (from the top)

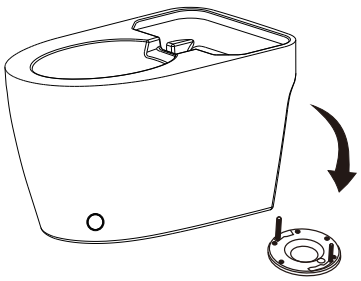

5.Use a spanner to lock the nut and other accessories to the retaining bolts. (from the top)

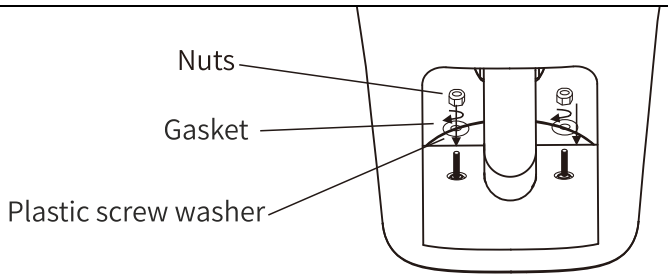

6.To install seat cover and ceramic bowl: the seat cover shall be aligned with the ceramic bowl.

Then press down by hand.

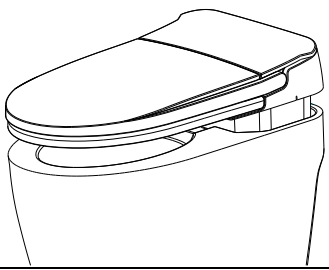

7.Install the water inlet angle valve and connect the dedicated hose (before connecting the dedicated hose, please drain for 3-5 minutes, ensuring the pipe is clean and won't be blocked)

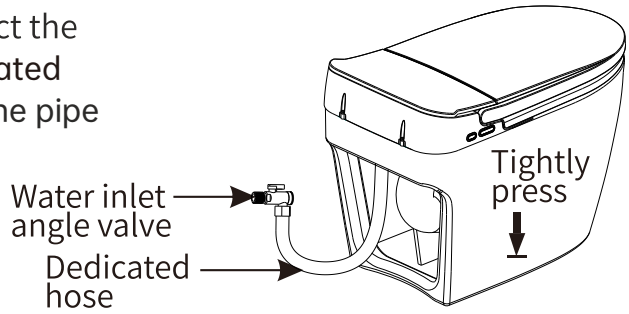

Filter screen should be cleaned with clear water every three months

Steps to clean filter screen: Turn off the valve, unscrew filter screen, carefully rinse with clean water.

Pipe and valve could be different from above graphic, due to production batches, please refer to actual product

BATTERY INSTALLATION

Steps

1.Find Figure 2 to install the battery into the battery box.

2.Insert a new battery in the direction of the arrow and tighten the waterproof cap clockwise.

3.Press the flush button to make sure it flushes properly

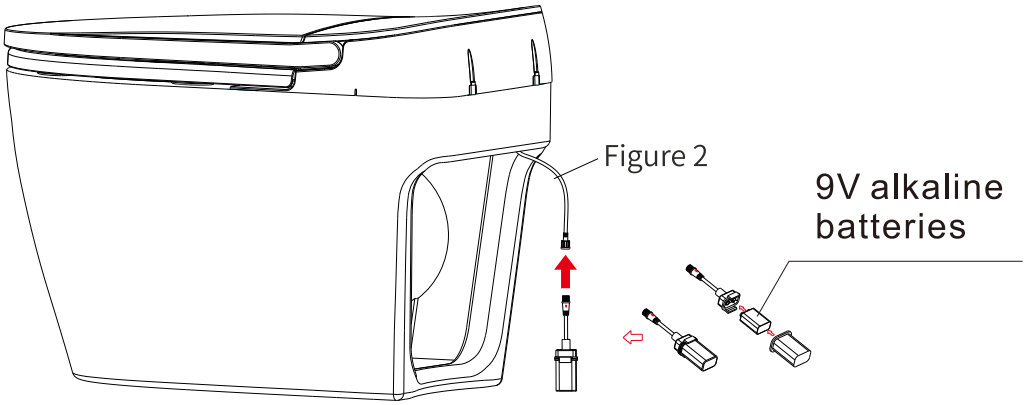

Note

1.The intelligent toilet accessories have been pre-adjusted and are strictly prohibited from personal disassembly.

2.Please use the fittings and hoses provided by our company.
Old fittings and hoses cannot be reused.

SEAL THE BOWL UNIT

Seal the gap between toilet and the ground, to further prevent water and odor leakage. Evenly apply a layer of general-purpose sealant (not included with the unit) around bottom of toilet, smooth the sealant with your finger. Allow the sealant to dry for at least 24 hours. (Follow instructions of specific sealant used for installation.)

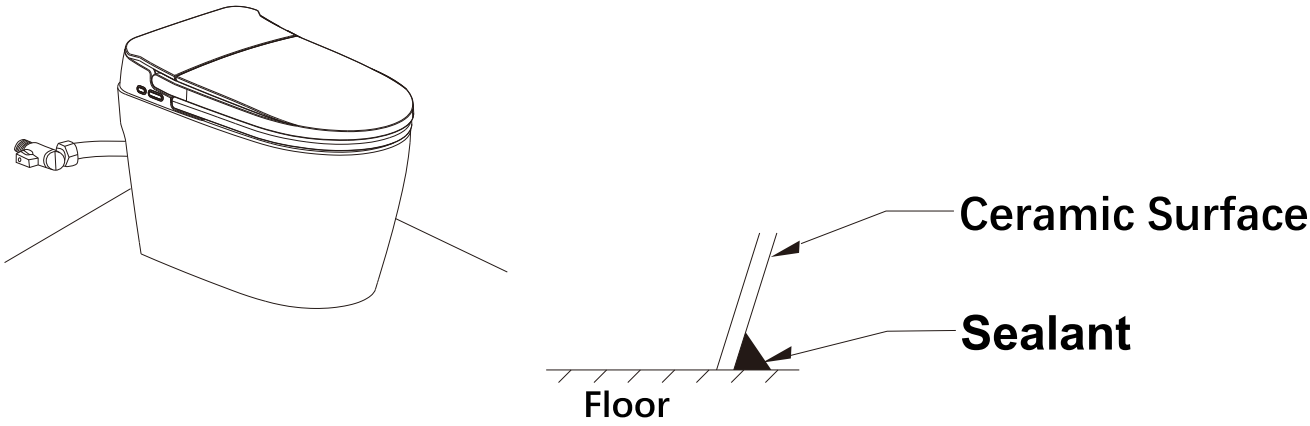

Figure 5

CONNECT POWER CORD

1. Power cord must be connected to an AC110-120V, 50/60Hz, 16A+, grounded GFCI power socket.
2. Wait for the unit to finish self-inspection after being connected. It is normal that the user sees the side button flash blue light, the nozzle stretch out, the machine engage, and a flushing sound occur.
3. User should do a trial run after self-inspection is done.

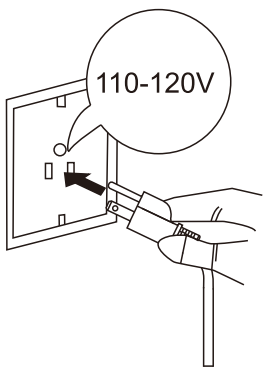

MAINTENANCE

REGULAR MAINTENANCE

Cleaning the unit

1. Gently wipe dirt and stains with a dry soft cloth or sponge, do not apply any chemical solutions to the unit.

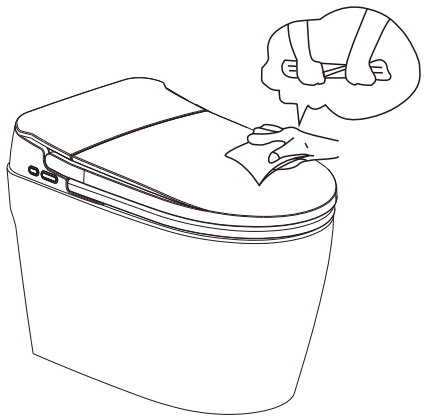

Cleaning the nozzle

1. Works when the user is not sitting on the unit. Press the female clean button on the side button. The nozzle will stretch out and the self-cleaning function will initiate. When the self-cleaning function turns on, the nozzle will not spray water. Gently wipe the nozzle with a soft cloth or brush with toothbrush.
2. The cleansing schedule is 90 seconds. The nozzle will be static in the first 70 seconds and will move back and forth in the last 20 seconds. Nozzle will retract back to the unit after cleansing. Repeat the process if necessary.
3. Warning: do not apply force by pulling, pushing, or attempting to bend the nozzle. This will result in damage or electrical shock.

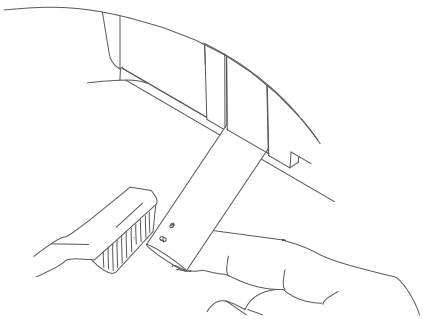

Cleaning the filter

1. Power off the unit, unplug the power cord with dry hands. Use a tool to unscrew the filter if necessary.
2. Rinse with clear water, use a brush if necessary.
3. Install the filter back to its original position, check for leakage.