
PNOZ m EF 1MM - AXIS 1 CONNECTION ARCHITECTURE

Where the module belongs and what may be connected

1. PHYSICAL POSITION IN THE PNOZmulti 2 RACK

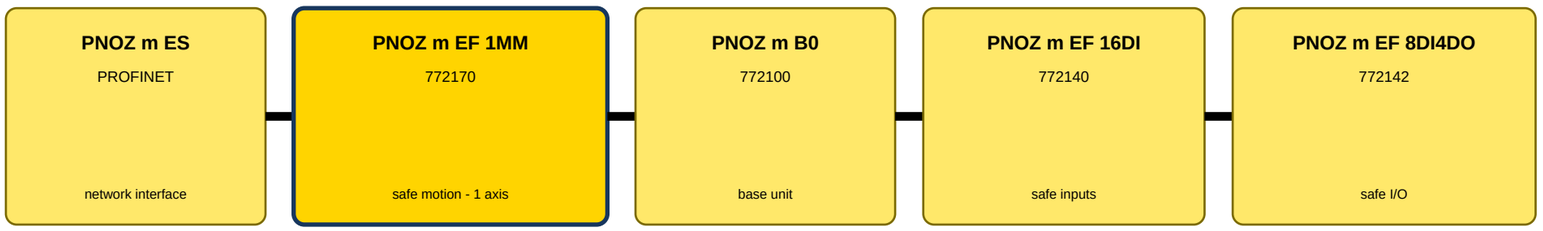


Modules exchange safety data through the lateral PNOZmulti bus - no external signal wire is required between modules



Installed module photograph: order 772170, version 2.4

2. CORRECT FIELD CONNECTION

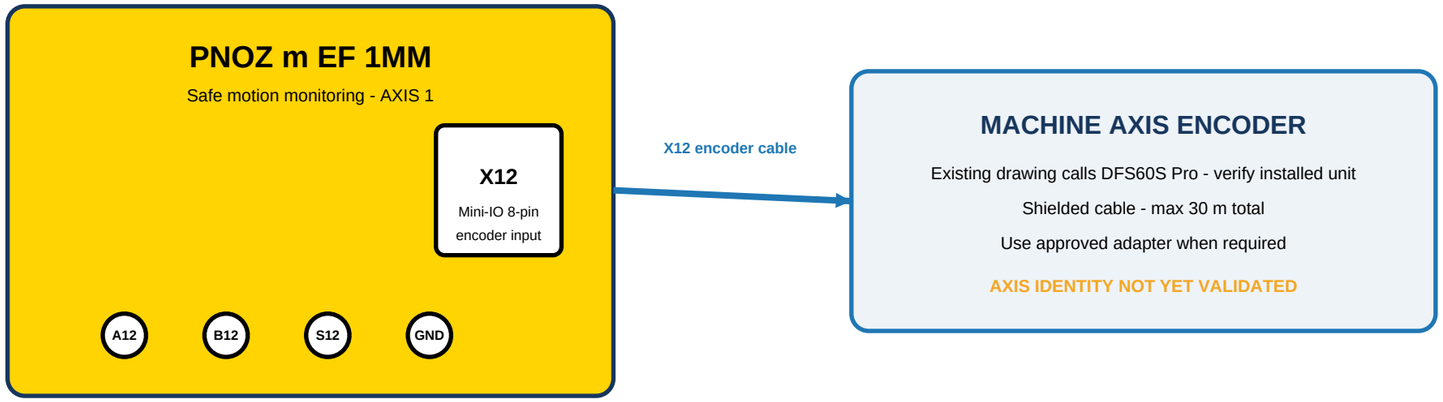


DO NOT CONNECT TO THIS MODULE

- X Door interlock channels GS1-GS11
- X Hood 1 FilterClogged %I12.4
- X Hood 2 FilterClogged %I12.7
- X Emergency-stop channels or ordinary 24 VDC PLC signals


PNOZ m EF 1MM - TERMINAL AND CABLE DETAIL

Choose only the connection method configured in PNOZmulti Configurator

OPTION A - ENCODER CONNECTED TO X12 (NORMAL FOR AXIS MONITORING)

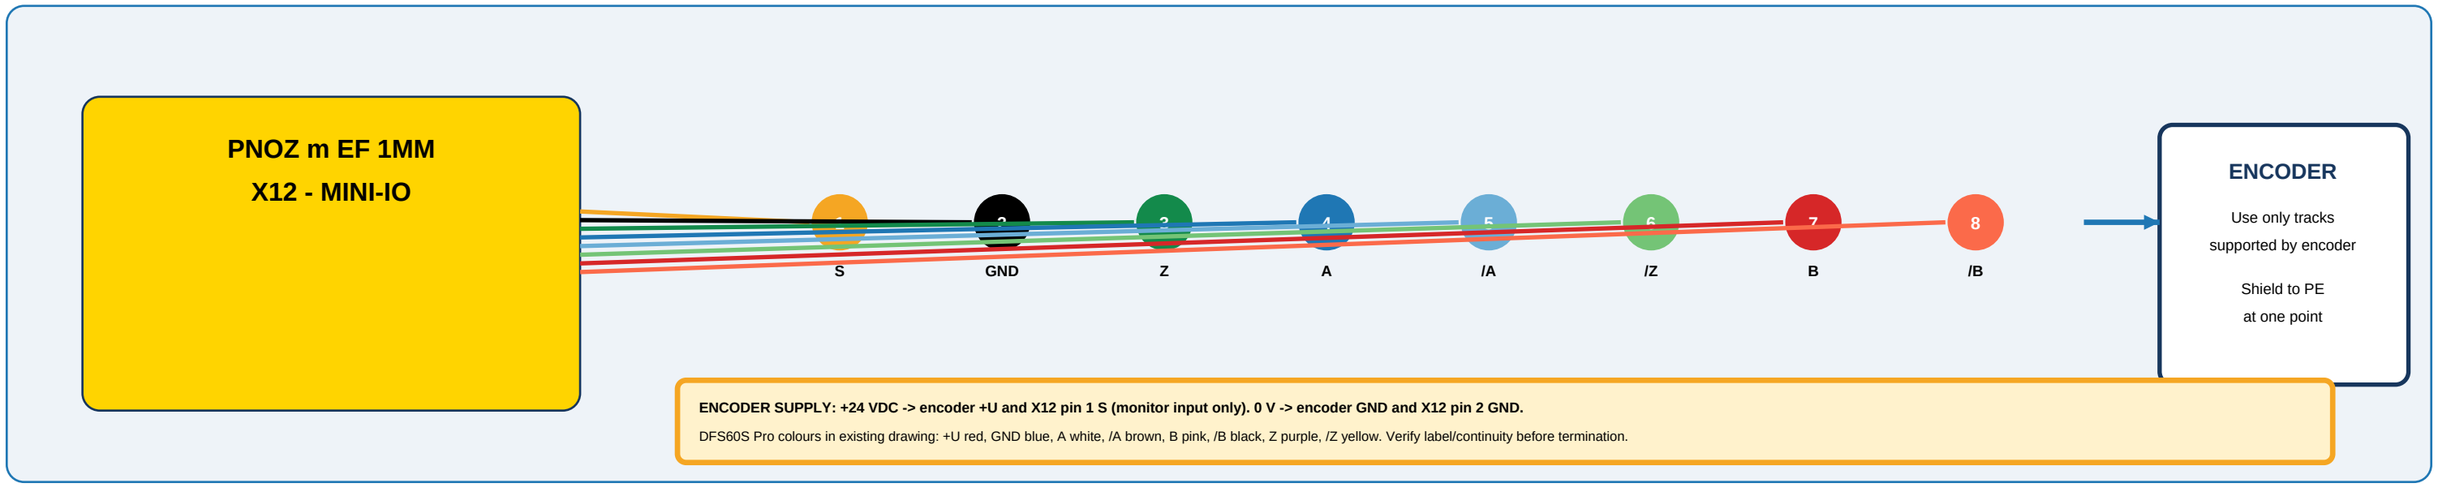

OPTION B - TWO 3-WIRE PROXIMITY SWITCHES ON A12/B12

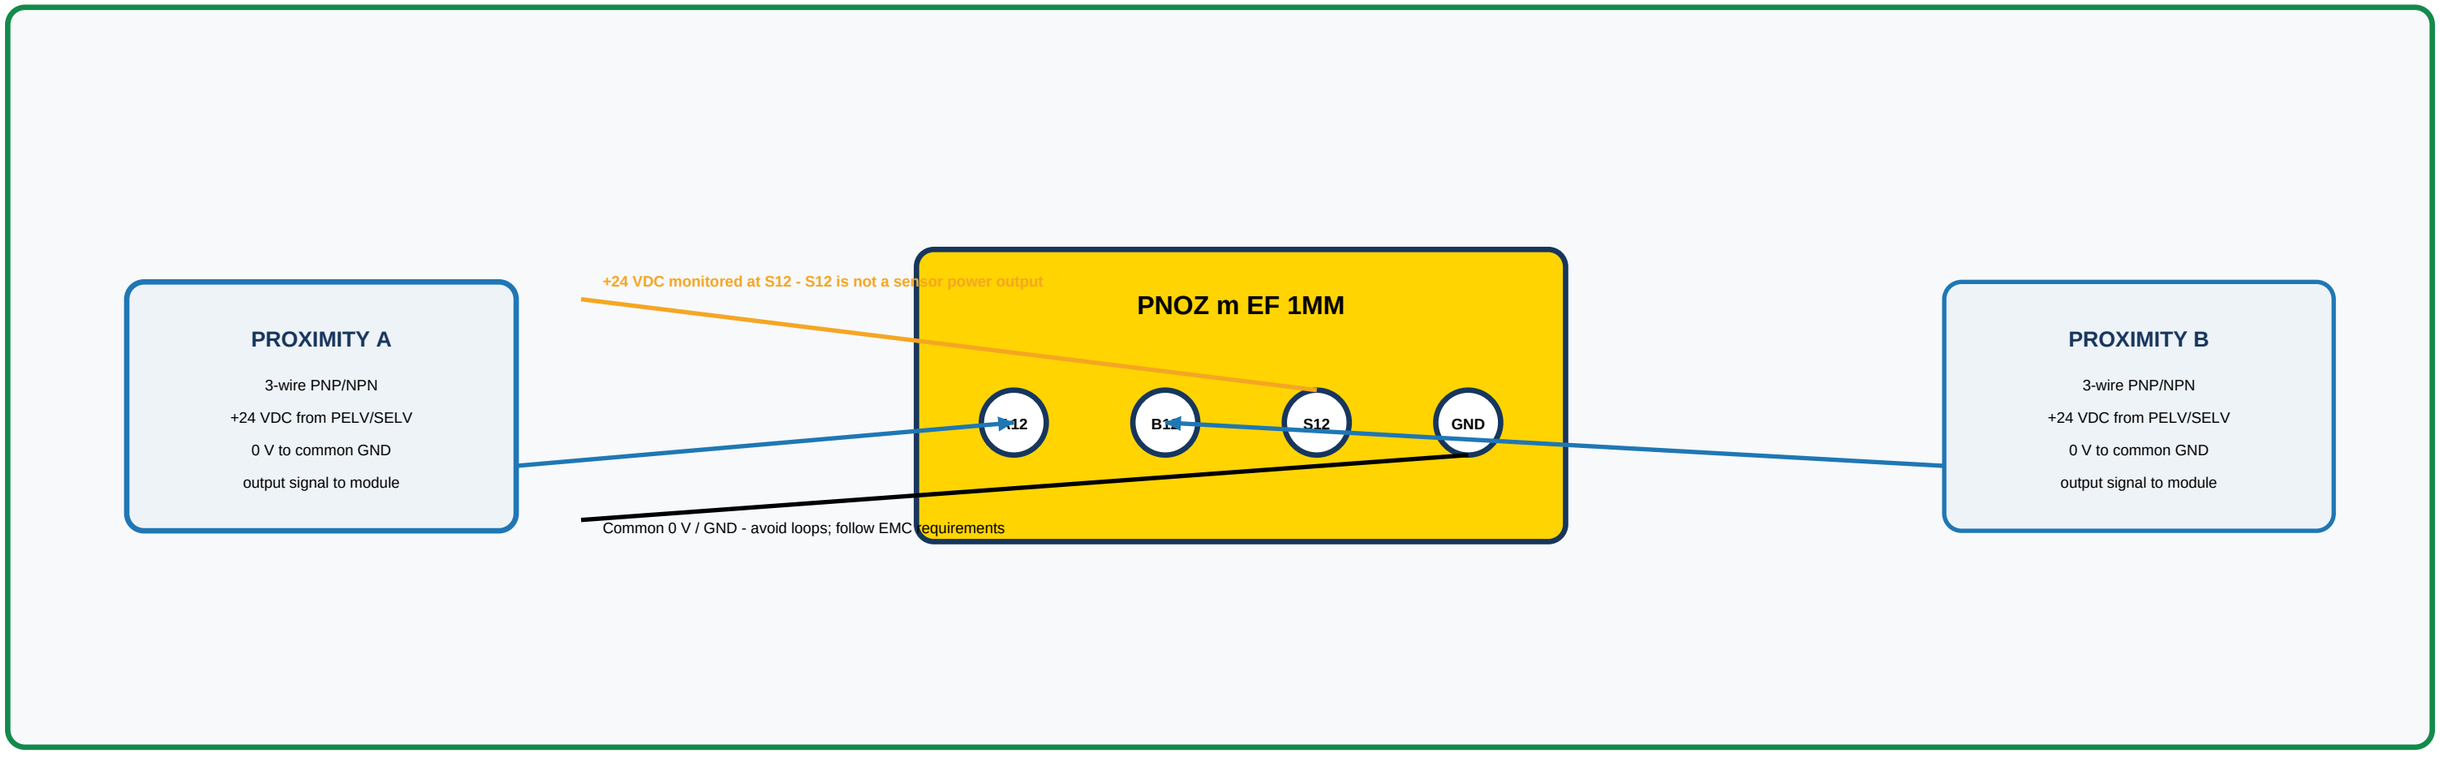

INSTALLATION HOLD: confirm the selected sensor method and Axis 1 assignment in the actual PNOZmulti project before wiring or commissioning.