

DTS

Dosing tank station

Installation and operating instructions



DTS Dosing tank station
Installation and operating instructions
Other languages
<http://net.grundfos.com/qr/i/98446198>

DTS

English (GB)

Installation and operating instructions	4
Declaration of conformity	13
Declaration of conformity	14

English (GB) Installation and operating instructions

Original installation and operating instructions

Table of contents

1. General information	4
1.1 Hazard statements	4
1.2 Notes	4
2. Safety instructions	4
2.1 Purpose of this manual	4
2.2 Documentation enclosed	4
2.3 Identification of notices	4
2.4 Qualification and training of personnel	4
2.5 Safety notices for the operating company/operator	5
2.6 Safety notices for maintenance, inspection and installation work	5
3. Product introduction	5
3.1 Intended use	5
3.2 Identification	5
4. Technical data	7
4.1 Operating conditions	7
4.2 Electrical data	7
4.3 Hydraulic data	7
4.4 Dimensions	7
4.5 Materials in contact with media	9
5. Structure and function	10
5.1 Product overview	10
6. Commissioning	10
6.1 Transport and storage	10
6.2 Installation	10
6.3 Tightness check	11
6.4 Electrical connection	11
7. Operation	12
8. Maintaining the product	12
8.1 Cleaning	12
8.2 Service	12
9. Accessories, spare parts	12
10. Disposing of the product	12
11. Document quality feedback	12

1. General information



Read this document before you install the product. Installation and operation must comply with local regulations and accepted codes of good practice.

1.1 Hazard statements

The symbols and hazard statements below may appear in Grundfos installation and operating instructions, safety instructions and service instructions.



DANGER

Indicates a hazardous situation which, if not avoided, will result in death or serious personal injury.



WARNING

Indicates a hazardous situation which, if not avoided, could result in death or serious personal injury.



CAUTION

Indicates a hazardous situation which, if not avoided, could result in minor or moderate personal injury.

The hazard statements are structured in the following way:



SIGNAL WORD

Description of the hazard

- Consequence of ignoring the warning
- Action to avoid the hazard.

1.2 Notes

The symbols and notes below may appear in Grundfos installation and operating instructions, safety instructions and service instructions.



Observe these instructions for explosion-proof products.



A blue or grey circle with a white graphical symbol indicates that an action must be taken.



A red or grey circle with a diagonal bar, possibly with a black graphical symbol, indicates that an action must not be taken or must be stopped.



If these instructions are not observed, it may result in malfunction or damage to the equipment.



Tips and advice that make the work easier.

2. Safety instructions

2.1 Purpose of this manual

These installation and operating instructions, along with the relevant component instructions, contain all the information needed to commission and operate the DTS dosing tank station.

If you require further information or should problems arise which are not described in detail in this manual, please contact your nearest Grundfos branch.

2.2 Documentation enclosed

The DTS dosing tank station is supplied together with the DTS installation and operating instructions.

Depending on the scope of supply, separate installation and operating instructions are provided for the following components:

- electric stirrer
- suction line (suction unit) (quick guide)
- multi-function valve.

2.3 Identification of notices

Information on the system itself, for example identification of fluid connections, must be clearly legible at all times.

2.4 Qualification and training of personnel

The personnel responsible for operation, maintenance, inspection and installation must be suitably qualified for this work. Areas of responsibility, responsibilities and supervision of personnel must be strictly controlled by the operating company.

If the personnel do not have the necessary knowledge, they must be trained and instructed accordingly. If necessary, the training can be provided by the manufacturer/supplier at the request of the operator of the pump. The operating company must ensure that personnel understand the content of this manual.

2.5 Safety notices for the operating company/operator

Dangerous hot or cold system parts must be protected to prevent accidental contact.

Any protection against accidental contact used for moving parts must not be removed when the system is operated.

Escaping hazardous media (e.g. hot, toxic) must be diverted such that they do not represent a hazard to people's health or the environment. Statutory regulations must be observed.

2.6 Safety notices for maintenance, inspection and installation work

WARNING Toxic material

Death or serious personal injury

- Cleaning and maintenance must be carried out by authorized and trained experts. DTS systems must be operated by experts in accordance with the installation and operating instructions.
- Wear personal protective equipment when handling chemicals.
- Shut down the entire installation before starting any work on the system components and lines.
- Ensure that the system is suitable for the dosing medium used.
- Observe the safety data sheets and safety instructions of the chemical manufacturer when handling chemicals.
- System parts which contain media hazardous to health must be decontaminated.
- Safety devices that have been deactivated during maintenance must be activated again immediately after maintenance.



Observe the points described in Section Transport and Storage prior to recommissioning.



Parts in contact with the dosing media must be resistant to the dosing medium under operating conditions.
Observe the characteristics of the dosing medium.

Related information

6.1 Transport and storage

3. Product introduction

DTS dosing tank stations comprise of a tank with optional equipment and optional preparation for the specified Grundfos dosing pump. See section Type key.

Related information

3.2.2 Type key

3.1 Intended use

- DTS dosing tank stations are intended for storing and dosing certain liquid dosing media.
- The operating safety of DTS dosing tank stations is only ensured, if used in accordance with the values mentioned in section Operating conditions. The specified limit values must not be exceeded.
- DTS dosing tank stations may only be operated by technical personnel in accordance with the installation and operating instructions.
- Modifications or changes to DTS dosing tank stations are only permitted with the consent of the manufacturer. Original spare parts and accessories approved by the manufacturer are safe to use.

WARNING

Toxic material

Death or serious personal injury

- Any usage other than that described here is not intended. Grundfos accepts no liability for any injuries or damage resulting from improper use.



3.1.1 Improper use

WARNING

Toxic material

Death or serious personal injury

- Dosing systems are not intended for dosing explosive, flammable, radioactive, poisonous, gaseous, highly viscous, solid media, or media containing abrasive or long-fibred particles.



DTS dosing tank stations are not intended for operation in other conditions than described in section Operating conditions.

3.2 Identification

3.2.1 Nameplate



Pos.	Description
1	Type designation
2	Product number
3	Serial number
4	Dosing capacity
5 ¹⁾	Voltage, Frequency, Power consumption
6	Production code (year and week)
7	Country of origin
8 ¹⁾	Marks of approval

¹⁾ DTS with electric stirrers

TM091294

3.2.2 Type key

Product type	
DTS-100-T-1-0-3-4-RE-E-4-A-1-H	
DTS	Dosing Tank Station
Tank size	
DTS-100-T-1-0-3-4-RE-E-4-A-1-H	
60	60 litres
100	100 litres
200	200 litres
300	300 litres
500	500 litres
1000	1000 litres
Tank colour	
DTS-100-T-1-0-3-4-RE-E-4-A-1-H	
T	Transparent
B	Black
Collecting tray	
DTS-100-T-1-0-3-4-RE-E-4-A-1-H	
0	Without
1	Collecting tray
Screw cover	
DTS-100-T-1-0-3-4-RE-E-4-A-1-H	
0	Black screw cover without lock
Mixer or stirrer	
DTS-100-T-1-0-3-4-RE-E-4-A-1-H	
0	Without
1	Handheld mixer PE
2	Electric stirrer, stainless steel
3	Electric stirrer, PP, with sealing flange
Preparation for dosing pump	
DTS-100-T-1-0-3-4-RE-E-4-A-1-H	
0	Without
1	Preparation for DMX 221 up to 50 l/h
4	Preparation for Smart Digital DDA, DDC, DDE
Suction line	
DTS-100-T-1-0-3-4-RE-E-4-A-1-H	
WO	Without
RV	Rigid suction lance (RSL) PE/V
RE	Rigid suction lance (RSL) PE/E
RT	Rigid suction lance (RSL) PE/T
FV	Flexible suction line with foot valve (FV) PE/V
FE	Flexible suction line with foot valve (FV) PE/E
FT	Flexible suction line with foot valve (FV) PE/T
Discharge line	
DTS-100-T-1-0-3-4-RE-E-4-A-1-H	
A	Without
B	10 m PE-hose 4/6 mm (up to 7.5 l/h)
C	10 m braided PVC-hose 6/12 mm (up to 30 l/h)
D	10 m PE-hose 9/12 mm (up to 60 l/h)
E	10 m PE-hose 6/9 mm (up to 30 l/h)

Injection unit with G1/2" process connection

DTS-100-T-1-0-3-4-RE-E-4-A-1-H	
0	Without
1	Injection unit PVC/V/C
2	Injection unit PP/V/C
3	Injection unit PVC/E/C
4	Injection unit PP/E/C
5	Injection unit PVC/T/C

Drain valve

DTS-100-T-1-0-3-4-RE-E-4-A-1-H	
A	Without
B	Drain valve PVC/E

Filling device

DTS-100-T-1-0-3-4-RE-E-4-A-1-H	
0	Without
1	Filling armature PVC/E with ball valve
2	Dissolving hopper

Multi-function valve

DTS-100-T-1-0-3-4-RE-E-4-A-1-H	
A	Without
G	Multi-function valve PV/V
H	Multi-function valve PV/E
I	Multi-function valve PV/T

3.2.3 Material key

Pos.	Description
PVC	Polyvinyl chloride
PP	Polypropylene
PE	Polyethylene
V	FKM
E	EPDM
T	PTFE
C	Ceramic
PV	PVDF

4. Technical data

4.1 Operating conditions



The resistance of the parts that come into contact with media depends on the medium, media temperature and operating pressure. Observe the characteristics of the dosing medium.

Parts in contact with the dosing media must be resistant to the dosing medium under operating conditions.

4.1.1 Dosing tank

- Min. /Max. storage temperature: -20 °C to +50 °C
- Min. /Max. ambient temperature: -20 °C to +45 °C
- Min. /Max. liquid temperature: -20 °C to +45 °C
 - Dosing medium must be in the liquid phase.

Thin (maximum 200 mPas), non-explosive dosing media without abrasive or long-fibre components. The dosing medium must not chemically attack the materials of the DTS dosing tank station.

4.1.2 Components



For the below mentioned operating conditions, observe the installation and operating instructions of the components used.

- Min. /Max. storage temperature
- Min. /Max. ambient temperature
- Min. /Max. liquid temperature
- Max. relative humidity (non-condensing)
- Max. altitude above sea level.

4.2 Electrical data

Electric stirrer for tanks of 60 l and 100 l:

- single-phase, 220-240 V, 50/60 Hz.

Electric stirrer for tanks of 200 l, 300 l, 500 l and 1000 l:

- single-phase, 230 V, 50 Hz (standard)
- single-phase, 240 V, 50 Hz.

For more details, refer to the installation and operating instructions for the electric stirrer and dosing pump.

4.3 Hydraulic data

4.3.1 Process connection


- with injection unit: G 1/2

- without injection unit: see hydraulic connection of the dosing pump

4.3.2 Suction line

Suction hose PE 6/9 mm with included connection for the suction side of the dosing pump.

4.4 Dimensions

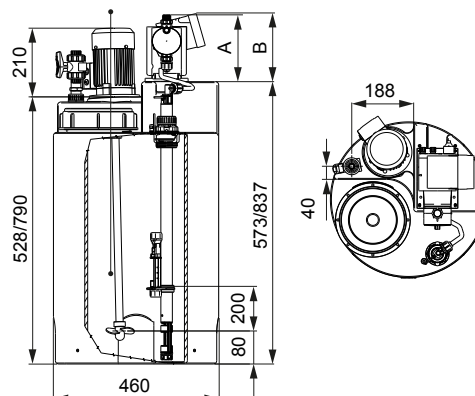


TM059268

Dosing tank station 60 / 100 l


Pump type	A ²⁾ [mm]	B ³⁾ [mm]
DDA 7.5-16, DDC 6-10, DDC 9-7	196	200.8
DDA-C 7.5-16	196	214
DDE 6-10	196	161.5
DDA 12-10, DDA 17-7, DDC 15-4	200.5	200.8
DDE 15-4	200.5	161.5
DDA 30-4	204.5	200.8
DMX 221, p _{max.} = 3 bar	197	319
DMX 221, p _{max.} = 4 bar	192	319
DMX 221, p _{max.} = 10 / 16 bar	179	319

2) height of pump up to discharge connection



3) height of pump housing or motor

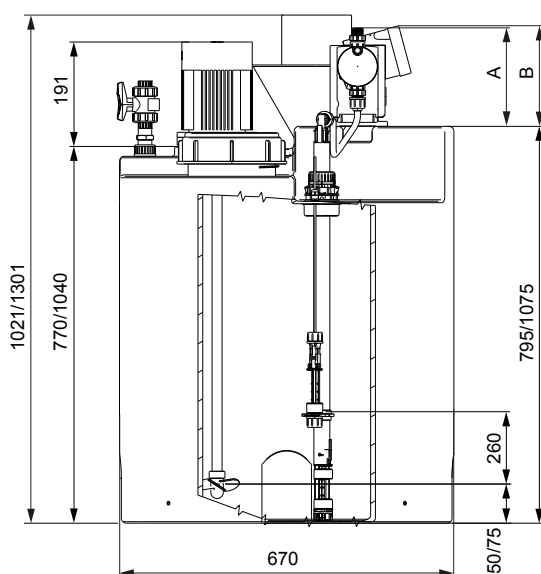



Dosing tank station 200 / 300 l

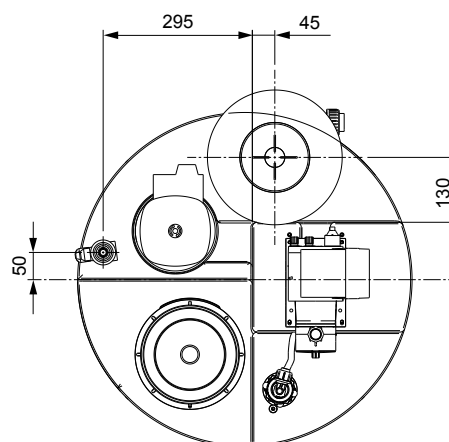

TM059269

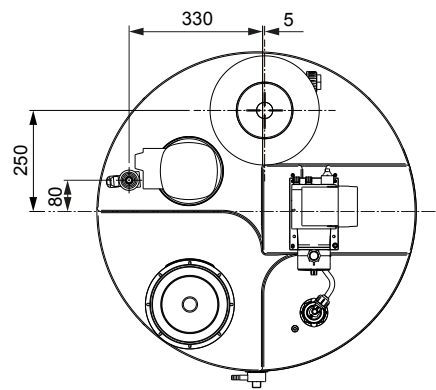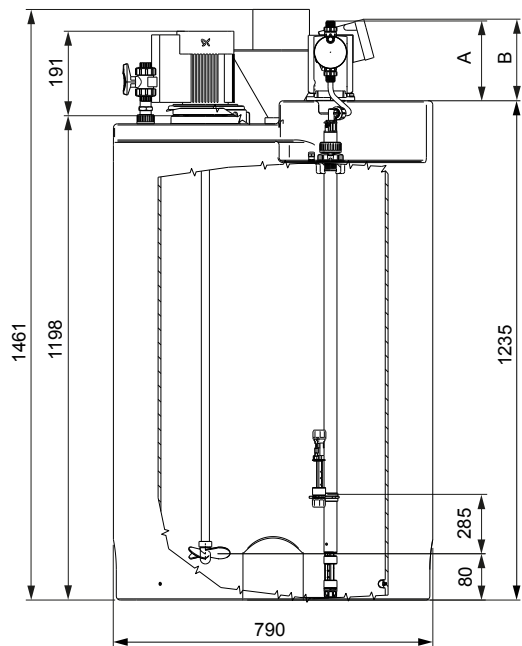

Dosing tank station 500 l

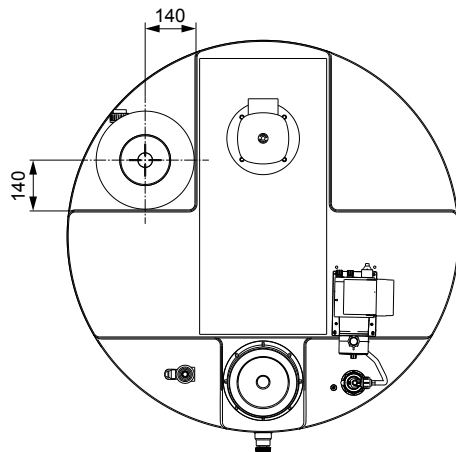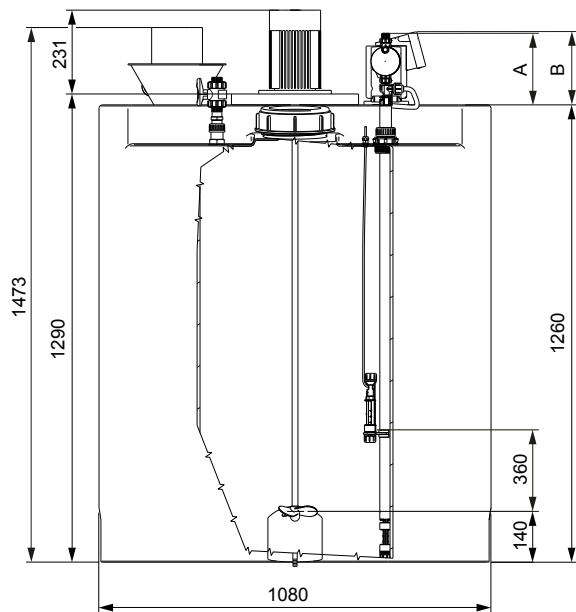


Dosing tank station 1000 l

Measurements in mm

TM059270

TM059271

4.5 Materials in contact with media

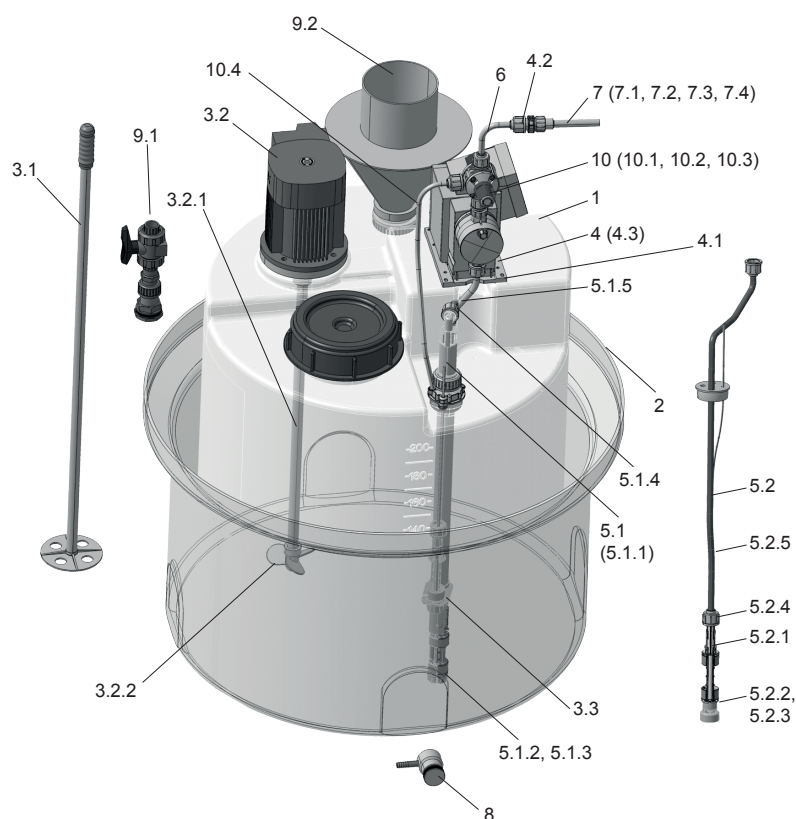

TM059321

Components that come into contact with media

Pos.	Description	Material
1	Dosing tank	PE
2	Collecting tray	PE
3	Mixer or stirrer	
3.1	Handheld mixer	PE
3.2	Electric stirrer	
3.2.1	Shaft	SS 1.4571, PP
3.2.2	Propeller	PP
3.3	Level switch for electric stirrer	PE
4	Installation material	
4.1	Screws and washers	Tank sizes 60-500 l: SS 1.4541 (screws), SS 1.4301 (washers); Tank size 1000 l: PP
4.2	Connection kits (only DMX)	PP, PVC
4.3	Mounting plate (only DDA, DDC, DDE)	PPO/PS 20 % GF
5	Suction line	
5.1	Rigid suction lance with suction line	
5.1.1	Rigid suction lance	PE
5.1.2	Valve ball	Ceramic Al ₂ O ₃ 99.5 %
5.1.3	Valve seat	PTFE
5.1.4	Gasket	FKM, EPDM or PTFE
5.1.5	Suction line	PE
5.2	Flexible suction line with foot valve	
5.2.1	Foot valve	PE

Pos.	Description	Material
5.2.2	Valve ball	Ceramic Al ₂ O ₃ 99.5 %
5.2.3	Valve seat	PTFE
5.2.4	Gasket	FKM, EPDM or PTFE
5.2.5	Suction line	PE
6	Discharge line	PE or braided PVC
7	Injection unit	
7.1	Body	PVC or PP
7.2	Gaskets	FKM, EPDM or PTFE
7.3	Spring	Tantal
7.4	Ball	Ceramic Al ₂ O ₃ 99.5 %
8	Drain valve	PVC/EPDM
9	Filling device	
9.1	Filling armature	PVC/EPDM
9.2	Dissolving hopper	PVC/EPDM
10	Multi-function valve	
10.1	Body	PVDF
10.2	Gaskets	FKM, EPDM or PTFE
10.3	Diaphragm	PTFE
10.4	Relief line	PE



For more details observe the installation and operating instructions of the components.

5. Structure and function

5.1 Product overview

DTS dosing tank stations can comprise the following modules (selection depending on model key):

- Chemically resistant tank
 - UV-stabilised semi-transparent or black PE
 - 6 sizes between 60 and 1000 litres
 - threaded M 6 inserts and/or adapter plate for installing a dosing pump
 - embossed litre scale
 - screw cover, PE
- Collecting tray, PE, in various sizes for dosing tanks of 60 to 1000 litres
- Handheld mixer or electric stirrer with level switch
- Flexible or rigid suction line, PE, with foot valve and 2-step level switch for idling protection
- Injection unit, PVC or PP, with G 1/2 screw-in thread
- 10 m discharge line, PE or PVC
- Drain valve
- Filling device
- Multi-function valve


The components for the discharge side of the pump are prepared for subsequent installation and enclosed with the delivery packaged separately.

5.1.1 Dosing pump

Depending on the application requirements, the dosing pump can be selected from the following series and ordered separately.

- DDA, DDE, DDC up to 30 l/h
- DMX 221 up to 50 l/h

5.1.2 Components of a DTS dosing tank station

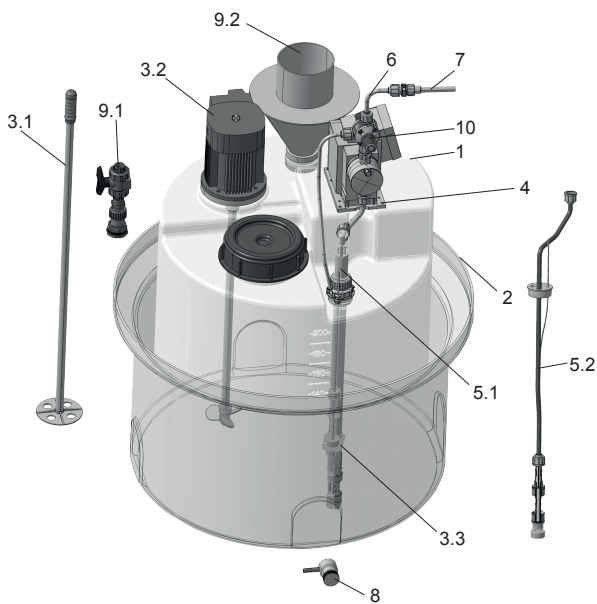

DTS dosing tank station (example)

Pos.	Description
1	Dosing tank
2	Collecting tray
3	Mixer or stirrer
3.1	Handheld mixer
3.2	Electric stirrer
3.3	Level switch for electric stirrer
4	Installation material
5	Suction line

Pos.	Description
5.1	Rigid suction lance
5.2	Flexible suction line with foot valve
6	Discharge line
7	Injection unit
8	Drain valve
9	Filling device
9.1	Filling armature with ball valve
9.2	Dissolving hopper
10	Multi-function valve

6. Commissioning

6.1 Transport and storage

WARNING

Heavy load

Death or serious personal injury



- Only instructed persons may transport the DTS system.
- Wear the stipulated personal protective equipment.
- Do not throw or drop the DTS dosing tank station.
- Only transport the DTS dosing tank station, if the dosing pump is disassembled.

6.1.1 Unpacking

- Check the DTS dosing tank station for visible transport damage immediately after receipt.
- Dispose of the packaging in accordance with local regulations.

6.2 Installation

WARNING

Toxic material

Death or serious personal injury



- Some chemicals react with water, which can lead to explosions. If your dosing medium can react with water, flush the DTS system with a medium that is compatible with both water and the dosing medium before startup.



The system is tested for tightness in the factory. Some residual water may still be present in the fittings and pipes.

6.2.1 Storing the product



Before starting work, check if all technical conditions required at the installation site comply with the data on the nameplate of the DTS dosing tank station.

- The installation site must be horizontal, even, frost-free and suitable for the corresponding loads.
- The DTS dosing tank station must be easily accessible.
- Observe the permissible ambient conditions.
- The storage location must be protected from rain, humidity, condensation, direct sunlight and dust.
- The system must be drained completely.
- Observe the requirements for the system components.

6.2.2 Hydraulic connection

Depending on the scope of supply, the customer must install the components.

Refer to the installation and operating instructions for the components used.

WARNING

Toxic material

Death or serious personal injury

- Observe the safety data sheets and safety instructions of the chemical manufacturer when handling chemicals.
- Wear personal protective equipment when handling chemicals.
- When changing chemicals, check the chemical resistance of the materials used. If there is a risk of a chemical reaction between the chemicals, clean the DTS dosing tank station thoroughly before dosing the new chemical.
- Some chemicals react with water, which can lead to explosions. If your dosing medium can react with water, flush the DSS system with a medium that is compatible with both water and the dosing medium before startup.
- Overflowing dosing medium must always be returned to a tank.
- The dosing medium is pressurised and can be harmful. Observe the maximum permissible pressure.



CAUTION

Electric shock

Minor or moderate personal injury

- Before starting the DTS, the grounding must be installed or tested.



Make sure that the system is suitable for the power supply to which it is to be connected.

- Media such as peracetic acid and hydrogen peroxide must be returned to a separate tank.
- Other media can be returned to the dosing tank.
- The overflow hose provided with the multi-function valve must be connected and routed to the corresponding tank or the cap of the suction lance or foot valve.

6.2.3 Installation of the dosing pump



The installation material for the dosing pump (screws, nuts, washers) is delivered with DTS dosing tank stations that have the "Preparation for dosing pump" option.

- Mount the dosing pump with the suitable installation material directly on the dosing tank or adapter plate.

Refer to the installation and operating instructions for the dosing pump.

6.2.4 Installation of the multi-function valve

- Fit the multi-function valve directly on the pressure valve of the dosing pump.

Refer to the installation and operating instructions for the multi-function valve.

6.2.5 Installation of the dosing lines

Route hoses free from mechanical tension and bends.

Only use the clamp rings and hose connectors intended for the hose diameter in question.

Only use original hoses with the required dimensions and wall thickness.

Observe the maximum permissible operating pressure.



Connect the suction line to the suction valve of the dosing pump. Connect the discharge line to the discharge valve or to the multi-function valve of the dosing pump.

1. Cut the hose ends to length (straight cut).

2. Pull the union nut and the clamp ring over the hose.

3. Slide the hose end over the connector until the stop, widen if necessary. Depending on the type of connection, secure it with a counterpiece or a hose clip.

4. Fit gasket.

- Ensure that the O-ring or flat gasket is positioned correctly in the counterpiece (pump valve/injection unit).

5. Use the union nut to screw the hose on the valve.

Refer to the installation and operating instructions for the dosing pump.

6.2.6 Installation of the injection unit

- Screw the injection unit into the coupling thread (provided by the customer) of the process line vertically from above.

Refer to the installation and operating instructions for the injection unit.

6.3 Tightness check

WARNING

Toxic material

Death or serious personal injury

- Some chemicals react with water, which can lead to explosions. If your dosing medium can react with water, flush the DTS system with a medium that is compatible with both water and the dosing medium before startup.
- Observe the safety data sheets and safety instructions of the chemical manufacturer when handling chemicals.



1. Before filling the dosing tank, check that the following requirements are fulfilled:

- the suction lance is connected
- the optional drain valve is fully closed

2. Only with drain valve: Fill the dosing tank with water and check for leaks.

6.4 Electrical connection

WARNING

Electric shock

Death or serious personal injury

- All electrical connections must be carried out by a qualified electrician in accordance with local regulations.
- Protect the cable connections and plugs against corrosion and humidity.



Before connecting the mains cables, check whether the supply voltage stated on the nameplates of the dosing pump and electric stirrer matches the local figures (permissible mains frequency deviation: $\pm 5\%$). An incorrect mains voltage may destroy the components.

- Fuse the motor with a motor overload switch of the appropriate rating.

6.4.1 Electrical connection of the dosing pump

Refer to the installation and operating instructions for the dosing pump.

6.4.2 Electrical connection of the electric stirrer

Refer to the installation and operating instructions for the electric stirrer.

6.4.3 Electrical connection of the level switch

The suction unit and the electric stirrer are each fitted with a level switch.

- Plug the connector of the level switch of the suction line into the corresponding connector of the dosing pump.

The separate level control of the electric stirrer can be used via an external control unit to deactivate the electric stirrer when the tank is running empty.

6.4.4 Inputs and outputs

Refer to the installation and operating instructions for the dosing pump and the suction line.

7. Operation

The dosing tank is not operated. Within the system, it simply serves as a reservoir for storage and dosing of the medium.

WARNING

Sharp element

Death or serious personal injury



- Do not reach into the dosing tank when the electric stirrer is running. The rotating propeller and mixing shaft may result in serious injuries.



All system components must be ready for operation.



Observe the installation and operating instructions of the dosing pumps and other components.



Before switching on the electric stirrer, fill the dosing tank with dosing medium to at least 20 cm above the propeller. If this is not done, turbulence may occur when stirring and the mixing shaft may be damaged.

The point at the top of suction unit where the suction line and level cable emerge must not be blocked or sealed. Air must enter there, in order to compensate for pressure in the dosing tank.

8. Maintaining the product

The dosing tank requires no maintenance.



Observe the installation and operating instructions of the dosing pumps and all other components of the DTS system.

8.1 Cleaning

WARNING

Toxic material

Death or serious personal injury



- Wear personal protective equipment when handling chemicals.
- Observe the safety data sheets and safety instructions of the chemical manufacturer when handling chemicals.

Clean the dosing tank and components, if necessary.

8.2 Service

WARNING

Toxic material

Death or serious personal injury



- Cleaning and maintenance must be carried out by authorized and trained experts.

Should a fault arise please provide an accurate description of the problem.

Please refer to the nameplate for the technical data.

9. Accessories, spare parts

Replace faulty accessories by new ones. Information on accessories is available on www.grundfos.com or in the data booklets:

- Accessories for dosing pumps
- SMART Digital, DDA, DDC, DDE, Pumps and accessories

10. Disposing of the product

This product or parts of it must be disposed of in an environmentally sound way.

1. Use the public or private waste collection service.
2. If this is not possible, contact the nearest Grundfos company or service workshop.



The crossed-out wheellie bin symbol on a product means that it must be disposed of separately from household waste. When a product marked with this symbol reaches its end of life, take it to a collection point designated by the local waste disposal authorities. The separate collection and recycling of such products will help protect the environment and human health.

See also end-of-life information at www.grundfos.com/product-recycling.

11. Document quality feedback

To provide feedback about this document, use your smart device to scan the QR code.



[Click here to submit your feedback](#)

Declaration of conformity

GB: EU declaration of conformity

We, Grundfos, declare under our sole responsibility that the product DTS with electric stirrers, to which the declaration below relates, is in conformity with the Council Directives listed below on the approximation of the laws of the EU member states.

DE: EU-Konformitätserklärung

Wir, Grundfos, erklären in alleiniger Verantwortung, dass das Produkt DTS with electric stirrers, auf das sich diese Erklärung bezieht, mit den folgenden Richtlinien des Rates zur Angleichung der Rechtsvorschriften der EG-/EU-Mitgliedsstaaten übereinstimmt.

ES: Declaración de conformidad UE

Grundfos declara, bajo su exclusiva responsabilidad, que el producto al que concierne la presente declaración, marcado con la denominación DTS with electric stirrers, es conforme con las Directivas del Consejo que figuran a continuación, basadas en la aproximación de las legislaciones correspondientes de los Estados miembros de la UE.

HU: EU megfelelőségi nyilatkozat

Mi, a Grundfos vállalat, teljes felelősséggel kijelentjük, hogy a(z) DTS with electric stirrers termék, amelyre az alábbi nyilatkozat vonatkozik, megfelel az Európai Unió tagállamainak jogi irányelveit összehangoló tanács alábbi előírásainak.

NL: EC Conformiteitsverklaring

Wij, Grundfos, verklaren geheel onder eigen verantwoordelijkheid dat product DTS with electric stirrers, waarop de onderstaande verklaring betrekking heeft, in overeenstemming is met de onderstaande Richtlijnen van de Raad inzake de onderlinge aanpassing van de wetgeving van de EU-lidstaten.

RU: Декларация о соответствии нормам ЕС

Мы, компания Grundfos, со всей ответственностью заявляем, что изделие DTS with electric stirrers, к которому относится нижеприведённая декларация, соответствует нижеприведённым Директивам Совета Евросоюза о тождественности законов стран-членов ЕС.

CZ: EU prohlášení o shodě

My společnost Grundfos prohlašujeme na svou plnou odpovědnost, že výrobek DTS with electric stirrers, na který se toto prohlášení vztahuje, je v souladu s níže uvedenými ustanoveními směrnice Rady pro sblížení právních předpisů členských států Evropské unie.

DK: EU-overensstemmelseserklæring

Vi, Grundfos, erklærer under ansvar at produktet DTS with electric stirrers som erklæringen nedenfor omhandler, er i overensstemmelse med Rådets direktiver der er nævnt nedenfor, om indbyrdes tilnærmelse til EU-medlemsstaternes lovgivning.

FR : Déclaration de conformité UE

Nous, Grundfos, déclarons sous notre entière responsabilité que le produit DTS with electric stirrers, auquel la déclaration ci-dessous fait référence, est conforme aux directives du Conseil répertoriées ci-dessous, concernant le rapprochement des législations des États membres de l'UE.

IT: Dichiarazione di conformità UE

Grundfos dichiara sotto la sua esclusiva responsabilità che il prodotto DTS with electric stirrers, al quale si riferisce questa dichiarazione, è conforme alle seguenti direttive del Consiglio riguardanti il riavvicinamento delle legislazioni degli Stati membri UE.

PL: Deklaracja zgodności WE

Firma Grundfos oświadcza z pełną odpowiedzialnością, że jej produkt DTS with electric stirrers, którego dotyczy niniejsza deklaracja, jest zgodny z następującymi dyrektywami Rady w sprawie zbliżenia przepisów prawnych państw członkowskich UE.

SI: Izjava o skladnosti EU

V Grundfosu s polno odgovornostjo izjavljamo, da so izdelki DTS with electric stirrers, na katere se spodnja izjava nanaša, v skladu s spodnjimi direktivami Sveta o približevanju zakonodaje za izenačevanje pravnih predpisov držav članic EU.

- Machinery Directive (2006/42/EC).
Standards used:
EN 60034-1:2015-02,
EN 60204-1:2007-06.
- RoHS Directives (2011/65/EU and 2015/863/EU.)
Standard used:
EN IEC 63000:2018
- EMC Directive (2014/30/EU).
Standards used:
EN 61326-1:2019,
EN 61000-3-2:2019,
EN 61000-3-3:2013 + A1:2019.

This EU declaration of conformity is only valid when published as part of the Grundfos installation and operating instructions (publication number 98402490).

Bjerringbro, 01.March 2022



Jimm Feldborg
Head of PD IND
Grundfos Holding A/S
Poul Due Jensens Vej 7
8850 Bjerringbro, Denmark
www.grundfos.com

Person authorised to compile technical file and empowered to sign the EU declaration of conformity.

Declaration of conformity

UK declaration of conformity

We, Grundfos, declare under our sole responsibility that the products to which the declaration below relates, are in conformity with UK regulations, standards and specifications to which conformity is declared, as listed below:

Valid for Grundfos products:

DTS with electric stirrers

- Supply of Machinery (Safety) Regulations 2008.
Standards used:
EN 60034-1:2015-02,
EN 60204-1:2007-06.
- The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2019
Standard used:
EN IEC 63000:2018
- Electromagnetic Compatibility Regulations 2016
Standards used:
EN 61326-1:2013,
EN 61000-3-2:2019,
EN 61000-3-3:2013 + A1:2019.

This UK declaration of conformity is only valid when accompanying Grundfos instructions.

UK Importer: Grundfos Pumps Ltd. Grovebury Road, Leighton Buzzard, LU7 4TL.

Bjerringbro, 01.March 2022



Jimm Feldborg
Head of PD IND
Grundfos Holding A/S
Poul Due Jensens Vej 7
8850 Bjerringbro, Denmark
www.grundfos.com

Manufacturer and person empowered to sign the UK declaration of conformity.
10000107518

Argentina

Bombas GRUNDFOS de Argentina S.A.
Ruta Panamericana km. 37.500 Industrias
1619 - Garín Pcia. de B.A.
Tel.: +54-3327 414 444
Fax: +54-3327 45 3190

Australia

GRUNDFOS Pumps Pty. Ltd.
P.O. Box 2040
Regency Park
South Australia 5942
Tel.: +61-8-8461-4611
Fax: +61-8-8340-0155

Austria

GRUNDFOS Pumpen Vertrieb Ges.m.b.H.
Grundfosstraße 2
A-5082 Grödig/Salzburg
Tel.: +43-6246-883-0
Fax: +43-6246-883-30

Belgium

N.V. GRUNDFOS Bellux S.A.
Boomsesteenweg 81-83
B-2630 Aartselaar
Tel.: +32-3-870 7300
Fax: +32-3-870 7301

Bosnia and Herzegovina

GRUNDFOS Sarajevo
Zmaja od Bosne 7-7A
BiH-71000 Sarajevo
Tel.: +387 33 592 480
Fax: +387 33 590 465
www.ba.grundfos.com
E-mail: grundfos@bih.net.ba

Brazil

BOMBAS GRUNDFOS DO BRASIL
Av. Humberto de Alencar Castelo Branco,
630
CEP 09850 - 300
São Bernardo do Campo - SP
Tel.: +55-11 4393 5533
Fax: +55-11 4343 5015

Bulgaria

Grundfos Bulgaria EOOD
Slatina District
Iztocna Tangenta street no. 100
BG - 1592 Sofia
Tel.: +359 2 49 22 200
Fax: +359 2 49 22 201
E-mail: bulgaria@grundfos.bg

Canada

GRUNDFOS Canada inc.
2941 Brighton Road
Oakville, Ontario
L6H 6C9
Tel.: +1-905 829 9533
Fax: +1-905 829 9512

China

GRUNDFOS Pumps (Shanghai) Co. Ltd.
10F The Hub, No. 33 Suhong Road
Minhang District
Shanghai 201106 PRC
Tel.: +86 21 612 252 22
Fax: +86 21 612 253 33

Colombia

GRUNDFOS Colombia S.A.S.
Km 1.5 vía Siberia-Cota Conj. Potrero
Chico,
Parque Empresarial Arcos de Cota Bod. 1A.
Cota, Cundinamarca
Tel.: +57(1)-2913444
Fax: +57(1)-8764586

Croatia

GRUNDFOS CROATIA d.o.o.
Buzinski prilaz 38, Buzin
HR-10010 Zagreb
Tel.: +385 1 6595 400
Fax: +385 1 6595 499
www.hr.grundfos.com

Czech Republic

GRUNDFOS Sales Czechia and Slovakia
s.r.o.
Čajkovskéhoho 21
779 00 Olomouc
Tel.: +420-585-716 111

Denmark

GRUNDFOS DK A/S
Martin Bachs Vej 3
DK-8850 Bjerringbro
Tel.: +45-87 50 50 50
Fax: +45-87 50 51 51
E-mail: info_GDK@grundfos.com
www.grundfos.com/DK

Estonia

GRUNDFOS Pumps Eesti OÜ
Peterburi tee 92G
11415 Tallinn
Tel.: + 372 606 1690
Fax: + 372 606 1691

Finland

OY GRUNDFOS Pumput AB
Trukkikuja 1
FI-01360 Vantaa
Tel.: +358-(0) 207 889 500

France

Pompes GRUNDFOS Distribution S.A.
Parc d'Activités de Chesnes
57, rue de Malacombe
F-38290 St. Quentin Fallavier (Lyon)
Tel.: +33-4 74 82 15 15
Fax: +33-4 74 94 10 51

Germany

GRUNDFOS GMBH
Schlüterstr. 33
40699 Erkrath
Tel.: +49-(0) 211 929 69-0
Fax: +49-(0) 211 929 69-3799
E-mail: infoservice@grundfos.de
Service in Deutschland:
kundendienst@grundfos.de

Greece

GRUNDFOS Hellas A.E.B.E.
20th km. Athinon-Markopoulou Av.
P.O. Box 71
GR-19002 Peania
Tel.: +0030-210-66 83 400
Fax: +0030-210-66 46 273

Hong Kong

GRUNDFOS Pumps (Hong Kong) Ltd.
Unit 1, Ground floor, Siu Wai industrial
Centre
29-33 Wing Hong Street & 68 King Lam
Street, Cheung Sha Wan
Kowloon
Tel.: +852-27861706 / 27861741
Fax: +852-27858664

Hungary

GRUNDFOS South East Europe Kft.
Tópark u. 8
H-2045 Törökbálint
Tel.: +36-23 511 110
Fax: +36-23 511 111

India

GRUNDFOS Pumps India Private Limited
118 Old Mahabalipuram Road
Thoraiakkam
Chennai 600 097
Tel.: +91-44 2496 6800

Indonesia

PT GRUNDFOS Pompa
Graha intirub Lt. 2 & 3
Jln. Cililitan Besar No.454. Makasar,
Jakarta Timur
ID-Jakarta 13650
Tel.: +62 21-469-51900
Fax: +62 21-460 6910 / 460 6901

Ireland

GRUNDFOS (Ireland) Ltd.
Unit A, Merrywell Business Park
Ballymount Road Lower
Dublin 12
Tel.: +353-1-4089 800
Fax: +353-1-4089 830

Italy

GRUNDFOS Pompe Italia S.r.l.
Via Gran Sasso 4
I-20060 Truccazzano (Milano)
Tel.: +39-02-95838112
Fax: +39-02-95309290 / 95838461

Japan

GRUNDFOS Pumps K.K.
1-2-3, Shin-Miyakoda, Kita-ku
Hamamatsu
431-2103 Japan
Tel.: +81 53 428 4760
Fax: +81 53 428 5005

Kazakhstan

Grundfos Kazakhstan LLP
7' Kyz-Zhibek Str., Kok-Tobe micr.
KZ-050020 Almaty Kazakhstan
Tel.: +7 (727) 227-98-55/56

Korea

GRUNDFOS Pumps Korea Ltd.
6th Floor, Aju Building 679-5
Yeoksam-dong, Kangnam-ku, 135-916
Seoul, Korea
Tel.: +82-2-5317 600
Fax: +82-2-5633 725

Latvia

SIA GRUNDFOS Pumps Latvia
Deglava biznesa centrs
Augusta Deglava ielā 60
LV-1035, Rīga,
Tel.: + 371 714 9640, 7 149 641
Fax: + 371 914 9646

Lithuania

GRUNDFOS Pumps UAB
Smolensko g. 6
LT-03201 Vilnius
Tel.: + 370 52 395 430
Fax: + 370 52 395 431

Malaysia

GRUNDFOS Pumps Sdn. Bhd.
7 Jalan Peguam U1/25
Glenmarie industrial Park
40150 Shah Alam, Selangor
Tel.: +60-3-5569 2922
Fax: +60-3-5569 2866

Mexico

Bombas GRUNDFOS de México
S.A. de C.V.
Boulevard TLC No. 15
Parque industrial Stiva Aeropuerto
Apodaca, N.L. 66600
Tel.: +52-81-8144 4000
Fax: +52-81-8144 4010

Netherlands

GRUNDFOS Netherlands
Veluwezoom 35
1326 AE Almere
Postbus 22015
1302 CA ALMERE
Tel.: +31-88-478 6336
Fax: +31-88-478 6332
E-mail: info_gnl@grundfos.com

New Zealand

GRUNDFOS Pumps NZ Ltd.
17 Beatrice Tinsley Crescent
North Harbour Industrial Estate
Albany, Auckland
Tel.: +64-9-415 3240
Fax: +64-9-415 3250

Norway

GRUNDFOS Pumper A/S
Strømsveien 344
Postboks 235, Leirdal
N-1011 Oslo
Tel.: +47-22 90 47 00
Fax: +47-22 32 21 50

Poland

GRUNDFOS Pompy Sp. z o.o.
ul. Klonowa 23
Baranowo k. Poznania
PL-62-081 Przeźmierowo
Tel.: (+48-61) 650 13 00
Fax: (+48-61) 650 13 50

Portugal

Bombas GRUNDFOS Portugal, S.A.
Rua Calvet de Magalhães, 241
Apartado 1079
P-2770-153 Paço de Arcos
Tel.: +351-21-440 76 00
Fax: +351-21-440 76 90

Romania

GRUNDFOS Pompe România SRL
S-PARK BUSINESS CENTER, Clădirea
A2, etaj 2
Str. Tipografilor, Nr. 11-15, Sector 1, Cod
013714
Bucuresti, Romania
Tel.: 004 021 2004 100
E-mail: romanian@grundfos.ro

Serbia

Grundfos Srbija d.o.o.
Omladinskih brigada 90b
11070 Novi Beograd
Tel.: +381 11 2258 740
Fax: +381 11 2281 769
www.rs.grundfos.com

Singapore

GRUNDFOS (Singapore) Pte. Ltd.
25 Jalan Tukang
Singapore 619264
Tel.: +65-6681 9688
Fax: +65-6681 9689

Slovakia

GRUNDFOS s.r.o.
Prievozská 4D 821 09 BRATISLAVA
Tel.: +421 2 5020 1426
sk.grundfos.com

Slovenia

GRUNDFOS LJUBLJANA, d.o.o.
Leskoškova 9e, 1122 Ljubljana
Tel.: +386 (0) 1 568 06 10
Fax: +386 (0) 1 568 06 19
E-mail: tehnika-si@grundfos.com

South Africa

GRUNDFOS (PTY) LTD
16 Lascelles Drive, Meadowbrook Estate
1609 Germiston, Johannesburg
Tel.: (+27) 10 248 6000
Fax: (+27) 10 248 6002
E-mail: lgradidge@grundfos.com

Spain

Bombas GRUNDFOS España S.A.
Camino de la Fuenteçilla, s/n
E-28110 Algete (Madrid)
Tel.: +34-91-848 8800
Fax: +34-91-628 0465

Sweden

GRUNDFOS AB
Box 333 (Lunnagårdsgatan 6)
431 24 Mölndal
Tel.: +46 31 332 23 000
Fax: +46 31 331 94 60

Switzerland

GRUNDFOS Pumpen AG
Bruggacherstrasse 10
CH-8117 Fällanden/ZH
Tel.: +41-44-806 8111
Fax: +41-44-806 8115

Taiwan

GRUNDFOS Pumps (Taiwan) Ltd.
7 Floor, 219 Min-Chuan Road
Taichung, Taiwan, R.O.C.
Tel.: +886-4-2305 0868
Fax: +886-4-2305 0878

Thailand

GRUNDFOS (Thailand) Ltd.
92 Chaloeam Phrakiat Rama 9 Road
Dokmai, Pravej, Bangkok 10250
Tel.: +66-2-725 8999
Fax: +66-2-725 8998

Turkey

GRUNDFOS POMPA San. ve Tic. Ltd. Sti.
Gebze Organize Sanayi Bölgesi
İhsan dede Caddesi
2. yol 200. Sokak No. 204
41490 Gebze/ Kocaeli
Tel.: +90 - 262-679 7979
Fax: +90 - 262-679 7905
E-mail: satis@grundfos.com

Ukraine

ТОВ "ГРУНДФОС УКРАЇНА"
Бізнес Центр Європа
Столичне шосе, 103
м. Київ, 03131, Україна
Tel.: (+38 044) 237 04 00
Fax: (+38 044) 237 04 01
E-mail: ukraine@grundfos.com

United Arab Emirates

GRUNDFOS Gulf Distribution
P.O. Box 16768
Jebel Ali Free Zone, Dubai
Tel.: +971 4 8815 166
Fax: +971 4 8815 136

United Kingdom

GRUNDFOS Pumps Ltd.
Grovebury Road
Leighton Buzzard/Beds. LU7 4TL
Tel.: +44-1525-850000
Fax: +44-1525-850011

U.S.A.

Global Headquarters for WU
856 Koomery Road
Brookshire, Texas 77423 USA
Phone: +1-630-236-5500

Uzbekistan

Grundfos Tashkent, Uzbekistan
The Representative Office of Grundfos
Kazakhstan in Uzbekistan
38a, Oybek street, Tashkent
Tel.: (+998) 71 150 3290 / 71 150 3291
Fax: (+998) 71 150 3292

98446198	10.2025
ECM: 1337057	

Trademarks displayed in this material, including but not limited to Grundfos and the Grundfos logo, are registered trademarks owned by The Grundfos Group. © 2025 Grundfos Holding A/S, all rights reserved.