

Complete Software Reset for Leica Captivate System (CS20, TS10,13,16,60 MS60)

Caution: The following processes will reset the system to factory default. All job data, configuration profiles and personal preference will be removed and reloaded. Please ensure the instrument is properly backed up before proceeding. Spatial Technologies is not responsible for any data lost. For any specific technical support questions or difficulties in the guide, please contact support@stpg.ca or our toll free number **(855) 414-9453**.

Description

Check RTK Profile:


GNSS connection settings are saved by utilizing the RTK Profile Wizard. They can only be backed up and restored when the RTK Profile is properly created.

*Base connection settings can not be saved.

Go to Settings > Connections > RTK Rover wizard > Load an existing Profile.

*If an existing profile does not exist, select Create a new Profile and follow the wizard. Contact support if you have any questions

*Load the existing RTK profile and confirm the settings.

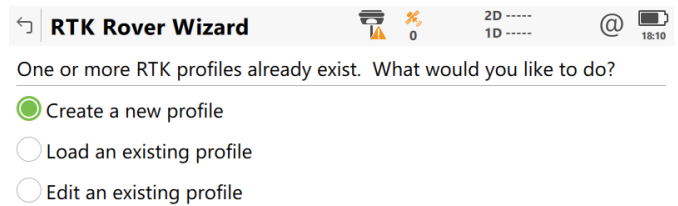


Check Working Style:

Personal preference settings are saved by utilizing the working style wizard. They can only be backed up and restored when it is properly stored.

Go to Settings > Customization > Working style wizard > Switch to a different working style

*Load the existing working style and check for your preferences. If the working style is not properly customized, please refer to separate notes to create working style before proceed.

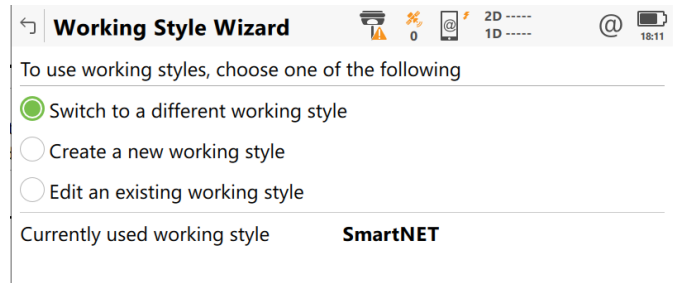

Backup Internal Memory:

Insert a USB drive/SD card


Go to Settings > Tools > Transfer User Objects

Object to transfer: All objects

From: Internal memory

To: SD Card/USB

Press OK

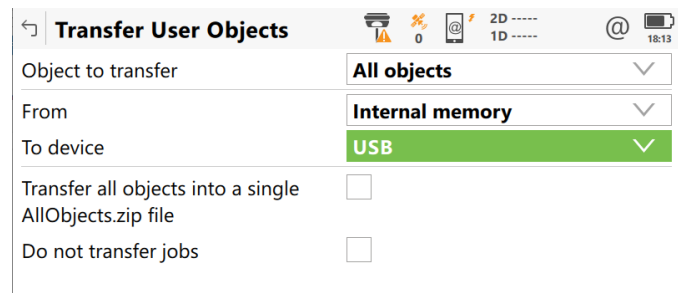


Format Internal Memory:

Go to Settings > Tools > Format memory

Memory device: Internal memory

Press OK

Confirm Yes to continue

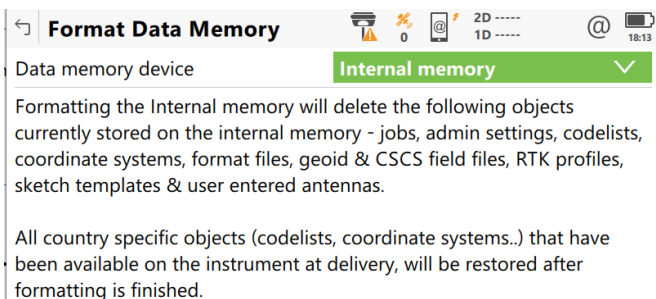

Format System Ram:


From Windows embedded screen, double tab on Leica Captivate icon to open captivate application.

Go to Settings > Tools > Format memory

Memory device: System

Press OK

Confirm Yes to continue

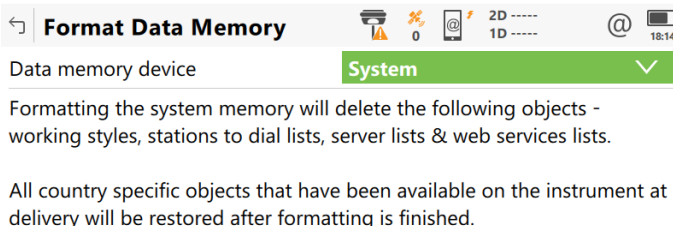


Reset Windows operation system and software:

Press and hold the power button while the instrument is on.

From the pop up screen, select Reset

Select Reset Windows EC7 and Leica Field SW. Then re-open Captivate

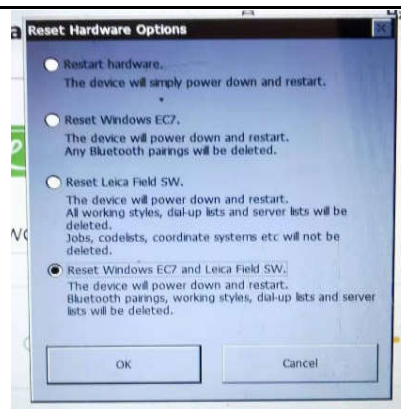

Restore backup file:

Insert the USB/SD card

Go to User > Tools & Utilities > Transfer User Objects


Object to transfer:



1. Codelist (optional)
2. Coordinate system
3. Format file (optional)
4. Geoid field file
5. Job (optional - recommend only loading current jobs)
6. RTK profile
7. Restrict access (optional)
8. Server list
9. Working style

From: SD card/USB

To: Internal memory

Press OK

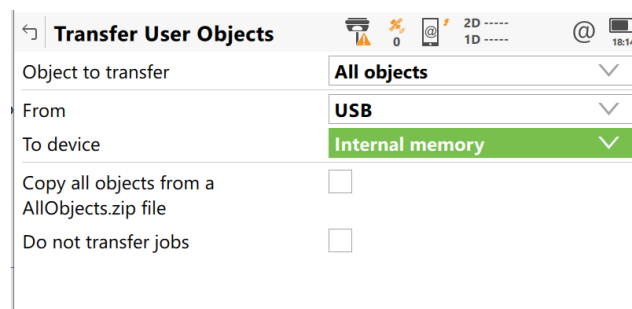

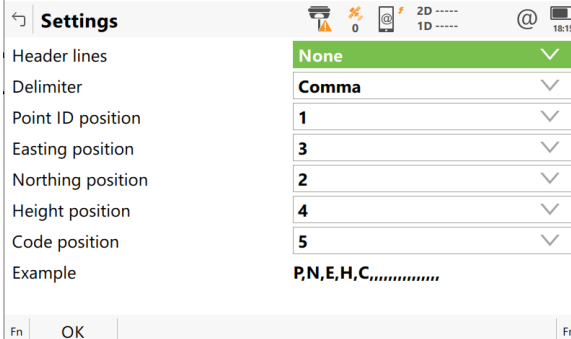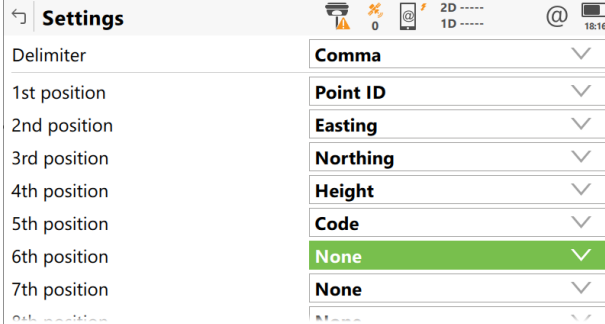User settings: Press on default job Go to Import data > ASCII/GSI Press Fn Key Select Settings Change to order: Point ID position: 1 Easting position: 3 Northing position: 2 Height position: 4 Code position: 5	
Press on default job Go to Export data > ASCII Press Fn Key Select settings Change to order: 1st position: Point ID 2nd Position: Northing 3rd position: Easting 4th position: Elevation 5th position: Code	
Go to Settings > System > Regional > Coordinates Change Grid Format to: Northing, easting	