# K27 Lite

# Additional Power Supply Install



ACRELEC
A GLORY COMPANY

**Address**

Acrelec America
5490 Campbells Run
RdPittsburgh, PA
15277

**Online**

Website: www.acrelec.com

## Contents

1. Document Version:....4
2. Object Of The Document....5
1. Pre-requisites / Tools Needed....5
1.1. Personale....5
1.2. Parts Required....5
1.3. Tools....5
2. Kiosk Screen Removal....6
3. K27 Lites without printers (Tim Hortons)....6
4. K27 Lites with printers (Five Guys, Jollibee, RBI International)....10

## 1. Document Version:

| Version | Date | Observation |
|---|---|---|
| V01 | 11/8/2024 | Creation by J.McGee |
| | | |
| | | |

## 2. Object Of The Document

***This document contains information regarding the hotfix (short-term fix) for the K27 Lite solution to prevent freezing issues.***

After this operation, the kiosk will contain 1 existing power supply for Giada PC and the new one to power screen, scanner and EFT + Reserve
Existing power supply is 75 W (12V/6.25A)
NEW one is 60 W (12V/5A)

### Application zone:

America K27 Lite Installs – Tim Hortons, Five Guys, Jollibee, RBI International, etc.

## 1. Pre-requisites / Tools Needed

### 1.1. Personnel

#### 1.1.1. Two resources to open and close Kiosk. Estimate duration: 1 hour per kiosk.

### 1.2. Parts Required

#### 1.2.1. New Power Supply (provided by Acrelec) –

##### 1.2.1.1. **PN:** FEALIME0061 – Power Supply

##### 1.2.1.2. PN: CAB0004432 – Y Cable (K27L Printer configuration)

#### 1.2.2. Heavy Duty Velcro (supplied by Vendor)

### 1.3. Tools

#### 1.3.1. Philips head screwdriver

#### 1.3.2. Allen Keys

#### 1.3.3. Zip ties

## 2. Kiosk Screen Removal

### 2.1. Remove faceplate with Pinpad and Navpad.

### 2.2. Unplug the power cables for the Pinpad, Navpad, and the PC.

### 2.3. Remove the kiosk screen from the kiosk back by:

#### 2.3.1. Unscrew the white Philips screws using a Philips head screwdriver.

#### 2.3.2. Unscrew the four bolts on the back of the kiosk. Holding onto the screen at the same time.

## 3. K27 Lites <u>without</u> printers (Tim Hortons)




### 3.1. Disconnect the C13 cable from the left-side power supply.

### 3.2. Detach the left-side power supply used for printers (Tim Hortons configuration does not use it) by putting some force to remove from the existing Velcro strips.




### 3.3. Add 1 or 2 more pieces of heavy-duty Velcro to install the new one in the same place as the printer power supply.

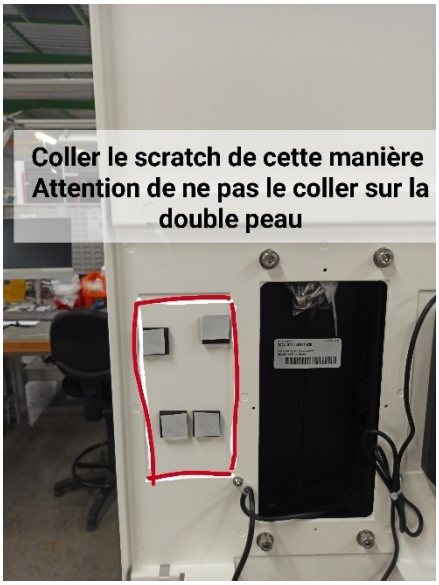


### 3.4. Connect the C13 cable to the new power supply.



**3.5. Unplug the power supply that links the power supply on the right-hand side (75W) to the quad power cable adapter and insert that power cable directly into Giada PC. You may need to loosen the cable attached with Velcro cable ties.**

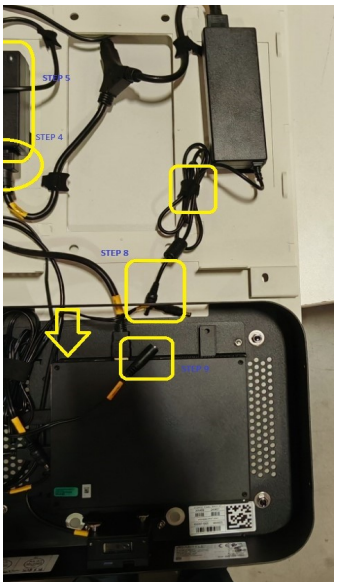


**3.6. Connect the new power supply to quad power cable adapter, and ensure that the three cables for the screen (power/HDMI/touch) is plugged in.**



**3.7. Confirm that there is power to both power bricks. The screen and PC should both be powered.**





**3.8. Perform any cable management of loose cables (if necessary).**

**3.9. Reinstall the screen using the four bolts and two Philips head screws, after double-checking that all screen cables are plugged in securely.**

**3.10. Reconnect the Pinpad and Navpad power cables ensuring that they are powered. Verify that all cables are managed and are not in front of the scanner.**

**3.11. Once everything is plugged back in, reinstall the faceplate and perform test transactions (including testing of the scanner).**

## 4. K27 Lites <u>with</u> printers (Five Guys, Jollibee, RBI International)




### 4.1. Disconnect the C3 cable from the left-side printer power supply.

### 4.2. Add two strips of heavy-duty Velcro on the existing printer power supply and the new power supply.




**4.3. Install the printer power supply to the left-side and the new power supply between the printer brick and the cable opening. Cables should be routed between them.**

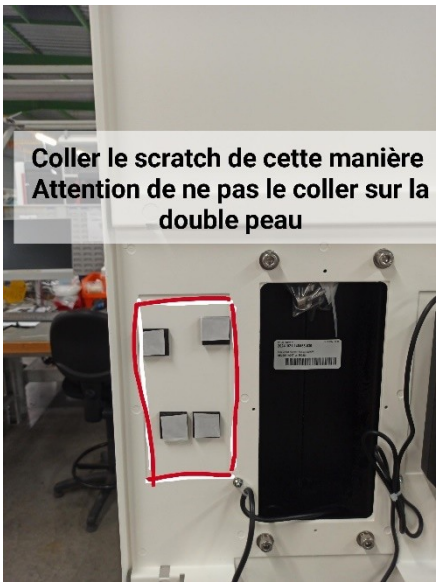

**4.4. Connect the provided C14-to-C13 Y-Style Splitter to the currently disconnected C13 cable. Cable manage the Y cables to ensure that they don't become disconnected during assembly. Place the Y-cables in the foot or mount of the kiosk.**

**4.5. Connect the C13 cable to the printer and new power supplies.**

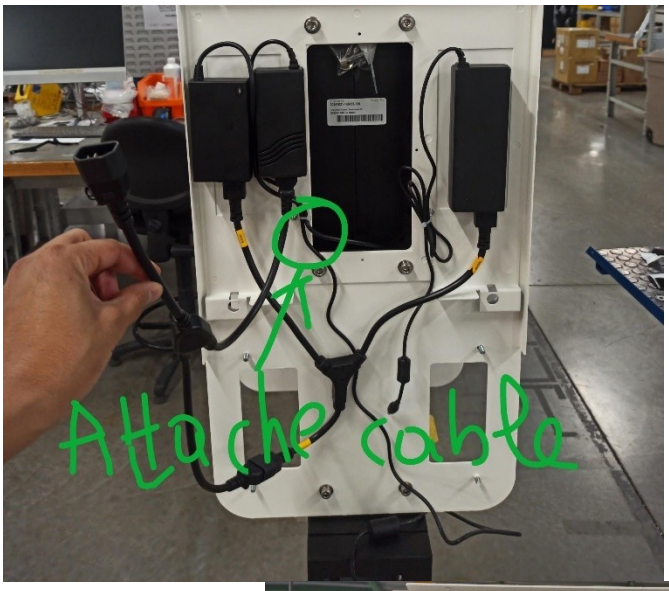








**4.6. Unplug the power supply that links the power supply on the right-hand side (75W) to the quad power cable adapter and insert that power cable directly into Giada PC. You may need to loosen the cable attached with Velcro cable ties.**

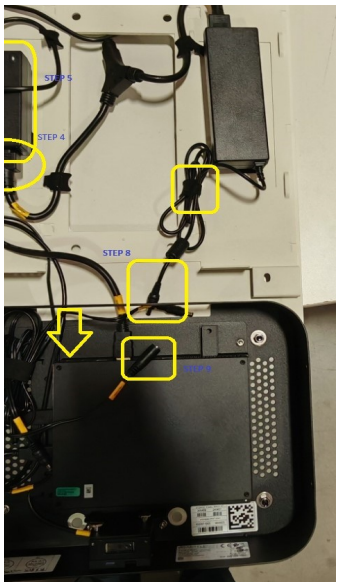


**4.7. Connect the new power supply to quad power cable adapter, and ensure that the three cables for the screen (power/HDMI/touch) is plugged in.**



**4.8. Confirm that there is power to both power bricks. The screen and PC should both be powered.**





**4.9. Perform any cable management of loose cables (if necessary).**

**4.10. Reinstall the screen using the four bolts and two Philips head screws, after double-checking that all screen cables are plugged in securely.**

**4.11. Reconnect the Pinpad and Navpad power cables ensuring that they are powered. Verify that all cables are managed and are not in front of the scanner.**

**4.12. Once everything is plugged back in, reinstall the faceplate and perform test transactions (including testing of the scanner).**