ECOLAB® HIGH TEMP - VENTED (EHT-V) WAREWASH MACHINE



DAILY

SUPPLIES:



KAY® SolidSense™ Machine Warewash Detergent



KAY® QSR TSC Rinse Additive



KAY® Liquid Delimer



KAY® Rapid Multi Surface Disinfectant Cleaner Solution




KAY® Specialty Cleaner & Polish




Clean Sanitizer-Soaked Towels

IMPORTANT: Ask your Territory Representative how to properly delime your machine. This machine provides sanitization by heat and therefore does not require a separate sanitizer product.


SET-UP

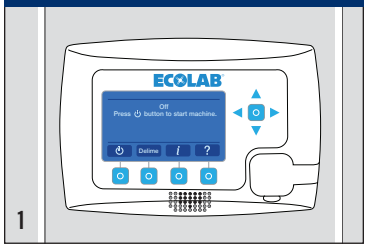


- Ensure machine is OFF and drained
  NOTE: Machine must be powered off at end of day, or power cycled at beginning of day

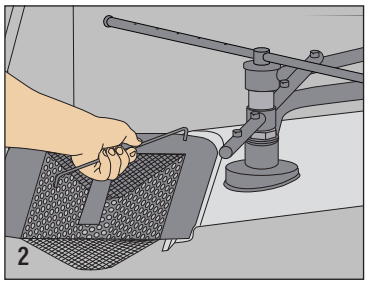

- Check that machine is clean and drain opening is clear; ensure drain stopper and screens are in place and wash arms spin freely

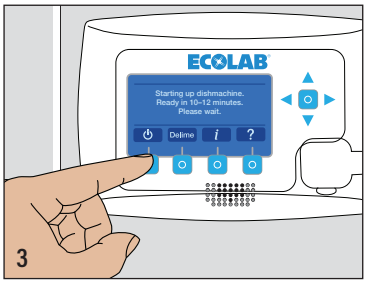

- Turn machine ON; machine will be ready for operation in approximately 10-12 minutes

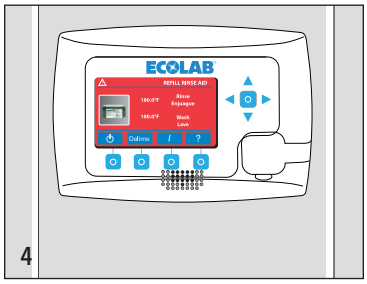


- When display indicates, refill products: Power Warewash Detergent and Rinse Additive


MACHINE OPERATION / WAREWASHING



- Load rack into machine

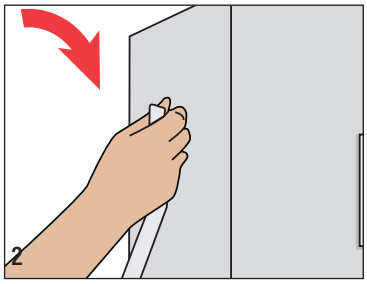

- Shut door; machine will automatically begin cycle
  NOTE: Door will not open while cycle is in process

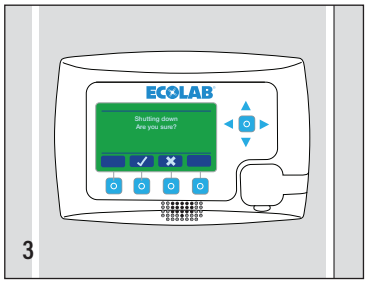


- Open door and remove rack when cycle is complete

WAREWASH RACKING PROCEDURE



- **INCORRECT** racking procedure; DO NOT place small wares under tray lids

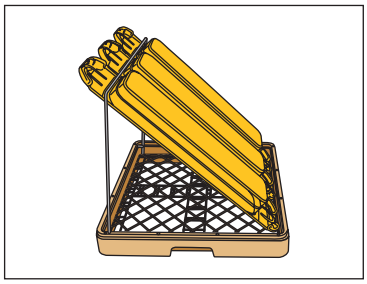

- **CORRECT** racking procedure; bottom of rack should be open for proper cleaning

ECOLAB®

Kay Chemical Company
8300 Capital Drive
Greensboro, NC 27409-9790, USA

CUSTOMER SERVICE 800.529.5458

58606003 MCD US 58606/8003/1224 ©2024 Ecolab USA Inc. All rights reserved.

ECOLAB® HIGH TEMP - VENTED (EHT-V) WAREWASH MACHINE (CONTINUED)




DAILY


CLEAN-UP




- **DO NOT PULL OUT STAND PIPE**

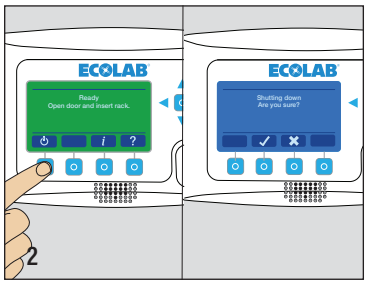


- Press power button to turn machine OFF and allow machine components to completely cool; shut-down time may take up to three minutes
  NOTE: DO NOT open door until screen turns blue; machine will indicate "OFF"; machine must be powered off at end of day

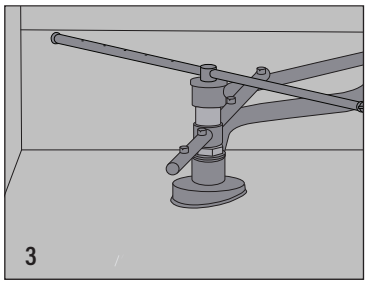

- Ensure machine is drained

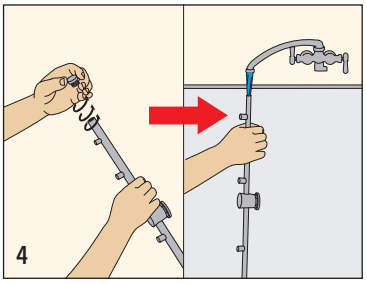


- Remove both top and bottom wash arms and top and bottom rinse arms
- Remove caps, then flush with water
- Clean nozzles with toothpick or paperclip and reassemble
- Reinstall wash arms and ensure they spin freely

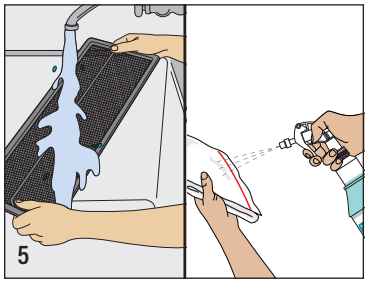

- Remove and clean screens; place screens back in machine
- Wipe outside of machine with clean, sanitizer soaked towel and Multi Surface Disinfectant Cleaner Solution
- As needed, polish outside of machine with Specialty Cleaner & Polish

MONTHLY DELIMING (as needed)

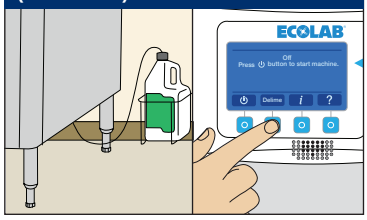

- Press DELIME button and follow on-screen instructions to start automated deliming
- Replace bottle of Liquid Delimer when empty
  NOTE: Delime more frequently as needed

ECOLAB®
Kay Chemical Company
8300 Capital Drive
Greensboro, NC 27409-9790, USA

CUSTOMER SERVICE 800.529.5458

5860603 MCD US 5860603 0324 ©2024 Ecolab USA Inc. All rights reserved.