TOASTERS—ANTUNES® RAPID

DAILY

SUPPLIES:



KAY® Rapid Multi Surface Disinfectant Cleaner Solution



KAY® QSR Heat-Activated Equipment Cleaner (HAEC)




Heat-Resistant Gloves



Clean, Sanitizer-Soaked Towels


BEFORE CLEANING

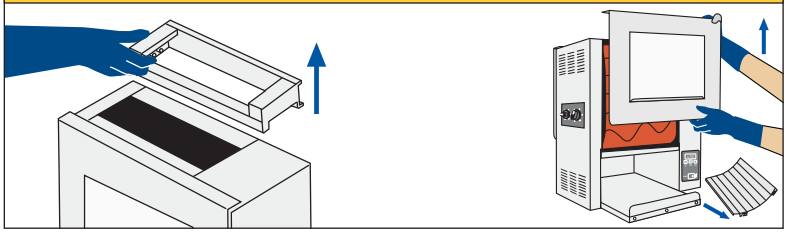


- Turn machine OFF; unplug toaster
- Put on heat-resistant gloves
- Remove bun feeder, front/heel cover, back/crown cover, bun chute and lower back cover on earlier models
- Wash, rinse and sanitize removable parts at 3-compartment sink or in warewash machine
- Wash, rinse and sanitize bun feeder and chute at 3-compartment sink
- Allow to air dry

NOTE: Refer to equipment-specific PM manual for further detail


DAILY

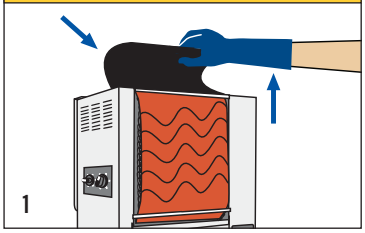

- Remove release sheet and lay on clean release sheet storage tray

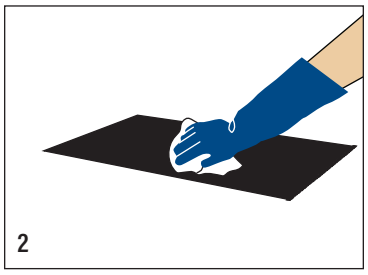

- Wipe release sheet with a clean, sanitizer-soaked towel
- If heavy buildup on release sheets, spray with Equipment Cleaner; wipe and rinse
- Follow same procedure to clean and rinse reverse side of release sheet

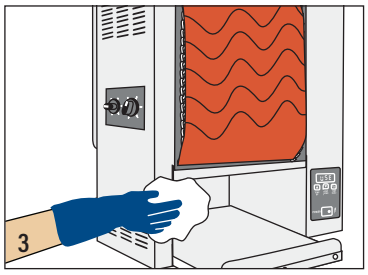


- Spray a clean sanitizer-soaked towel with Rapid MSDC Solution; wipe exterior of toaster
- Discard towel into soiled towel bucket after use




- Spray a clean sanitizer-soaked towel with Equipment Cleaner
- Wipe belt until clean; discard towel into soiled towel bucket after use

NOTE: Do not remove belts from toaster; rotate belts to clean all sections

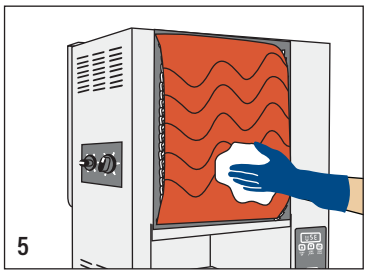

- Rinse belts by wiping with a separate clean sanitizer-soaked towel; discard towel into soiled towel bucket after use

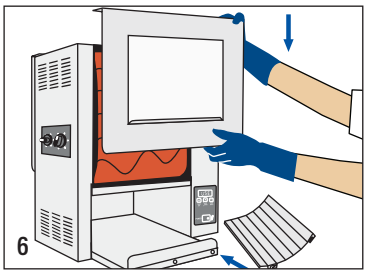

- Reassemble toaster
- Plug in toaster and turn ON

ECOLAB®

Kay Chemical Company
8300 Capital Drive
Greensboro, NC 27409-9790, USA

CUSTOMER SERVICE 800.529.5458

5969102 MCD US 59691/8002/1025 ©2025 Ecolab USA Inc. All rights reserved.