TOASTERS—PRINCE CASTLE® UNIVERSAL RAPID

DAILY/MONTHLY

SUPPLIES:


KAY® Rapid Multi Surface Disinfectant Cleaner Solution


KAY® QSR Heat-Activated Equipment Cleaner (HAEC)


Heat-Resistant Gloves



Clean Sanitizer-Soaked Towels


Universal Rapid Toaster (URT) Cleaning Tool


Hi-Temp Pad


IMPORTANT: This procedure covers cleaning recommendations for the Prince Castle Universal Rapid Toaster Model 340-URT.
Best practice tip—when using your clean grill cloth, fold four times and use all sides of the cloth prior to discarding in the soiled towel bucket.

BEFORE CLEANING—DAILY

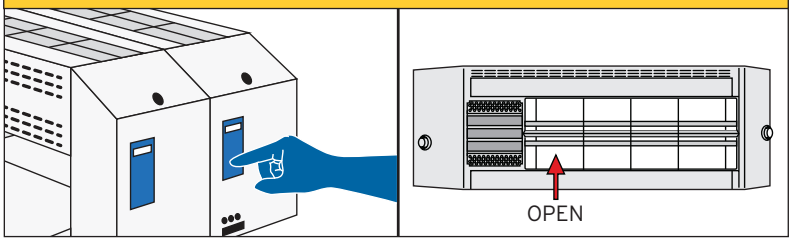


- Place toaster in CLEAN mode; when display reads CLEAN READY, unplug power cord
- Ensure gates/false floor are open so gates are not damaged while cleaning
- Put on heat-resistant gloves


DAILY

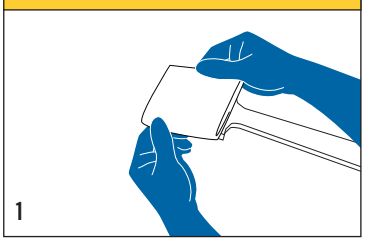

- Fold clean sanitizer-soaked towel in half; fold in half again
- Attach folded towel to tool
- Wipe each platen with prepared tool; discard towel into soiled towel bucket after use

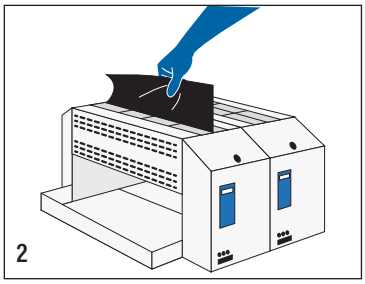


- Remove top clamp bar and pull out main platen release sheet
- Remove all release sheets and lay on release sheet tray

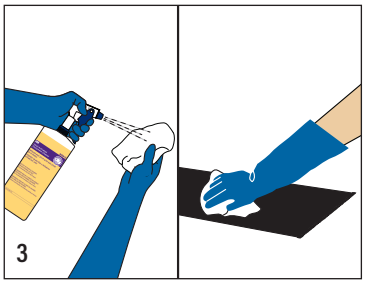


- Wipe release sheets with a clean sanitizer-soaked towel; discard towel into soiled towel bucket after use
- Clean reverse side of release sheets; discard towel into soiled towel bucket after use


NOTE: If heavy buildup on release sheets, spray with Equipment Cleaner, then wipe and rinse

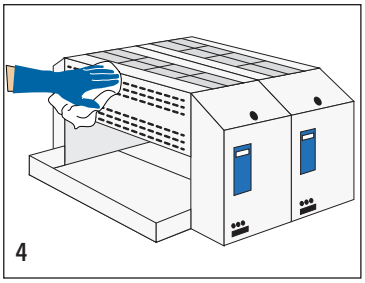


- Wipe exterior of unit with a clean sanitizer-soaked towel sprayed with Rapid MSDC Solution; discard towel into soiled towel bucket after use
- Be sure to clean Bun Buffer Landing Zone (BBLZ) and gates as well

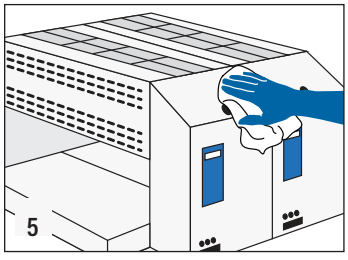

- Rinse exterior of unit using a separate clean sanitizer-soaked towel; discard towel into soiled towel bucket after use

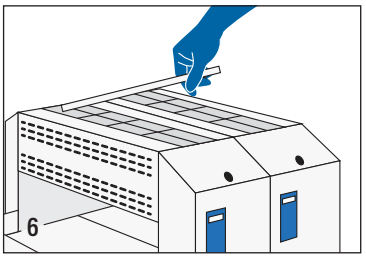

- Reassemble toaster

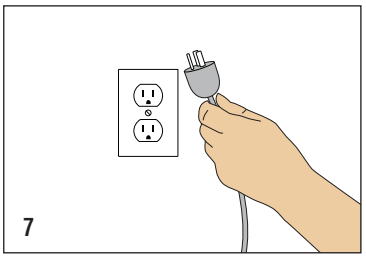

- Plug toaster in and turn ON

NOTE: Refer to equipment-specific PM manual for further detail

ECOLAB®
Kay Chemical Company
8300 Capital Drive
Greensboro, NC 27409-9790, USA


CUSTOMER SERVICE 800.529.5458

59693.02 MCD US 59693/8002/1025 ©2025 Ecolab USA Inc. All rights reserved.

TOASTERS—PRINCE CASTLE® UNIVERSAL RAPID (CONTINUED)

DAILY/MONTHLY

BEFORE CLEANING—MONTHLY

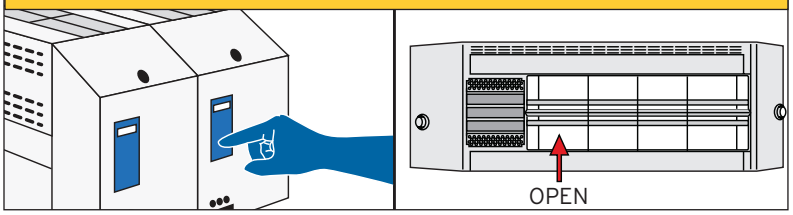


- Place toaster in CLEAN mode; when display reads CLEAN READY, unplug power cord
- Ensure gates/false floor are open so gates are not damaged while cleaning
- Put on heat-resistant gloves


MONTHLY




- Attach a clean, Hi-Temp Pad to tool
- Spray Equipment Cleaner once onto pad

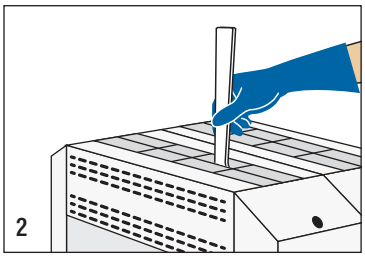


- Apply Equipment Cleaner to platen using tool until all platen areas are covered
- Gently scrub platen until clean

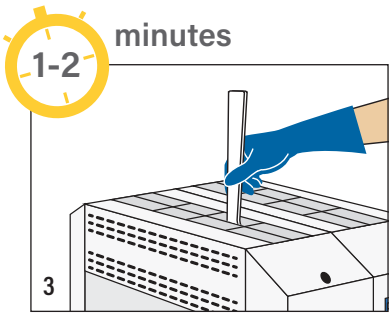


- Apply Equipment Cleaner to each compression plate section using tool
  NOTE: Do not scrub compression plate with an abrasive pad
- Reapply Equipment Cleaner until all compression plate areas are covered; allow to sit on platen and compression plate for 1-2 minutes

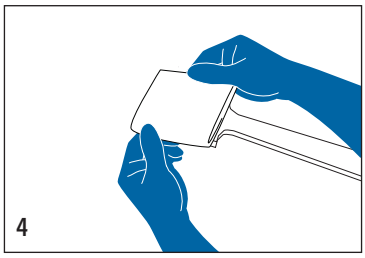

- Remove Hi-Temp Pad from tool
- Wrap folded clean sanitizer-soaked towel around tool
- Rinse each platen and compression plate to remove all Equipment Cleaner residue; discard towel into soiled towel bucket after use

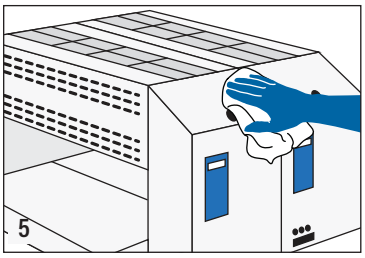

- Spray a clean sanitizer-soaked towel with Rapid MSDC Solution and clean exterior of unit
  NOTE: Make sure to clean Bun Buffer Landing Zone (BBLZ) and gates
- Rinse exterior of unit with a separate clean sanitizer-soaked towel; discard towel into soiled towel bucket after use

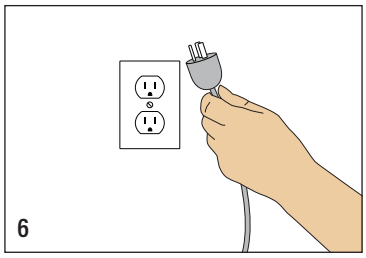

- Plug toaster in and turn ON
- Wash, rinse and sanitize all utensils, tools and PPE used to clean toaster at 3-compartment sink

ECOLAB®
Kay Chemical Company
8300 Capital Drive
Greensboro, NC 27409-9790, USA

CUSTOMER SERVICE 800.529.5458

59693/02 MCD US 59693/0002/1025 ©2025 Ecolab USA Inc. All rights reserved.