TOASTERS—ANTUNES® UNIVERSAL BUN AND CLUB

DAILY

SUPPLIES:


KAY® Rapid Multi Surface Disinfectant Cleaner Solution



KAY® QSR Heat-Activated Equipment Cleaner (HAEC)


Heat-Resistant Gloves


Clean, Sanitizer-Soaked Grill Cloths



Clean Sanitizer-Soaked Towels

UNIVERSAL TOASTER—Before cleaning

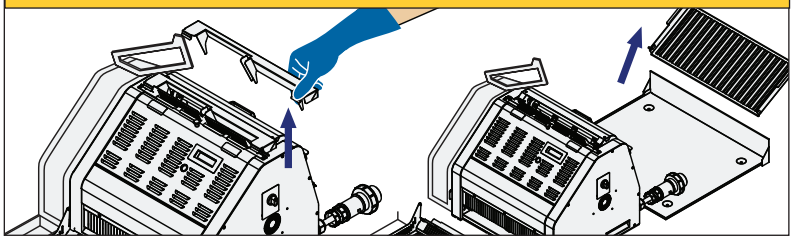


- Turn power switch OFF
- Wearing heat-resistant gloves, remove breakfast chute (rear of unit), bun feeder (top of unit), bun buffer (front of unit), unit crumb tray (rear of unit), release sheet retainer bar and release sheet (top of unit)
- Carefully inspect release sheet; if sheet is worn, creased or torn, replace it with a new release sheet
- Set release sheet and retainer bar aside
- Continue with cleaning steps once "OK to Clean" displays


UNIVERSAL TOASTER—Daily

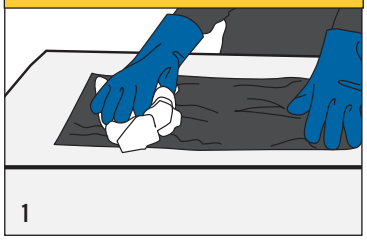


- Wipe release sheet using a clean, sanitizer-soaked towel
- Clean both sides of release sheet
  NOTE: If heavy buildup on release sheets, spray with Equipment Cleaner then wipe and rinse
- Discard towel into soiled towel bucket after use

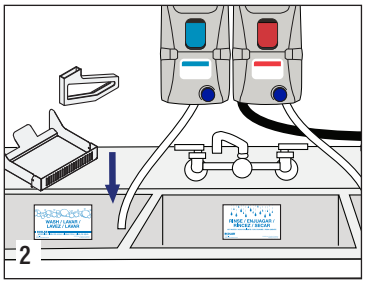

- Wash, rinse and sanitize breakfast chute, bun feeder, bun buffer and crumb tray at 3-compartment sink or warewash machine; allow to air dry
- Discard towel into soiled towel bucket after use

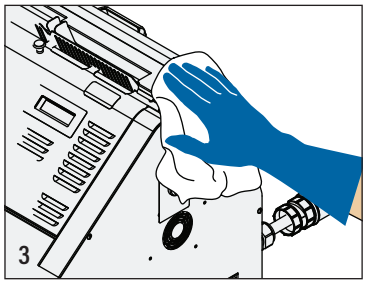

- Wipe exterior of unit using a clean, sanitizer-soaked towel sprayed with Rapid MSDC Solution
- Rinse with a separate clean sanitizer-soaked towel
- Discard towels in soiled towel bucket after use

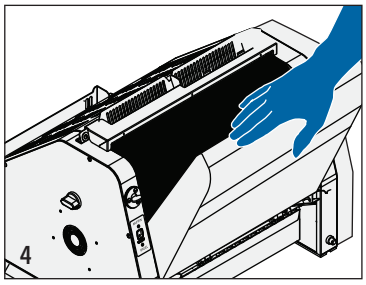

- Open vertical conveyor



- Spray Equipment Cleaner once onto a clean, sanitizer-soaked grill cloth and apply to toaster belt; repeat until entire belt is fully covered with Toaster Cleaner
- Wipe exposed part of conveyor belt with grill cloth from side to side; if needed, use a NO-SCRATCH Pad
- Rinse toaster belt with a separate, clean, sanitizer-soaked grill cloth until all residue is removed; rinse frequently to remove soil and Cleaner residue; allow to air dry
  NOTE: If belt has heavy buildup, allow Cleaner to sit for 5-8 minutes then wipe
- Discard grill cloths into soiled towel bucket after use


ECOLAB®
Kay Chemical Company
8300 Capital Drive
Greensboro, NC 27409-9790, USA

CUSTOMER SERVICE 800.529.5458

59695L02 MCD US 59695/80102/1025 ©2025 Ecolab USA Inc. All rights reserved.


TOASTERS—ANTUNES® UNIVERSAL BUN AND CLUB (CONTINUED)

DAILY

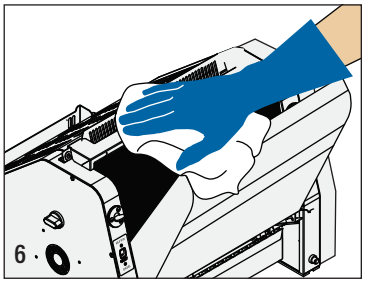


- Press and hold both MUFFIN/BAGEL selector buttons to expose uncleaned portion of conveyor belt
- Repeat step 5 for all surfaces of conveyor belt

NOTE: Do not remove belts from toaster

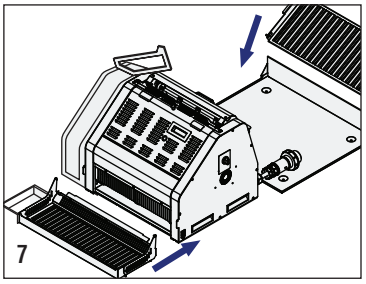

- Close back panel and reassemble toaster
- Turn power ON

CLUB TOASTER—Before Cleaning

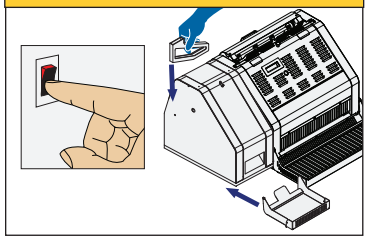


- Turn power switch OFF


NOTE: It is not necessary to wait until "OK TO CLEAN" displays to begin this cleaning procedure

- Wearing heat-resistant gloves, remove bun feeder and bun buffer from toaster


CLUB TOASTER—Daily

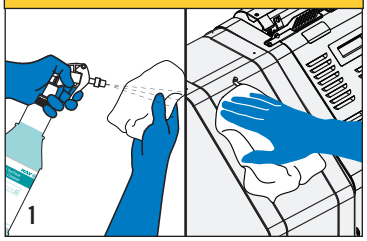


- Wipe exterior of club toaster using a clean, sanitizer-soaked towel sprayed with Rapid MSDC Solution
- Rinse with a separate, clean, sanitizer-soaked towel; discard towel into soiled towel bucket after use

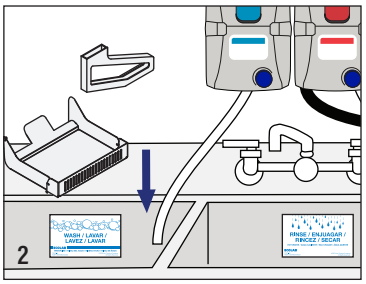


- Wash, rinse and sanitize bun feeder and bun buffer at 3-compartment sink or in warewash machine
- Allow to air dry

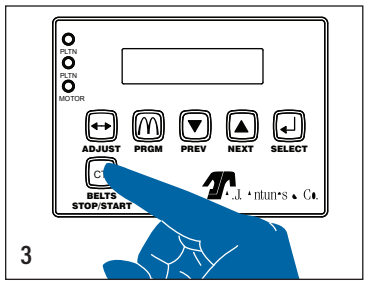


- Open front top cover
- Press CT to stop belts from turning

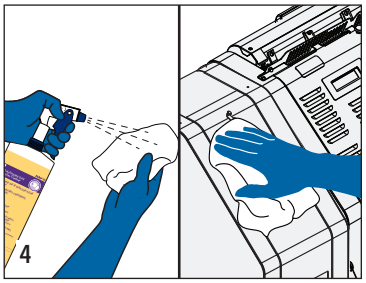

- Press CT to rotate belt wrap to expose uncleaned portion
- Spray Equipment Cleaner once onto a clean, sanitizer-soaked grill cloth; apply to toaster belt and scrub
- Repeat until all portions of belt wrap are clean
- Discard grill cloth into soiled towel bucket after use

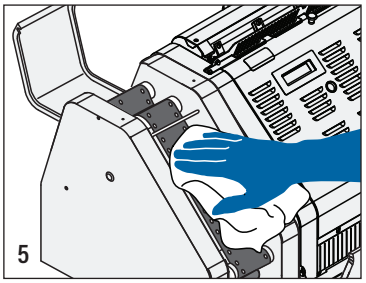

- Rinse all portions of belt wrap using a separate, clean, sanitizer-soaked towel until all residue is removed; rinse frequently to remove soil and cleaner residue; allow to air dry
- Discard towel into soiled towel bucket after use
- Repeat steps for lower belt wrap

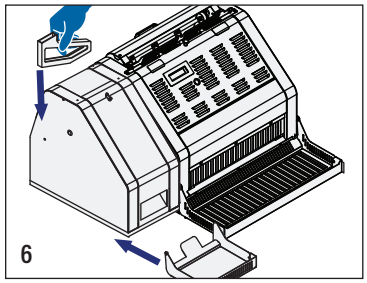

- Reinstall clean bun feeder and bun buffer
- Turn power ON
- Wash, rinse and sanitize all utensils, tools and PPE used to clean grill at 3-compartment sink

ECOLAB®
Kay Chemical Company
8300 Capital Drive
Greensboro, NC 27409-9790, USA

CUSTOMER SERVICE 800.529.5458

5969502 MCD US 59695/8002/1025 ©2025 Ecolab USA Inc. All rights reserved.