
Quick Start Guide
openUC2 FLIM Upgrade Kit

MU-UC2-01-1C1L

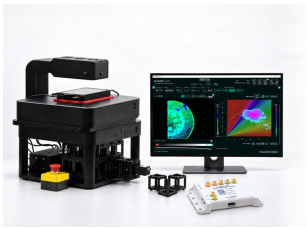

1 About This Guide

This guide provides the essential steps required to install and commission the FLIM LABS openUC2 FLIM Upgrade Kit.

It does **not** replace the openUC2 FLIM Upgrade Kit User Manual, the manuals supplied with the individual FLIM LABS components, or the documentation for any connected third-party equipment.

The complete openUC2 FLIM Upgrade Kit User Manual is available at:

https://www.flimlabs.com/products/openuc2-FLIM-upgrade-kit/

Scan the QR code to access the full manual.

Warning Read the full User Manual, all supplied FLIM LABS component manuals, and the documentation of any connected third-party equipment before installation and operation.

2 Safety Information

The upgrade kit integrates timing, detection, synchronization, and data acquisition hardware into an existing microscope system. Depending on the selected configuration, it may also include laser and optical components.

Safe operation requires compliance with:

- The safety instructions provided by openUC2
- The manuals supplied with the FLIM LABS hardware components
- The *FLIM IMAGER* Software Manual
- Applicable laboratory and workplace safety procedures

Warning Never look into optical fibers, microscope beam paths, or laser outputs.

Warning Enable only one excitation laser at a time unless simultaneous operation is explicitly permitted.

3 Scope of Delivery

The openUC2 FRAME microscope system is not part of the upgrade kit.

The exact scope of delivery depends on the ordered kit configuration. Refer to the configuration table and the delivery documentation supplied with the product.

The exact scope of delivery depends on the selected kit configuration.

P/N	Channels	Lasers
X-1C1L	1	1
X-1C2L	1	2

The kit contains:

- FLIM LABS pulsed laser source(s)
- FLIM LABS SPAD detector
- *FLIM DAQ*
- Fiber-integrated emission filter
- Single-mode laser fiber(s)
- Multimode detection fiber
- Electrical connection cables
- USB cables and power supplies
- Product documentation

The openUC2 FRAME microscope system is not part of the upgrade kit.

Verify that all components of the ordered configuration are present and undamaged before installation.

4 Hardware Installation

Figure 1 shows the complete system connection diagram. If the configuration includes multiple detector channels, lasers, or synchronization paths, repeat the corresponding connections for each device or signal.

Warning Disable laser emission before connecting or disconnecting any optical fiber.

1. Install all components on stable surfaces with sufficient space for ventilation, operation, and cable routing.
2. Connect the laser FC/PC output to the microscope excitation FC/PC input using the supplied single-mode optical fiber.
3. Connect the microscope detection FC/PC output to the SPAD FC/PC input using the supplied filtered multimode fiber assembly. Follow the filter markings so fluorescence passes through the filter before reaching the detector. Secure the fibers without excessive bending or mechanical stress.
4. Connect the detector output to the detector input of the *FLIM DAQ*.
5. Connect the microscope synchronization signals directly to the corresponding reference inputs of the *FLIM DAQ*:
   - Pixel synchronization
   - Line synchronization
   - Frame synchronization
6. Connect the *Sync-OUT* port of each active FLIM LABS laser to the corresponding *SYNC-IN* input of the *FLIM DAQ*.
7. Connect the *FLIM DAQ* to the acquisition computer using the supplied USB cable.
8. Connect the required power supplies to all FLIM LABS devices.
9. Verify all optical, electrical, USB, and power connections before applying power.

5 Software Configuration

Download and install the latest version of *FLIM IMAGER* from:

https://www.flimlabs.com/products/FLIM-imager

After completing the hardware installation:

1. Power on the openUC2 FRAME microscope system according to the microscope manufacturer's instructions.
2. Power on all FLIM LABS devices.
3. Verify that only one excitation laser is in the emission-active state at any time.
4. Start *FLIM IMAGER*.
5. Select *Guided Configuration*.
6. Verify that the *FLIM DAQ* is detected.
7. Detect or select the active detector channels.
8. Select the appropriate timing synchronization source.
9. Detect or configure the microscope synchronization signals.
10. Configure the image dimensions.
11. Save the configuration.

For detailed software instructions, refer to the *FLIM IMAGER* Software Manual.

6 First FLIM Measurement

1. Start the microscope scan using openUC2 control.
2. Start FLIM acquisition in *FLIM IMAGER*.
3. Verify that an image appears in *Scouting Mode*.
4. Switch to *InstaFLIM* mode to acquire fluorescence lifetime images.
5. Adjust the acquisition parameters as required.
6. Save or export the acquired data.

Notice A floating acquisition control window can be opened using the W button in *FLIM IMAGER*. This allows convenient start and stop control while monitoring the microscope control software.

7 Product Label

openUC2 FLIM Upgrade Kit

P/N: MU-UC2-01-1C1L
S/N: MU-UC2-XXXX-XXX

MADE IN ITALY - **FLIM LABS S.r.l.**
Via della Farnesina 3 - 00135 Rome
techsupport@flimlabs.com

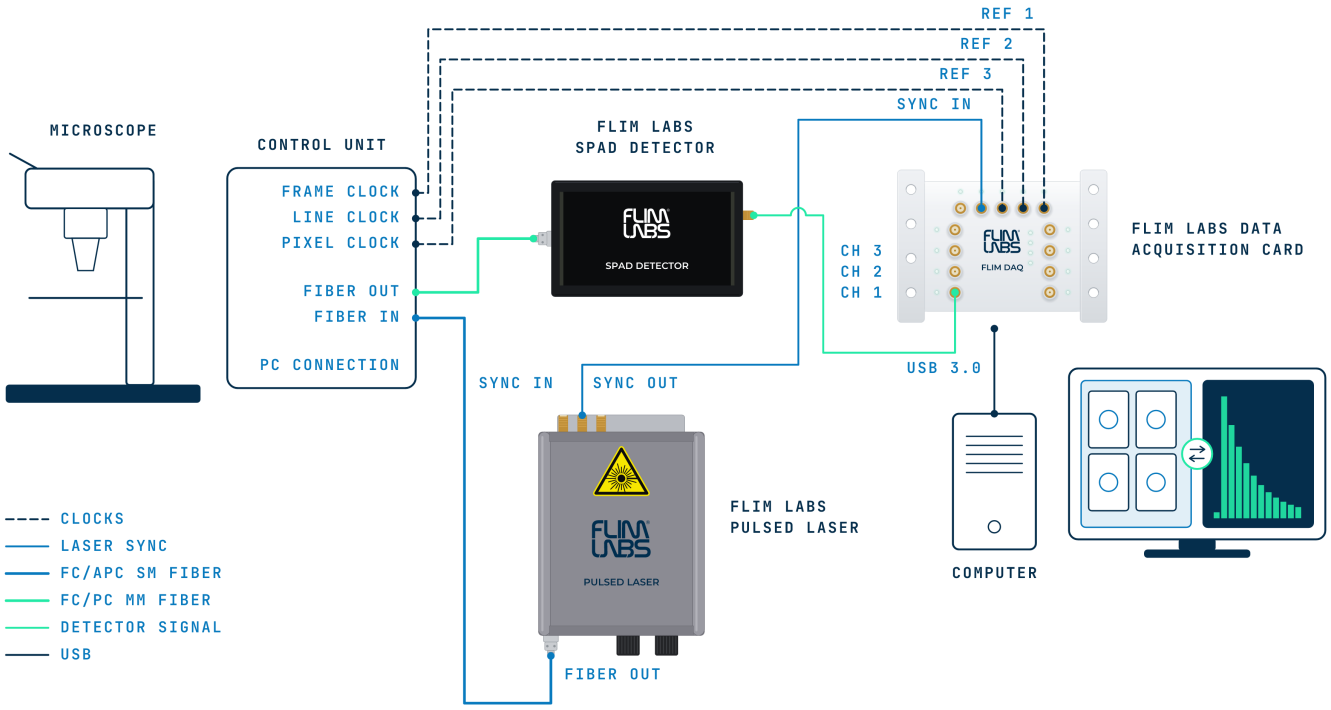


Figure 1: System connection overview.