
Quick Start Guide
Prospective Instruments FLIM Upgrade Kit
MU-PINST-01-2C

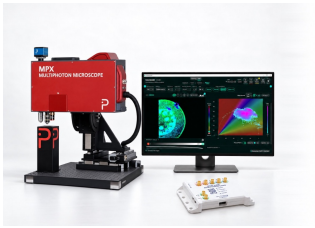

1 About This Guide
This guide provides the essential steps required to install and commission the FLIM LABS Prospective Instruments FLIM Upgrade Kit.

It does **not** replace the Prospective Instruments FLIM Upgrade Kit User Manual, the manuals supplied with the individual FLIM LABS components, or the documentation for any connected third-party equipment.

The complete Prospective Instruments FLIM Upgrade Kit User Manual is available at:

https://www.flimlabs.com/products/prospective-instruments-FLIM-upgrade-kit/

Scan the QR code to access the full manual.

Warning Read the full User Manual, all supplied FLIM LABS component manuals, and the documentation of any connected third-party equipment before installation and operation.

2 Safety Information
The upgrade kit integrates timing, detection, synchronization, and data acquisition hardware into an existing microscope system. Depending on the selected configuration, it may also include laser and optical components.

Safe operation requires compliance with:

- The safety instructions provided by Prospective Instruments
- The manuals supplied with the FLIM LABS hardware components
- The *FLIM IMAGER* Software Manual
- Applicable laboratory and workplace safety procedures

Warning Never look into optical fibers, microscope beam paths, or laser outputs.

Warning Enable only one excitation laser at a time unless simultaneous operation is explicitly permitted.

3 Scope of Delivery
The MPX/MPA microscope system is not part of the upgrade kit.

The exact scope of delivery depends on the ordered kit configuration. Refer to the configuration table and the delivery documentation supplied with the product.

The Prospective Instruments FLIM Upgrade Kit is supplied in a single standard configuration.

Component	Quantity
FLIM DAQ	1
Constant Fraction Discriminator Modules	3
Wideband Amplifiers	3
Active Splitters	2
Electrical connection cable set	1
USB cables and power supplies	1 set

The MPX/MPA microscope system, including its excitation lasers, photomultiplier tube (PMT) detectors and optical components, is not part of the upgrade kit.

Verify that all components of the ordered configuration are present and undamaged before installation.

4 Hardware Installation
Figure 1 shows the complete system connection diagram. If the configuration includes multiple detector channels, lasers, or synchronization paths, repeat the corresponding connections for each device or signal.

1. Install all components on stable surfaces with sufficient space for ventilation, operation, and cable routing.
2. Connect each microscope detector output to the supplied Active Splitter modules as shown in the connection diagram.
3. Connect one splitter output back to the original microscope electronics and the second output to the corresponding Wideband Amplifier.
4. Connect each amplifier output to its corresponding Constant Fraction Discriminator (CFD).
5. Connect the digital outputs of the detector CFDs to the corresponding detector input channels of the *FLIM DAQ*.
6. Connect the microscope laser synchronization output to the supplied Constant Fraction Discriminator.
7. Connect the digital output of this CFD to the *SYNC-IN* input of the *FLIM DAQ*.
8. Connect the *FLIM DAQ* to the acquisition computer using the supplied USB cable.
9. Connect the required power supplies to all FLIM LABS devices.
10. Verify all optical, electrical, USB, and power connections before applying power.

5 Software Configuration
Download and install the latest version of *FLIM IMAGER* from:

https://www.flimlabs.com/products/FLIM-imager

After completing the hardware installation:

1. Power on the MPX/MPA microscope system according to the microscope manufacturer's instructions.
2. Power on all FLIM LABS devices.
3. Verify that only one excitation laser is in the emission-active state at any time.
4. Start *FLIM IMAGER*.
5. Select *Guided Configuration*.
6. Verify that the *FLIM DAQ* is detected.
7. Detect or select the active detector channels.
8. Select the appropriate timing synchronization source.
9. Detect or configure the microscope synchronization signals.
10. Configure the image dimensions.
11. Save the configuration.

For detailed software instructions, refer to the *FLIM IMAGER* Software Manual.

6 First FLIM Measurement
1. Start the microscope scan using Prospective control.
2. Start FLIM acquisition in *FLIM IMAGER*.
3. Verify that an image appears in *Scouting Mode*.
4. Switch to *InstaFLIM* mode to acquire fluorescence lifetime images.
5. Adjust the acquisition parameters as required.
6. Save or export the acquired data.

Notice A floating acquisition control window can be opened using the W button in *FLIM IMAGER*. This allows convenient start and stop control while monitoring the microscope control software.

7 Product Label
Prospective Instruments FLIM Upgrade Kit

P/N: MU-PINST-01-2C
S/N: MU-PINST-XXXX-XXX

MADE IN ITALY - **FLIM LABS S.r.l.**
Via della Farnesina 3 - 00135 Rome
techsupport@flimlabs.com

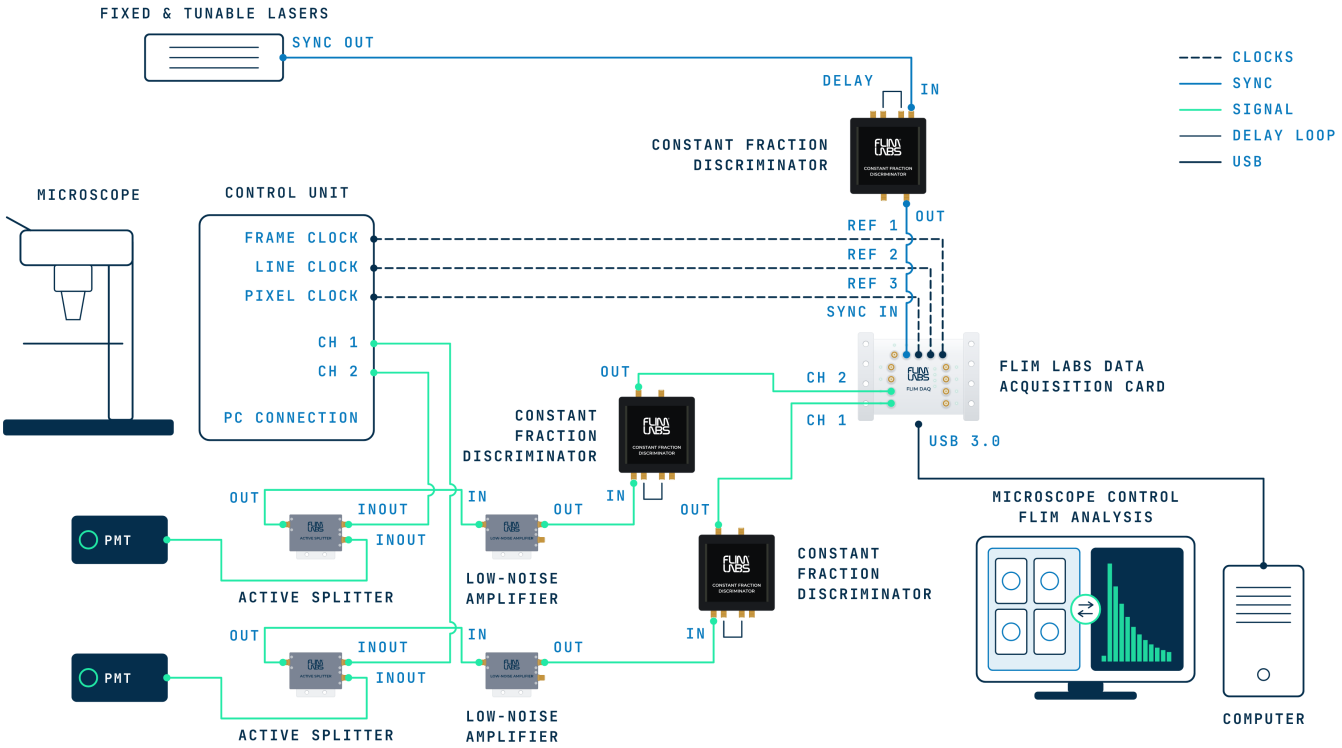


Figure 1: System connection overview.