Integrated Controller


JPM-C210E

210E IR SET UP MANUAL

CONTENTS


- 1. How to Enter Test Mode
- 2. COM PORT Set up
- 3. Select Projector
- 4. Save

1. How to Enter Test Mode




On pressing and hold no. 1 button with something sharp like ball point pen, press no. 2 button for Test Mode.

1.Test Mode

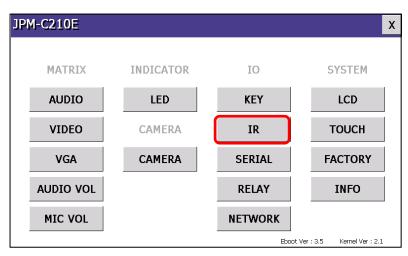

Click IR button

2.IR PORT Set up

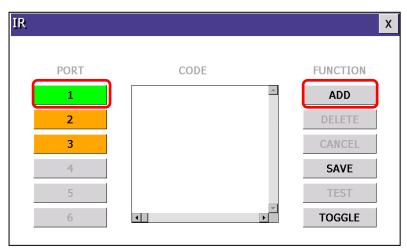


① Select IR PORT => ② Press ADD button


3.Enter Remote Controller Value



If entering remote controller value into the receiving part(Red Mark), IR value is entered like below.

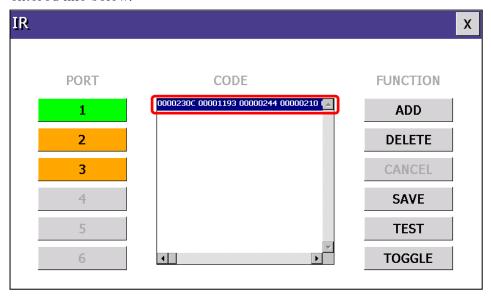

If you want to add IR value,

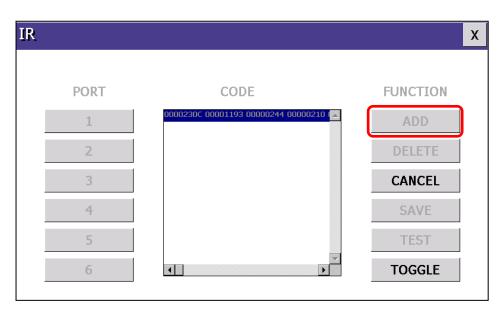


Press ADD button



Like above, if entering remote controller value into the receiving part(Red Mark), one more IR value is entered like below.

4. Save

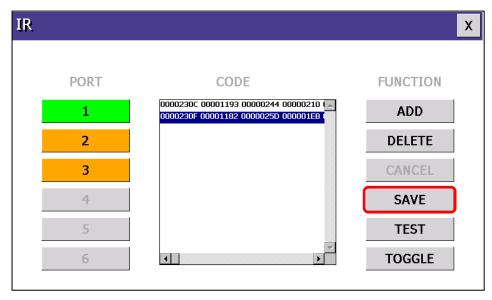

Save the values by press SAVE button.



On the page above,

ON/OFF button (Value stored on 1st line) Output
DVD button (Value stored on 2nd line) Output
VCR button (Value stored on 3rd line) Output
REW button (Value stored on 4th line) Output
PLAY button (Value stored on 5th line) Output
FF button (Value stored on 6th line) Output
PAUSE button (Value stored on 7th line) Output
STOP button (Value stored on 8th line) Output
REC button (Value stored on 9th line) Output