AusSport Water Polo Scoreboard Controller - Quick Start and Setup Guide

(Refer to the Button Guide for details on button functions)

1. If the remote is powered by batteries it can be switched on by rotating the knob on the bottom edge clockwise until it clicks.

If it has a plugpack power supply it will power up as soon as the power plug is inserted in the socket beside the rotary switch on the bottom edge. The switch has no effect when a plugpack is used.

******* BATTERIES AND A PLUGPACK MUST NOT BE USED TOGETHER *******

The unit does not recharge batteries when plugged in and AusSport advises that it could do damage if batteries and the plugpack power supply are used simultaneously.

2. For the normal game timing mode, set the TOGGLE SHOT to “Y” with a double-click.

There are two timing modes: Actual Time and Running Time. In Actual Time games, both the Game Clock and the Shot Clock stop and start in unison. In Running Time games, the Game Clock runs continuously while only the Shot Clock stops and starts.

For Actual Time games, use the PAUSE/PLAY (||>) button to control the game. PAUSE/PLAY operates the SHOT PAUSE/PLAY as well in this mode so both clocks can be stopped and started together.

For Running Time games, start the quarter with the PAUSE/PLAY button and then use the SHOT PAUSE/PLAY button to stop and start the Shot Clock while the Game Clock continues to run.

3. At the end of a quarter, the horn will sound and the clocks will stop. Press the PAUSE/PLAY button to start the clock for the interval between the quarters. At the end of the interval the horn will sound again and the clock will stop ready to start the next quarter.

4. If the Shot Clock expires, it will reset and sound the horn and stop both clocks. Press PAUSE/PLAY to restart both clocks.

5. Press the LIGHT or DARK button to add a goal to the respective tally. Double click "+/-" first if you need to correct a score. The "+" will change to "-".Then press the appropriate score button to decrement the count by 1. DON'T FORGET to double click "+/-" again to set the indicator back to "+".

6. SHOT 1 resets the Shot Clock to its preset value (currently 28) and keeps it running if the Game Clock is running or otherwise it stops. If the remaining quarter time is less than the SHOT 1 preset then the Shot Clock will fall into line with the Game Clock.

Use this button to reset the Shot Clock whenever there is a change of possession.

7. SHOT 2 resets the shot Clock to its preset value (currenlty 18), and keeps it running if the Game Clock is running or otherwise it stops. If the remaining quarter time is less than the SHOT 2 preset then the Shot Clock will fall into line with the Game Clock.

Use this button if there is (i) an exclusion, (ii) a 2m corner throw awarded, or if (iii) the attacking team regains possession after a shot at goal which rebounds back into play.*

*DO NOT USE THIS BUTTON IF THE REMAINING SHOT TIME IS GREATER THAN THE PRESET VALUE FOR SHOT 2. Also see 8. below.

8. LIGHT EXCLUDE/DARK EXCLUDE starts an 18 second exclusion timer. Press this button when a player is “kicked out” and also press the SHOT 2 button if the remaining Shot clock time is less than 18 sec. This is to allow the attacking team 18 seconds minimum time to take advantage of the exclusion. Pressing the button when the remaining Shot time is greater than 18 would skip the Shot time down to 18 and penalise the attacking team.

9. LIGHT/DARK T.O. and CANCEL LIGHT/DARK T.O. control the scoreboard exclusion counters.


10. T.O.> starts and stops/resets the Time Out timer. When the referee whistles a Time Out, press this button to start the Time Out clock. Then when you know which team called the Time Out, adjust the scoreboard indicator for that team.

If you press T.O.> in error, just press it again to stop and reset the Time Out clock.

When the Time Out clock starts, it pauses ALL other clocks ie Game, Shot and Exclusion. When it finishes, it stops, sounds the horn and resets but it does not restart the other clocks. Restart them all together by pressing PAUSE/PLAY (||/>) when the referees are ready.

11. During the quarter intervals ie quarter time, half time & three quarter time, any running exclusion timers will pause and resume at the start of the next quarter.

Pool Setup Guide

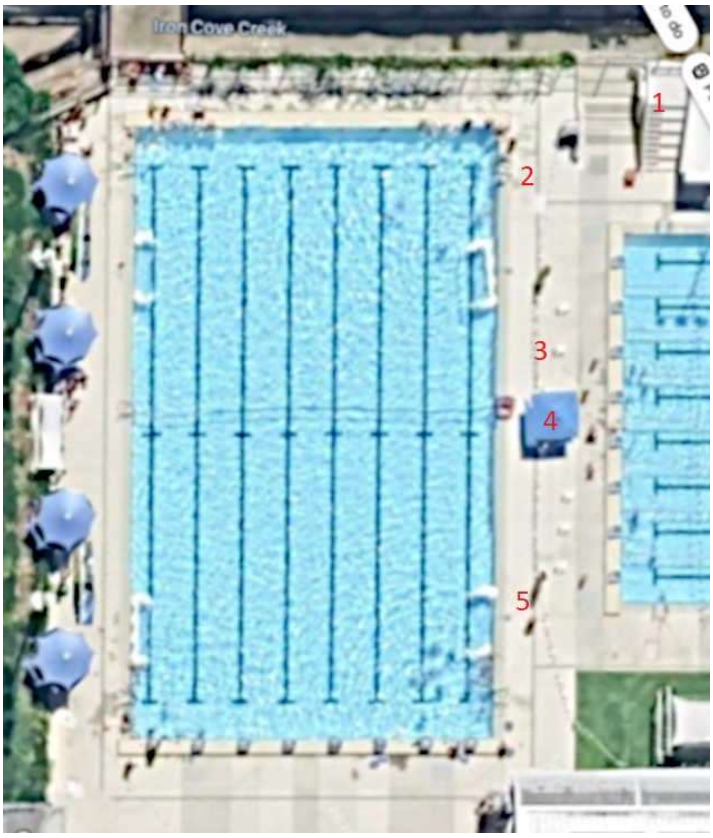

1. Connect a power reel with 2 built-in sockets to an outlet under the grandstand (1).
Leave it switched off for now for safety.

2. Place a satellite Shot Clock here and connect it to one of the sockets in the power reel from above. Connect another power reel to the second socket at (2) and run it up to (3).

3. Place the scoreboard here (3) and plug it into the second power reel. If this reel only has two sockets then attach a power bar. Any power needed by the Table can be connected here (3).

4. Position the Table under the umbrella.

5. Run an extension lead from (3) to the other satellite Shot Clock positioned at (5).

Position the clocks so that they can all be viewed from the table for monitoring.

Make sure that all cable connections are raised and not flat on the pool deck where they can get wet.


Install an antenna on each clock cabinet socket, top right viewed from the front. Remove the protective caps first.

Now you can switch on the main power under the grandstand.

When packing up, SWITCH OFF THE MAIN POWER UNDER THE GRANDSTAND FIRST.
Remember to replace the caps on the antenna sockets and replace the antennas in the plastic tube in the toolbox.

Remote Control Setup

Remote Screen

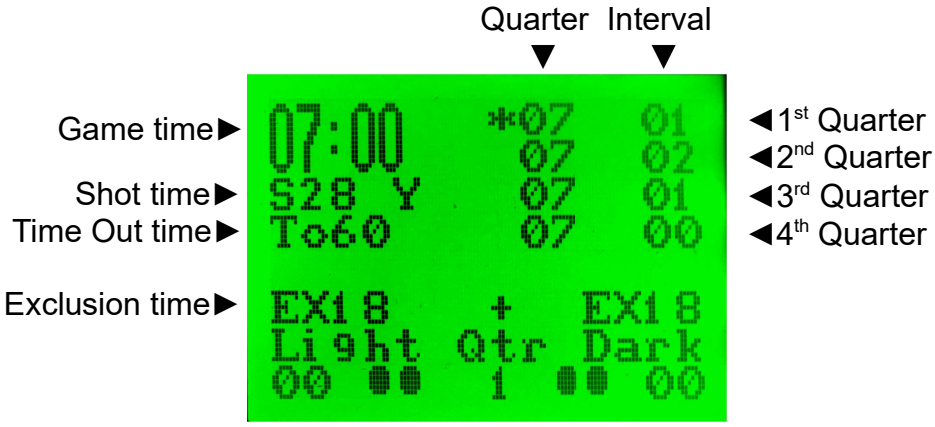

Remote Setup Procedure

A number of game parameters can vary and therefore they are programmable. In this remote controller the variable parameters are (i) quarter duration x4, (ii) interval duration x4, (iii) Shot clock time 1, (iv) Shot clock time 2, (v) Time Out duration, and (vi) Exclusion time.

Setup mode is entered by double-clicking the SET button. The asterisk symbol (*) next to the quarter one data field will change to an arrow head (>) pointing at the data field which is available for new data entry and the first digit in the field will flash.

Enter data into this field by pressing one of the numeric buttons. The next digit will then flash indicating that it is ready for data entry. Enter a digit.

The “>” will advance to the next data field to be filled in, in this case it is the interval between the first and second quarters. Continue as above until all quarter and interval data fields have been completed. NOTE that the interval data field after the 4th quarter is usually left at 00.

Now the ”>” will move to the SHOT 1 field for data entry. When two digits have been entered the “>” will move to the SHOT 2 field and after data entry here it goes to the Time Out field and then to the Exclusion field. When all of these entries are complete, the “>” will move back to the beginning. Now the Setup is complete.

To exit Setup mode, press the SET button once ie single-click. You will see that the SHOT 2 field has now been hidden.

HINT: If most of the setup data is correct and only one or two items need to be changed, you can press the PAUSE/PLAY (||/>) button to skip through the data fields without entering data.

Changing the Game and Shot times during a game

Occasionally the referee might ask you to change one or both clocks forward or backward. The best way to do this is in “N” mode where the Game Clock and the Shot Clock are independent of eachother. Double-click the TOGGLE SHOT button to get into “N” mode.

The Shot Clock is easy. Just enter “N” mode and run it down OR reset it and then run it down. Job done.

The game clock will most likely need to be reset to an earlier time ie a bigger number. If not then just run it down if the change is not big. Otherwise follow the method below.

To adjust the Game time, first make a note of which quarter you are in, the scores, the Shot Clock time and the Time Out counts because althought they should remain, if you make an error they might be lost.

Confirm that you are in “N” mode. Double-click SET to enter setup mode and then use the PAUSE/PLAY button (||/>) to advance the “>” to the quarter field for the quarter which needs adjustment. Set it to the nearest higher (or lower) minute eg if the ref wants the time adjusted up to 5 min 45 sec then set it to 06. Now click SET to exit setup mode. Double-click the PERIOD SELECT button to move the asterisk (*) to the current quarter then double-click RESET TIME to adjust the Game time to the new value. From here just run the game clock down to the desired number of seconds.

Finally double-click TOGGLE SHOT to exit “N” mode and return to “Y” mode. Now you should be good to go again unless some other data has disappeared. If it has, just re-enter it before you restart the game.

The Duration of Games per Division*

Division 1 (SSLM/W, M2, M3, W2, W3) are to be played in four quarters of 7 minutes actual or 12 minutes running time. SSL games may be 8 minute quarters depending on the referees. One hour is allotted per game or 1 hour and 15 minutes for games with 8 minute quarters.

Division 2 Men (M4, M5, M6, M18, M16, M14, M12) are to be played in four quarters of 5 minutes actual or 8 minutes running time. 45 minutes is allotted per game.

Division 2 Women (L4, L5, L7, L18, L16, L14, L12) are to be played in four quarters of 5 minutes actual or 8 minutes running time. 45 minutes is allotted per game.

Quarter Intervals = 1min, 2min, 1min except for games with 8 minute quarters which have 2min, 3min, 2min intervals.

* This information is frequently available on the WPNSW website. It has been known to disappear or change from time to time unannounced.

Copy date: 09/09/2025