首都机场集团
Capital Airports Holdings

北京首都国际机场股份有限公司
Beijing Capital International Airport Co.,Ltd.



BCIA de-icing PILOT BRIEF HANDBOOK

I.Aircraft Defrosting Mode

Defrosting service shall be conducted at parking stands under frosty weather.

II.Aircraft De-icing Mode

De-icing service shall be carried out at remote de-icing pads in snowy weather; de-icing at parking stands is available for selected aircraft.

If unsure of service mode, the crew shall consult FOC/AOC and ground agent as early as possible.

For aircraft with pre-defrosting / pre-de-icing completed, the crew shall check whether secondary defrosting / de-icing is required after arrival.

III.Parking Stands Defrosting / de-icing Procedure For Pilot

(I)Inform FOC or AOC of the de-icing/defrosting requirement no later than 45 minutes before flight STD(scheduled time of departure), which will be delivered to the de-icing agency.

(II)De-icing communication between aircraft and the de-icing agency is via interphone. Notice interphone-man when emergency occurred.

IV.Remote de-icing Procedure For Pilot

(I)How should the pilot report de-icing requirement?

1)Inform the de-icing requirement to FOC or AOC no later than 45 minutes before the flight STD;

2)De-icing requirement includes： operation mode, including one-step procedure (de-icing) and two-step procedure (de-icing+anti-icing); and operation position (wings, fuselage, horizontal stabilizer, vertical stabilizer).

3)When contact Beijing Delivery for clearance， advise “aircraft de-icing required”.

(II)What to do after arriving at the de-icing holding position?




1)Establish contact with the VHF communicator of the de-icing pads.

2)Follow the yellow light (if the light fails, “follow-me” vehicle will be utilized) to the assigned de-icing pad under the instruction of VHF communicator.

3)After arrives at the de-icing holding position, the VHF communicator will no longer confirm the de-icing requirement with the pilot.

If the de-icing requirement needs to be adjusted, the pilot should actively put forward such requirement to the VHF communicator.

(III)What to do after entering the de-icing pad?

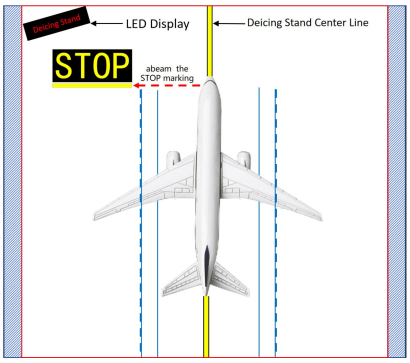

1)Marshal service is not available for engine-on de/anti-icing.The "STOP" markings are located on all de-icing pads to help aircraft stop without marshal service.Aircraft should stop and hold abeam the "STOP" markings.

2)Set the parking brake and prepare for de-icing. Upon completion of each step, immediately notify the VHF communicator so that the de-icing vehicle can simultaneously carry out de-icing/anti-icing preparations.

Note:

a)After the parking brake is being set, the de-icing vehicle enters the de-icing pad and stands by for the treatment.

b)After the deicing preparation is completed, the de-icing vehicles start the treatment.

3)Engine power at GND idle, DO NOT move aircraft until instructed, notice VHF communicator when emergency occurred.

(IV)What to do after de-icing?

1)VHF communicator only reports the start time of de-icing/anti-icing operation. The type, mixing ratio and volume of de-icing fluids shall not be asked in VHF;

2)The pilot shall contact Beijing Apron ASAP and apply for taxi out clearance. Flight control inspection shall be conducted after taxiing out.

V. Other Special Precautions

(I)All de-icing agencies use the same de-icing/anti-icing fluids from Newave Aerochemical. Details are as follows:

Type I Fluid			Type II Fluid		
Brand	Model	Ratio	Brand	Model	Ratio
Chengdu Newave	FCY-1Bio+	50:50	Chengdu Newave	FCY-2	100:0

(II)If there is snow on the nose, windshield and other parts of the aircraft, the aircraft shall be cleared by ground personnel at original parking stand before going to the de-icing pads.

(III)The location and number of the de-icing pads and the VHF frequency are shown in the figure on the right.

