

# PL18 Ultra-FP02 面板安装说明

PL18 Ultra 如需更换 PL18 Ultra-FP02 面板，按如下步骤操作：


❶ 如图，拆下 PL18 Ultra 发射机手胶，共 4 片；

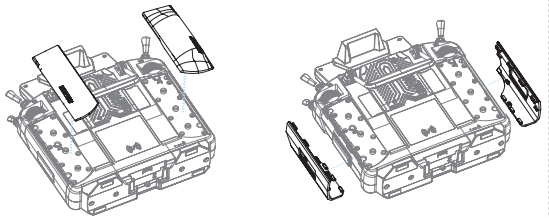


❷ 使用 2.5mm 六角螺丝刀拆下固定底座的 4 颗螺丝，接着拆下底座，并移除电池；

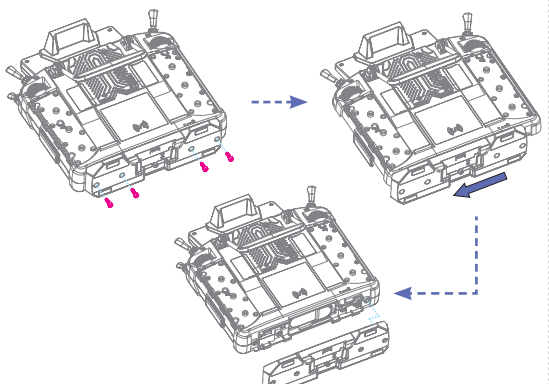


❸ 使用 2.5mm 和 1.5mm 六角螺丝刀拆下固定前后壳的螺丝，然后分开前后壳；

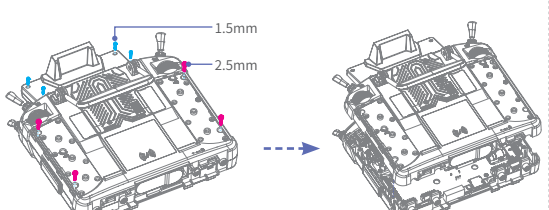



❹ 使用合适的十字螺丝刀拆下固定面板的 4 颗螺丝；接着使用 7mm 内六角套筒取下固定吊环的螺母；

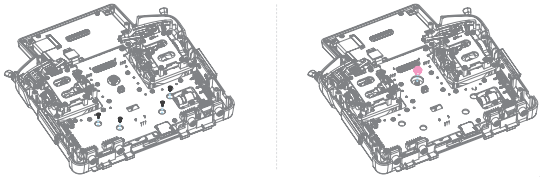

❺ 依次取下吊环、VRC 旋钮、面板、KL 微调按键、KR 微调按键和电源键，最后拧下固定 VRC 旋钮转接件的两颗螺丝，然后取下转接件；

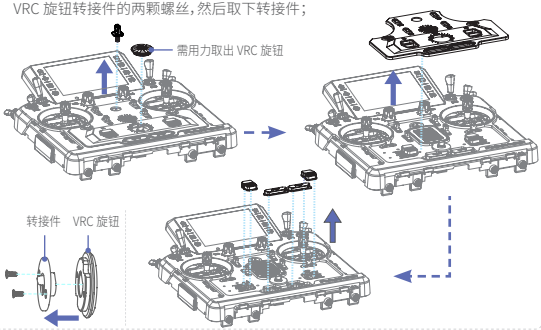


❻ 安装新面板：先安装新的微调按键和电源键；接着安装新的面板、VRC 旋钮（转接件装至新 VRC 钮）和吊环；

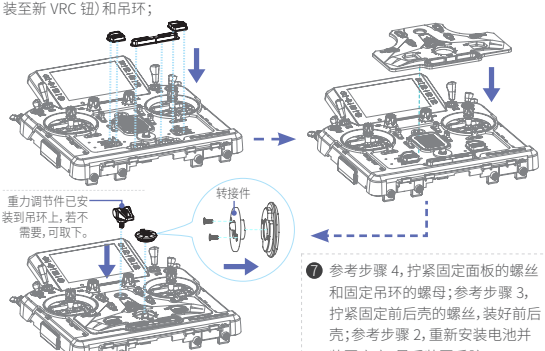



❼ 参考步骤 4，拧紧固定面板的螺丝和固定吊环的螺母；参考步骤 3，拧紧固定前后壳的螺丝，装好前后壳；参考步骤 2，重新安装电池并装回底座；最后装回手胶。

# PL18 Ultra-FP02 Panel Installation Instruction


Manufacturer: ShenZhen FLYSKY Technology Co., Ltd.
Address: 16F, Huafeng Building, No. 6006 Shennan Road, Futian District, Shenzhen, Guangdong, China

To replace the PL18 Ultra-FP02 panel on the PL18 Ultra, follow the steps below:


1. As illustrated, detach the 4 pieces of grip from the PL18 Ultra transmitter.

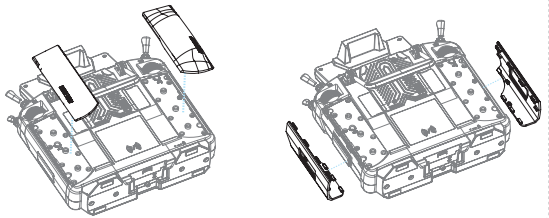


2. Use a 2.5mm hex screwdriver to remove the 4 screws that secure the base. Then lift off the base and remove the battery.

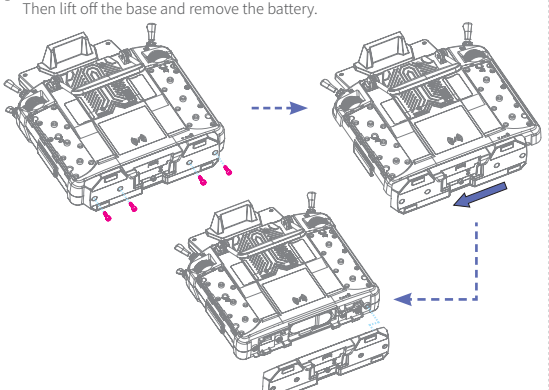


3. Using 2.5mm and 1.5mm hex drivers, remove the screws securing the front and rear covers, then separate them.

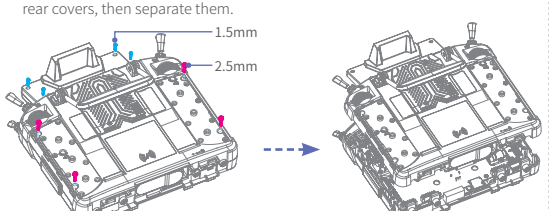



4. Use a suitable Phillips screwdriver to remove the 4 screws securing the panel. Then use a 7mm hex socket to remove the nut securing the neck strap hook.

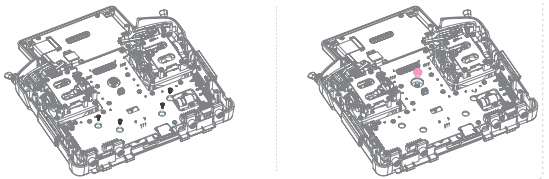

5. Remove the neck strap hook, VRC knob, panel, KL trim, KR trim, and power switch sequentially. Then unscrew the two screws holding the VRC knob adapter and remove it.

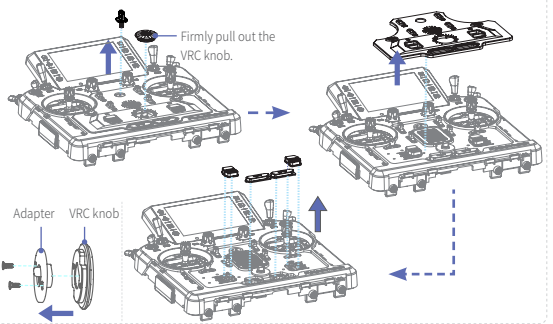


6. Installing the new panel: First install the new trims and power switch; then install the new panel, VRC knob (mount the adapter to the new VRC) , and neck strap hook.

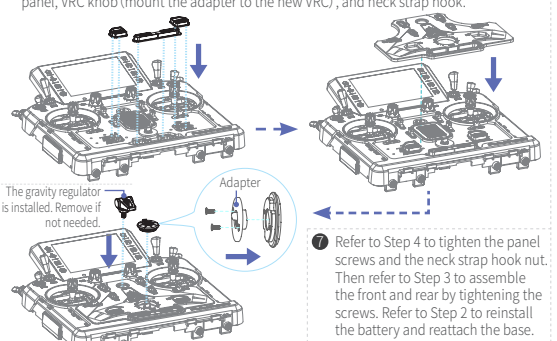


7. Refer to Step 4 to tighten the panel screws and the neck strap hook nut. Then refer to Step 3 to assemble the front and rear by tightening the screws. Refer to Step 2 to reinstall the battery and reattach the base. Finally, reinstall the grips.