
产品介绍 Introduction

Tr8M 是一款极致轻量化与紧凑化的 8 通道接收机。它采用 AFHDS 3 协议，配备单天线，支持单双向传输和回传功能。本接收机支持 2 个 Newport 接口，可自定义这些接口的输入或输出的信号类型，包括 i-BUS2/S.BUS/i-BUS/PPM/PWM 等。专门适配教育、竞技、娱乐模型使用。

The Tr8M is an ultra-lightweight, ultra-compact 8-channel receiver. Operating on the AFHDS 3 protocol, it features one antenna and supports one-way/two-way transmission plus telemetry functionality. It features 2 Newport connectors, which can be customized for various input or output signal types, including i-BUS2, S.BUS, i-BUS, PPM, PWM, etc. It is designed for educational, competitive, and recreational models.

接收机概览 Receiver Overview

接收机正面 /Front View

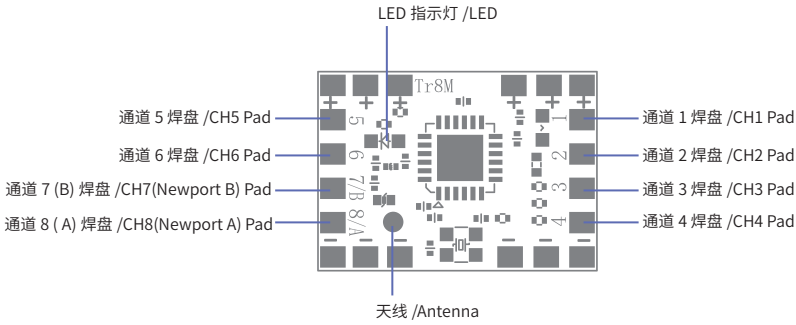

注意：焊接时请规范操作，确保安全。焊后务必进行焊点质量检查。

Follow safe soldering practices. All solder joints must be inspected post-welding.

产品规格 Product Specifications

- 产品型号：Tr8M
- 适配发射机：支持 AFHDS 3 协议的发射机（如 PL18 Ultra）
- 适配模型：教育、竞技、娱乐模型
- PWM 通道数：8
- 波段个数：171
- 无线频率：2.4GHz ISM
- 无线协议：AFHDS 3
- 发射功率：<20dBm
- 天线类型：单天线
- 工作电压：3.0~9V/DC
- 通道分辨率：4096
- 数据输出：PWM/PPM/i-BUS2/S.BUS/i-BUS
- 温度范围：-10°C～ +60°C
- 湿度范围：20% ～ 95%
- 固件更新：支持
- 外形尺寸：16.5*11.8*2.5mm
- 机身重量：0.5g
- 认证 : CE, SRRC，FCC ID: 2A2UNTR8M00

- Product Model: Tr8M
- Compatible Transmitter: Transmitter based on AFHDS 3 protocol, such as PL18 Ultra
- Compatible Models: Educational, Competition, and Recreational Models
- Number of PWM Channels: 8
- Number of Bands：171
- RF: 2.4GHz ISM
- RF Protocol: AFHDS 3
- Maximum Power: <20dBm (e.i.r.p.) （EU）
- Antenna: Single Antenna
- Operating Voltage: 3.0~9V/DC
- Resolution:4096
- Data Output: PWM/PPM/i-BUS2/S.BUS/i-BUS
- Temperature Range: -10°C ~+60°C
- Humidity Range: 20%~95%
- Firmware Update: Supported
- Dimensions: 16.5*11.8*2.5mm
- Weight: 0.5g
- Certifications: CE, SRRC, FCC ID: 2A2UNTR8M00

Copyright ©2026 Flysky Technology Co., Ltd.

对码 Binding

本款接收机支持单 / 双向对码，通电自动进入对码状态：

- 接收机上电即进入等待连接状态，等待与已对码的发射机建立通信；
- 若 2 秒 未与已对码的发射机建立通信，则自动进入对码状态，此状态持续 3 秒；
- 若与发射机对码成功，即进入正常通信状态 否则退出对码状态，回到等待连接状态。

注：对码时，接收机 LED 快闪；等待连接时，接收机 LED 慢闪；正常通信时，接收机 LED 常亮。

双向对码步骤：

1. 发射机选择双向通信，然后进入对码状态；
2. 接收机上电后先等待 2S：若期间未检测到发射机信号，则自动进入对码状态，此时 LED 快闪；也可在通电前短接 CH3 与 CH4 信号端，再上电，即进入对码状态；
3. 对码成功后，接收机 LED 灯常亮；
4. 检查发射机、接收机是否正常工作。如需重新对码 , 请重复以上步骤。

单向对码步骤：

1. 发射机选择单向通信，然后进入对码状态；
2. 接收机进入对码状态；
3. 接收机 LED 灯变为慢闪后将发射机退出对码状态。此时，如果接收机的 LED 灯常亮，表示对码成功；
4. 检查发射机和接收机是否正常工作。如果需要重新对码，请重复上述步骤。

注：对码时请先将发射机进入对码状态，再将接收机进入对码状态，若 3 秒内对码没有完成，接收机 LED 灯进入慢闪状态。

This receiver is compatible with one-way/two-way binding, and is to automatically enter the binding mode upon power-on.

- The receiver will enter the waiting-for-connection status upon power-on, waiting for the connection to the bound transmitter.
- If the receiver does not connect the bound transmitter within 2 seconds, it will automatically enter the binding state. This state lasts for 3 seconds.
- If the binding with the transmitter is successful, it will enter the normal communication status, otherwise, it will exit the binding state and return to the waiting-for-connection status.

Note: In case of binding, the receiver LED flashes quickly. In case of waiting-for-connection, the receiver LED flashes slowly. In case of normal communication, the receiver LED is solid on.

Follow the steps below to bind in two-way binding:

1. Select [2 WAY] for RF standard of the transmitter, then put the transmitter into the binding mode.
2. After powering on, the receiver will wait for 2 seconds. If no transmitter signal is detected during this period, it will automatically enter binding mode, indicated by a rapidly flashing LED.
   Alternatively, you can enter binding mode by shorting the signal pins of CH3 and CH4 before powering on.
3. When the receiver's LED is solid on, it indicates that the binding is successful.
4. Check if the transmitter and receiver are working properly. If you need to re-bind, please repeat the above steps.

Follow the steps below to bind in one-way binding:

1. Select [1 WAY] for RF standard of the transmitter, then put the transmitter into the binding mode.
2. This receiver enters the binding state.
3. After the receiver LED becomes slow flashing, then put the transmitter to exit the binding state. If the receiver's LED is solid on, it indicates that the binding is successful.
4. Check to make sure the transmitter and receiver functions are working correctly, repeat steps above(binding process) if any problems arise.

Note: Set the transmitter to its binding state first, and then set the receiver to its binding status. If the binding is not finished within 3 seconds, the receiver LED will enter a slow flashing status.

固件更新 Firmware Update

本接收机的固件更新需要通过富斯遥控管家（FlySkyAssistant）来完成。请注意，只有 3.0 及以上版本的富斯遥控管家支持此操作，相关固件可以从官网 www.flyskytech.com 下载。更新过程可以通过以下两种方式进行：

方式一：首先完成发射机与接收机的对码（接收机 LED 灯常亮），然后将发射机连接到电脑。在电脑端打开富斯遥控管家软件，通过该软件进行固件更新。

方式二：首先将发射机连接到电脑，然后按照以下步骤使接收机进入强制更新状态（接收机 LED 灯状态为三闪一灭）：

- 先短接接收机 CH1 与 CH2 信号端；
- 再给接收机上电，接收机 LED 状态为 3 闪 1 灭，即进入强制更新状态。

完成上述步骤后，在电脑端打开富斯遥控管家软件，通过该软件完成固件的强制更新。强制更新完成后，接收机的指示灯将由 3 闪 1 灭状态变为慢闪状态。

The firmware update for this receiver must be completed through FlySkyAssistant. Please note that only versions 3.0 and later of FlySkyAssistant support this operation, and the relevant firmware can be downloaded from the official website www.flysky-cn.com. The update process can be carried out in two ways:

Method Ⅰ: First, complete the binding between the transmitter and the receiver (the LED of the receiver is solid on), then connect the transmitter to the computer. Open FlySkyAssistant on the computer and perform the firmware update through the software.

Method Ⅱ: First, connect the transmitter to the computer, then follow these steps to put the receiver into forced update mode (the LED of the receiver will operate in a three-flash-one-off mode repeatedly):

- Short the signal pins between the CH1 and CH2.
- Power on the receiver. The LED of the receiver operates in a three-flash-one-off mode repeatedly, indicating that the receiver is in forced update mode.

After completing the above steps, open FlySkyAssistant on your computer and complete the forced firmware update through the software. Once the forced update is completed, the LED of the receiver will change from the three-flash-one-off state to a slow flashing state.

Copyright ©2026 Flysky Technology Co., Ltd.

失控保护 Failsafe

失控保护功能用于在接收机失去信号不受控制后，接收机按设置好的失控保护值进行通道输出以保护模型及人员安全。

本款接收机共支持三种失控保护模式 : [无输出]、[保持] 和 [固定值]

[无输出]PWM 通道接口为无输出状态 ;

[保持] 输出失控前最后的通道值;

[固定值] 输出设置的通道值。

注:

1. 对于 PPM/i-BUS/S.BUS/i-BUS2 等总线信号类型不允许单个或其中几个通道为 [无输出] 模式，通道设置为 [无输出] 模式时，实际信号是保持最后输出值;
2. 因 S.BUS/i-BUS2 信号信息包含失控标志位，各通道失控保护设置被失控标志位传达给后续设备，若连接的设备支持失控标志位解析，则失控后，输出各通道设置的失控保护值;
3. 对于无失控标志位的信号 PPM/i-BUS，支持设置失控时信号 [无输出] 模式。设置为 [无输出] 模式后，不管各通道失控保护如何设置，失控后各通道均为 [无输出] 模式。

The failsafe function is used when the receiver loses signal and is out-of-control, in both 2.4GHz and 900MHz. The receiver performs channel output according to the set failsafe value to protect the safety of the model and personnel.

This receiver supports three fail-safe modes: **No output**, **Hold**, and **Fixed value**.

No output: No output for PWM channel.

Hold: Maintain the last output value.

Fixed value : Output the failsafe values that have been set for each channel.

Notes:

1. For bus signal types such as PPM/i-BUS/S.BUS/i-BUS2, a single or several of these channels are not allowed to be in No output mode. The actual signal is held at the last output value when the channel is set to No output mode.
2. Because the S.BUS/i-BUS2 signal information contains failsafe flag bits, the failsafe settings of each channel are communicated to subsequent devices by the failsafe flag bits. If the connected devices support the failsafe flag bit analysis, the failsafe values set for each channel are output after out of control.
3. For the signal PPM/i-BUS without failsafe flag bits, it supports the setting of the signal to No output mode in case of out of control. After setting to No output mode, regardless of the setting of the failsafe of each channel, each channel will be in No output mode after out-of-control.

注意事项:

- 使用前必须确保本产品与模型安装正确，否则可能导致模型发生严重损坏。
- 关闭时，请务必先关闭接收机电源，然后关闭发射机。如果关闭发射机电源时接收机仍然在工作，将会导致遥控设备失控。失控保护设置不合理可能引起事故。
- 确保接收机安装在远离电机，电子调速器或电子噪声过多的区域。
- 接收机天线需远离导电材料，例如金属棒和碳物质。为了避免影响正常工作，请确保接收机天线和导电材料之间至少有 1 厘米以上的距离。
- 准备过程中，请勿连接接收机电源，避免造成不必要的损失。

Attention:

- Make sure the product is installed and calibrated correctly, failure to do so may result in serious injury.
- Make sure the receiver's battery is disconnected before turning off the transmitter, failure to do so lead to lose control. Unreasonable setting of the Failsafe may cause accidents.
- Make sure the receiver is mounted away from motors, electronic speed controllers or any device that emits excessive electrical noise.
- Keep the receiver's antenna at least 1cm away from conductive materials such as carbon or metal.
- Do not power on the receiver during the setup process to prevent loss of control.

Copyright ©2026 Flysky Technology Co., Ltd.

认证相关 Certification

FCC Compliance Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.
If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help.

EU DoC Declaration

Hereby, [ShenZhen FLYSKY Technology Co., Ltd.] declares that the Radio Equipment [Tr8M] is in compliance with RED 2014/53/EU.
The full text of the EU DoC is available at the following internet address: www.flyskytech.com/info_detail/10.html

RF Exposure Compliance

This equipment complies with FCC/ISED RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.

Environmentally friendly disposal

Old electrical appliances must not be disposed of together with the residual waste, but have to be disposed of separately. The disposal at the communal collecting point via private persons is for free. The owner of old appliances is responsible to bring the appliances to these collecting points or to similar collection points. With this little personal effort, you contribute to recycle valuable raw materials and the treatment of toxic substances.

FCC ID: 2A2UNTR8M00

微信公众号 Bilibili Website Facebook

Manufacturer: ShenZhen FLYSKY Technology Co., Ltd.
Address: 16F, Huafeng Building, No. 6006 Shennan Road, Futian District, Shenzhen, Guangdong, China

本说明书中的图片和插图仅供参考，可能与实际产品外观有所不同。 产品设计和规格可能会有所更改，恕不另行通知。
Figures and illustrations in this manual are provided for reference only and may differ from actual product appearance. Product design and specificatiions may be changed without notice.

Copyright ©2026 Flysky Technology Co., Ltd.