
Quick Start Guide
快速操作指南

FS-i6 Nova

2.4GHz AFHDS 2A

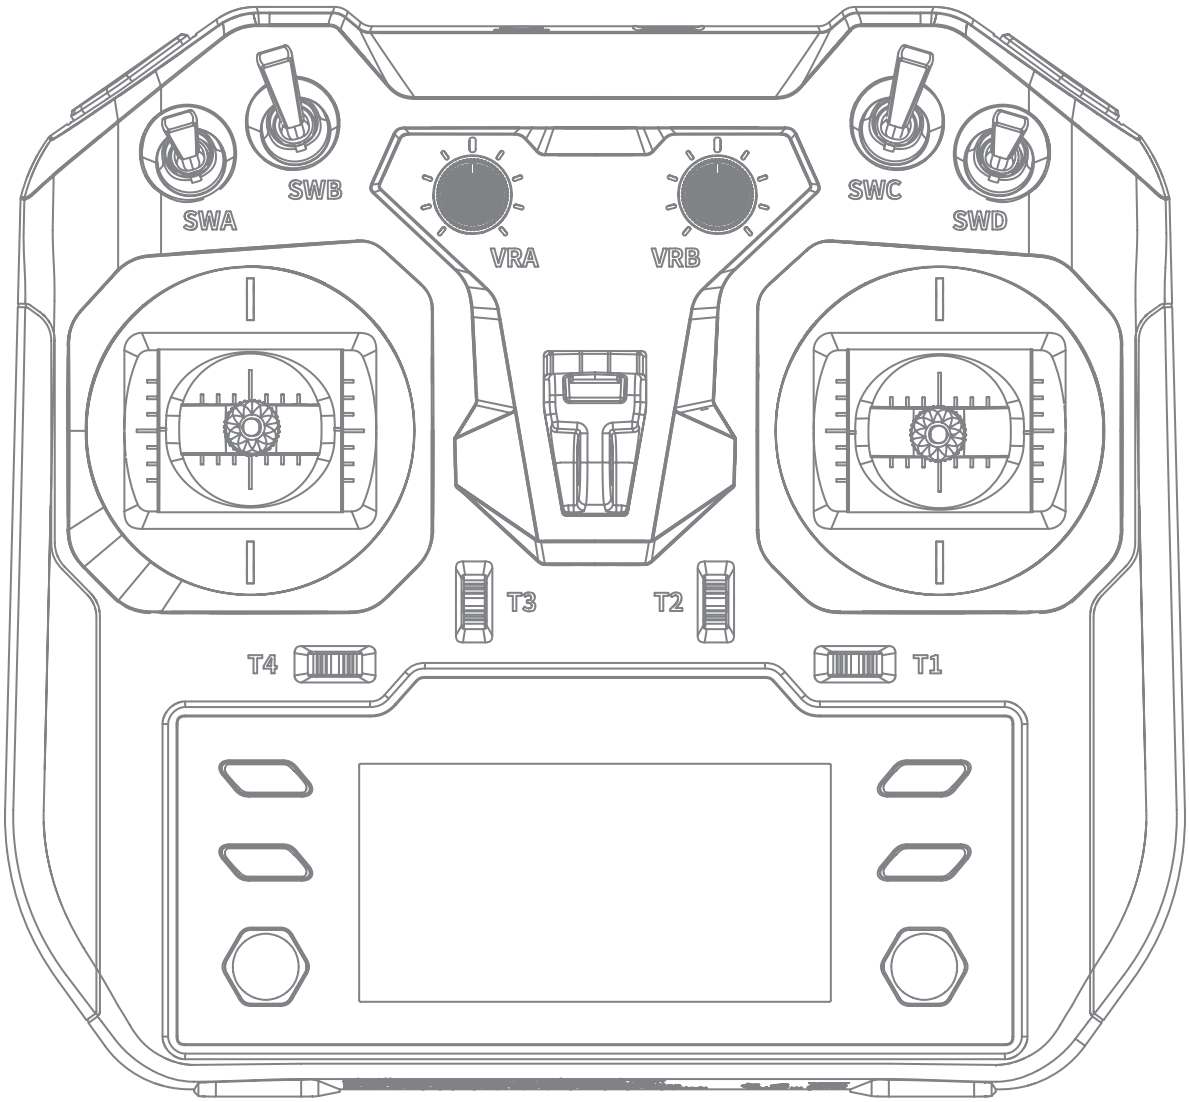

Http://www.flysky-cn.com

Copyright © 2026 Flysky Technology Co., Ltd.

Thank you for purchasing the products of Flysky! To find out more about our products, visit our website at www.flysky-cn.com. If you encounter any problems during using, please refer to the manual first. If the problem is still not resolved, contact your local dealer directly or contact the customer service staff via Flysky official website.

Precautions

Read the safety messages listed below before operation!

- Do not use the product at night or during bad weather conditions, like rain or thunderstorms. It can cause erratic operation or loss of control.
- Do not use the product when visibility is limited.
- Do not expose the product to rain or snow. Any exposure to moisture (water or snow) may cause erratic operation or loss of control.
- Interference may cause loss of control. To ensure the safety of you and others, do not operate in the following places:



Near any sites where other radio control activity may occur



Near people or roads



On any pond/ lake when passenger boats are present



Near power lines or communication broadcasting antennas

- Do not use this product when you are tired, uncomfortable, or under the influence of alcohol or drugs. Doing so may cause serious injury to yourself or others.
- The 2.4GHz radio band is limited to line of sight. Always keep your model in sight as a large can block the RF signal and lead to loss of control.
- Never grip the transmitter antenna during operation. It significantly degrades signal quality and strength and may cause loss of control.
- Do not touch any part of the model that may generate heat during operation, or immediately after use. The engine or motor, may be very

hot and can cause serious burns.


- Misuse of this product may lead to serious injury or death. To ensure the safety of you and your equipment, read this manual and follow the instructions carefully.
- Make sure the product is properly installed in your model. Failure to do so may result in serious injury.
- Make sure that the receiver's battery is disconnected before turning off the transmitter. Failure to do so may lead to unintended operation and cause an accident.
- Ensure that all servos operate in the correct direction. If not, adjust the direction first.
- Make sure that the model stays within range in order to prevent loss of control.

CAUTION!


- RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

Transmitter Overview

Front View

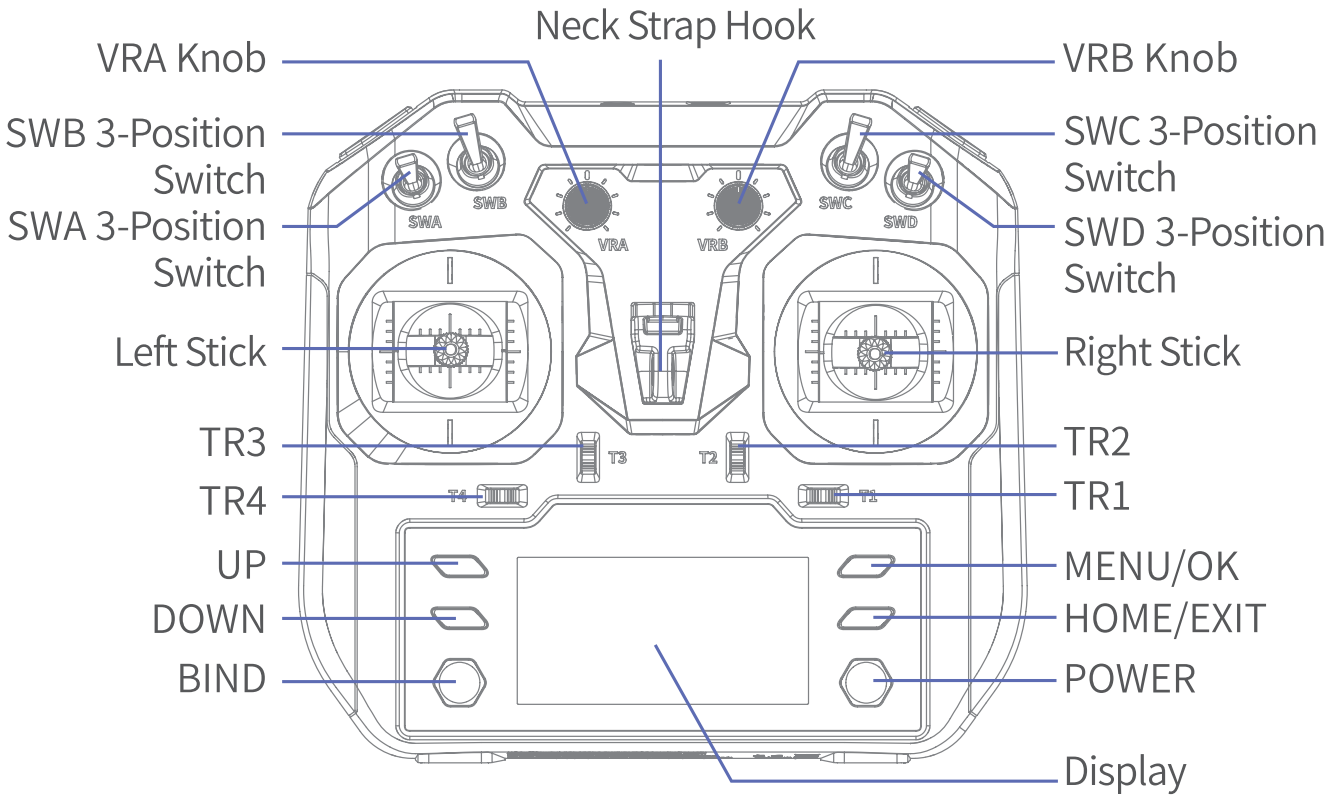


Back View

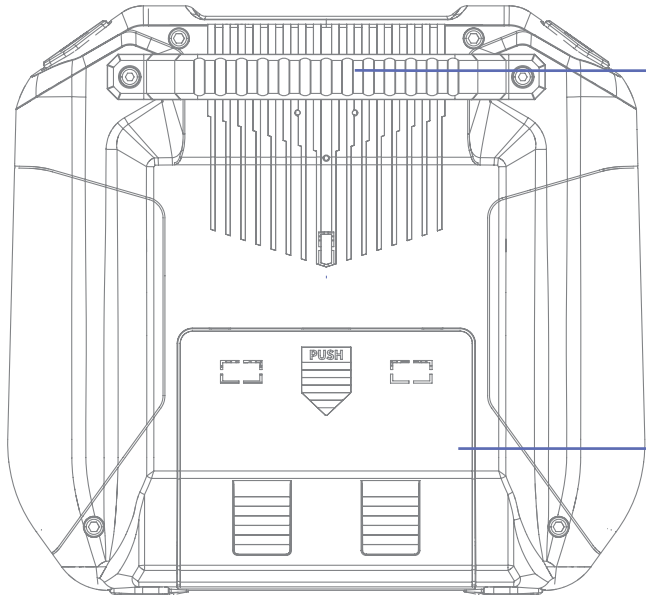

Carrying Handle

Battery Compartment

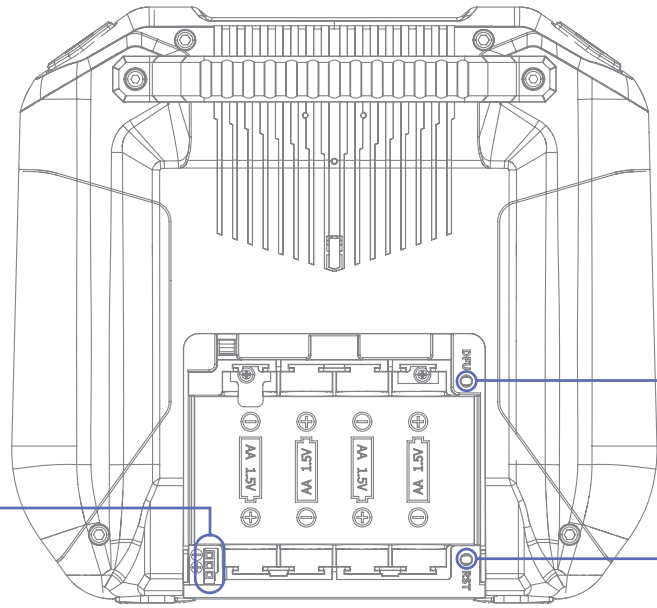


DFU

Battery Connector(JST /Dupont)

RST (Reset Button)

Top View

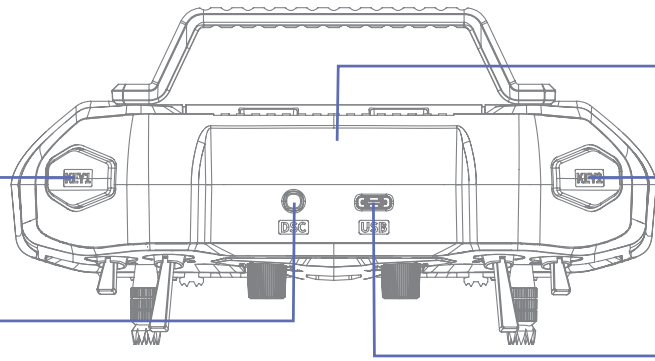

Two Built-in Antennas

KEY1(Latching Button)

KEY2 (Momentary Button)

DSC 3.5mm Trainer Port


USB Type-C Port

Basic Operations

Installing the AA Battery

Follow the steps below to install the AA battery:

1. Open the battery compartment cover as shown in the figure.
2. Check the positive (+) and negative (-) polarity markings inside the battery compartment.
3. Place the included foam pad at the bottom of the battery compartment (Note: The foam pad will cover the original polarity markings after installation; please confirm the orientation before installing.).
4. Insert 4 fully charged AA batteries into the compartment according to the confirmed polarity directions.
5. Close the battery compartment cover.

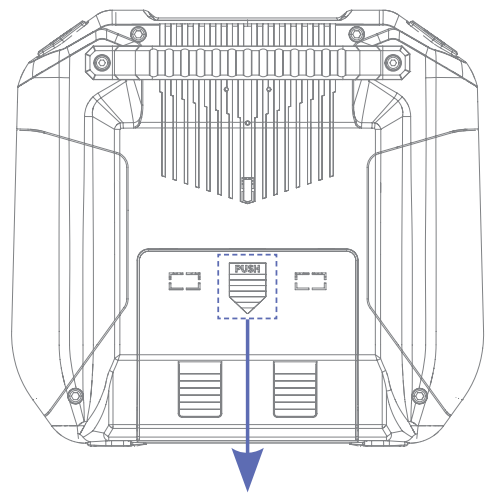

Press here and slide in the direction of the arrow to remove the battery cover.

Installing the LiPo Battery


The transmitter supports LiPo batteries and has one JST connector and one Dopont connector for battery wiring. Follow the steps below to install the LiPo batteries:

1. Open the battery compartment cover.
2. If a foam pad is already installed inside the battery compartment, remove it first, then insert a fully charged 2S Li-Po battery into the compartment.
3. Attach the included adhesive-backed foam pad to the inside of the battery cover to prevent the battery from moving.
4. Plug the battery wiring of the LiPo battery into the JST Port accordingly.
5. Close the battery cover, minding to avoid pinching the battery wiring.

Note: Additionally, you can also use a USB Type-C cable to connect the transmitter's USB Type-C port for power.

System Control Buttons

The following section explains the purpose of the following buttons: MENU/OK, HOME/EXIT, UP, DOWN, BIND and POWER.

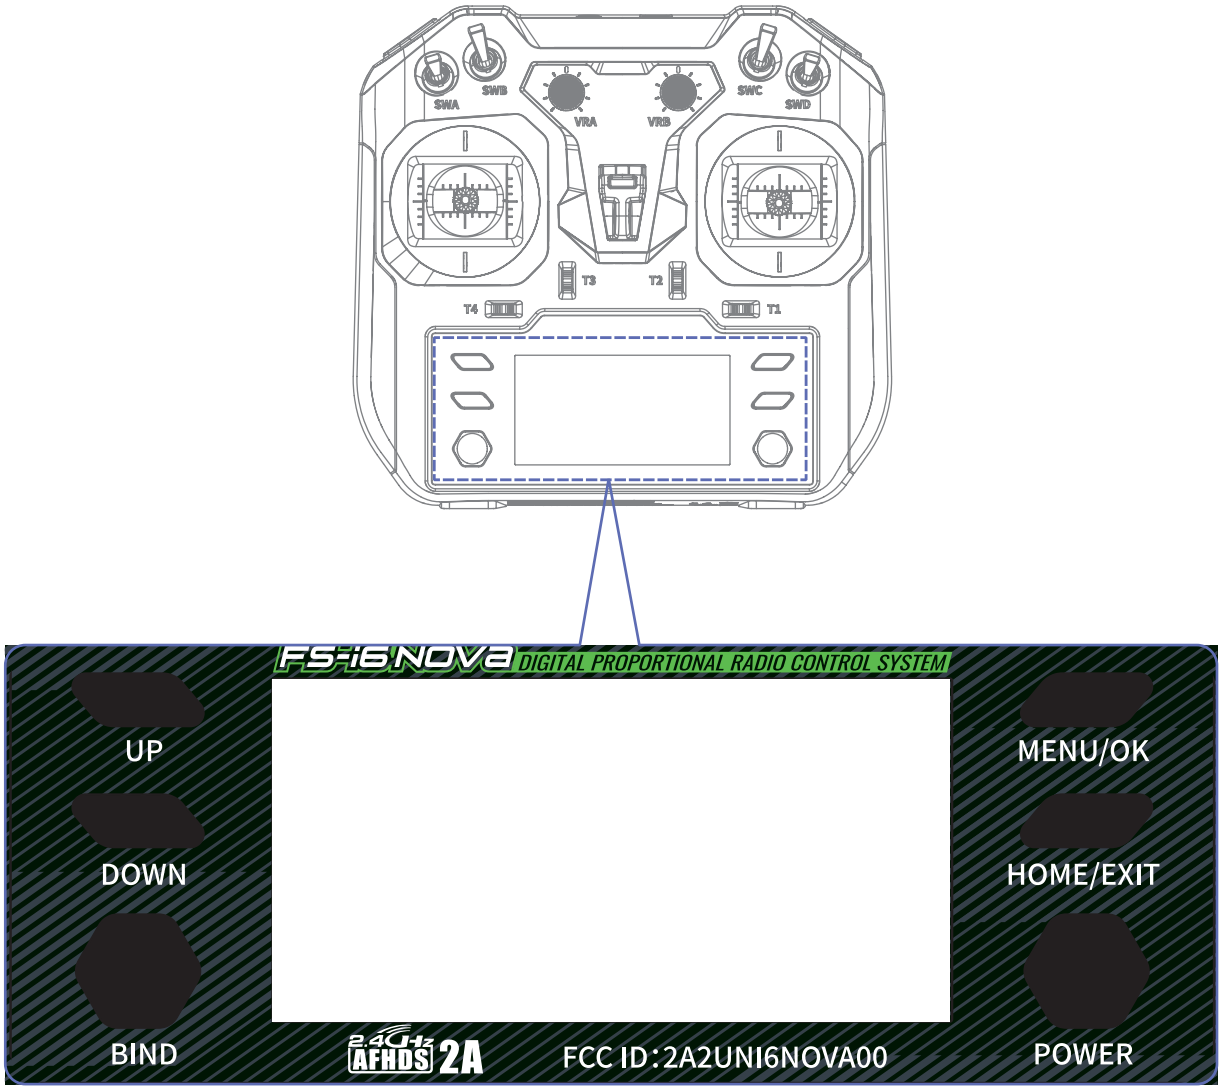

MENU/OK Button(Menu/OK)

- On the Home Screen: A short press enters the main menu.
- On Non-Home Screens: A short press enters the selected submenu or selects a setting item. If the item is already selected, a short press saves the setting. For items with a reset function, a long press (approx. 1 second) restores the default value.

HOME/EXIT Button(Home/Back)

- On Non-Home Screen: short press to return to the previous level. Note

that if you return while a setting option is selected, the adjustment will not be saved; a long press (≈ 1s) jumps directly to the Home Screen. Please note: the button will not work during a transmitter firmware update.

UP Button (up)/DOWN Button (down)

- On the Home Page: Short press UP to enter the Display menu. Short press DOWN to enter the Sensor List menu.
- On Non-Home Screens: When the screen displays multiple functional items (indicated by), use the UP/DOWN to switch between these items. When a setting item is selected, use UP/DOWN to adjust or toggle the item's options.

  Short press of UP/DOWN: Navigate or adjust one step/item at a time.
  Long press: Enables fast, continuous scrolling or switching.

BIND Button (binding)

- On the Home Screen: A short press enters Model Select menu.
- Entering Binding Mode: Press and hold BIND while powering on the transmitter.

  Note: Exiting binding mode returns the transmitter to normal operation. To re-enter binding mode, power off and repeat the procedure.

POWER Button (power switch)

- Long press to power on / off. Refer to the Powering On/Off section for details.

Powering on

Follow the steps below to turn on the transmitter:

1. Check to make sure that the batteries are fully charged and installed correctly.
2. Press and hold POWER (power switch) until the LCD screen light up.
3. Follow the on-screen prompts below to power on successfully.
   - Check if the controls are in the safe position. Please check the position

of the controls (SWA/SWB/SWC/SWD/KEY1/KEY2/Throttle Stick) and move them to the specified position to enter the home screen. If there is no operation within 5 minutes, the transmitter will automatically shut down.

- Or short press MENU/OK to enter the home screen.

Powering Off

Follow the steps below to turn off the transmitter:

1. Turn off the receiver first.
2. Press and hold POWER (power switch). When the screen displays the prompt "Turn off the transmitter....", do not release the button. Continue holding until the screen goes completely dark, then release POWER to complete the shutdown.

Make sure to disconnect the receiver power before turning off the transmitter. Failure to do so can result out of control. Unreasonable setting of the Failsafe may cause accidents.

Binding

Using the FS-i6 Nova transmitter and FS-iA10B receiver as an example for two-way binding, the steps are as following:

1. Hold the transmitter's BIND button and turn on the transmitter. Once powered on, the transmitter will enter binding mode. Then release the BIND button and POWER button.
2. Connect the binding cable to the B/VCC connector on the receiver.
3. Connect the power cable to any other connector on the receiver. The receiver's LED flashes rapidly, indicating that the receiver has entered the binding mode.
4. Once the receiver's LED is solid on (the transmitter will automatically exit binding mode). At this point, remove the binding cable and the power cable, then reconnect the power cable to the B/VCC connector.
   - Once the receiver's LED is solid on, indicating the binding is successful.
5. Check whether the transmitter and the receiver are working properly. If

you need to rebind, repeat the steps above.

Note: The binding mode may vary according to the receiver model. Visit the Flysky official website to check the receiver manual or other relevant information.

Failsafe


The failsafe function is used when the receiver loses radio signal and is out-of-control. The receiver performs channel output according to the set failsafe value to protect the safety of the model and personnel.

Each channel from 1 to 10 can be individually set to either [OFF] or [ON] for its failsafe. The default setting is [OFF], which means the channel will hold its last output value upon RF signal loss. **To ensure safety, always configure appropriate failsafe values based on your specific equipment**. When set to [ON], a specific failsafe value can be defined for the channel. The default value is the channel's current output.

You can also set the output value for all channels with configured failsafe values through [All Channels] after RF signal loss.

Setup:


1. On Home Screen, briefly press MENU/OK to enter MENU interface.
2. [System] is selected by default. If not selected, short press UP/DOWN to select it, then short press MENU/OK to enter.
3. Short press UP/DOWN to navigate to the [RX setup], then short press MENU/OK to enter its interface.
4. Short press UP/DOWN to navigate to the [Failsafe], then short press MENU/OK to enter.
5. Set an individual channel failsafe:

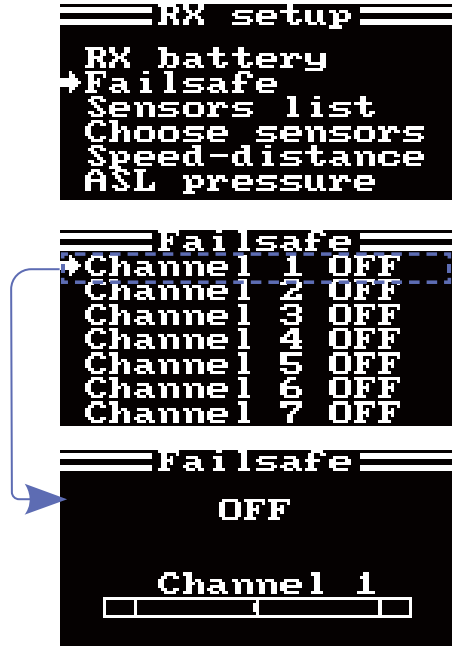

- Short press DOWN/UP to select a channel, then short press MENU/OK. In the submenu, set the option to [ON], then move and hold the corresponding physical control to the position you wish to set. Finally, short press MENU/OK to confirm.


6. Set [All channels] failsafe:

   - Move all controls corresponding to channels with set values and hold them if needed, then short press MENU/OK, then set the option to [YES], Finally, short press MENU/OK to confirm.

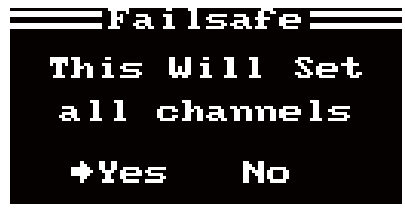

7. To restore defaults:

   - When no parameter is selected on the [Failsafe] page, press and hold MENU/OK. The system will pop up a confirmation dialog. Select [Yes], then press MENU/OK briefly to confirm and complete the operation.

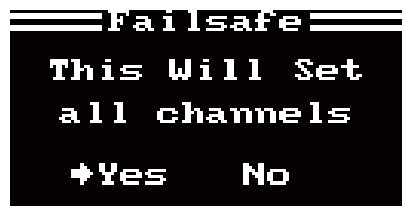

Firmware Update & Language Selection


To put the transmitter into updating state. In case of updating the firmware of the transmitter, use this function to put the transmitter into updating mode first, then upgrade the transmitter's firmware.


It also supports switching the transmitter system language via the [Firmware Update] function. That is, when updating the firmware, select the Chinese or English firmware to switch the language.


⚠ Warning	• Do not unplug the USB Type-C cable while the firmware is updating.

Follow these steps:

1. Download and open the latest official firmware. Note: Select the required Chinese or English version according to your needs.
2. Connect the transmitter to the computer using a USB Type-C cable.
3. Select [Firmware update]. Follow the on-screen prompts to short press MENU/OK, then select [Yes] and short press MENU/OK again to enter the update mode.
4. After completing the above steps, on the computer's update software interface, click [Update] to start updating the transmitter's firmware.
5. Once the firmware update is complete, restart the transmitter.

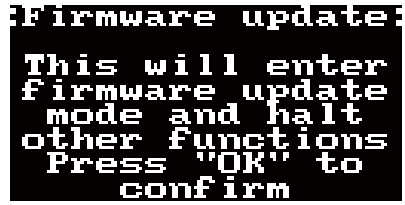

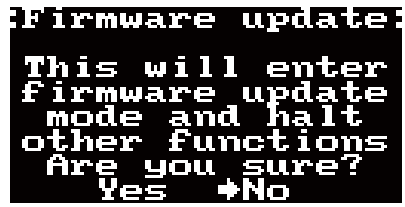

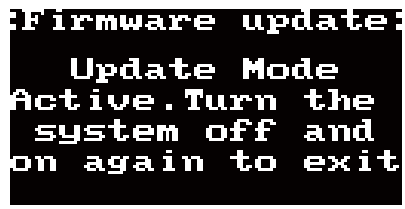

Specifications

- Product Model: FS-i6 Nova
- Compatible Receiver: Receivers with AFHDS 2A protocol
- Compatible RC Models: Educational, Competition, and Recreational Models
- Number of Channels: 10
- Number of Bands: 135
- RF: 2.4GHz ISM
- Maximum Power: < 20dBm (e.i.r.p.) （EU）
- RF Protocol: AFHDS 2A
- Resolution: 1024 Step
- Data Interface: USB Type-C, 3.5mm Audio Jack (DSC)
- Antenna: Two bulit-in antennas (a PCB antenna and a copper tube antenna）
- Input Power: AA*4/2S LiPo (supports a 4-9V/DC power supply input)
- Display: 128*64 LCD (Black and white dot matrix screen)
- Firmware Update: Supported
- Temperature Range: -10°C ~ +60°C
- Humidity Range: 20% ~ 95%
- Language: Chinese or English (via flashing firmware for the desired language)
- Dimensions: 168.6mm*155.6mm*87.9mm
- Weight: 360 g (Excluding battery)
- Charging Jack: None
- Certifications: CE, SRRC, FCC ID: 2A2UNI6NOVA00

- For more information about the transmitter, please refer to the user manual.

Certifications

FCC Compliance Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help.

EU DoC Declaration

Hereby, [ShenZhen FLYSKY Technology Co., Ltd.] declares that the radio equipment type [FS-i6Nova] is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: www.flyskytech.com/info_detail/10.html

Environmentally Friendly Disposal

Old electrical appliances must not be disposed of together with the residual waste, but have to be disposed of separately. The disposal at the communal collecting point via private persons is for free. The owner of old appliances is responsible to bring the appliances to these collecting points or to similar collection points. With this little personal effort, you contribute to recycle valuable raw materials and the treatment of toxic substances.

CAUTION

RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE.
DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS



CE

CAUTION

- replacement of a battery with an incorrect type that can defeat a safeguard (for example in the case of some lithium battery types);
- disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery,that can result in an explosion;
- leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas; and
- a battery subjected to extremely low air pressure that may result in an explosion or the leakage offlammable liquid or qas.

CE SAR statement

This equipment complies with Directive 2014/53/EU radiation exposure limits set forth for an uncontrolled environment. End user must follow the specific operating instructions for satisfying RF exposure compliance.

This transmitter must not be colocated or operating in conjunction with any other antenna or transmitter. The portable device is designed to meet the requirements for exposure to radio waves established by European Union market(France). These requirements set a SAR limit of 2W/kg averaged over ten gram of tissue.

The highest SAR value 0.061W/kg reported under this standard during product certification for use when properly worn on the body.

FCC SAR

For body-worn operation, the device has been tested and meets the FCC RF exposure, the maximum sar value is 0.536W/Kg at 0mm

感谢您购买富斯公司的产品!欲知更多产品信息,请浏览以下官方网站:www.flyskytech.com. 如果您在使用中遇到任何问题,请先查阅发射机使用说明书。如果问题仍未得到解决,请直接联系当地经销商或者访问官网联系客服人员。

注意事项!

开始操作前请务必阅读以下安全信息!

- 请不要在夜晚或雷雨天气使用本产品,恶劣的天气环境有可能导致遥控设备失灵。
- 请不要在能见度有限的情况下使用本产品。
- 请不要在雨雪或有水的地方使用本产品。如果有液体进入到系统内部,可能会导致运行不稳定或设备失灵。
- 信号干扰可能导致设备失控。为保证您和他人的安全,请不要在以下地点使用本产品:



基站附近或其他无线电活跃的地方



人多的地方或道路附近



有客船的水域



高压电线或通信广播天线附近


- 当你感到疲倦、不舒服，或在摄入酒精或服食导致麻醉或兴奋的药物后，不要操作本产品，否则可能对自己或他人造成严重的伤害。
- 2.4GHz 无线电波段完全不同于之前所使用的低频无线电波段。使用时请确保模型产品在您的视线范围内，大的障碍物将会阻断无线电频率信号从而导致遥控失灵模型失控。
- 在使用过程中，严禁紧握发射机天线，否则将会大大减弱无线电传播信号的质量和强度， 导致遥控失灵模型失控。
- 在操作或使用模型后，请勿触摸任何可能发热的部位，如发动机、电机等。这些部件可能非常热，容易造成严重的烧伤。

- 遥控设备使用不恰当可能导致操作者或他人严重受伤，甚至死亡。为保证您和设备的安全，请仔细阅读使用说明书并按照要求进行操作。
- 使用前必须确保本产品与模型安装正确，否则可能导致模型发生严重损坏。
- 关闭时，请务必先关闭接收机电源，然后关闭发射机。如果关闭发射机电源时接收机仍然在工作，将有可能导致遥控设备失控或者引擎继续工作而引发事故。
- 操控时，请先确认模型所有舵机的动作方向与操控方向一致。如果不一致，请调整好正确的方向。
- 当遥控距离持续较远时，有发生失控的可能。请适当缩短遥控的距离。


注意：使用类型不正确的电池可能发生爆炸风险，请妥善处理使用完的电池。

发射机概览

前视图

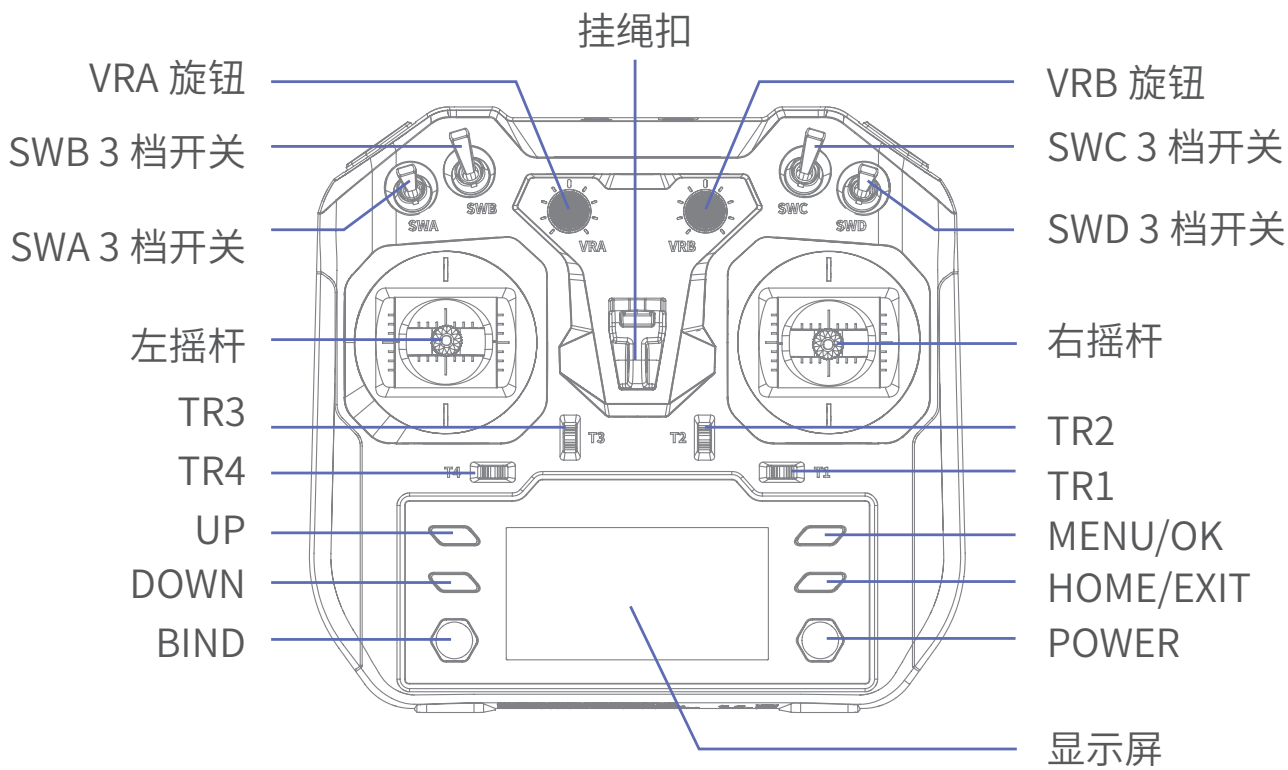

后视图

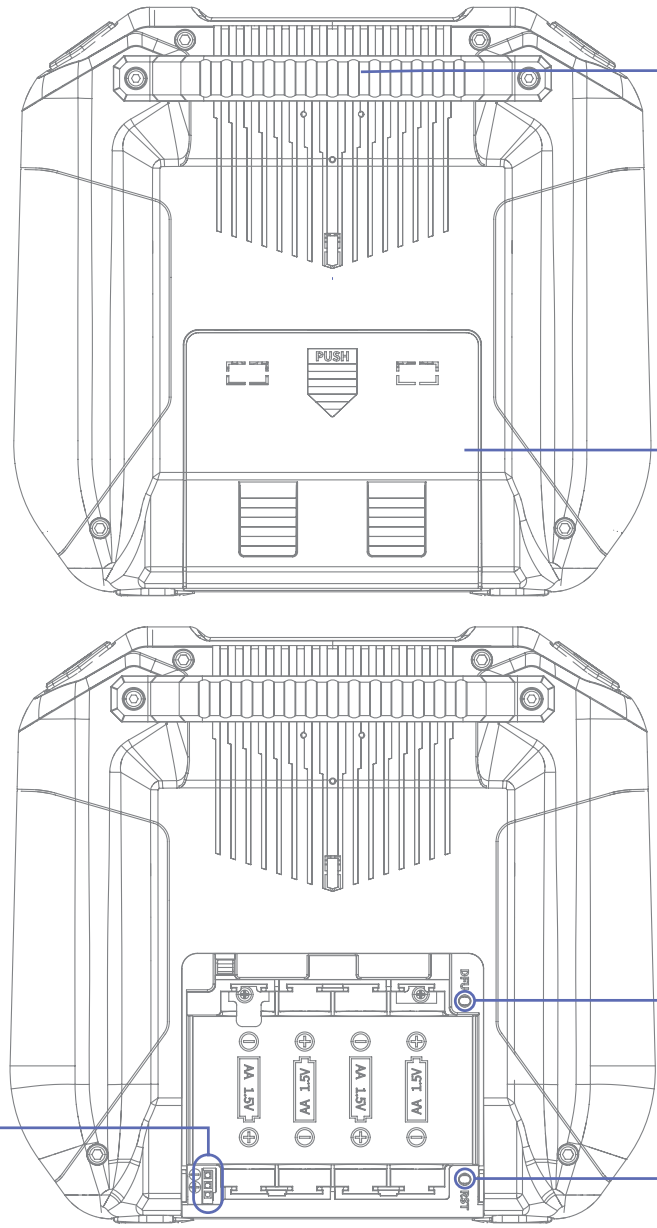

提手


电池仓

DFU

电池导线接口
（JST&杜邦）

RST（复位按键）

顶视图

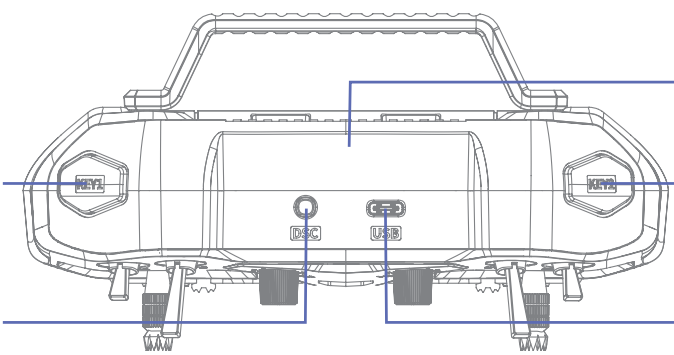

内置双天线

KEY1
（自锁按键）

KEY2
（回弹按键）


DSC 3.5mm
教练口

USB Type-C 接口

AA 电池安装

请按照以下步骤安装 AA 电池：

1. 如图所示，打开电池仓盖；
2. 查看电池仓内部标注的正 (+) 和负 (-) 极方向；
3. 将随机附赠的泡棉垫放入电池仓底部（注意：安装后泡棉垫会覆盖原有的极性标识，请在安装前确认方向。）；
4. 依据已确认的正负极方向，将 4 颗电量充足的电池正确放入仓内；
5. 盖好电池仓盖。

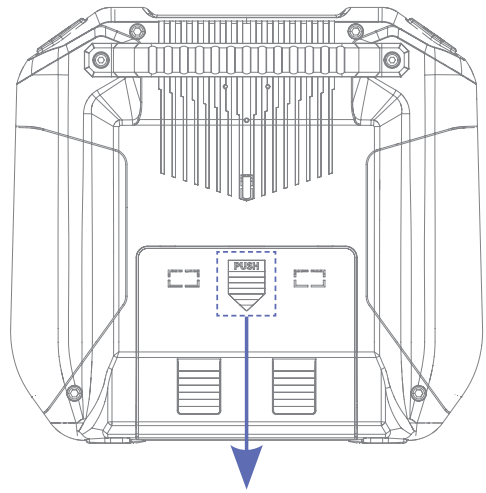

按住此处并沿箭头所示方向滑动，取下电池仓盖。

Lipo 锂电池安装


本发射机支持带电池导线为 JST 接口或杜邦接口的锂电池，请按照以下步骤安装锂电池：

1. 打开电池仓盖；
2. 若电池仓内已安装泡棉垫，请先将其取出，再将电量充足的 2S 锂电池放入仓内；
3. 将随机附赠带背胶的泡棉垫贴到电池仓盖内侧，避免电池晃动；
4. 将电池导线接入电池导线接口 (JST& 杜邦)；
5. 盖好电池仓盖，注意避免夹到电池导线。

注：除所述供电方式外，还可以使用 USB Type-C 线连接发射机的 USB Type-C 接口供电。

系统操作按键

以下是 MENU /OK、HOME /EXIT 、UP、DOWN、BIND 和 POWER 相关功能介绍。

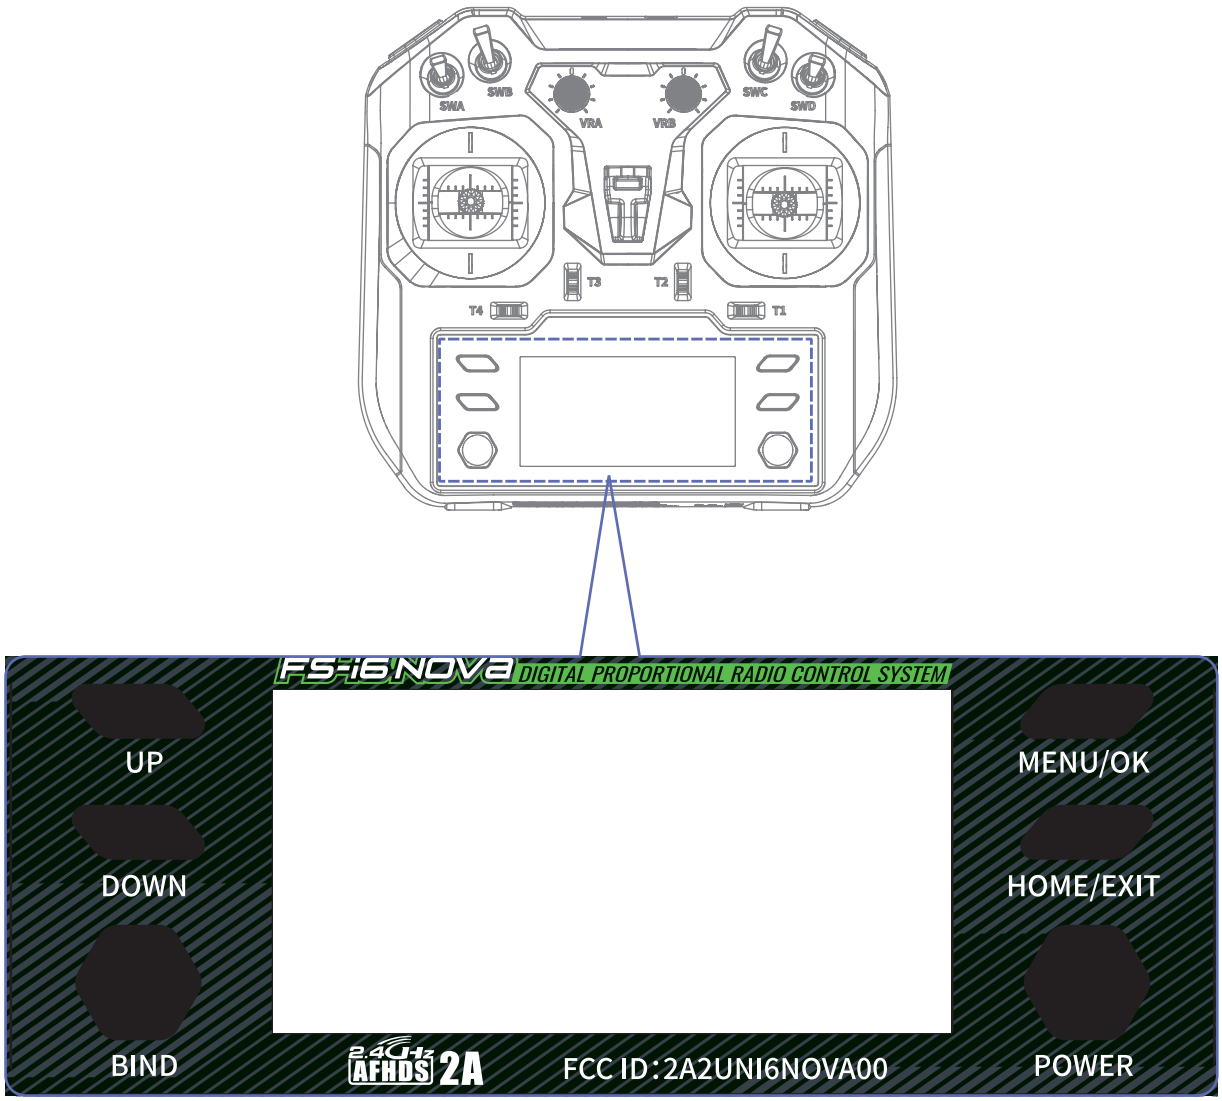

MENU /OK (菜单 / 确认键)

- 首页下：短按进入主菜单。
- 非首页下：短按进入选择的菜单下级页面，或选中此设置项。若选中设置项短按则保存此设置；当选中项支持复位功能时，长按 (约 1 秒) 复位。

HOME/EXIT 键 (主页 / 返回键)

- 非首页下：短按返回上一级，注意当选中为设置选项时返回则设置调整不保存；长按 (约 1 秒) 直接返回至首页。注意发射机固件更新过程中不能返回。

UP (上键)/DOWN (下键)

- 首页下：短按 UP 进入 [通道显示] 界面 ； 短按 DOWN 进入 [传感器列表] 界面。
- 非首页下：如界面有多个功能项（有切换箭头 ）， 此时可用 UP/DOWN 切换功能项；如选中菜单项的设置项，此时可用 UP/DOWN 切换设置项。

  短按 UP 向上逐项切换，短按 DOWN 向下逐项切换。长按可快速连续切换。

BIND（对码按键）

- 首页下：短按进入 [模型选择] 界面。
- 开机时，按下 BIND 并开机，使发射机开机并进入对码状态。

注意对码状态可直接退出到正常开机状态，如要再次进入对码状态需要关机后再按前面描述操作。

POWER（电源键）

- 长按开机 / 关机，具体参考开机和关机章节。

开机

请按照以下步骤开机：

1. 检查系统状态，确保电池电量充足且安装正确；
2. 长按 POWER（电源键），发射机显示屏亮起；
3. 依如下屏幕提示操作至开机成功。
   - 控件是否位于安全位置。请检查控件位置（SWA/SWB/SWC/SWD/KEY1/KEY2/ 油门摇杆），并将其拨至指定位置，后进入主页。若 5 分钟内无任何操作，发射机将自动关机。
   - 或者短按 MENU/OK 进入主页。

关机

请按照以下步骤开机：

1. 先断开接收机电源；
2. 长按 POWER（电源键），待屏幕显示 " 关闭发射机 ...." 提示后，请勿松开，直至屏幕完全熄灭再松开电源键，即可完成关机。

关闭发射机之前，请务必先断开接收机电源，然后关闭发射机。如果强行关闭发射机，将会导致遥控设备失控，失控保护设置不合理可能引起事故。

对码

以 FS-i6 Nova 发射机与 FS-iA10B 接收机双向对码为例，请按照如下步骤操作：

1. 按住发射机 BIND（对码键）并开机，开机后，发射机即进入对码状态，松开 BIND（对码键）和 POWER（电源键）；
2. 将对码线连接到接收机上的 B/VCC 接口；
3. 将电源线连接到接收机上除 B/VCC 外的任意一个接口，接收机指示灯开始快速闪烁，表示其已进入对码状态；
4. 当接收机 LED 灯变为常亮时（同时发射机会自动退出对码状态），然后将对码线和电源线从接收机上断开，再将电源线正确连接到 B/VCC 接口；
   - 接收机的状态指示灯常亮，表示对码成功。
5. 检查发射机、接收机是否正常工作。如需重新对码，请重复以上步骤。

注：不同的接收机对码方式不同，具体对码方式请访问 FLYSKY 官网查询接收机说明书或其他相关资料。

失控保护

当接收机无法正常收到发射机的信号时，接收机按设置好的失控保护值进行通道输出以保护模型和操作人员的安全。

通道 1~ 通道 10 可分别设置失控保护为 [关] 或 [开]。默认设置为 [关]，也就是，失控后保持最后输出。**请根据具体使用的设备，设置合适的失控保**


护数值以确保安全。 当设置为 [开]，可每个通道设置一个失控保护值，默认为读取通道的当前输出值。

也可通过 [所有通道] 设置所有已设置失控保护数值的通道在失控后的输出值。

功能设置：

1. 首页下，短按 MENU/OK，进入菜单界面；
2. [系统] 默认选中（若未选择 [系统]，短按 UP/DOWN 选择 [系统]），短按 MENU/OK 进入下一级界面；
3. 短按 UP/DOWN 选择 [接收机设置]，接着短按 MENU/OK 进入接收机设置界面；
4. 短按 UP/DOWN 选择 [失控保护]，接着短按 MENU/OK 进入失控保护设置界面；
5. 设置单独通道失控保护值：
   - 短按 DOWN/UP 选择要设置的通道，接着短按 MENU/OK 进入下一级界面；短按 DOWN/UP 选择 [开]，然后将此通道对应的控件拨到合适的位置并保持，接着短按 MENU/OK 确认。即完成此通道失控保护值的设置。
6. 设置 [所有通道] 失控保护值：
   - 将所有已设置失控保护数值的通道对应的控件拨到合适的位置并保持，然后短按 MENU/OK，选择 [是]，短按 MENU/OK 确认即完成。
7. 如需恢复默认 :
   - [失控保护] 页面未选任何参数时，长按 MENU/OK 键，系统弹出确认框，选择 [是]，短按 MENU/OK 确认即完成。



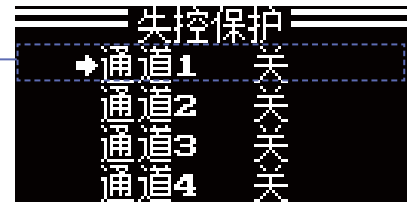







固件更新 / 语言切换


让发射机进入固件更新状态。当使用固件更新程序更新时，需要先通过此功能，让发射机进入更新状态后，然后通过固件更新程序执行更新。


还支持通过 [固件更新] 功能切换发射机系统语言。即更新固件时，选择中文或英文固件以切换语言。


⚠警告	• 当固件正在更新时请勿断开 USB Type-C 线。

固件更新步骤如下：

1. 下载并打开最新的官方软件，注意根据需要选择中文版或英文版；
2. 将发射机通过 USB Type-C 线与电脑连接；
3. 选择 [固件更新]，依照界面提示短按 MENU/OK，接着选择 [是]，短按 MENU/OK 即进入更新状态；
4. 完成以上步骤后，电脑端，点击 [Update]，即开始更新发射机固件；
5. 固件更新完成后，重新开机即可。

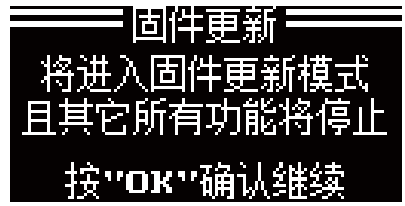

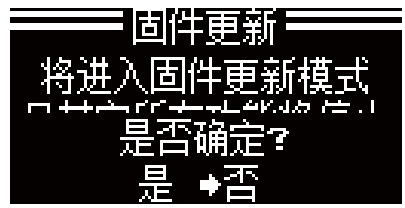

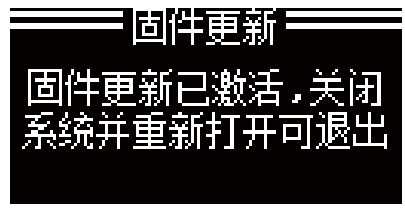

产品规格

- 产品型号：FS-i6 Nova
- 适配接收机：AFHDS 2A 协议接收机
- 适配模型：教育、竞技、娱乐模型
- 通道个数：10
- 波段个数：135
- 无线频率：2.4GHz ISM
- 发射功率：小于 20dBm
- 无线协议：AFHDS 2A
- 通道分辨率：1024 级
- 数据接口：DSC 3.5mm 教练接口、USB Type-C
- 天线类型：内置双天线（1PCB 天线 +1 铜管天线）
- 输入电源：2S 锂电池 /4*AA 电池 （4~9V/DC 供电支持）
- 低电压报警：支持
- 显示方式：黑白 LCD 显示屏（128*64 分辨率）
- 固件更新：支持
- 温度范围：-10°C ～ +60°C
- 湿度范围：20% ～ 95%
- 系统语言：中、英（通过刷写不同语言版本的固件实现）
- 外形尺寸：168.6mm*155.6mm*87.9mm
- 机身重量：360g (不带电池)
- 充电接口：无
- 认证：CE、SRRC、FCCID: 2A2UNI6NOVA00

- 关于 FS-i6Nova 发射机的更多操作请阅读使用说明书。

本说明书中的图片和插图仅供参考，可能与实际产品外观有所不同。 产品设计和规格可能会有所更改，恕不另行通知。

Figures and illustrations in this manual are provided for reference only and may differ from actual product appearance. Product design and specificatiions may be changed without notice.

FLYSKY

微信公众号

Bilibili

Website

Facebook

Http://www.flysky-cn.com

Copyright © 2026 Flysky Technology Co., Ltd.

Release date: 2026-06-08

FCC ID: 2A2UNI6NOVA00

Manufacturer: ShenZhen FLYSKY Technology Co., Ltd.
Address: 16F, Huafeng Building, No. 6006 Shennan Road, Futian District, Shenzhen, Guangdong, China