
FS-i6 Nova

USER MANUAL

FLYSKY

Digital Proportional Radio Control System

2.4GHz AFHDS 2A

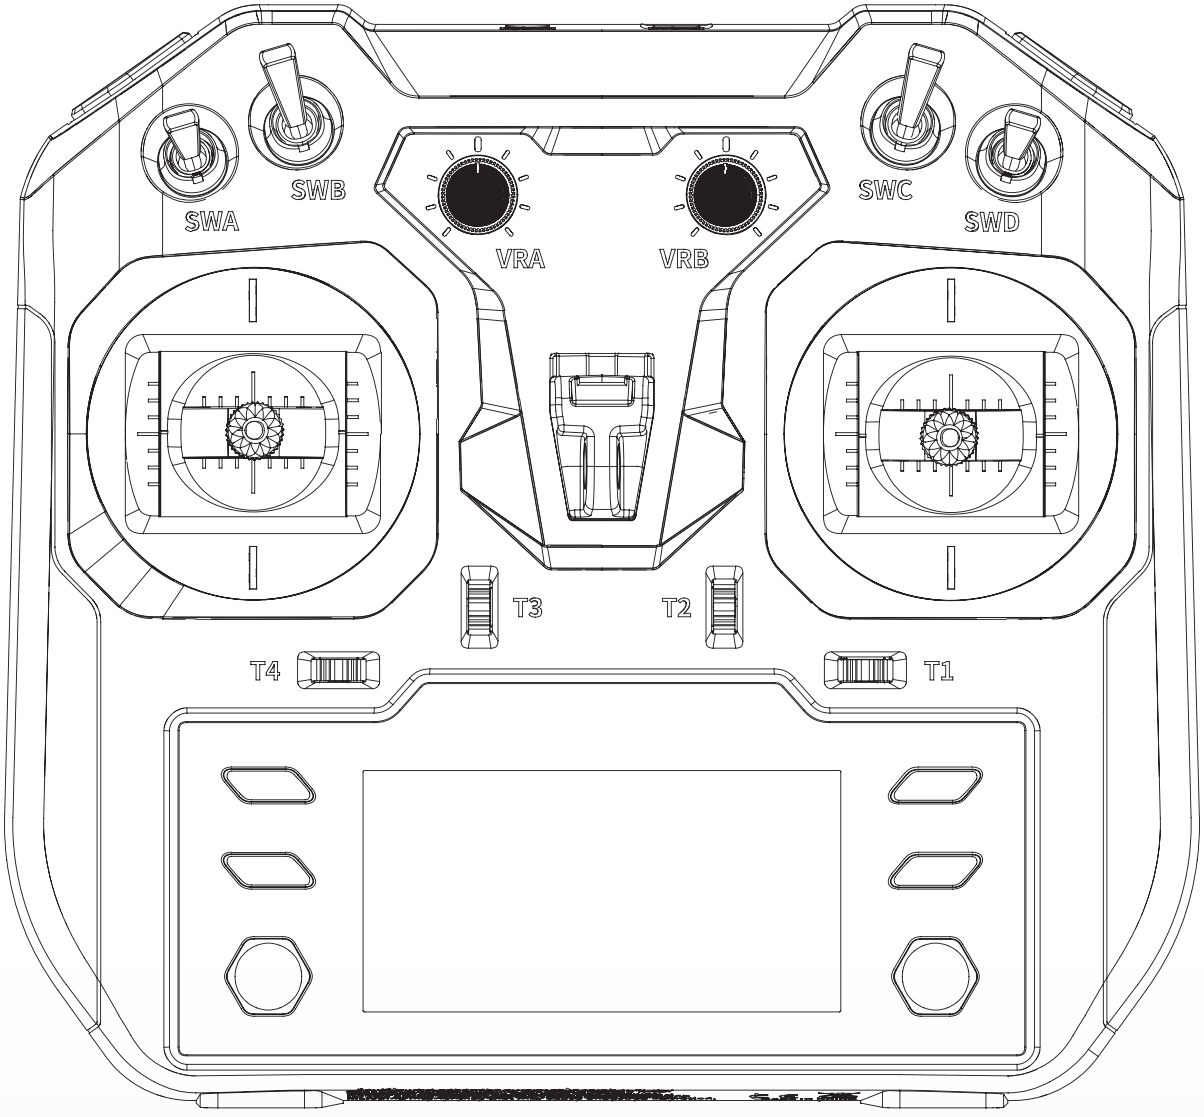

Copyright ©2026 Flysky Technology Co., Ltd.

微信公众号 Bilibili Website Facebook

15+

WARNING:
This product is only for 15 years old or above.

Thank you for purchasing our products. Read the manual carefully to ensure your personal safety as well as the safety of your equipment.

If you encounter any problems during using, please refer to this manual first. If the problem is still not resolved, please contact the local dealer directly or contact the customer service staff via the website below:
http://www.flysky-cn.com

Table of Contents

1.Safety 1
1.1 Safety Symbols 1
1.2 Safety Guide 1
2.Introduction 2
2.1 System Features 2
2.2 Transmitter Overview 3
2.2.1 System Control Buttons 5
2.2.2 Swapping Gimbals 6
2.2.3 Changing KEY1 from a Latching Button to a Momentary Button 7
2.2.4 USB Simulatior Function 8
3. Getting Started 9
3.1 Installing Transmitter Battery 9
3.2 Installing Receiver and Servo 10
4. Operation Guide 11
4.1 Power-On 11
4.2 Binding 11
4.3 Power-Off 11
4.4 Flight Controls (Default Mode 2) 12
4.5 Trims / Switches / Knobs / Buttons 13
5. System Overview 14
6. System 15
6.1 Model Select 15
6.2 Model Name 15
6.3 Model Comb. 16
6.4 Type Select 16
6.5 Model Copy 17
6.6 Model Reset 17
6.7 RX Setup 18
6.7.1 RX Battery 18
6.7.2 Failsafe 18
6.7.3 Sensors List 19
6.7.4 Choose Sensors 22
6.7.5 Speed and Distance 23
6.7.6 ASL Pressure 23
6.7.7 Output Mode 24
6.7.8 i-BUS Setup 24

6.7.9 Servos Freq 25
6.7.10 Low Sig. Alarm 25
6.8 Trainer Mode 25
6.9 Sticks Mode 26
6.10 Battery Type 27
6.11 Firmware Version 27
6.12 Firmware Update & Language Select 28
6.13 Factory Reset 28
7. Function 29
7.1 Reverse 29
7.2 End Points 30
7.3 Display 30
7.4 Aux. Channels 31
7.5 Subtrim 31
7.6 Dual rate/exp. 32
7.7 Throttle Curve 32
7.8 Elevon 33
7.9 V Tail 33
7.10 Pitch Curve (Helicopter Variable pitch) 34
7.11 Gyroscope(Helicopter Variable pitch) 34
7.12 Fly Mode 35
7.13 Throttle Hold 35
7.14 Throttle Idle 36
7.15 Mixes 36
8. Product Specifications 37
8.1 Transmitter Specifications 37
9. Package Contents 38
10. Certifications 39
10.1 DoC Declaration 39
10.2 CE Warning 39
10.3 FCC Statement 39
10.4 Environmentally friendly disposal 40
10.5 CE SAR statement 40
10.6 FCC SAR 40

1.Safety

1.1 Safety Symbols

Pay close attention to the following symbols and their meanings. Failure to follow these warnings could cause damage, injury or death.

⚠ Danger	• Not following these instructions may lead to serious injuries or death.
⚠ Warning	• Not following these instructions may lead to major injuries.
⚠ Attention	• Not following these instructions may lead to minor injuries.

1.2 Safety Guide

Prohibited

- Do not use the product at night or in bad weather like rain or thunderstorm. It can cause erratic operation or loss of control.
- Do not use the product when visibility is limited.
- Do not use the product on rain or snow days. Any exposure to moisture (water or snow) may cause erratic operation or loss of control.
- Interference may cause loss of control. To ensure the safety of you and others, do not operate in the following places:
  - Near any site where other radio control activity may occur
  - Near power lines or communication broadcasting antennas
  - Near people or roads
  - On any body of water when passenger boats are present
- Do not use this product when you are tired, uncomfortable, or under the influence of alcohol or drugs. Doing so may cause serious injury to yourself or others.
- The 2.4GHz radio band is limited to line of sight. Always keep your model in sight as a large object can block the RF signal and lead to loss of control.
- Do not touch any part of the model that may generate heat during operation, or immediately after use. The engine, motor or speed control, may be very hot and can cause serious burns.

Mandatory

- Misuse of this product may lead to serious injury or death. To ensure the safety of you and your equipment, read this manual and follow the instructions.
- Make sure the product is properly installed in your model. Failure to do so may result in serious injury.
- Make sure to disconnect the receiver battery before turning off the transmitter. Failure to do so may lead to unintended operation and cause an accident.
- Ensure that all servos operate in the correct direction. If not, adjust the direction first.
- Make sure the model stays within the systems maximum range to prevent loss of control.

2.Introduction

This product utilizes the 2.4GHz AFHDS 2A (Automatic Frequency Hopping Digital System 2nd Generation Enhanced) system and outputs 10 channels. The system features a built-in model type setup menu, allowing flexible adaptation to a variety of application scenarios.

2.1 System Features

The AFHDS 2A (Automatic Frequency Hopping Digital System Second Generation) developed and patented by FLYSKY is specially developed for all radio control models. Offering superior protection against interference while maintaining lower power consumption and high reliable receiver sensitivity, FLYSKY's AFHDS technology is considered to be one of the leaders in the RC market today.



Bidirectional Communication

Capable of sending and receiving data, each transmitter is capable of receiving data from temperature, altitude and many other types of sensors, servo calibration and i-BUS Support.



Multi-channel Hopping Frequency

This systems bandwidth ranges from 2.408GHz to 2.475GHz. This band is divided in 135 channels. Each transmitter hops between 16 channels (32 for Japanese and Korean versions) in order to reduce interference from other transmitters.



Omni-directional Gain Antenna

The high efficiency Omni-directional high gain antenna cuts down on interference, while using less power and maintaining a strong reliable connection.



Unique ID Recognition System


Each transmitter and receiver has it's own unique ID. Once the transmitter and receiver have been bound, they will save the each other's ID and only connect with each other. When the syetem is working,if the IDs are matched with each other, then the connection will be connect, otherwise, there is no connection between transmitter and receiver. This unique ID recognition syetem resists the interference so as to make the system stabler and more reliable.





Low Power Consumption


The system is built using highly sensitive low power consumption components, maintaining high receiver sensitivity, while consuming as little as one tenth the power of a standard FM system, dramatically extending battery life.

2.2 Transmitter Overview

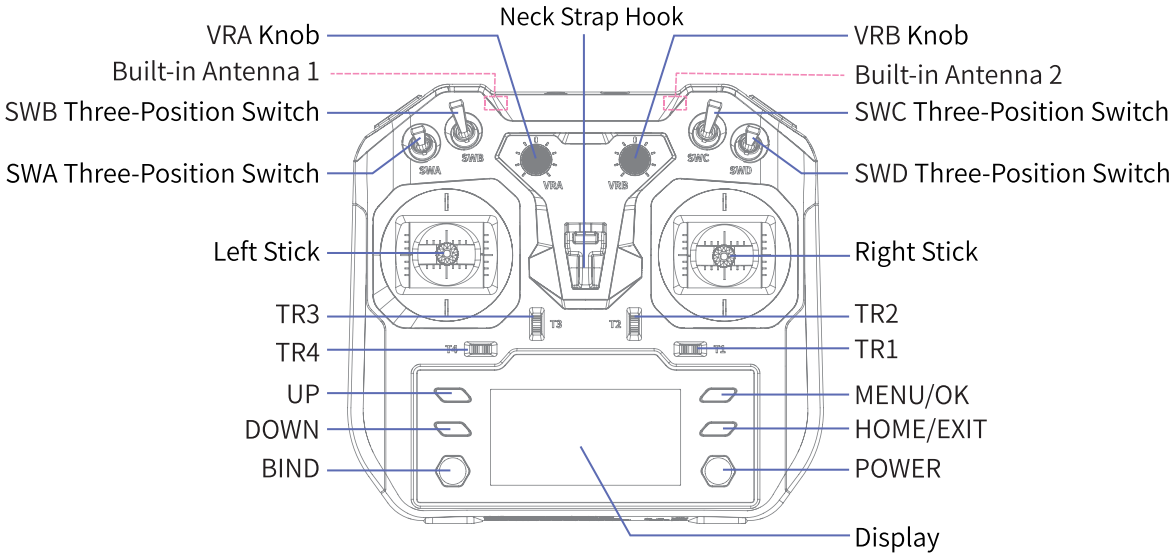

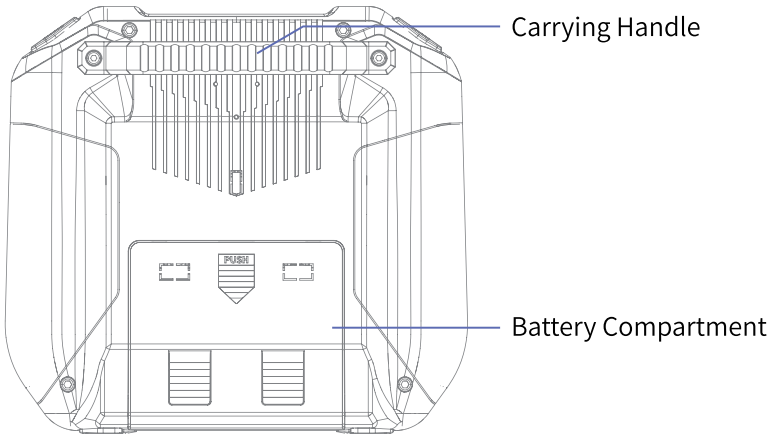

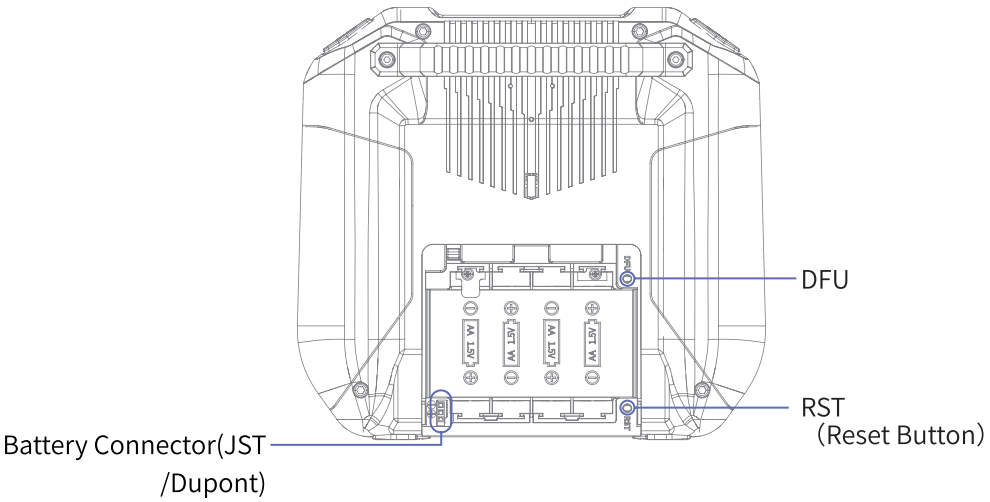


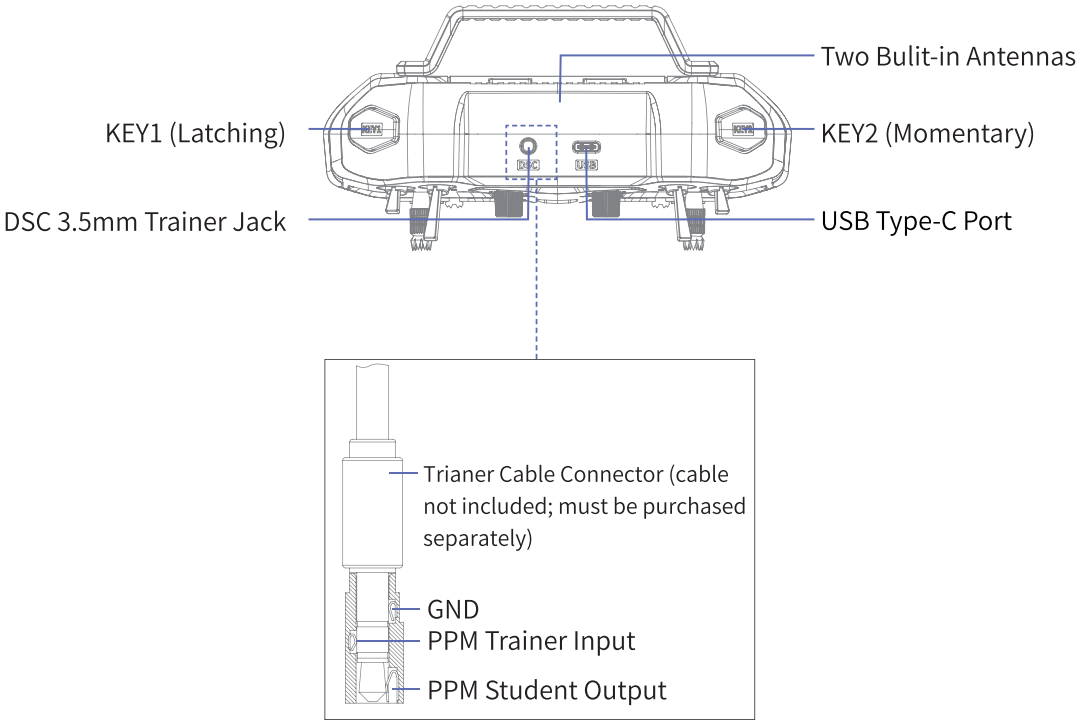


微信公众号 Bilibili Website Facebook

2.2.1 System Control Buttons

The following is an introduction to the functions of MENU/OK, HOME/EXIT, UP, DOWN and POWER.

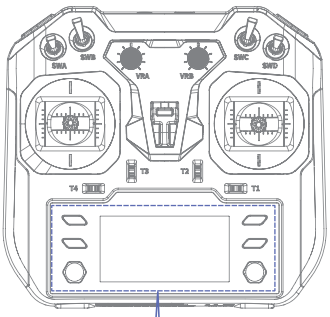

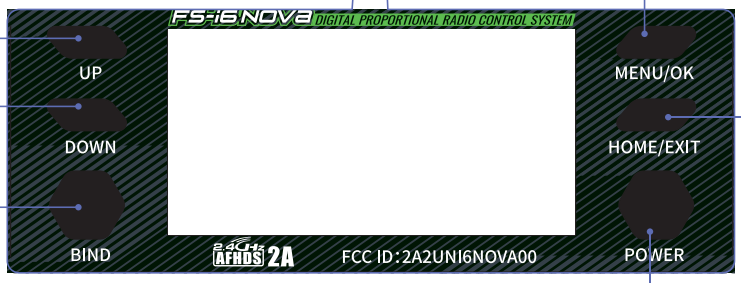

UP Button (up)/DOWN Button (down)

- On the Home Page: Short press UP to enter the Display menu. Short press DOWN to enter the Sensor List menu.
- On Non-Home Screens: When the screen displays multiple functional items (indicated by ➡), use the UP/DOWN to switch between these items. When a setting item is selected, use UP/DOWN to adjust or toggle the item's options.

  Short press of UP/DOWN: Navigate or adjust one step/item at a time. Long press: Enables fast, continuous scrolling or switching.

MENU/OK Button(Menu/OK)

- On the Home Screen: A short press enters the main menu.
- On Non-Home Screens: A short press enters the selected submenu or selects a setting item. If the item is already selected, a short press saves the setting. For items with a reset function, a long press (approx. 1 second) restores the default value.

HOME/EXIT Button(Home/Back)

- On Non-Home Screen: short press to return to the previous level. Note that if you return while a setting option is selected, the adjustment will not be saved; a long press (≈ 1s) jumps directly to the Home Screen. Please note: the button will not work during a transmitter firmware update.

BIND Button (binding)

- On the Home Screen: A short press enters Model Select menu.
- Entering Binding Mode: Press and hold BIND while powering on the transmitter.

  Note: Exiting binding mode returns the transmitter to normal operation. To re-enter binding mode, power off and repeat the procedure.

POWER Button (power switch)


- Long press to power on / off. Refer to the Powering On/Off section for details.

2.2.2 Swapping Gimbals

The stick mode can be adjusted on the non-self-centering throttle version to suit user preferences. Please note, however, that this function is not available on the self-centering throttle version.

When switching between Mode 2/4 and Mode 1/3, the throttle positions will be exchanged. This also requires the user to open the transmitter and reverse the gimbals positions to ensure that throttle is on the correct side. To switch the sticks:

1. Take the battery out from the transmitter, Loosen the four screws that hold the back cover shown in blue in the following digram.
2. Carefully take the back off the transmitter and disconnect the power cable connected to it.
3. Unscrew the screws around the gimbals, marked in blue in the following picture.
4. Switch the gimbals to the opposite side. Make sure the gimbals have been rotated 180 degrees so that the wires are facing towards the middle of the system.
5. Reconnect the power cable connecting the back to the front, then reattach the back and tighten the screws.
6. Install the battery and close the battery compartment cover.
7. Turn on the transmitter, go to the MAIN Menu, select [System setup], and navigate to [Sticks mode]. Then, ensure that the correct stick mode is selected. From the MAIN menu, enter [Functions setup], select [Display], and move the stick to ensure that the channel moves in the correct direction.

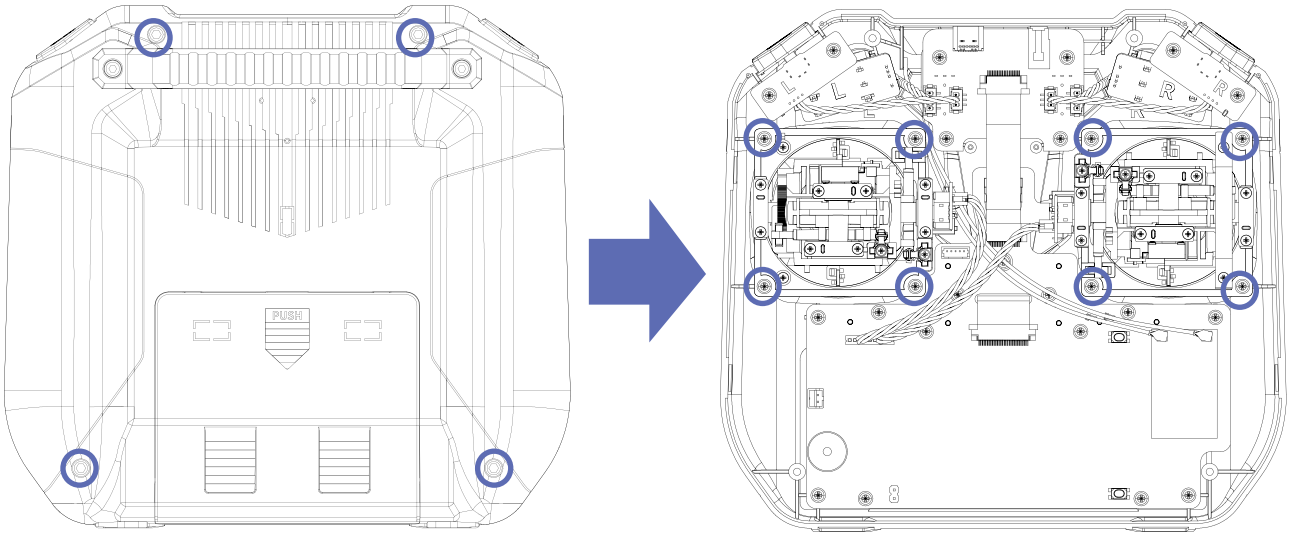


微信公众号 Bilibili Website Facebook

2.2.3 Changing KEY1 from a Latching Button to a Momentary Button


The system allows users to customize key-type buttons as needed.


As configured at the factory, KEY1 is a latching button and KEY2 is a momentary button. If you need to reconfigure KEY1 as momentary and KEY2 as latching, follow these steps:

1. Remove the transmitter's battery cover and battery.
2. Remove the four screws from the back cover (see figure).
3. Carefully separate the front and back covers.
4. Disconnect the power cable between the covers.

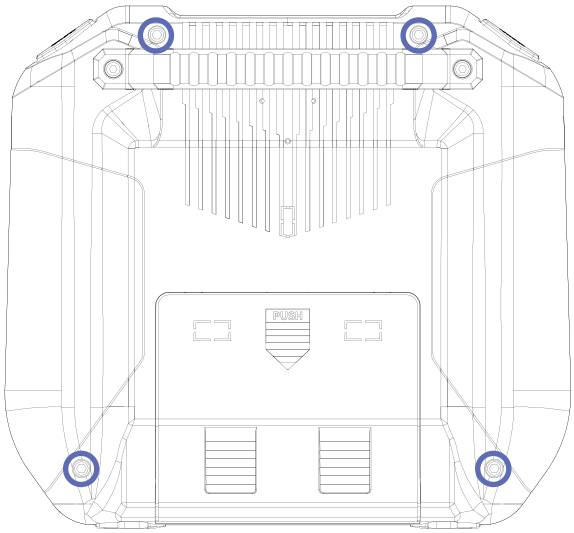


5. Remove KEY1 Button Assembly:
   - Locate KEY1 assembly (PCB marked "R", see figure).
   - Remove its two mounting screws, as shown.
   - Disconnect the assembly's terminal cable from the mainboard, then remove the entire assembly.
   - Gently pry off the keycap from the KEY1 assembly.
6. Remove the KEY2 Button Assembly: Repeat step 5 to remove the KEY2 button assembly.

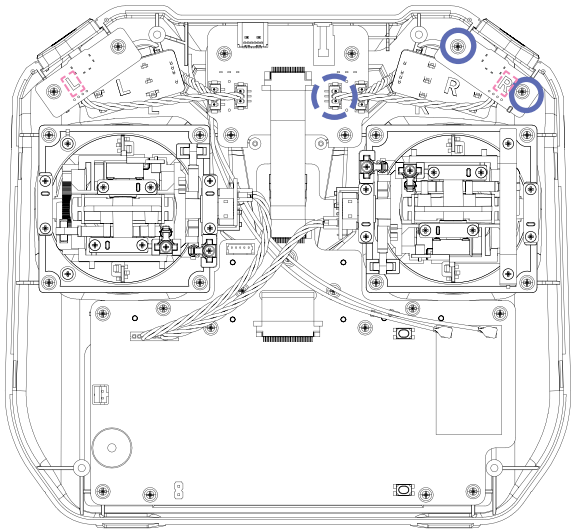

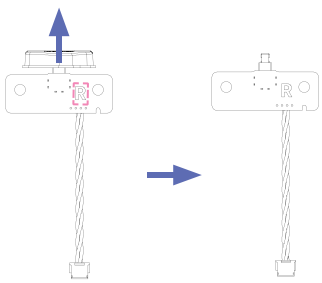

7. Install the KEY1 Button Assembly:
   - Attach the KEY1 keycap to the PCB marked "L", ensuring it snaps securely into place.
   - Reinstall the KEY1 button assembly using the two screws removed in Step 5. Note: Check keycap-to-housing clearance before tightening.
   - Reconnect the terminal cable to the mainboard firmly.
8. Install the KEY2 Button Assembly: Repeat Step 7 to install the KEY2 button assembly.

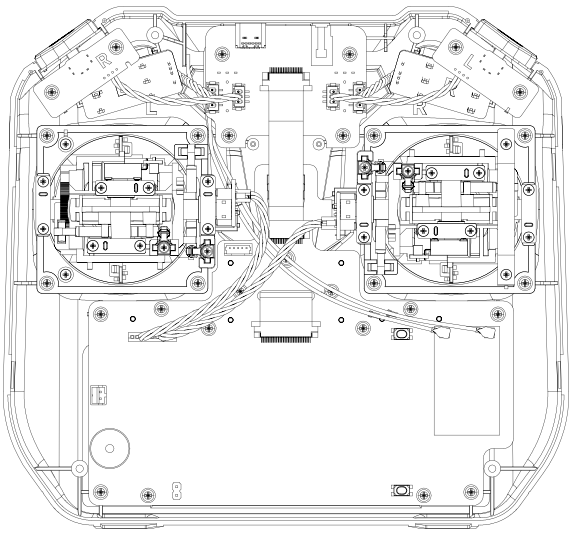

9. Reconnect the power cable between the front and back covers of the transmitter, close the back cover, and tighten the screws.
10. Install the battery and close the battery compartment cover.

2.2.4 USB Simulatior Function

The system can be connected via a USB Type-C cable to a computer for use as a HID device. This function is automatically activated when connected to a computer and will be recognized as a standard HID controller.

⚠	**Attention**	• **If the computer does not recognise the transmitter unplug and reconnect the USB cable.**

3. Getting Started

Prior to operations, please install the battery and connect devices according to the sequence and guide as described in this chapter.

3.1 Installing Transmitter Battery


⚠ Danger	• Only use specified battery.
⚠ Danger	• Do not open, disassemble, or attempt to repair the battery.
⚠ Danger	• Do not crush/puncture the battery, or short the external contacts.
⚠ Danger	• Do not expose to excessive heat or liquids
⚠ Danger	• Do not drop the battery or expose to strong shocks or vibrations.
⚠ Danger	• Always store the battery in a cool, dry place.
⚠ Danger	• Do not use the battery if damaged

Battery types used: AA batteries or 2S LiPo.

Installing the AA Battery

Follow the steps below to install the AA batteries:

1. Open the battery compartment cover as illustrated.
2. Check the positive (+) and negative (-) polarity markings inside the batterycompartment.
3. Place the included foam pad at the bottom of the battery compartment (Note: The foam pad will cover the polarity markings after installation; please confirm the orientation before installing.).
4. Insert 4 fully charged AA batteries into the compartment according to the confirmed polarity directions.
5. Replace battery compartment cover.

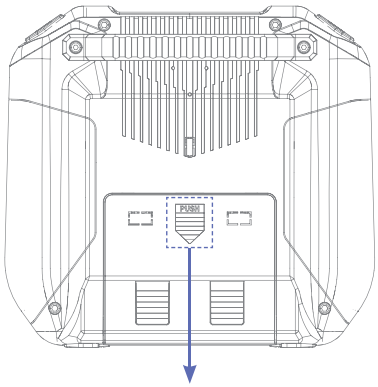

Press and slide the cover as illusrtated. Then remove the cover.

Installing the LiPo Battery

Supports LiPo batteries with JST or Dupont connectors.

Follow the steps below to install it:

1. Open the battery compartment cover.
2. If a foam pad is alreadyinstalled inside the battery compartment, remove it first, then insert 2S fully-charged LiPo battery into the compartment.
3. Attach the included adhesive-backed foam pad to the inside of the battery cover to prevent the battery from moving.
4. Plug the cable of LiPo battery into the Battery Connector.
5. Replace battery compartment cover. Be careful not to pinch the cable.

3.2 Installing Receiver and Servo

Make sure that the receiver is mounted in an appropriate location within the model, to ensure a stable signal, maximum range and to mitigate external interference, follow these guidelines:

Pay attention to the following when installing the receiver:

1. Make sure the receiver is not installed near motors or sources of electrical noise.
2. Keep the receiver's antenna away from conductive materials such as carbon or metal. To ensure normal function, make sure there is a gap of at least 1cm between the antenna and the conductive material.

⚠ **Caution**	• **To prevent damage do not power on the receiver during installation.**

4. Operation Guide

After setting up, follow the instructions below to operate the system.

4.1 Power-On

Follow the steps below to turn on the transmitter:

1. Check to make sure that the battery is fully charged and installed correctly.
2. Press and hold POWER (power switch) until the LCD screen light up.
3. Follow the prompts on the screen to successfully power on.
   - Check if the controls are in the safe position. Please check the position of the controls (SWA/SWB/SWC/SWD/KEY1/KEY2/Throttle Stick) and move them to the specified position to enter the home screen. If there is no operation within 5 minutes, the transmitter will automatically shut down.
   - Or short press MENU/OK to enter the home screen.

⚠ **Warning**	• **Operate with caution in order to avoid damage or injury.**
⚠ **Warning**	• **For your safety, please turn the transmitter switch and throttle to the safe position.**

4.2 Binding

Using the FS-i6 Nova transmitter and FS-iA10B receiver as an example for two-way binding, the steps are as following:

1. Hold the transmitter's BIND button and turn on the transmitter. Once powered on, the transmitter will enter binding mode. Then release the BIND button and POWER button.
2. Connect the binding cable to the B/VCC connector on the receiver.
3. Connect the power cable to any other connector on the receiver. The receiver's LED flashes rapidly, indicating that the receiver has entered the binding mode.
4. Once the receiver's LED is solid on (the transmitter will automatically exit binding mode). At this point, remove the binding cable and the power cable, then reconnect the power cable to the B/VCC connector.
   - Once the receiver's LED is solid on, indicating the binding is successful.
5. Check whether the transmitter and the receiver are working properly. If you need to rebind, repeat the steps above.

- **The binding mode may vary according to the receiver model. Visit the Flysky official website to check the receiver manual or other relevant information.**

4.3 Power-Off

Follow the steps below to turn off the system:


1. Disconnect the receiver power.
2. Press and hold POWER (power switch). When the screen displays the prompt "Turn off the transmitter....", do not release the button. Continue holding until the screen goes completely dark, then release POWER to complete the shutdown.


⚠ **Danger**	• **Make sure to disconnect the receiver power before turning off the transmitter. Failure to do so may lead to damage or serious injury.**

4.4 Flight Controls (Default Mode 2)


The sticks are used for controlling the aircraft, each stick has 2 functions. The right stick controls pitch and roll, the left stick controls throttle and yaw.


To control pitch(elevator), move the right stick up or down.

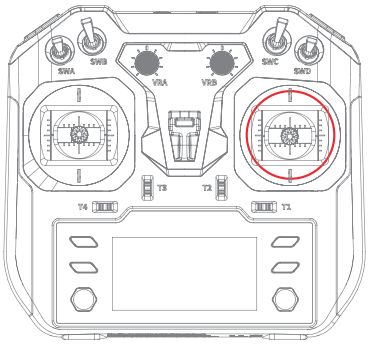

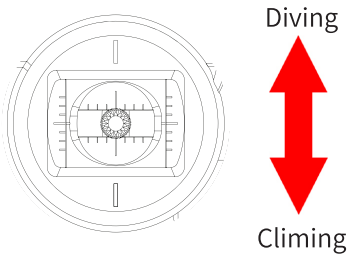



To control roll (ailerons), move the right stick left or right.

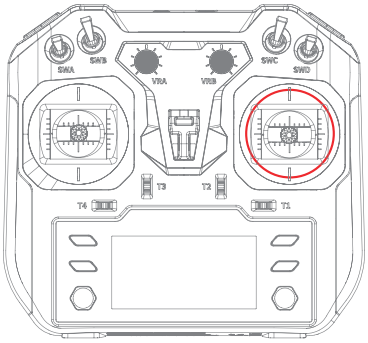

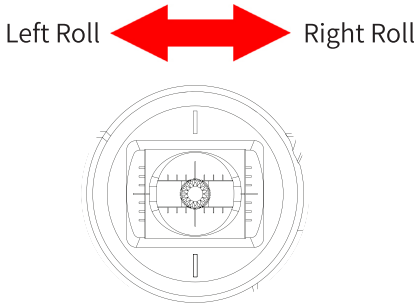


To control yaw (rudder), move the left stick left or right.

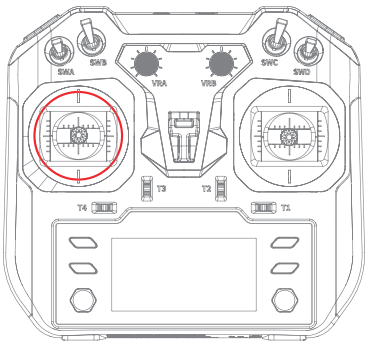


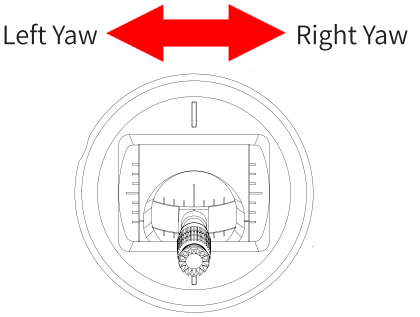

微信公众号 Bilibili Website Facebook

To control throttle, move the left stick up or down.

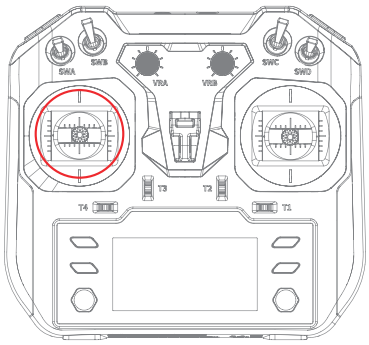

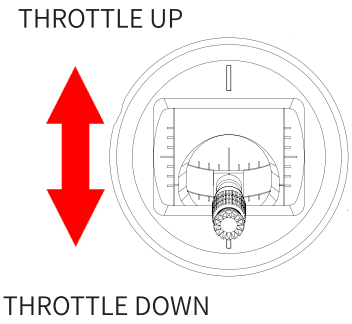

4.5 Trims / Switches / Knobs / Buttons

The transmitter features 4 trim switches (TR1–TR4), 4 position- switches (SWA–SWD), 2 knobs (VRA and VRB), and 2 buttons (KEY1 and KEY2).

Trims:

Used to adjust the center offset of the corresponding stick axis during control. The current trim position (centered or offset) can be viewed on the home screen.

Switches / Knobs / Buttons:

These can be customized by the user in the corresponding function settings, for purposes such as switching fly modes, throttle Idle Switch, or controlling auxiliary channels.

5. System Overview

System Home Screen and Menu Introduction


Home Screen



Status Bar: Displays signal strength, current model number, and transmitter battery level (Note: Ensure the battery type is correctly set for accurate display).

If a receiver has been bound, the receiver battery level will also be displayed here (Note: Configure the high/low voltage range for the receiver battery to accurately indicate the battery level).

If the transmitter is powered on via USB without a battery installed, the transmitter battery level will not be displayed.

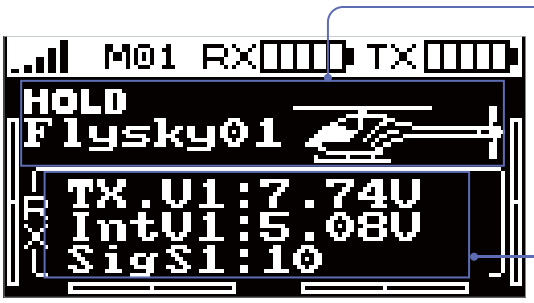

Displays the fly mode status, throttle hold (shown only when active), throttle idle status, as well as the model name and model image.

Fly Mode: F1 represents Normal, F2 represents Sport.


Throttle Hold: HOLD indicates the function is active.

Throttle Idle: IDLE ON means idle is active; IDLE OFF means idle is off.

Display the information of sensors.

The displayed sensors can be selected via the Choose sensors function.

MENU Screen

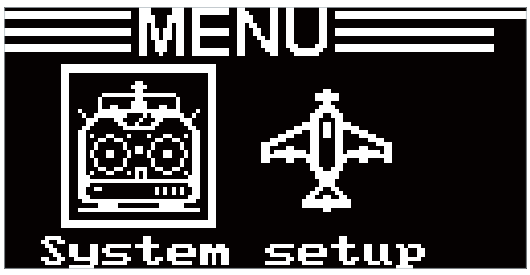

The transmitter's menu interface consists of two main modules: [System setup] and [Functions setup] .

[System setup] : Includes Model select, Model name, Model comb., Type select, Model copy, Model reset, RX setup, Trainer mode, Sticks mode, Battery type, Firmware Ver., Firmware Update (Language switch), and Factory reset.

[Functions setup] : Includes Reverse, End points, Display, Aux. channels, Subtrim, Dual rate/exp., Throttle curve, Elevon, V Tail, Pitch Curve, Gyroscope, Fly mode, Throttle hold, Throttle idle, and Mixes.

On the home screen, a short press MENU/OK enters the MENU menu. Short press UP/DOWN to select [System] or [Functions]. Short press MENU/OK to enter the selected submenu.

微信公众号 Bilibili Website Facebook

6. System

This section covers the function settings available in the System Menu.

6.1 Model Select

Use this function to select stored models. The system can store up to 20 models.

Setup:

1. Navigate to the [Model select] setting interface.
2. To select a model number, first short press MENU/OK to activate the field. You can then short press UP/DOWN to adjust the number, or long press UP/DOWN for rapid selection.
3. Short press MENU/OK to confirm. Then short press HOME/EXIT to return.



The arrow is used to indicate the currently selected function item.






6.2 Model Name

This function renames the currently selected model.

Setup:

1. Navigate to the [Model name] setting interface.
2. Set the first character:
   - Short press UP/DOWN to select a desired letter, number, or symbol.
   - Short press MENU/OK to confirm your selection. Long press MENU/OK to restore the factory default.
3. The system will automatically proceed to the next character. Repeat the previous steps to set all subsequent characters.
4. Short press HOME/EXIT to return.



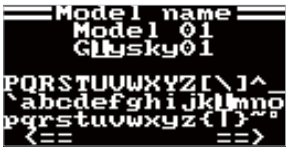

6.3 Model Comb.

This function allows you to create multiple model groups and assign a switch. When the present model is part of a combination, you can use this pre-assigned switch to cycle through the models within it.

You can assign an SW-type control. Moving the switch UP selects the previous model. Moving the switch DOWN selects the next model. The center position is inactive.

Setup:

1. Navigate to the [Model comb.] setting interface.
2. To assign a Control switch:
   - Select [Switches] and short press MENU/OK to confirm.
   - Short press UP/DOWN to choose the desired control, then short press MENU/OK to confirm.
3. To configure models in the Combination (Displays [Uncombined] when not set, and [Combined] when set.):
   - Select [Mix settings] and short press MENU/OK to confirm.
   - Short press UP/DOWN to choose the desired model, then short press MENU/OK to confirm.
   - Short press MENU/OK again, select [Yes], and short press MENU/OK to confirm. A checkmark will now appear in the function box to the right of the model.
   - Continue setting up the combination by referring to the above steps.
4. Short press HOME/EXIT to return.



6.4 Type Select

This function changes the type of the currently selected model, including Airplane or glider, Helicopters Variable pitch, and etc.

Setup:

1. Navigate to the [Type select] setting interface.
2. Short press MENU/OK to confirm, and short press UP/DOWN to choose model type, then short press MENU/OK to confirm.
3. Short press HOME/EXIT to return.



微信公众号 Bilibili Website Facebook

6.5 Model Copy

This function allows you to copy the data of one model to another. When setting up a new model, you can use this function to copy existing model data and then modify different parts without repeating settings. It is very convenient.

Setup:

1. Navigate to the [Model copy] setting interface.
2. Select a model as the copy object:
   - Short press MENU/OK to confirm.
   - Short press UP/DOWN to choose the desired copy model, then short press MENU/OK to confirm.
3. Select the destination model:
   - Select the model below "copy to", then short press MENU/OK to confirm.
   - Short press UP/DOWN to choose the desired destination model, then long press MENU/OK.
4. Select Copy, then short press MENU/OK to confirmm, select [Yes] in the pop-up window, then short press MENU/OK to confirm.



6.6 Model Reset

This function resets the current model to the default settings.

Setup:

1. Navigate to the [Model reset] setting interface.
2. Short press MENU/OK to confirm, and short press UP/DOWN to choose [Yes]. then short press MENU/OK.




6.7 RX Setup

This section is an introduction to receiver related functions.

6.7.1 RX Battery

Used to detect the voltage of the connected receiver (internal or external voltage sensor). When an alarm voltage is set, an alert will be triggered if the receiver's voltage drops below the set value. Adjusting the high/low voltage settings will affect the display of the receiver's battery level on the home page.

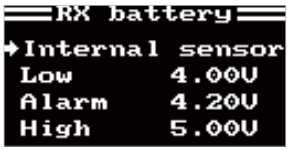

Setup:

1. Navigate to the [RX battery] setting interface.
2. To set a alarm item:
   - Short press MENU/OK to activate and select [Internal sensor] or [External sensor] using UP/DOWN.
3. To set the low voltage:
   - Select [Low], then short press MENU/OK to confirm.
   - Short press UP/DOWN to set the desired value.
   - Short press MENU/OK. Long press MENU/OK to restore the factory default.
4. The [Alarm] and [High] are set by following the steps described above for the low voltage.

6.7.2 Failsafe


The failsafe function is used when the receiver loses radio signal and is out-of-control. The receiver performs channel output according to the set failsafe value to protect the safety of the model and personnel.

Each channel from 1 to 10 can be individually set to either [OFF] or [ON] for its failsafe. The default setting is [OFF], which means the channel will hold its last output value upon RF signal loss. **To ensure safety, always configure appropriate failsafe values based on your specific equipment.** When set to [ON], a specific failsafe value can be defined for the channel. The default value is the channel's current output.

You can also set the output value for all channels with configured failsafe values through [All Channels] after RF signal loss.

Setup:


1. Navigate to the [Failsafe] setting interface.
2. Set an individual channel failsafe:
   - Short press DOWN/UP to select a channel, then short press MENU/OK.
   - In the submenu, set the option to [ON], then move and hold the corresponding physical control to the position you wish to set. Finally, short press MENU/OK to confirm.
3. Set [All channels] failsafe:

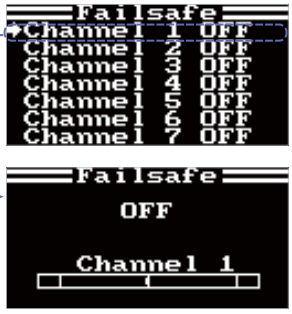

微信公众号 Bilibili Website Facebook

- Move all controls corresponding to channels with set values and hold them if needed.
- Short press MENU/OK, then set the option to [YES].
- Finally, short press MENU/OK to confirm.

4. Short press HOME/EXIT to return.

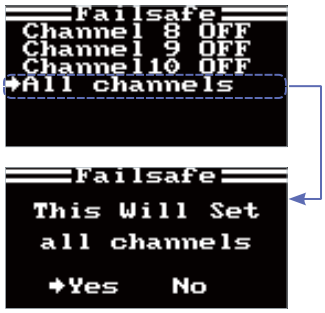

Restore the Factory Default

Restore all channel failsafe values to factory defaults.



Setup:

1. If no parameters is selected in the Failsafe interface, long press MENU/OK. A pop-up box will then appear.
2. Short press DOWN/UP to select [YES], then short press MENU/OK, the box closes and all parameters return to factory defaults.

6.7.3 Sensors List

This list displays data from all sensors connected to the transmitter, including their type, ID, and real-time readings.

ID 1 is reserved for the transmitter's voltage or receiver's internal voltage, signal strength, RSSI, noise, and SNR. ID 2 is assigned to the first external sensor connected to the receiver, and so on. The receiver supports up to 15 sensors.

The list updates in real time. When a sensor is connected to the receiver, the list will automatically refresh to display its data. Conversely, the data for a sensor will be removed from the list once it is disconnected.

Signal Strength: Displays the signal strength between the transmitter and receiver, calculated using SNR. The signal strength is shown as a value between 0 and 10. In a given environment, the value decreases as the distance increases. If the signal strength drops to 4 or below, the system will alert the user.


RSSI: To indicate the power of the signal received by the receiver. 0 to -40dBm: Indicates that the distance between transmitter and receiver is close and the communication quality is best. -40dBm to -85dBm: The communication quality is good. Less than -85dBm: Indicates that there is an obstacle between the transmitter and receiver or the distance is far. Please shorten the control distance to avoid losing control.

SNR: The signal-to-noise ratio refers to the decibel difference between the signal and the noise received by the receiver. The signal-tonoise ratio equals the data of RSSI subtract the data of Noise, which is a decisive parameter in the overall quality of the signal. If the SNR drops below 11, reduce the range quickly to prevent loss of control.

Noise: Noise is generated due to interference from other nearby transmitters such as Wi-Fi. In places where there are too many transmitters, excessive noise will affect the redio-controlled distance.

Setup:


1. Navigate to the [Sensor list] setting interface.
2. Short press UP/DOWN to view the sensor information.
3. Short press HOME/EXIT to return.

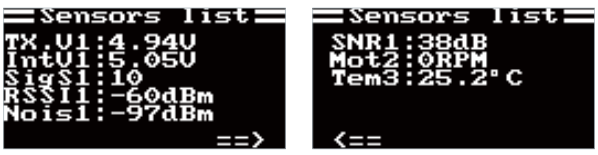

The FS-i6 Nova transmitter supports i-BUS series sensors, including FS-CAT01 (Altitude), FS-CPD01 (Speed/Magnetic), FS-CPD02 (Speed/Optical), FS-CVT01 (Voltage), FS-CTM01 (Temperature), and FS-CGPS01 (GPS). These sensors are connected via the SENS interface on the receiver.

Using the FS-iA10B receiver bound with the FS-i6 Nova transmitter as an example, you can view the telemetry data returned by connected i-BUS sensors by navigating to: Home > MENU > [SYSTEM setup] > [RX SetUP] > [Sensor List].

Below are the installation steps for several i-BUS sensors (acquisition modules).

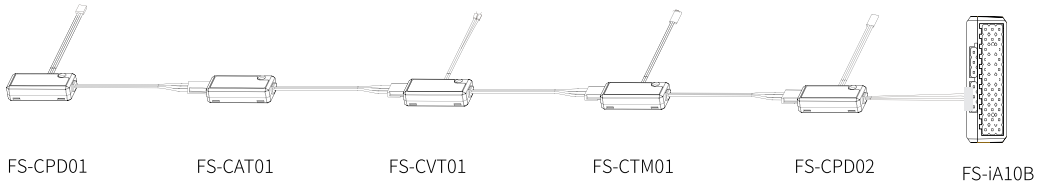


FS-CPD01: Magnetic Speed Module

Used to monitor the speed of the motor. The length of one wheel revolution can be set to calculate the model's travel distance. For details, refer to 6.7.5 Speed and Distance.

Setup:

1. Place the sensor next to the magnet, which is fixed to the spinning part of a model such as the blades of a plane rotor.
   Note: Make sure that the sensor is within 2mm of the magnet and the north pole or south pole of the magnet is parallel to the sensor.
2. Connect the FS-CPD01 sensor to the SENS interface of the FS-iA10B receiver.
3. On the transmitter side, access the Sensors List. If the Mot2 appears, it means the installation was successful. If not, repeat the above steps.

Note: Mot2 means the sensor is testing the speed of the motor. 12rpm is the speed measurement value.

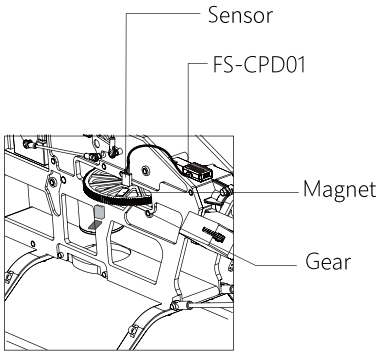


FS-CPD02: Optical Speed Module

Used to measure the speed of the motor.

Setup:

1. Mount the sensor and the reflective sticker to the axial rotation position.
   Note: Keep the reflective sticker flat and perpendicular to the sensor, and the distance between the sensor and the sticker is moderate.
2. Connect the FS-CPD02 sensor to the SENS interface of the FS-iA10B receiver.

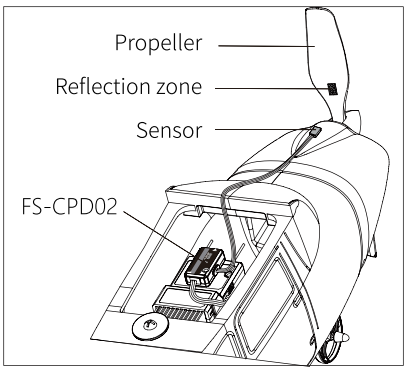

微信公众号 Bilibili Website Facebook

3. On the transmitter side, access the Sensors List. If the Mot2 appears, it means the installation was successful. If not, repeat the above steps.

Note: Mot2 means the sensor is testing the speed of the motor. 12rpm is the speed measurement value.

FS-CTM01: Temperature Module

This sensor is used to monitor the temperature of a chosen part of the model.

Setup:

1. Use soft double-sided tape to attach the FS-CTM01 to element you want to measure (e.g., motor, battery). Make sure the sensor is pressed against the surface snugly.
2. Connect the FS-CTM01 sensor to the SENS interface of the FS-iA10B receiver.
3. On the transmitter side, access the Sensors List. If the Tem2 appears, it means the installation was successful. If not, repeat the above steps.

Note: Tem2 means the sensor is testing the temperature. 26.4° C is the measured value.

FS-CVT01 Voltage Module

The FS-CVT01 function is used to monitor the model battery voltage.

Setup:

1. Insert the red and black wire pins into the battery port, with the red pin indicating the positive terminal and the black pin indicating the negative terminal.
2. Connect the FS-CVT01 sensor to the SENS interface of the FS-iA10B receiver.
3. On the transmitter side, access the Sensors List. If Ext V2 appears, it means the installation was successful. If not, repeat the above steps.

FS-CAT01 Altitude Module

The FS-CAT01 detects the altitude of the model using air pressure. To calibrate the altitude sensor. Refer to 6.7.6 ASL Pressure.

Setup:

1. Use double-sided soft tape to snugly fix the FS-CAT01 and the receiver in place.
2. Connect the FS-CAT01 sensor to the SENS interface of the FS-iA10B receiver.
3. On the transmitter side, access the Sensors List. If ALT2 appears, it means the installation was successful. If not, repeat the above steps.


Note: ALT2 means the sensor is testing the altitude. 133m is the measured value.


6.7.4 Choose Sensors

This function changes which sensors will be displayed on the home interface. The home interface can display up to 3 sensors.

Setup:

1. Navigate to the [Choose sensor] setting interface.
2. Set sensor [1]:
   - Select [1], then short press UP/DOWN to choose the sensor displayed.
   - Short press MENU/OK to confirm. Long press MENU/OK to restore the factory default.
3. sensor [2] and sensor [3] are set by following the steps described above for the sensor1.

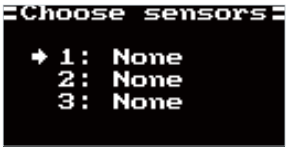

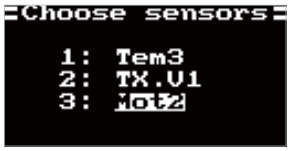



微信公众号 Bilibili Website Facebook

6.7.5 Speed and Distance



This function is for setting up speed and distance sensors.

Speed Sensor

Choose the target sensor.

Rotation Length

If a speed sensor is installed on the wheel, you need to define the length of each rotation. This length is used to calculate the model's travel distance.

Reset Odometer 1


Used to reset Odometer 1. Odometer 1 records the distance traveled in a single trip. The value of Odometer 1 will also automatically reset to zero upon repowering the transmitter.

Reset odometer 2

Used to reset Odometer 2. Odometer 2 records the total travel distance since the last reset, which is the cumulative value of each trip's distance.

Setup:



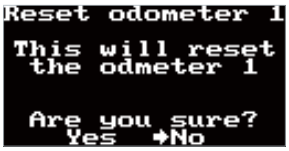

1. Navigate to the [Speed and distance] setting interface.
2. Set speed sensor:
   - Short press UP/DOWN to select a desired sensor.
   - Short press MENU/OK.
3. Set rotation length:
   - Select [Rotation Length] to enter, then short press UP/DOWN to set a desired value.
   - Short press MENU/OK to confirm. Long press MENU/OK to restore the factory default.
4. Reset Odometer 1 :
   - Select [Reset Odometer 1] to enter.
   - Short press DOWN/UP to select [Yes].
   - Short press MENU/OK to confirm.
5. Reset Odometer 2 by following the same steps as for Odometer 1.

6.7.6 ASL Pressure

The "Set ASL" function calibrates the altitude sensor and has a setting range from 870 hPa to 1090 hPa.

Setup:





1. Navigate to the [ASL pressure] setting interface.
2. Set pressure value:
   - Short press MENU/OK.
   - Short press UP/DOWN to choose the desired value.
   - Short press MENU/OK to confirm. Long press MENU/OK to restore the factory default.
3. Short press HOME/EXIT to return.

6.7.7 Output Mode

Use this function to set the output mode for the receiver interfaces: the SERVO, i-BUS, or i-BUS/S.BUS interface (supports i-BUS or S.BUS), and the CH1 interface (supports PPM or PWM). Please refer to the receiver manual for details.

When set to [PWM], the receiver CH1 channel interface output PWM signals. When set to [PPM], the receiver CH1 channel (PPM interface) outputs a standard PPM signal.

When set to [i-BUS], SERVO interface outputs an i-BUS signal, which is used to connect to the FS-CEV04 serial bus receiver. When set to [S.BUS], it is used to connect to devices that support S.BUS.

Setup:



1. Navigate to the [Output mode] setting interface.
2. Set output:
   - Select [CH1], then short press MENU/OK to activate.
   - Short press UP/DOWN to choose the desired output mode.
   - Short press MENU/OK to confirm.
3. Complete the i-BUS/SERVO settings by referring to the previous steps.
4. Short press HOME/EXIT to return.

6.7.8 i-BUS Setup


You can set up external devices using the i-BUS protocol. The currently settable devices include the i-BUS serial receiver.

The i-BUS function is mainly used for servo extension. When servo lines are too short or there are too many servos to connect directly to the receiver ports, this function can be used to solve the problem.

Note: Before setting [i-BUS Setup], please refer to Section 6.7.7 Output Mode to set [i-BUS/SERVOl] to [i-BUS].

Setup:



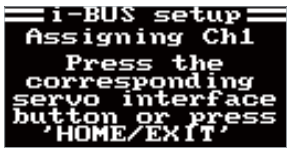

1. Connect the input wires of the i-BUS receiver to the i-BUS/Servo interface of the receiver (and set [i-BUS/SERVOl] to [i-BUS]).
   - Note that the transmitter and the receiver have bound.
2. Navigate to the [i-BUS setup] setting interface.
3. Set the channel:
   - Short press UP/DOWN to choose the desired channel.
4. Short press MENU/OK to confirm(if the channel is wrong, short press HOME/EXIT to cancel and reset). Follow the system prompts to continue:
   - Press the corresponding button on the i-BUS receiver.
5. Repeat the steps above for setting more channels.

微信公众号 Bilibili Website Facebook

6.7.9 Servos Freq

This function adjusts the servo frequency, with an adjustable range of 50Hz to 400Hz.

If a servo's required frequency differs from the system default, use this function to match it. For correct operation, always confirm the appropriate frequency in the servo's user manual before making any adjustments.

Setup:



1. Navigate to the [Servos Freq] setting interface.
2. Set pressure value:
   - Short press MENU/OK.
   - Short press UP/DOWN to set the desired value.
   - Short press MENU/OK to confirm. Long press MENU/OK to restore the factory default.
3. Short press HOME/EXIT to return.

6.7.10 Low Sig. Alarm

This function configures a signal strength alarm for the communication between the transmitter and the receiver. The receiver triggers an alarm when the signal strength is low (less than or equal to 4).

Setup:



1. Navigate to the [Low sig. alarm] setting interface.
2. Short press MENU/OK. Then short press UP/DOWN to choose [ON] or [OFF]. Short press MENU/OK to confirm.
3. Short press HOME/EXIT to return.

6.8 Trainer Mode

This function is designed for beginners, allowing an trainer to guide and train a student under supervision to mitigate the risks associated with the learning process.

The system supports any transmitter with a standard PPM output as the student's unit.


Please note that the two transmitters must be connected using an optional trainer cable. The trainer's transmitter must have the trainer mode enabled (indicated as ON on the interface) to be controlled by the student's transmitter. When the trainer switch is disengaged, control returns to the trainer's transmitter. If the student's flight becomes dangerous or deviates significantly, the trainer can immediately switch back to ensure safety.

Notes:

1. The trainer's transmitter and the student's transmitter must be connected using a trainer cord. When using the trainer function, you should first check whether the trainer cable is properly connected.
2. The trainer function will only be activated when the trainer function control switch is turned on and the student's signal is input. Otherwise, it will be ineffective.

Setup:

1. Navigate to the [Trainer mode] setting interface.
2. Set the Mode
   - Select Mode, then short press MENU/OK.
   - Short press UP/DOWN to choose [Trainer], [Student] or [OFF].
   - Short press MENU/OK to confirm.
3. Set a switch when the mode is set to Trainer. :
   - Select Swicth, then short press MENU/OK.
   - Short press UP/DOWN to choose a desired control.
   - Short press MENU/OK to confirm.
4. Short press HOME/EXIT to return.

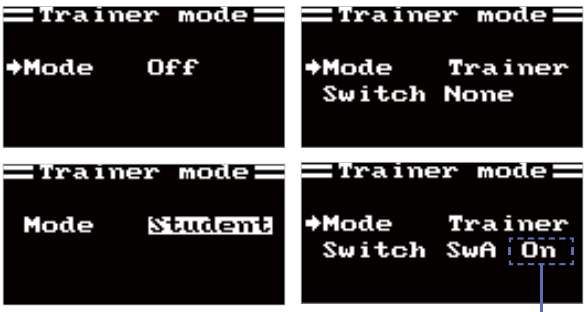

When the status is "On", control lies with the trainer. When it is "Off", control transfers to the student.

6.9 Sticks Mode

This transmitter offers four different stick modes, which can be configured to your preference. CH1 to CH4 correspond to aileron, elevator, throttle, and rudder, respectively.

After configuring the system settings, you may need to make physical adjustments to the stick assembly. The following adjustments are necessary:

When changing the throttle position between left and right sides. No adjustments are needed for any other changes.

The default configuration is Mode 2:

[CH1]: Move the right stick left/right to control aileron.

[CH2]: Move the right stick up/down to control elevator.


[CH3]: Move the left stick up/down to control throttle.

[CH4]: Move the left stick left/right to control rudder.

When switching between Mode 2/4 and Mode 1/3, the throttle position will be swapped. Additionally, you will need to open the transmitter and physically adjust the stick mechanisms to complete the mode change. For detailed steps, please refer to [Section 2.2.2 Sapping Gimbals].

Setup:

1. Navigate to the [Stick mode] setting interface.
2. Set pressure value:
   - Short press MENU/OK.
   - Short press UP/DOWN to set the desired mode.
   - Short press MENU/OK to confirm. Long press MENU/OK to restore the factory default.
3. Short press HOME/EXIT to return.

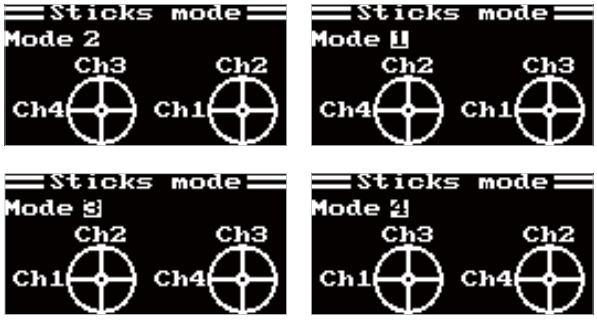


微信公众号 Bilibili Website Facebook

6.10 Battery Type

This function is used to set the transmitter battery type, which can be set to [AA] or [2S Lipo].

Setup:

1. Navigate to the [Battery type] setting interface.
2. Set battery type:
   - Short press MENU/OK.
   - Short press UP/DOWN to set the desired type.
   - Short press MENU/OK to confirm. Long press MENU/OK to restore the factory default.
3. Short press HOME/EXIT to return.

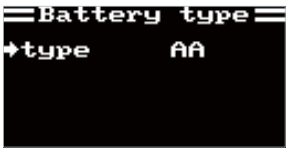

6.11 Firmware Version

Display the company name, transmitter name, firmware version, and firmware date.

Setup:

Navigate to the [Firmware ver.], then short press MENU/OK to view.

6.12 Firmware Update & Language Select

To put the transmitter into updating state. In case of updating the firmware of the transmitter, use this function to put the transmitter into updating mode first, then upgrade the transmitter's firmware.

It also supports switching the transmitter system language via the [Firmware Update] function. That is, when updating the firmware, select the Chinese or English firmware to switch the language.


⚠ **Warning**	• **Do not unplug the USB Type-C cable while the firmware is updating.**

Follow these steps:

1. Download and open the latest official firmware. Note: Select the required Chinese or English version according to your needs.
2. Connect the transmitter to the computer using a USB Type-C cable.
3. Select [Firmware update]. Follow the on-screen prompts to short press MENU/OK, then select [Yes] and short press MENU/OK again to enter the update mode.
4. After completing the above steps, on the computer's update software interface, click [Update] to start updating the transmitter's firmware.
5. Once the firmware update is complete, restart the transmitter.





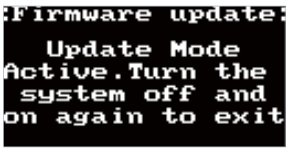

6.13 Factory Reset

This function can restore all transmitter data to their default values. Note that once the factory reset function is executed, all setting data will be lost.

Setup:

1. Navigate to the [Factory reset] setting interface.
2. According to the prompt, short press MENU/OK.
   - Then short press UP/DOWN to choose [Yes].
   - Short press MENU/OK to confirm.



微信公众号 Bilibili Website Facebook

7. Function

This section describes the model-related functions located in the Function settup Menu.

7.1 Reverse

To reverse the output direction of each channel

This function can be used to correct the direction of the servo action which is opposite to the intended operation.

due to different servo types or installation methods. After establishing a new model connection, ensure that the servos are assigned to the correct channels.

Nor: indicates that the channel output is the default direction.

Rev: Indicates that the channel's direction has been reversed.

Setup:

1. Navigate to the [Reverse] setting interface.
2. Set the channel1:
   - Short press MENU/OK.
   - Short press UP/DOWN to choose [Nor] or [Rev].
   - Short press MENU/OK to confirm. Long press MENU/OK to restore the factory default.
3. Refer to the steps above to configure the other channels.



7.2 End Points

The Maximum Servo Travel function adjusts the maximum movement range for each channel's servo, ensuring that the movement does not exceed the defined limits to prevent damage.

When setting up a model, first confirm that the servo direction and travel range are correct. First, set the correct neutral position using the Subtrim function, then use this function to set the servo range.

For each channel, the first column on the right corresponds to the low endpoint, and the second column corresponds to the high endpoint.

Setup:



1. Navigate to the [End points] setting interface.
2. Set the endpoint values for channel 1:
   - Select channel 1 (low end selected by default), short press MENU/OK to confirm.
   - Short press UP/DOWN to set the desired value.
   - Short press MENU/OK to confirm. Long press MENU/OK to restore the factory default.
   - Refer to the steps above to configure the high end.
3. Refer to the steps above to configure the other channels.

7.3 Display

Display the real-time status of the channels. The servo can be tested. When the function is turned on, the servos of all channels will move slowly and repeatedly. Please caution when the function is activated if servos are connected.

Setup:



1. Navigate to the [Display] setting interface.
2. Toggle the control corresponding to the channel.
3. View the realtime output status on the interface.
4. Short press HOME/EXIT to return.

Channel Test

The servo can be tested.

⚠ **Danger**	• **When the mode of testing all chanenl is enabled, propellers/rotary wing of models will rotate unexpectly. It is very dangerous! Do not activate this function when the transmitter is connected with the models or the engines of the model is started.**


Setup:

1. Navigate to the [Display] setting interface. Long press MENU/OK to activate the function.



微信公众号 Bilibili Website Facebook

2. Short press MENU/OK, in the pop-up window, select [Yes] to enter the channel test function.
3. Short press HOME/EXIT to exit.

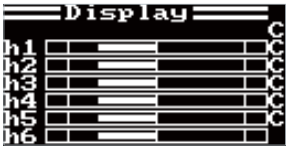

7.4 Aux. Channels

The Auxiliary Channel function assigns controls to channels other than the default ones.

You can assign either a knob or a switch to control the channel. If a switch is selected, the channel will output its low-end value when the switch is OFF, and its high-end value when the switch is ON.

Setup:




1. Navigate to the [Aux. channels] setting interface.
2. Set the control for the channel5:
   - Short press MENU/OK.
   - Short press UP/DOWN to choose a desired control.
   - Short press MENU/OK to confirm.
3. Refer to the steps above to configure the other channels.

7.5 Subtrim

To adjust the neutral position of each servo.

This function can be used to solve the problem of angle difference between the servo and model structure, whether caused by installation or the servo's inherent structural clearance. To set the subtrim, first toggle the trim to the neutral position.

Setup:

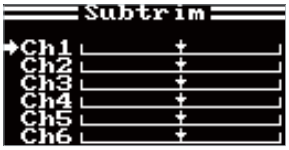

1. Navigate to the [Subtrim] setting interface.
2. Set the subtrim for the channel1:
   - Short press MENU/OK.
   - Short press UP/DOWN to choose a desired value.
   - Short press MENU/OK to confirm. Long press MENU/OK to restore the factory default.
3. Refer to the steps above to configure the other channels.

7.6 Dual rate/exp.

This function allows you to calibrate the relationship curve between the input (from sticks/knobs) and output (servo response) for each control channel.


If the actual response of your controls feels different from your personal preference, this function can tailor the feel—making it more aggressive, smoother, or creating different responses across the control range. It is generally configured after setting the servo's maximum travel.

You can set the rate and exponent for channels 1, 2, and 4 using the following parameters:

Rate: Determines the slope of the curve (0-100). A higher value results in a steeper curve and a more sensitive response.

Exp (Exponential): Adjusts the curve's exponent (-100 to +100). A higher value reduces sensitivity around the center stick position.

Normal: Represents the fly mode. This can be assigned to a physical switch via [Fly Mode] for mode switching, the user can switch the output value of the dual rate/exp.

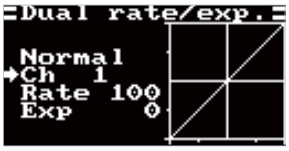

Setup:


1. Navigate to the [Dual rate/exp.] setting interface.
2. Set the dual rate/exp. for the channel1:
   - Select "CH 1", then select [Rate], then short press MENU/OK.
   - Short press UP/DOWN to choose a desired value.
   - Short press MENU/OK to confirm; long press MENU/OK to restore the factory default.
   - To set the exponent, follow the same steps described above for the Rate setting.
3. Refer to the steps above to configure the other channels.


7.7 Throttle Curve

This feature utilizes a 5-point curve to adjust the throttle output in response to the throttle stick movement. This allows you to fine-tune the engine RPM for optimal aircraft performance and precise control.

Users can separately set the throttle curve parameters for when the throttle idle is on or off. Then, through the throttle idle function switch, users can switch the throttle curve output value.

Setup:

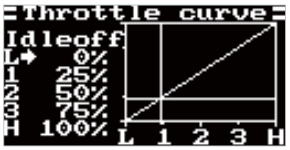

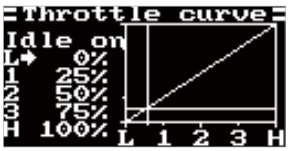

1. Navigate to the [Throttle curve] setting interface.
2. Set the low point:
   - Short press MENU/OK.
   - Short press UP/DOWN to choose a desired value.
   - Short press MENU/OK to confirm; long press MENU/OK to restore the factory default.
3. Refer to the steps above to configure the other points.

微信公众号 Bilibili Website Facebook

7.8 Elevon

This mix function is designed for specific aircraft models. For example, a delta-wing aircraft, which only has two ailerons that also need to function as elevators, can utilize this mix function.

Setup:





1. Navigate to the [Elevon] setting interface.
2. Set the function on or off:
   - Short press MENU/OK.
   - Short press UP/DOWN to choose [ON] or [OFF].
   - Short press MENU/OK to confirm.
3. Set the channel1 for the mix:
   - Select [CH1], then short press MENU/OK.
   - Short press UP/DOWN to set a desired value.
   - Short press MENU/OK to confirm; long press MENU/OK to restore the factory default.
4. Refer to the step3 above to configure the channel 2 for the mix.

7.9 V Tail

The V-tail configuration combines the functions of both the vertical stabilizer (rudder) and horizontal stabilizer (elevator). In this design, directional (yaw) and pitch (elevator) control are achieved through the coordinated movement of two servos, each linked to a separate control surface and channel.

For directional (yaw) control, the surfaces move differentially (opposite directions).

For pitch (elevator) control, the surfaces move symmetrically (same direction).

Setup:







1. Navigate to the [V tail] setting interface.
2. Set the function on or off:
   - Short press MENU/OK.
   - Short press UP/DOWN to choose [ON] or [OFF].
   - Short press MENU/OK to confirm.
3. Set the channel 2 for the mix:
   - Select [CH2], then short press MENU/OK.
   - Short press UP/DOWN to set a desired value.
   - Short press MENU/OK to confirm; long press MENU/OK to restore the factory default.
4. Refer to the step3 above to configure the ch4 for the mix.

7.10 Pitch Curve (Helicopter Variable pitch)

This function adjusts the pitch movement curve (configurable with 5 points) for collective-pitch helicopters to achieve optimal control performance. Users can separately set the pitch curve parameters for when the throttle idle is on or off. Then, through the throttle idle function switch, users can switch the pitch curve output value.

Setup:

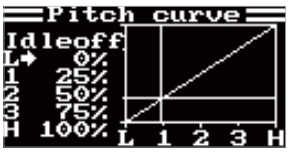

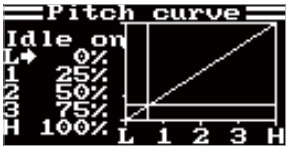

1. Navigate to the [Pitch curve] setting interface.
2. Set the Low point:
   - Short press MENU/OK.
   - Short press UP/DOWN to set a desired value.
   - Short press MENU/OK to confirm; long press MENU/OK to restore the factory default.
3. Refer to the steps above to configure the other points.

7.11 Gyroscope(Helicopter Variable pitch)

The gyroscope function stabilizes the flight attitude.

Users can set the gyro sensitivity separately for the throttle idle on state and the off state, so that sensitivity can be switched using the throttle idle function switch.

Setup:





1. Navigate to the [Gyroscope] setting interface.
2. Set the switch:
   - Select [Gyro], then short press MENU/OK.
   - Short press UP/DOWN to choose [ON] or [OFF].
   - Short press MENU/OK to confirm.
3. Set the value:
   - Select [Value], then short press MENU/OK.
   - Short press UP/DOWN to set a desired output value.
   - Short press MENU/OK to confirm; long press MENU/OK to restore the factory default.
   - Select ""Idle on" by using the assigned control, and refer to the steps above to set the value for it.

微信公众号 Bilibili Website Facebook

7.12 Fly Mode

Set the fly mode switch. This feature affects the switching of the [Scale/Curve] function settings. Fly mode status will be displayed as "F1" or "F2" on the home page, where F1 represents Normal mode and F2 represents Sport mode.

Setup:

1. Navigate to the [Fly mode] setting interface.
2. Set the control:
   - Select Switches(selected by default), then short press MENU/OK.
   - Short press UP/DOWN to choose a desired switch.
   - Short press MENU/OK to confirm.






7.13 Throttle Hold

A control can be set up to enable or disable the throttle lock function and set the throttle lock value. Once enabled, the throttle stick is locked, and the transmitter will output the preset value regardless of stick position.Note: The throttle hold function becomes enable only when the assigned control switch is ON. When the throttle hold function is enabled, HOLD will be displayed on the home screen.

Setup:

1. Navigate to the [Throttle hold] setting interface.
2. Set the control:
   - Select Switches, then short press MENU/OK.
   - Short press UP/DOWN to choose a desired control.
   - Short press MENU/OK to confirm, then operate the control to check whether the switch is "On" or "Off" on the interface.
3. Set the value:
   - Select [Value], then short press MENU/OK.
   - Short press UP/DOWN to set a desired output value.
   - Short press MENU/OK to confirm; long press MENU/OK to restore the factory default.

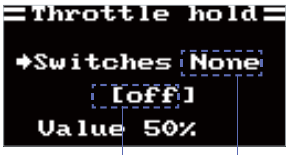



Off indicates that the throttle hold function is inactive.


None indicates that throttle hold function is not assigned to any control.

7.14 Throttle Idle

A control can be set to enable or disable the throttle idle function. When enabled, it prevents the engine from cutting off when the throttle is at a low position. Note that the throttle idle function only takes effect when the control is turned on. This control can also be used to switch throttle idle states for the [Throttle Curve], [Pitch Curve], and [Gyroscope] functions. Once the throttle hold function is off, the throttle idle status will be displayed as "IDLE ON" or "IDLE OFF" on the home page, where "IDLE ON" indicates idle is active, and "IDLE OFF" indicates idle is inactive.

Setup:

1. Navigate to the [Throttle idle] setting interface.
2. Set the control:
   - Select "Switches", then short press MENU/OK.
   - Short press UP/DOWN to choose a desired control.
   - Short press MENU/OK to confirm, then operate the control to check the throttle idle status on the interface.

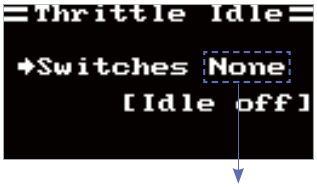

None indicates that throttle idle function is not assigned to any control.



no Idle indicates that the throttle idle function is inactive.



7.15 Mixes

Mixes are enabled when a model requires the linkage of two channels, such as providing rudder compensation when increasing the throttle for an airplane to prevent it from pitching up.

This transmitter provides 3 sets of mixes.

Mix is: Sets the on/off for this set of mix.

Master: Represents the control role in the current mix relationship.

Slave: Represents the controlled role in the current mix relationship.

Pos. mix: Sets the influence range of the high-end of the master channel on the slave channel, with an adjustment range of -100% to 100%. If the high-end mix is set to 50%, when the master channel moves to 100%, the slave channel will simultaneously move to 50%.

Neg. mix: Represents the influence range of the low-end of the master channel on the slave channel, with an adjustment range of -100% to 100%. If the low-end mix is set to 50%, when the master channel moves to -100%, the slave channel will simultaneously move to -50%.

Offset: Sets the offset amount for the slave channel.

Setup:



1. Navigate to the [Mixes] setting interface.
2. Set the mix1:
   - Select "Mix #1', then select [Mix is], then short press MENU/OK.
   - Short press UP/DOWN to choose [ON] or [OFF].
   - Short press MENU/OK to confirm.
   - Refer to the steps abover to set the other parameters.
3. Refer to the steps above to configure the other mixes.

微信公众号 Bilibili Website Facebook

8. Product Specifications

This section contains FS-i6 Nova transmitter specifications.

8.1 Transmitter Specifications

Product Model	FS-i6 Nova
Number of Channels	10
Number of Bands	135
Compatible Receiver	Receivers with AFHDS 2A protocol
Compatible RC Models	Educational, Competition, and Recreational Models
RF	2.4GHz ISM
Maximum Power	< 20dBm (e.i.r.p.) (EU)
RF Protocol	AFHDS 2A
Resolution	1024 Step
Input Power	AA*4/2S LiPo (supports a 4-9V/DC power supply input)
Charging Jack	None
Data Connector	USB Type-C, DSC 3.5mm Trainer Port
Low Voltage Warning	Supported
Antenna	Two built-in antennas (a PCB antenna and a copper tube antenna)
Display	128*64 LCD (Black and white dot matrix screen)
Temperature Range	-10°C ~ +60°C
Humidity Range	20% ~ 95%
Firmware Update	Supported
Color	Black
Language	Chinese / English (via flashing firmware for the desired language)
Dimensions	168.6mm*155.6mm*87.9mm
Weight	360 g (Excluding battery)
Certifications	CE, SRRC, FCC ID: 2A2UNI6NOVA00

9. Package Contents

The accessories included are different in different versions, please consult your dealer for details..

10. Certifications

10.1 DoC Declaration

Hereby, [ShenZhen FLYSKY Technology Co., Ltd.] declares that the Radio Equipment [FS-i6 Nova] is in compliance with RED 2014/53/EU.

The full text of the EU DoC is available at the following internet address: www.flyskytech.com/info_detail/10.html.

10.2 CE Warning

The ce warns that the installation of the antenna used in this transmitter must be kept in distance from all the personnel and shall not be used or used with any other transmitter. The end user and the installer must provide antenna installation instructions and transmitter operating conditions to meet the requirements for rf exposure compliance.

10.3 FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or televison reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help.

To assure continued compliance, any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:


(1) This device may not cause harmful interference.and (2) This device must accept any interference received, including interference that may cause undesired operation.

Caution!

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user authority to operate the equipment.

1. Move all your channels to the desired position.
2. Select [All channels] and then [Yes] in the confirmation box.

10.4 Environmentally friendly disposal

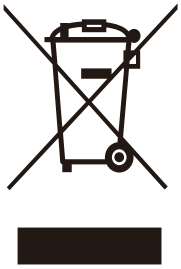

Old electrical appliances must not be disposed of together with the residual waste, but have to be disposed of separately. The disposal at the communal collecting point via private persons is for free. The owner of old appliances is responsible to bring the appliances to these collecting points or to similar collection points. With this little personal effort, you contribute to recycle valuable raw materials and the treatment of toxic substances.

CAUTION

RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE.
DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS

CAUTION

- replacement of a battery with an incorrect type that can defeat a safeguard (for example, in the case of some lithium battery types);
- disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion;
- leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas; and
- a battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

10.5 CE SAR statement

This equipment complies with Directive 2014/53/EU radiation exposure limits set forth for an uncontrolled environment. End user must follow the specific operating instructions for satisfying RF exposure compliance.

This transmitter must not be colocated or operating in conjunction with any other antenna or transmitter.
The portable device is designed to meet the requirements for exposure to radio waves established by European Union market(France). These requirements set a SAR limit of 2W/kg averaged over ten gram of tissue.

The highest SAR value 0.061W/kg reported under this standard during product certification for use when properly worn on the body.

10.6 FCC SAR

For body-worn operation, the device has been tested and meets the FCC RF exposure, the maximum sar value is 0.536W/Kg at 0mm

Figures and illustrations in this manual are provided for reference only and may differ from actual product appearance. Product design and specificatiions may be changed without notice.

FLYSKY

微信公众号 Bilibili Website Facebook

www.flysky-cn.com

Copyright ©2026 Flysky Technology Co., Ltd.

Release date: 2026-06-12

CE, FCC ID：2A2UNI6NOVA00

Manufacturer:ShenZhen FLYSKY Technology Co., Ltd.
Address: 16F, Huafeng Building, No. 6006 Shennan Road, Futian District, Shenzhen, Guangdong, China