

STUDIO CARQUINEZ PATCH BAY

Front view, top of rack first. Left 16 ports: console buckets. Right 8: outboard, FX, monitoring. Generated 2026-09-23 from config.py.

Console core

Room sends

Tie lines

Outboard

Instruments & pedals

Aux sends & FX

Monitoring

2-track

Groups & mix bus

Amp rack

Network

Power

MIDI

Spare

Reserved

Rear not plugged in yet

Normalled

Not normalled

MAIN RACK

1

24 x 2
5 spare
0 normalled
0/37 rear plu

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
Tanzb ar Out L	Sub 37 Out	Fuzz In	MXR Dist In	Reserved · Instruments & pedals					LA-2A In	UA 550 In	DBX 160 Link	SSL Fusion In L/R	API L/R In			Dbx 160A L/R In	D-Comp L/R In		902 De-esser IN 1-2		Art Comp In L/R		
Tanzb ar Out R		Fuzz Out	MXR Dist Out	Reserved · Instruments & pedals					LA-2A Out	UA 550 Out	DBX 160 Link	SSL Fusion Out L/R	API L/R Out			Dbx 160A L/R Out	D-Comp L/R Out		902 De-esser OUT 1-2		Art Comp Out L/R		

2

24 x 2
0 spare
16 normalled
0/48 rear plu

Ghost Channel Insert Send 1-16																Group 1 - 8 Insert Send							
NORMALLED																NORMALLED							
Ghost Channel Insert Return 1-16																Group 1 - 8 Insert Return							

3

24 x 2
0 spare
24 normalled
0/44 rear plu

Ghost Channel Insert Send 17-32																Aux 1 Out								Aux 2 Out		Aux 3 Out		Aux 4 Out		Aux 5 / 6 Out		Aux 7 Out L/R	
NORMALLED																N		N		N		N		NORMALLED		NORMALLED							
Ghost Channel Insert Return 17-32																EMT 140 In		PCM60 In		SDE 1000 In		Moog DLY In											

4

24 x 2
3 spare
18 normalled
0/39 rear plu

Worm hole Matched to Left Side Patch bay 1-16 top																Aux 8 Out L/R		Moog DLY Out						Main Insert Send	
NORMALLED																NORMALLED		NORMALLED		NORMALLED		NORMALLED			
Console Line In 1-16																								Main Insert Return	


5

24 x 2
8 spare
16 normalled
0/32 rear plu

Worm hole Matched to Left Side Patch bay 1-16 bottom																							
NORMALLED																							
Console Line In 17-32																							


6

24 x 2
8 spare
16 normalled
0/32 rear plu

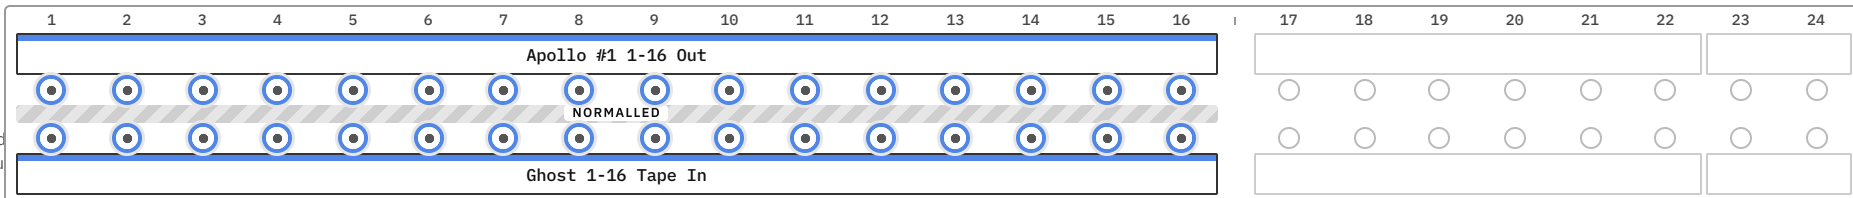


7

24 x 2
0 spare
22 normalled
0/46 rear plu

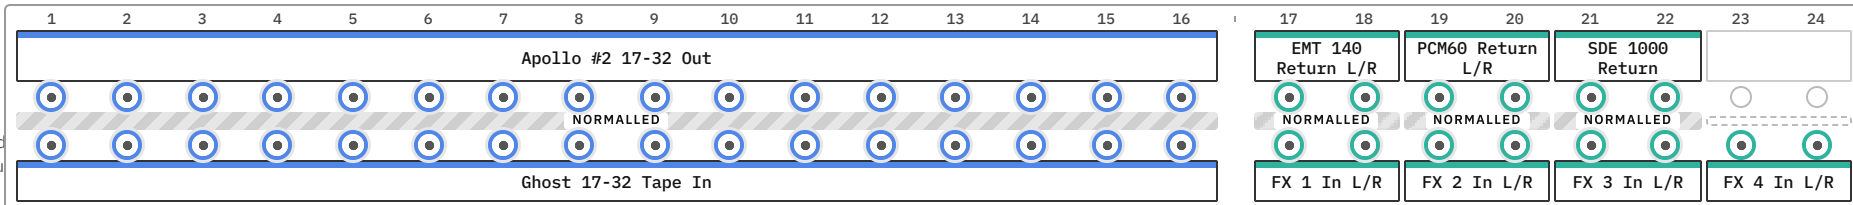


8

24 x 2
0 spare
24 normalled
0/47 rear plu

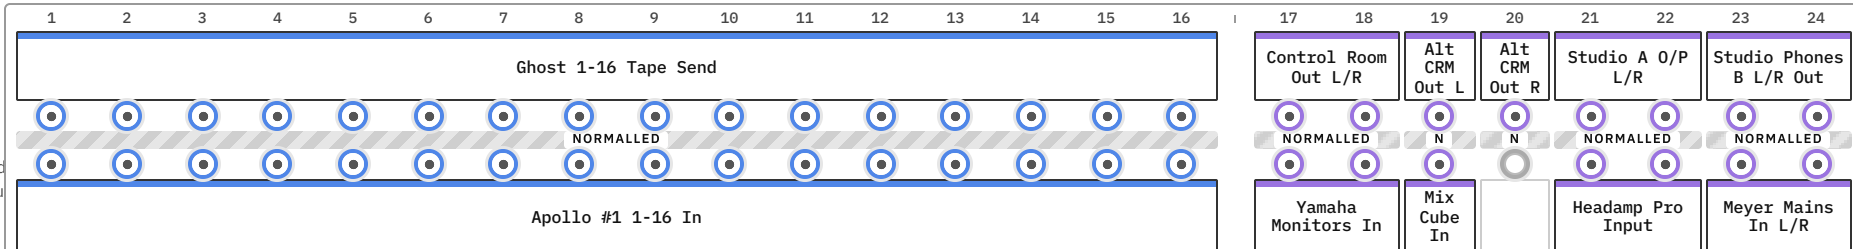


9

24 x 2
0 spare
22 normalled
0/44 rear plu

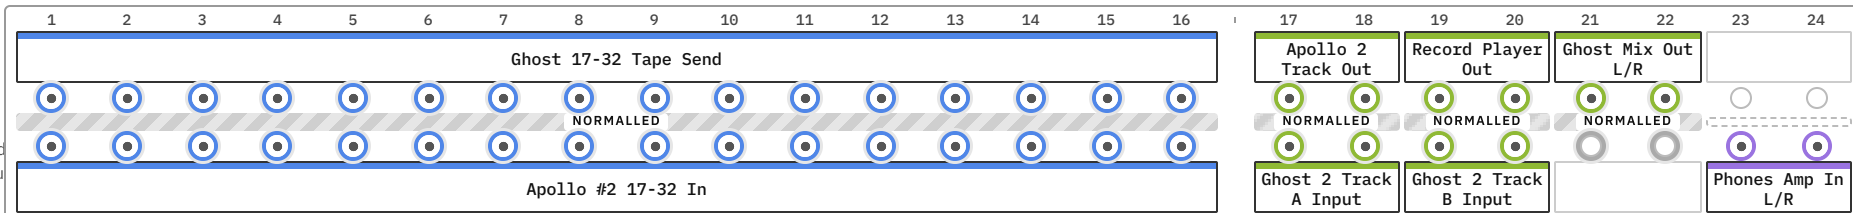

10


24 x 2
3 spare
0 normalled
0/42 rear plu

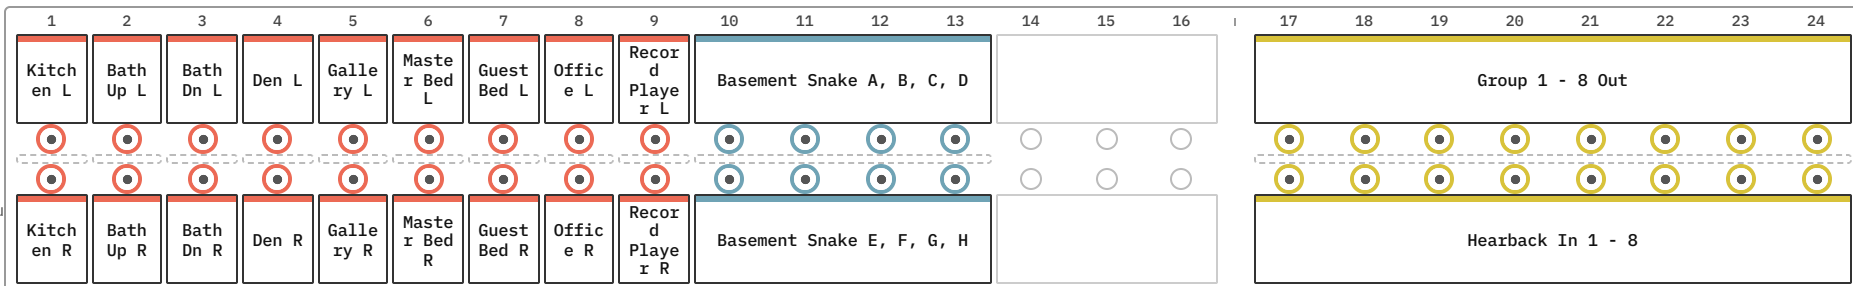

AMP RACK

11 AMP RACK


24 x 2
16 spare
8 normalled
0/16 rear plug

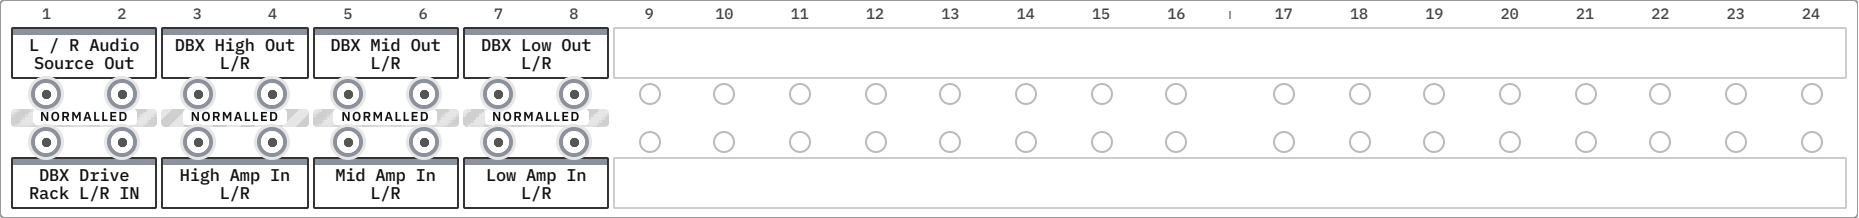

ETHERNET

ETHERNET


Single row
2 spare
0/8 rear plug

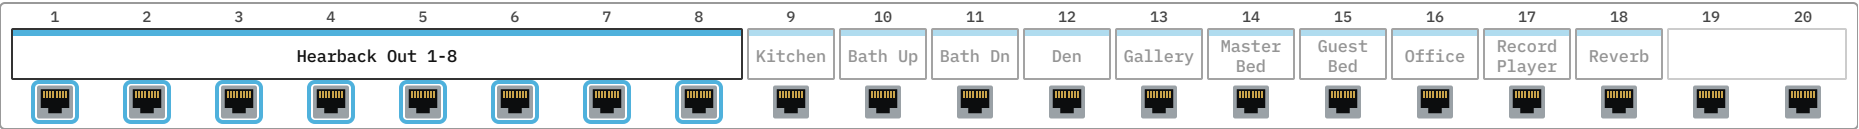

MIDI

MIDI


Not in use
Single row
0 spare
0/22 rear plug

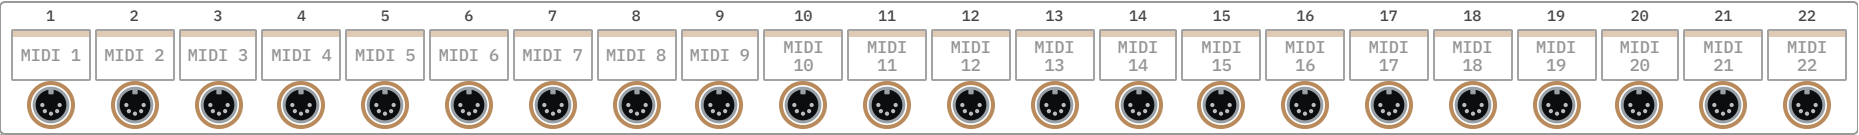

POWER SWITCHES

POWER SWITCHES

Single row
1 spare
0/9 rear plug

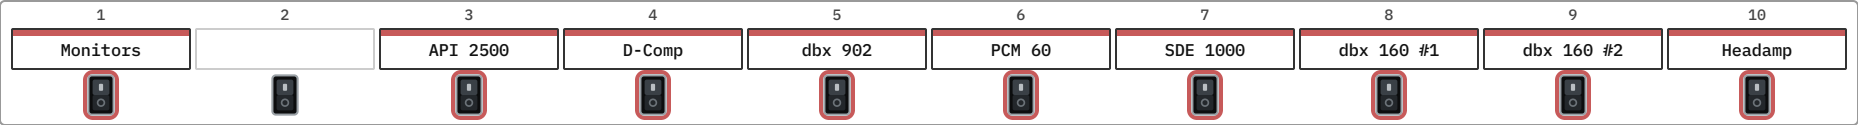

RACK 1 · EQUIPMENT (20U)

U1	POWER CONDITIONER	
U2	SWITCH PANEL	Not on the patch bay
U3	APOLLO 16 #1	Replacing both Apollos with one 1U unitPatch bay: Bay 6 · 1–16, Bay 8 · 1–16
U4	APOLLO 16 #2	Replacing both Apollos with one 1U unitPatch bay: Bay 7 · 1–16, Bay 9 · 1–16
U5	API 2500 COMPRESSOR	Patch bay: Bay 1 · 15–16, Power Switches · 3
U6–7	D-COMP	Patch bay: Bay 1 · 19–20, Power Switches · 4
U8	DBX 902 DE-ESSER ×2	Patch bay: Bay 1 · 21–22, Power Switches · 5
U9	LEXICON PCM 60 REVERB	Patch bay: Bay 3 · 18, Bay 7 · 19–20, Power Switches · 6
U10	SDE 1000 DELAY	Patch bay: Bay 3 · 19, Bay 7 · 21–22, Power Switches · 7
U11–12	DBX 160 COMPRESSORS	Patch bay: Bay 1 · 12, 17–18, Power Switches · 8–9
U13	EMT REVERB REMOTE	Could move
U14	HEADPHONE AMP	Could movePatch bay: Bay 9 · 23–24
U15	HEADPHONE POWER SUPPLY	
U16	MIDI PATCH BAY	Patch bay: <u>Midi</u> · 1–22
U17	HEARBACK UNIT	Patch bay: Bay 10 · 17–24, Ethernet · 1–8
U18	ETHERNET PATCH BAY	Patch bay: <u>Ethernet</u> · 1–20
U19–20	SOUNDCRAFT GHOST POWER SUPPLY	

OPEN QUESTIONS

General

What does G1 mean on the conduit?

CABLE PULLS TO EACH ROOM

Two XLR sends, one XLR return and one Cat5 per room. Every XLR end is soldered onto its cable: pull it, solder the room end, solder the rack end, then patch it (Cat5 ends are terminated instead). Sends land on the patch bay as TRS; the returns stay in a loom on the floor, so they have nothing to patch — **169** steps in all. The destination is where the cable lands at the rack.

KITCHEN

		PULL	SOLDER ROOM	SOLDER CONSOLE	PATCH
Send L	XLR	☐	☐	☐	☐
Send R	XLR	☐	☐	☐	☐
Return	XLR	☐	☐	☐	—
Network	CAT5	☐	☐	☐	☐

Notes...

BATH UP

		PULL	SOLDER ROOM	SOLDER CONSOLE	PATCH
Send L	XLR	☐	☐	☐	☐
Send R	XLR	☐	☐	☐	☐
Return	XLR	☐	☐	☐	—
Network	CAT5	☐	☐	☐	☐

Notes...

BATH DN

		PULL	SOLDER ROOM	SOLDER CONSOLE	PATCH
Send L	XLR	☐	☐	☐	☐
Send R	XLR	☐	☐	☐	☐
Return	XLR	☐	☐	☐	—
Network	CAT5	☐	☐	☐	☐

Notes...

DEN

		PULL	SOLDER ROOM	SOLDER CONSOLE	PATCH
Send L	XLR	☐	☐	☐	☐
Send R	XLR	☐	☐	☐	☐
Return	XLR	☐	☐	☐	—
Network	CAT5	☐	☐	☐	☐

Notes...

GALLERY

		PULL	SOLDER ROOM	SOLDER CONSOLE	PATCH
Send L	XLR	☐	☐	☐	☐
Send R	XLR	☐	☐	☐	☐
Return	XLR	☐	☐	☐	—
Network	CAT5	☐	☐	☐	☐

Notes...

MASTER BED

		PULL	SOLDER ROOM	SOLDER CONSOLE	PATCH
Send L	XLR	☐	☐	☐	☐
Send R	XLR	☐	☐	☐	☐
Return	XLR	☐	☐	☐	—
Network	CAT5	☐	☐	☐	☐

Notes...

GUEST BED

		PULL	SOLDER ROOM	SOLDER CONSOLE	PATCH
Send L	XLR	☐	☐	☐	☐
Send R	XLR	☐	☐	☐	☐
Return	XLR	☐	☐	☐	—
Network	CAT5	☐	☐	☐	☐

Notes...

OFFICE

		PULL	SOLDER ROOM	SOLDER CONSOLE	PATCH
Send L	XLR	☐	☐	☐	☐
Send R	XLR	☐	☐	☐	☐
Return	XLR	☐	☐	☐	—
Network	CAT5	☐	☐	☐	☐

Notes...

RECORD PLAYER

		PULL	SOLDER ROOM	SOLDER CONSOLE	PATCH
Send L	XLR	☐	☐	☐	☐
Send R	XLR	☐	☐	☐	☐
Return	XLR	☐	☐	☐	—
Network	CAT5	☐	☐	☐	☐

Notes...

FRONT DECK

		PULL	SOLDER ROOM	SOLDER CONSOLE	PATCH
Speaker	SPEAKER	☐	☐	☐	—

Notes...

BACK DECK

		PULL	SOLDER ROOM	SOLDER CONSOLE	PATCH
Speaker	SPEAKER	☐	☐	☐	—

Notes...

G1 · UNKNOWN CONDUIT

		PULL	SOLDER ROOM	SOLDER CONSOLE	PATCH
XLR 1	XLR	☐	☐	☐	—
XLR 2	XLR	☐	☐	☐	—
Network	CAT5	☐	☐	☐	—

Notes...

REVERB · EMT PLATE

		PULL	SOLDER ROOM	SOLDER CONSOLE	PATCH
Send	XLR	☐	☐	☐	☐
Return L	XLR	☐	☐	☐	☐
Return R	XLR	☐	☐	☐	☐
Motor control · 5-pin	CAT5	☐	☐	☐	—
Network	CAT5	☐	☐	☐	☐

Notes...

MIDI HOOKUPS

0 of 11 connected

INSTRUMENT		PORT	PRIORITY	MIDI PATCH BAY
☐	Moog Sub 37	MIDI In	Required	Not assigned
		MIDI Out	Required	Not assigned
☐	Waldorf Streichfett	MIDI In	Required	Not assigned
		MIDI Out	Low priority	Not assigned
☐	MFB Tanzbar	MIDI In	Required	Not assigned
		Check which MIDI ports it has	Low priority	Not assigned
☐	Sim n Tonic	MIDI In	Required	Not assigned
		Check which MIDI ports it has		
☐	Oberheim OB-X8	MIDI In	Required	Not assigned
		MIDI Out	Required	Not assigned
☐	Oberheim OB-6	MIDI In	Required	Not assigned
		MIDI Out	Required	Not assigned