

STUDIO CARQUINEZ PATCH BAY

Front view, top of rack first. Left 16 ports: console buckets. Right 8: outboard, FX, monitoring. Generated 2026-09-24 from config.py.

Console core

Room sends

Tie lines

Outboard

Instruments & pedals

Aux sends & FX

Monitoring

2-track

Groups & mix bus

Amp rack

Network

Power

MIDI

Spare

Reserved

Rear not plugged in yet


Normalled

Not normalled

MAIN RACK


1

24 × 2
5 spare
0 normalled
0/37 rear plu

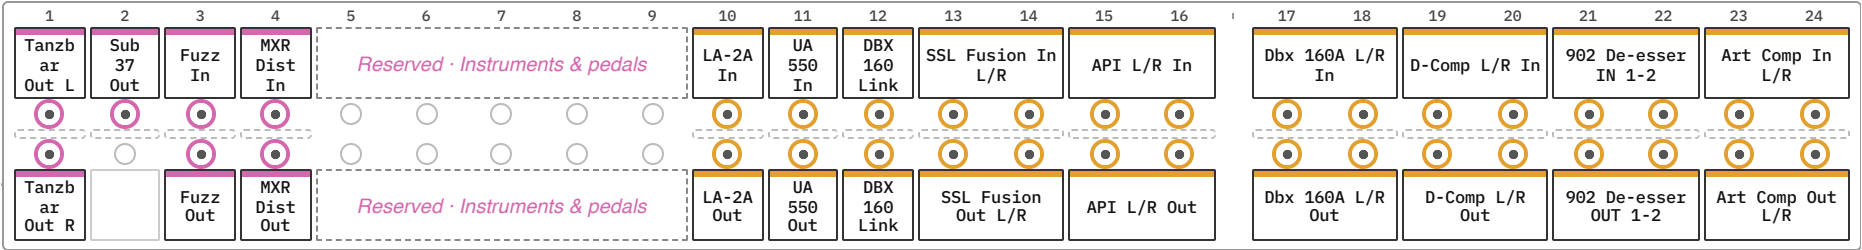


2

24 × 2
0 spare
16 normalled
0/48 rear plu

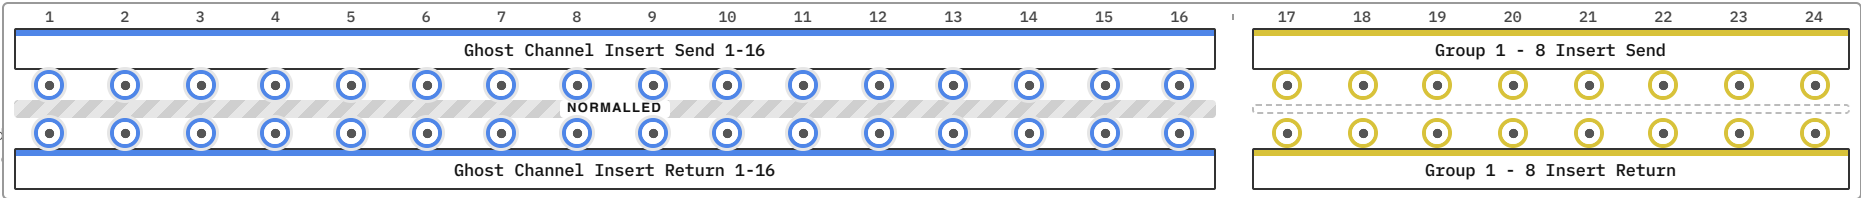


3

24 × 2
0 spare
24 normalled
0/44 rear plu

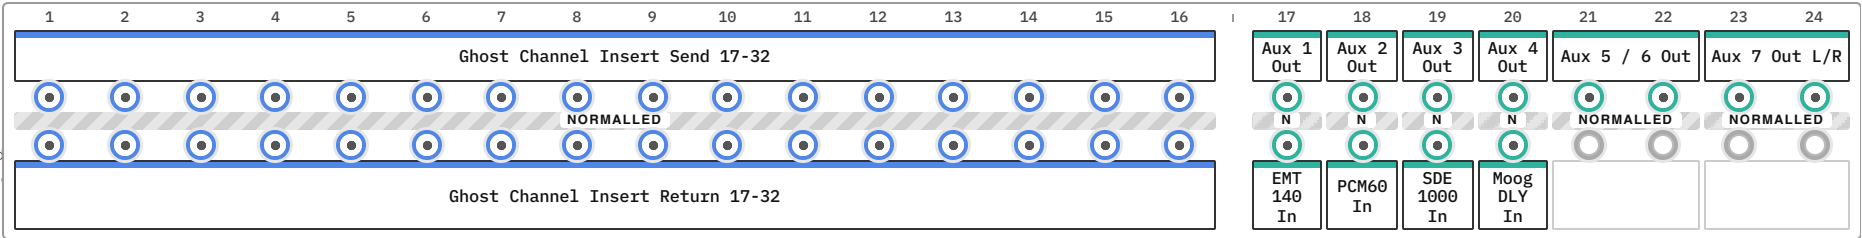


4

24 × 2
3 spare
18 normalled
0/39 rear plu

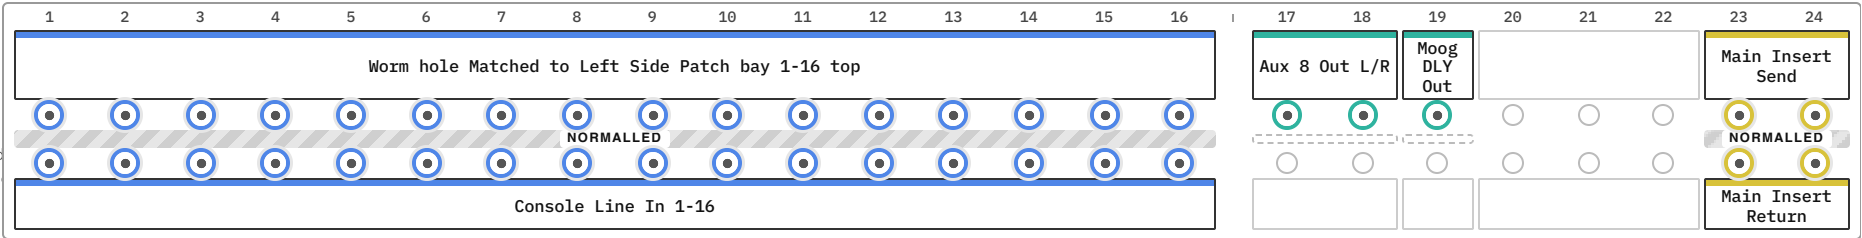


5

24 x 2
8 spare
16 normalled
0/32 rear plu

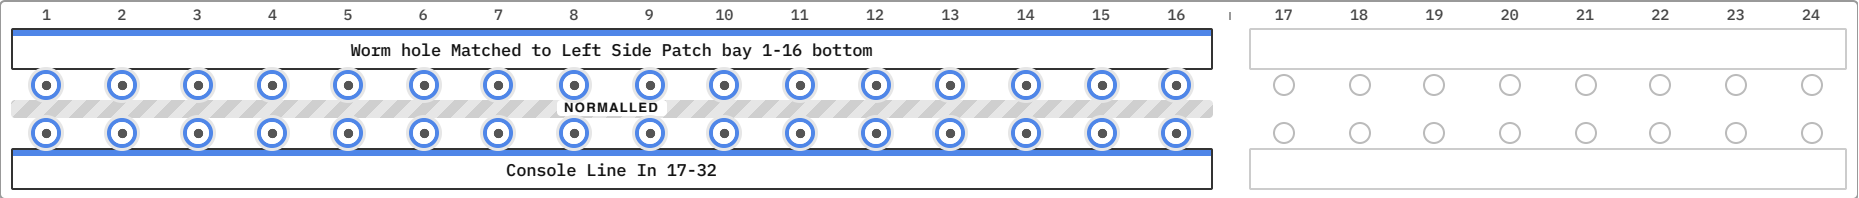


6

24 x 2
8 spare
16 normalled
0/32 rear plu

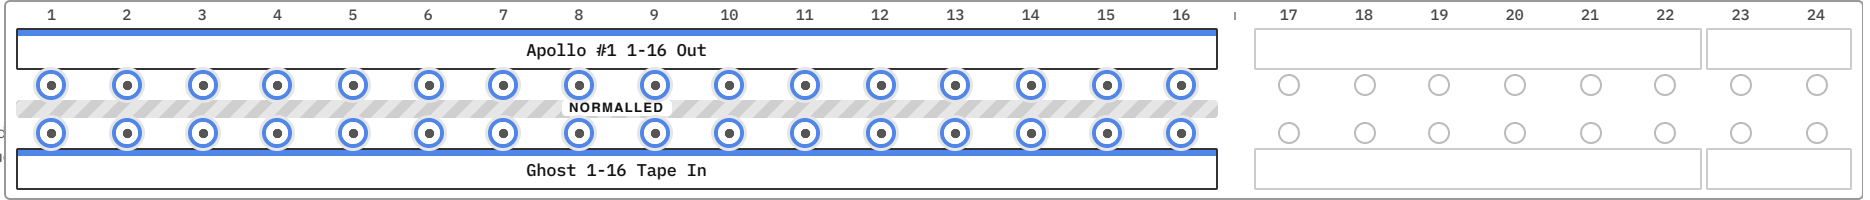


7

24 x 2
0 spare
22 normalled
0/46 rear plu

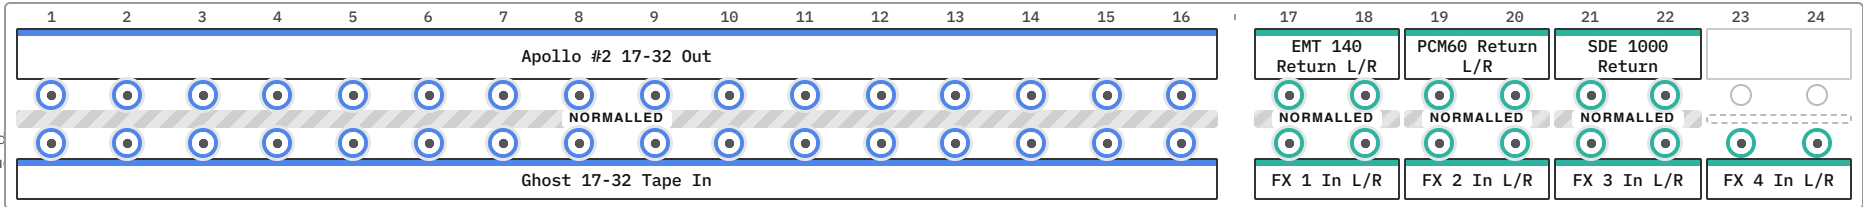


8

24 x 2
0 spare
24 normalled
0/47 rear plu

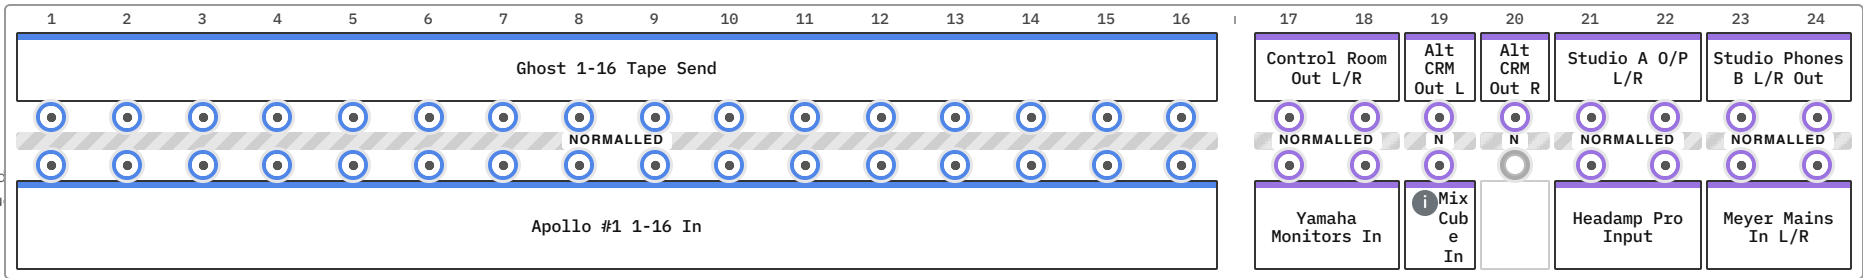


9

24 x 2
0 spare
22 normalled
0/46 rear plu

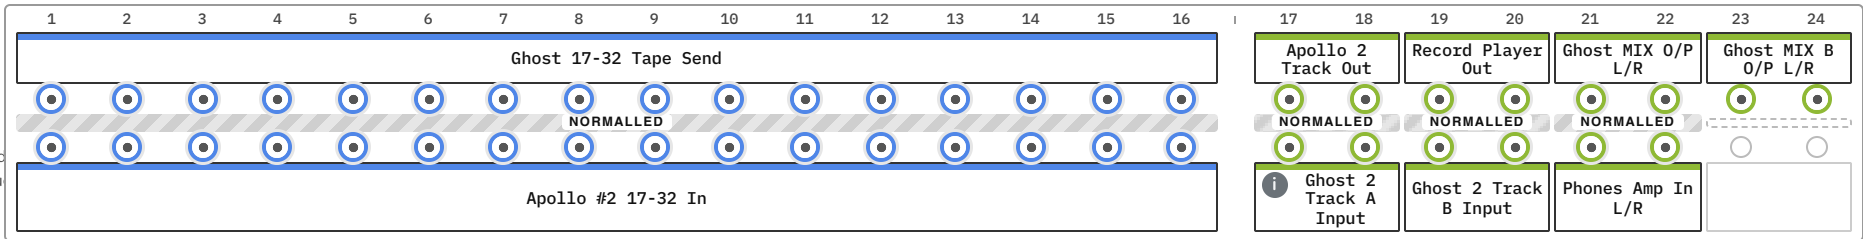


10


24 x 2
3 spare
0 normalled
0/42 rear plu

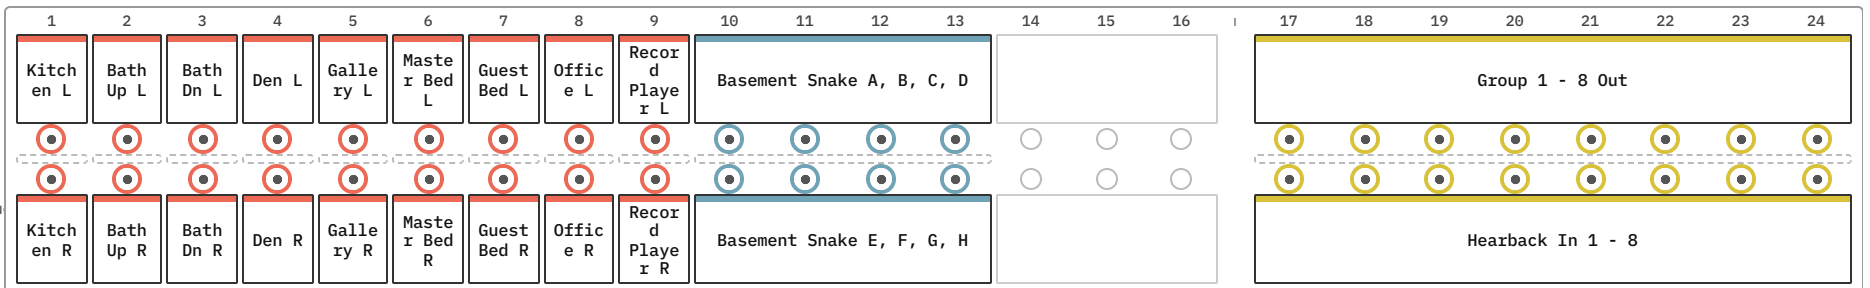


24 x 2
16 spare
8 normalised
0/16 rear plu

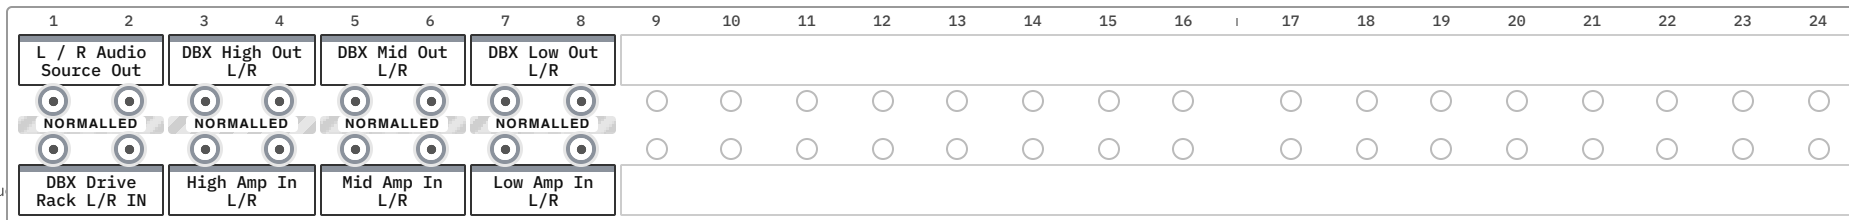


Single row
3 spare
0/8 rear plug

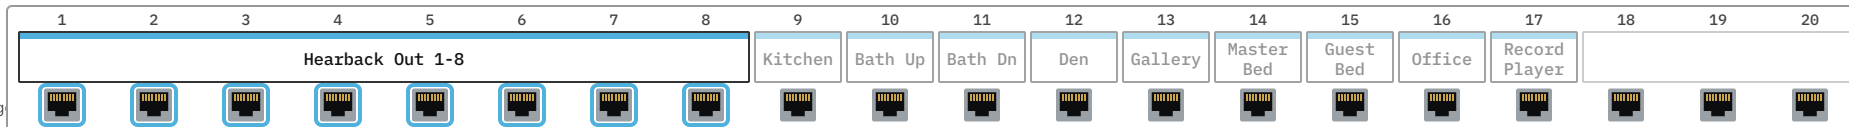

Not in use
Single row
22 spare
0/0 rear plug

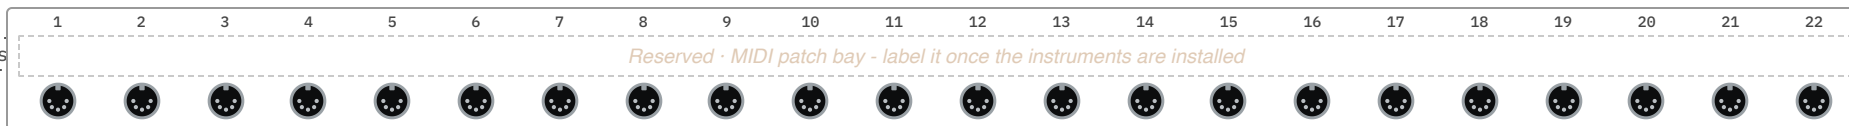

Single row
1 spare
0/9 rear plug

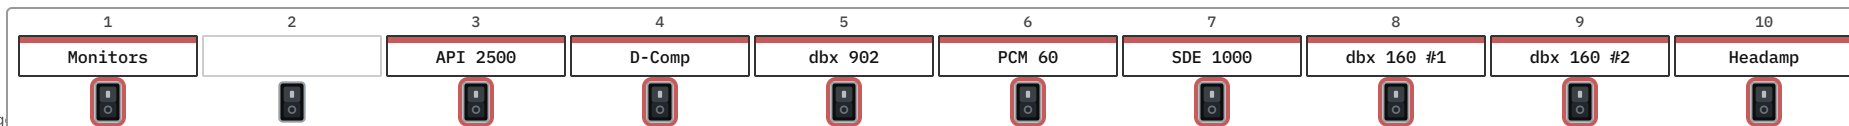

RACK 1 · EQUIPMENT (20U)

U1	POWER CONDITIONER	
U2	SWITCH PANEL	Not on the patch bay
U3	APOLLO 16 #1 Replacing both Apollos with one 1U unit	Patch bay: Bay 6 · 1–16, Bay 8 · 1–16
U4	APOLLO 16 #2 Replacing both Apollos with one 1U unit	Patch bay: Bay 7 · 1–16, Bay 9 · 1–16
U5	API 2500 COMPRESSOR	Patch bay: Bay 1 · 15–16, Power Switches · 3
U6–7	D-COMP	Patch bay: Bay 1 · 19–20, Power Switches · 4
U8	DBX 902 DE-ESSER ×2	Patch bay: Bay 1 · 21–22, Power Switches · 5
U9	LEXICON PCM 60 REVERB	Patch bay: Bay 3 · 18, Bay 7 · 19–20, Power Switches · 6
U10	SDE 1000 DELAY	Patch bay: Bay 3 · 19, Bay 7 · 21–22, Power Switches · 7
U11–12	DBX 160 COMPRESSORS	Patch bay: Bay 1 · 12, 17–18, Power Switches · 8–9
U13	EMT REVERB REMOTE Could move	
U14	HEADPHONE AMP Could move	Patch bay: Bay 9 · 21–22
U15	HEADPHONE POWER SUPPLY	
U16	MIDI PATCH BAY	Patch bay: <u>Midi</u> · 1–22
U17	HEARBACK UNIT	Patch bay: Bay 10 · 17–24, Ethernet · 1–8
U18	ETHERNET PATCH BAY	Patch bay: <u>Ethernet</u> · 1–20
U19–20	SOUNDCRAFT GHOST POWER SUPPLY	

OPEN QUESTIONS

SOUNDCRAFT GHOST · CENTRE SECTION REAR

Every jack on the master section's rear panel, in the order the manual lists them - all ¼".
Grey means nothing on the patch bay carries it yet.

INPUTS

tip signal +, ring signal -, sleeve ground

○ ○

TRS balanced

Bay 7 · 17–18

○ ○

TRS balanced

Bay 7 · 19–20

○ ○

TRS balanced

Bay 7 · 21–22

○ ○

TRS balanced

Bay 7 · 23–24

○ ○

TRS balanced

Bay 9 · 17–18

○ ○

TRS balanced

Bay 9 · 19–20

OUTPUTS

tip signal +, ring ground sense, sleeve ground;
the TS unbalanced ones are tip signal +, ring not
used, sleeve ground

○ ○ ○ ○ ○ ○ ○ ○ ○ ○

GRP 1-8

TRS ground-comp

Bay 10 · 17–24

○

AUX 1

TRS ground-comp

Bay 3 · 17

○

AUX 2

TRS ground-comp

Bay 3 · 18

○

AUX 3

TRS ground-comp

Bay 3 · 19

○

AUX 4

TRS ground-comp

Bay 3 · 20

○ ○

AUX 5 / 6

TRS ground-comp

Bay 3 · 21–22

○ ○

AUX 7 L/R

TRS ground-comp

Bay 3 · 23–24

○ ○

AUX 8 L/R

TRS ground-comp

Bay 4 · 17–18

○ ○

MIX 0/P L/R

TRS ground-comp

Bay 9 · 21–22

○ ○

MIX B 0/P L/R

TRS ground-comp

INSERTS

tip RETURN, ring SEND, sleeve ground - the
opposite of the usual tip-send wiring

○ ○ ○ ○ ○ ○ ○ ○ ○ ○

GRP INS 1-8

TRS insert

Bay 2 · 17–24

○ ○

MIX INS L/R

TRS insert

Bay 4 · 23–24

Bay 9 · 23–24

CRM O/P L/R



TS unbalanced

Bay 8 · 17–18

ALT O/P L/R



TS unbalanced

Bay 8 · 19

STU O/P A L/R



TRS ground-comp

Bay 8 · 21–22

STU PHNS B L/R



TS unbalanced

Bay 8 · 23–24

CABLE PULLS TO EACH ROOM

Two XLR sends, one XLR return and one Cat5 per room. Every XLR end is soldered onto its cable: pull it, solder the room end, solder the rack end, then patch it (Cat5 ends are terminated instead). Sends land on the patch bay as TRS; the returns stay in a loom on the floor, so they have nothing to patch — **156** steps in all. The destination is where the cable lands at the rack.

KITCHEN

		PULL	ROOM	CONSOLE	PATCH
Send L	XLR	☐	☐	☐	☐
Send R	XLR	☐	☐	☐	☐
Return	XLR	☐	☐	☐	—
Network	CAT5	☐	☐	☐	☐

Notes...

BATH UP

		PULL	ROOM	CONSOLE	PATCH
Send L	XLR	☐	☐	☐	☐
Send R	XLR	☐	☐	☐	☐
Return	XLR	☐	☐	☐	—
Network	CAT5	☐	☐	☐	☐

Notes...

BATH DN

		PULL	ROOM	CONSOLE	PATCH
Send L	XLR	☐	☐	☐	☐
Send R	XLR	☐	☐	☐	☐
Return	XLR	☐	☐	☐	—
Network	CAT5	☐	☐	☐	☐

Notes...

DEN

		PULL	ROOM	CONSOLE	PATCH
Send L	XLR	☐	☐	☐	☐
Send R	XLR	☐	☐	☐	☐
Return	XLR	☐	☐	☐	—
Network	CAT5	☐	☐	☐	☐

Notes...

GALLERY

		PULL	ROOM	CONSOLE	PATCH
Send L	XLR	☐	☐	☐	☐
Send R	XLR	☐	☐	☐	☐
Return	XLR	☐	☐	☐	—
Network	CAT5	☐	☐	☐	☐

Notes...

MASTER BED

		PULL	ROOM	CONSOLE	PATCH
Send L	XLR	☐	☐	☐	☐
Send R	XLR	☐	☐	☐	☐
Return	XLR	☐	☐	☐	—
Network	CAT5	☐	☐	☐	☐

Notes...

GUEST BED

		PULL	ROOM	CONSOLE	PATCH
Send L	XLR	☐	☐	☐	☐
Send R	XLR	☐	☐	☐	☐
Return	XLR	☐	☐	☐	—
Network	CAT5	☐	☐	☐	☐

Notes...

OFFICE

		PULL	ROOM	CONSOLE	PATCH
Send L	XLR	☐	☐	☐	☐
Send R	XLR	☐	☐	☐	☐
Return	XLR	☐	☐	☐	—
Network	CAT5	☐	☐	☐	☐

Notes...

RECORD PLAYER

		PULL	ROOM	CONSOLE	PATCH
Send L	XLR	☐	☐	☐	☐
Send R	XLR	☐	☐	☐	☐
Return	XLR	☐	☐	☐	—
Network	CAT5	☐	☐	☐	☐

Notes...

FRONT DECK

	PULL	ROOM	CONSOLE	CATCH
Speaker	SPEAKER	☐	☐	☐ —

Notes...

BACK DECK

	PULL	ROOM	CONSOLE	CATCH
Speaker	SPEAKER	☐	☐	☐ —

Notes...

REVERB · EMT PLATE


		PULL	ROOM	CONSOLE	CATCH
Send	XLR	☐	☐	☐	☐
Return L	XLR	☐	☐	☐	☐
Return R	XLR	☐	☐	☐	☐
Motor control · 5-pin	CAT5	☐	☐	☐	—

Notes...


SOLDERING · XLR TO TRS

Hot is XLR pin 2 to the tip, cold is pin 3 to the ring, shield is pin 1 to the sleeve. Hold a connector with the two pins up and the single pin down, and read the view that matches what you are looking at - the solder side is the mirror of the front. Every connector has the numbers moulded beside each contact; trust those over any drawing.

- 2 · hot (+)
- 3 · cold (-)
- 1 · shield

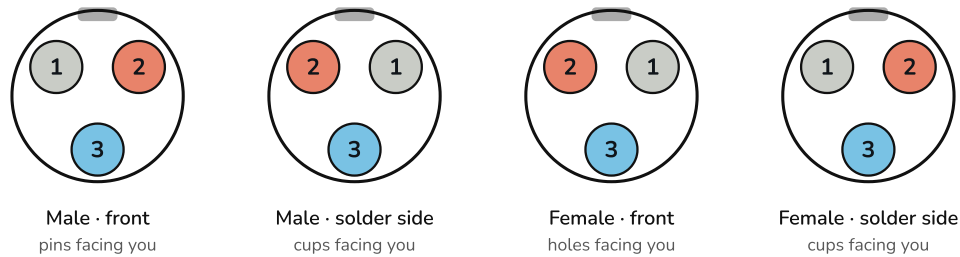

XLR numbering flips left to right between the front of a connector and its solder side.

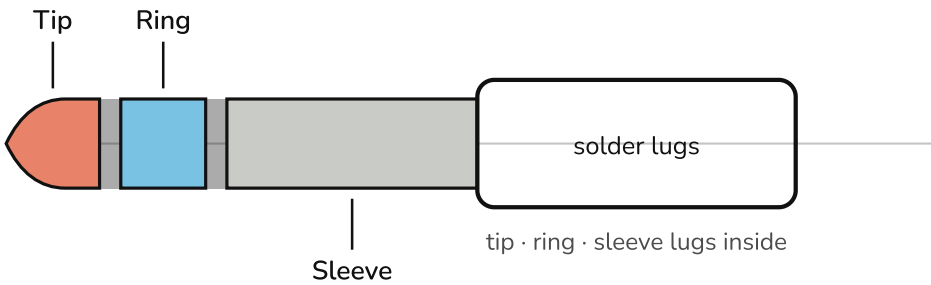

A ¼" TRS plug, tip first. The sleeve lug is the big one nearest the cable clamp.

XLR	SIGNAL	TRS	WIRE
Pin 2	Hot, +	Tip	Usually red or white
Pin 3	Cold, –	Ring	Usually black or blue
Pin 1	Shield	Sleeve	Braid or drain wire

– **Ghost inserts are backwards from most desks:** tip is RETURN and ring is SEND on GRP INS and MIX INS. An insert cable built for another

console will have send and return swapped here.

- **Ghost outputs are ground compensated:** tip signal +, ring ground sense, sleeve ground. Wire them as TRS; a TS plug shorts the ring and throws that away. CRM, ALT and STU PHNS B are the plain unbalanced exceptions.
- **Going unbalanced on purpose?** Leave the ring unconnected at the source end rather than shorting it to sleeve, and keep the shield on sleeve at both ends.
- **Check before you trust it:** buzz tip, ring and sleeve against pins 2, 3 and 1 with a meter once the first cable is done, then build the rest to match.

IMPERFECT CRIMES

Shortcuts taken during the build, so nobody has to rediscover them with a meter. Ones tied to a port also show as an i on that bay.

Bay 8 • port 19 bottom

Avantone Active MixCube: the lamp in its rear power switch is dead. The speaker and its supply are fine - the switch just doesn't light up, so don't go chasing a dead unit.

Bay 9 • port 17-18 bottom

Bay to the Ghost 2 Track A input is 2x unshielded TRS cables, about 6 ft, inside the rack.

Room XLR runs

While spooling out the cable, every XLR run from a room to the console is flagged with black tape at BOTH ends - room side and console side - because the parts to finish them aren't here yet. Anything without a black flag was soldered and jacked into the patch bay as it was pulled. So: black flag = still to terminate.

TO DO

0 of 4 done

- ☐ Find the screws for all the cover plates
- ☐ Gather every cover plate in one place
- ☐ Work out which rooms are missing cover plates - Kitchen and Guest Bed are, the rest unknown
- ☐ Go back to every black-flagged XLR run and terminate it once the parts arrive

Anything else...

MIDI HOOKUPS

0 of 11 connected

INSTRUMENT		PORT	PRIORITY	MIDI PATCH BAY
☐	Moog Sub 37	MIDI In	Required	Not assigned
		MIDI Out	Required	Not assigned
☐	Waldorf Streichfett	MIDI In	Required	Not assigned
		MIDI Out	Low priority	Not assigned
☐	MFB Tanzbar	MIDI In	Required	Not assigned
		MIDI Out	Low priority	Not assigned
☐	Sim n Tonic	MIDI In	Required	Not assigned
				Check which MIDI ports it has
☐	Oberheim OB-X8	MIDI In	Required	Not assigned
		MIDI Out	Required	Not assigned
☐	Oberheim OB-6	MIDI In	Required	Not assigned
		MIDI Out	Required	Not assigned