

STUDIO CARQUINEZ PATCH BAY

Front view, top of rack first. Left 16 ports: console buckets. Right 8: outboard, FX, monitoring. Generated 2026-09-26 from config.py.

Console core

Room sends

Tie lines

Outboard

Instruments & pedals

Aux sends & FX

Monitoring

2-track

Groups & mix bus

Amp rack

Network

Power

MIDI

Spare

Reserved

Rear not plugged in yet


Normalled

Not normalled

MAIN RACK


1

24 × 2
5 spare
0 normalled
0/37 rear plu

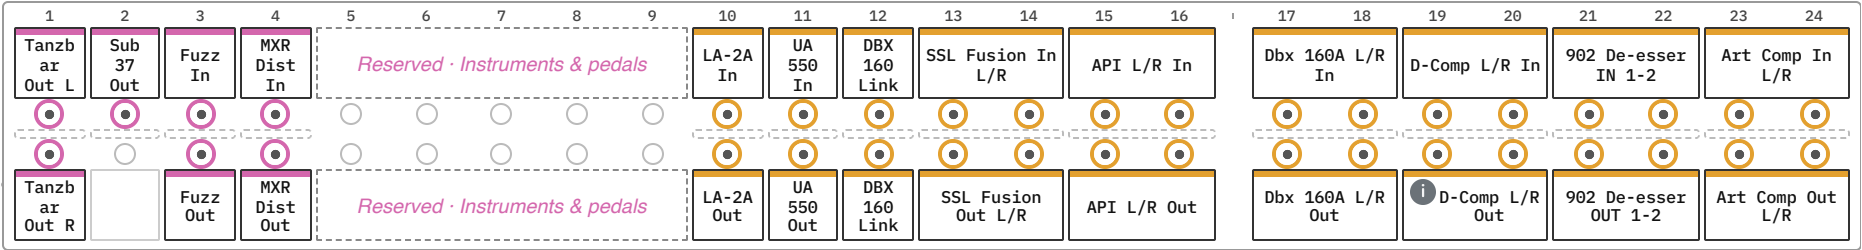


2

24 × 2
0 spare
16 normalled
0/48 rear plu

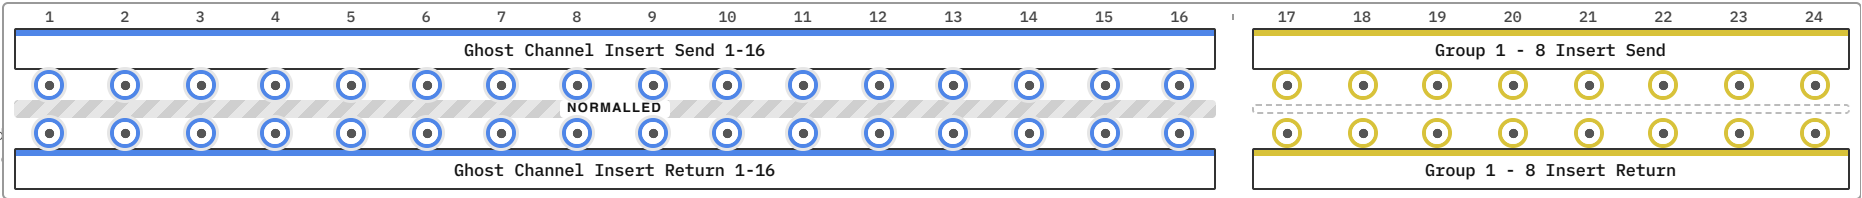


3

24 × 2
0 spare
24 normalled
0/44 rear plu

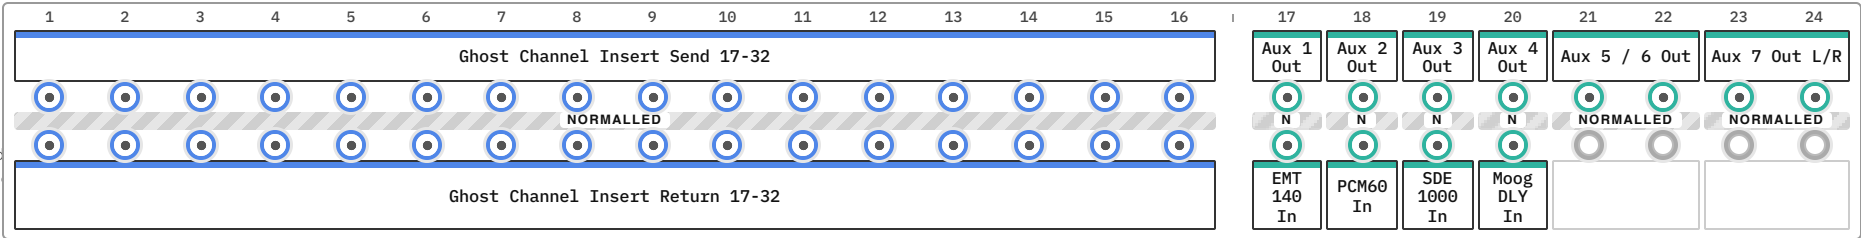


4

24 × 2
2 spare
18 normalled
0/40 rear plu

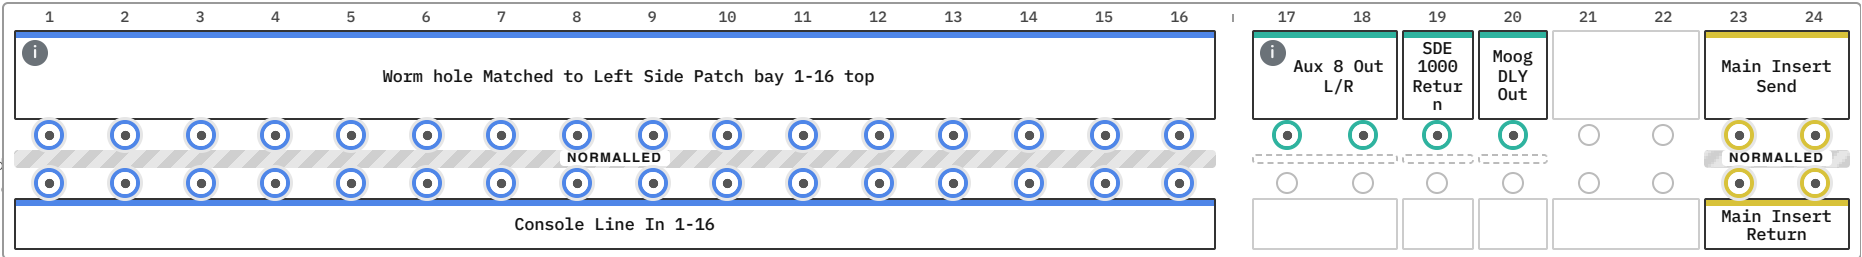



5

24 x 2
8 spare
16 normalled
0/32 rear plu

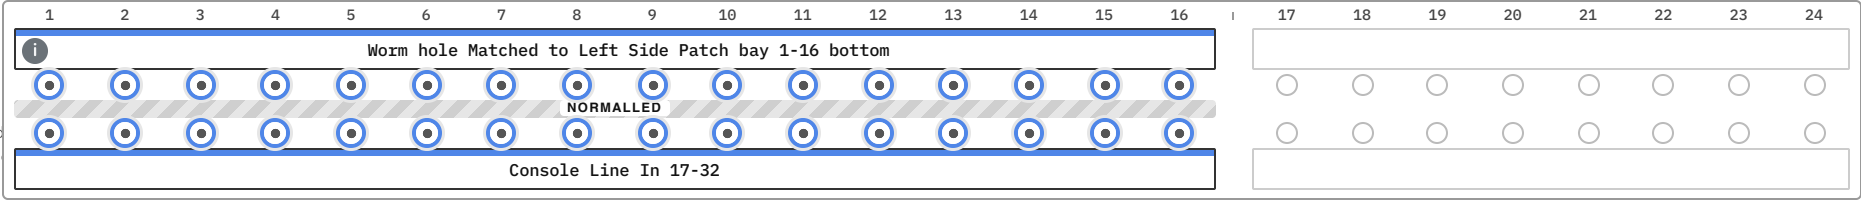



6

24 x 2
0 spare
16 normalled
0/32 rear plu

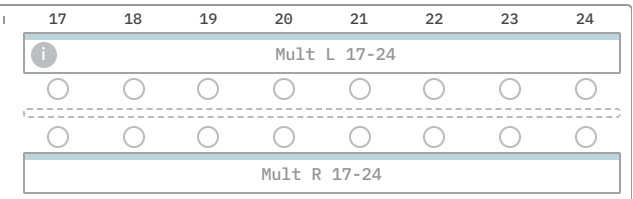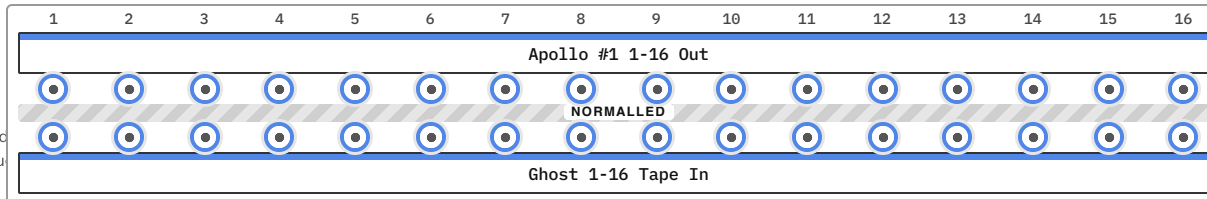



7

24 x 2
0 spare
20 normalled
0/44 rear plu

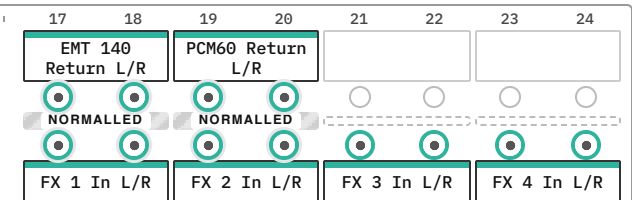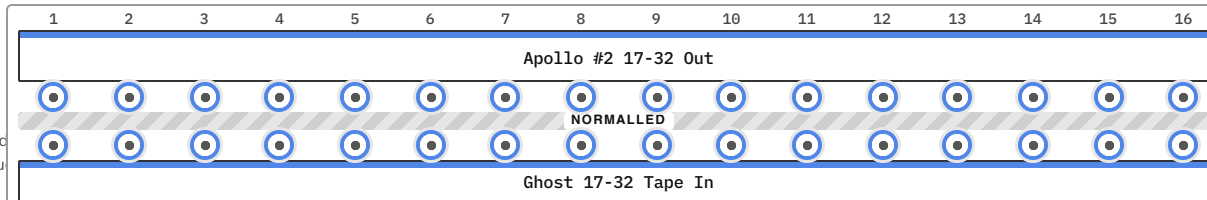



8

24 x 2
0 spare
24 normalled
0/47 rear plu

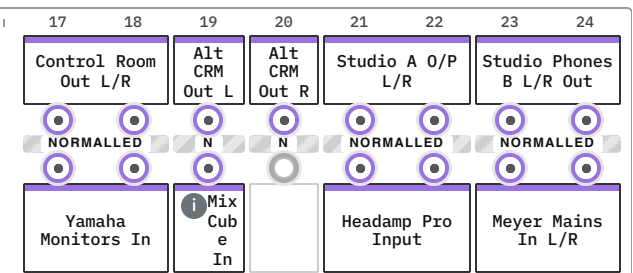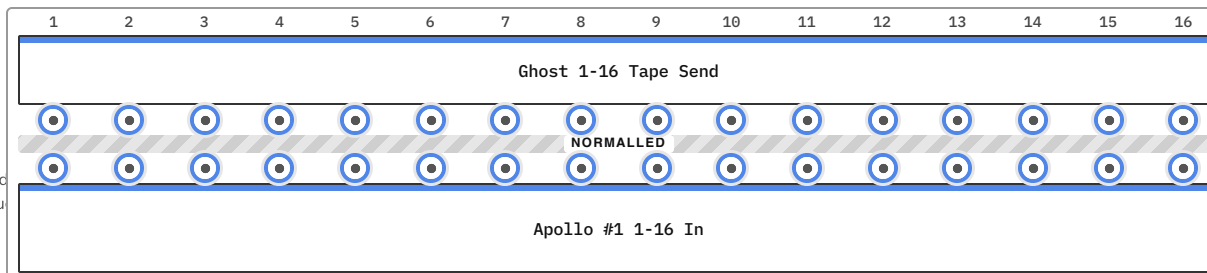



9

24 x 2
0 spare
20 normalled
0/44 rear plu

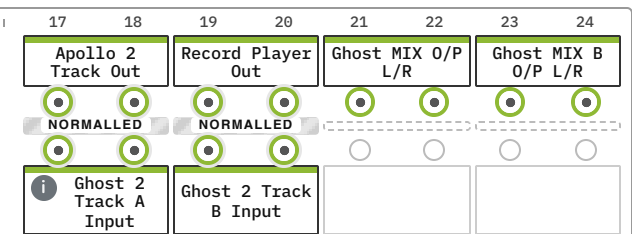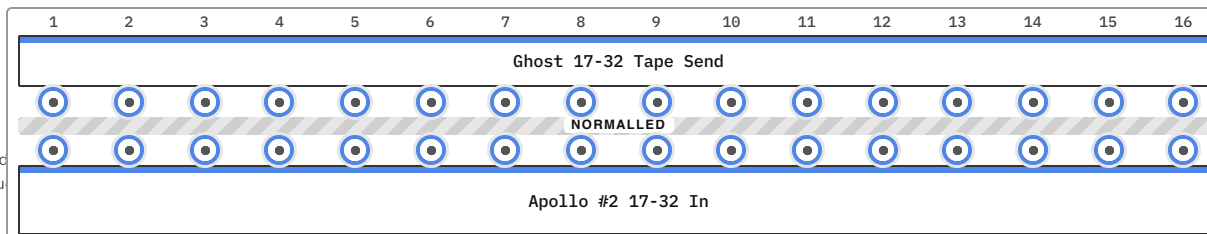

10


24 x 2
3 spare
0 normalled
0/42 rear plu

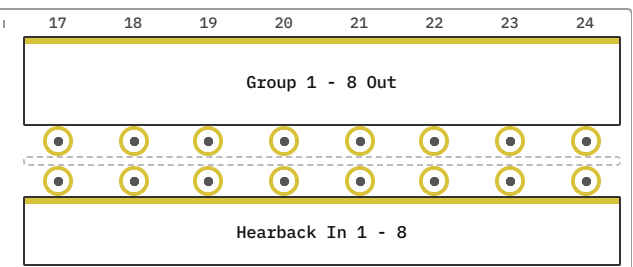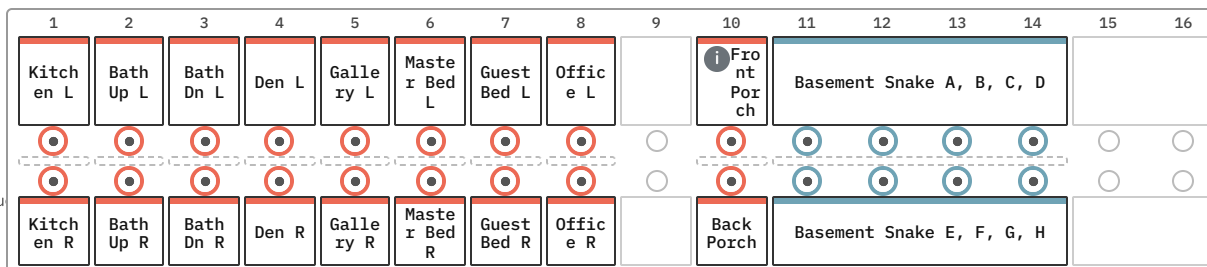

AMP RACK

11 AMP RACK


24 x 2
16 spare
8 normalised
0/16 rear plu

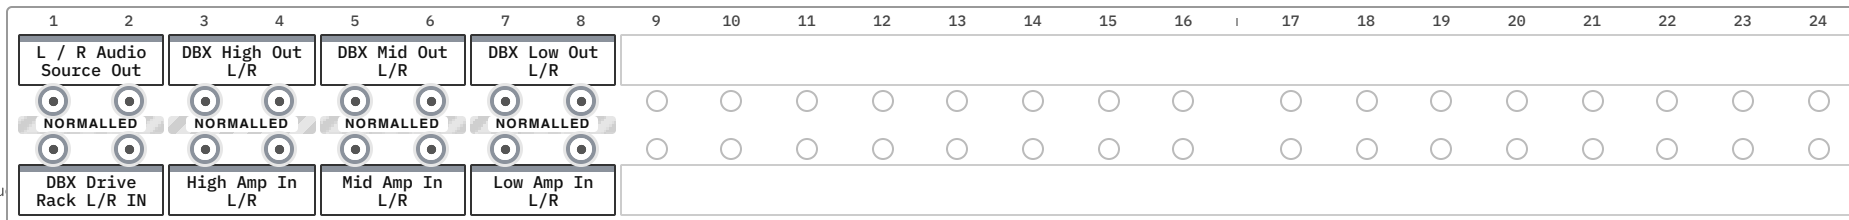

ETHERNET

ETHERNET

Single row
3 spare
0/8 rear plug

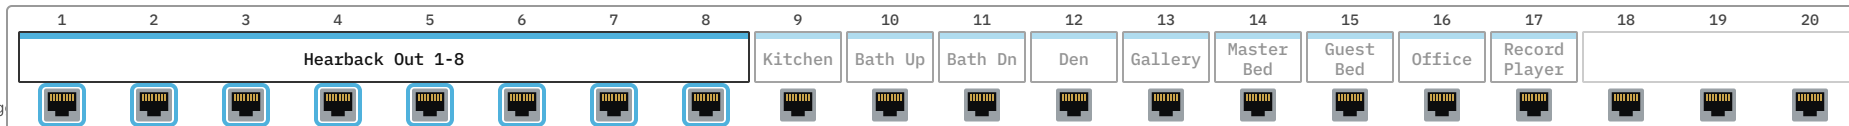

MIDI


MIDI

Not in use

Single row

22 spare


0/0 rear plugged in

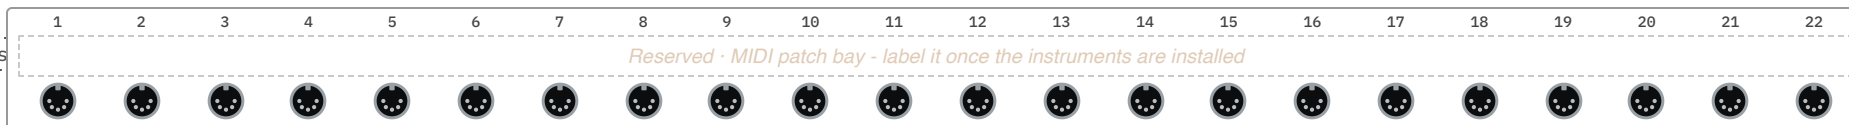

POWER SWITCHES

POWER SWITCHES

Single row
1 spare
0/9 rear plugs

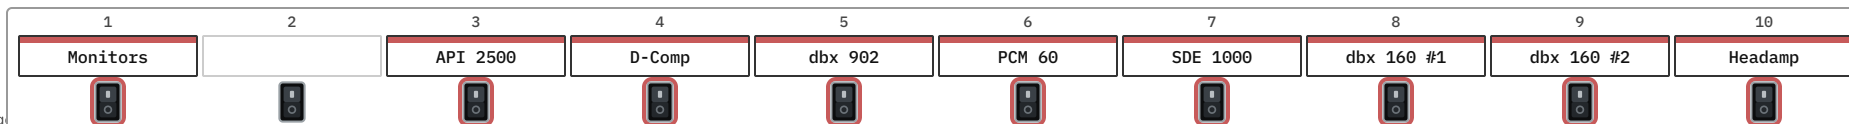

RACK 1 · EQUIPMENT (20U)

U1	POWER CONDITIONER	
U2	SWITCH PANEL	Not on the patch bay
U3	APOLLO 16 #1 Replacing both Apollos with one 1U unit	Patch bay: Bay 6 · 1–16, Bay 8 · 1–16
U4	APOLLO 16 #2 Replacing both Apollos with one 1U unit	Patch bay: Bay 7 · 1–16, Bay 9 · 1–16
U5	API 2500 COMPRESSOR	Patch bay: Bay 1 · 15–16, Power Switches · 3
U6–7	D-COMP	Patch bay: Bay 1 · 19–20, Power Switches · 4
U8	DBX 902 DE-ESSER ×2	Patch bay: Bay 1 · 21–22, Power Switches · 5
U9	LEXICON PCM 60 REVERB	Patch bay: Bay 3 · 18, Bay 7 · 19–20, Power Switches · 6
U10	SDE 1000 DELAY	Patch bay: Bay 3 · 19, Bay 4 · 19, Power Switches · 7
U11–12	DBX 160 COMPRESSORS	Patch bay: Bay 1 · 12, 17–18, Power Switches · 8–9
U13	EMT REVERB REMOTE Could move	
U14	HEADPHONE AMP Could move	Patch bay: Bay 8 · 21–22
U15	HEADPHONE POWER SUPPLY	
U16	MIDI PATCH BAY	Patch bay: <u>Midi</u> · 1–22
U17	HEARBACK UNIT	Patch bay: Bay 10 · 17–24, Ethernet · 1–8
U18	ETHERNET PATCH BAY	Patch bay: <u>Ethernet</u> · 1–20
U19–20	SOUNDCRAFT GHOST POWER SUPPLY	

OPEN QUESTIONS

CABLE PULLS TO EACH ROOM

Two XLR sends, one XLR return and one Cat5 per room. Each cable: pull it, terminate both ends onto their connectors, then patch it in at the room plate and at the console - **182** tasks in all. A dash means there is nothing to patch there: the returns live in a floor loom and the deck speaker runs never touch a bay.

KITCHEN

PULLED	TERMINATED		PATCHED	
	ROOM	CONSOLE	ROOM	CONSOLE
	☐	☐	☐	☐
	☐	☐	☐	☐
	☐	☐	☐	—
	☐	☐	☐	☐

Notes...

BATH UP

PULLED	TERMINATED		PATCHED	
	ROOM	CONSOLE	ROOM	CONSOLE
	☐	☐	☐	☐
	☐	☐	☐	☐
	☐	☐	☐	—
	☐	☐	☐	☐

Notes...

BATH DN

PULLED	TERMINATED		PATCHED	
	ROOM	CONSOLE	ROOM	CONSOLE
	☐	☐	☐	☐
	☐	☐	☐	☐
	☐	☐	☐	—
	☐	☐	☐	☐

Notes...

DEN

PULLED	TERMINATED		PATCHED	
	ROOM	CONSOLE	ROOM	CONSOLE
	☐	☐	☐	☐
	☐	☐	☐	☐
	☐	☐	☐	—
	☐	☐	☐	☐

Notes...

GALLERY

PULLED	TERMINATED		PATCHED	
	ROOM	CONSOLE	ROOM	CONSOLE
	☐	☐	☐	☐
	☐	☐	☐	☐
	☐	☐	☐	—
	☐	☐	☐	☐

Notes...

MASTER BED

PULLED	TERMINATED		PATCHED	
	ROOM	CONSOLE	ROOM	CONSOLE
	☐	☐	☐	☐
	☐	☐	☐	☐
	☐	☐	☐	—
	☐	☐	☐	☐

Notes...

GUEST BED

PULLED	TERMINATED		PATCHED	
	ROOM	CONSOLE	ROOM	CONSOLE
	☐	☐	☐	☐
	☐	☐	☐	☐
	☐	☐	☐	—
	☐	☐	☐	☐

Notes...

OFFICE

PULLED	TERMINATED		PATCHED	
	ROOM	CONSOLE	ROOM	CONSOLE
	☐	☐	☐	☐
	☐	☐	☐	☐
	☐	☐	☐	—
	☐	☐	☐	☐

Notes...

RECORD PLAYER

PULLED	TERMINATED		PATCHED	
	ROOM	CONSOLE	ROOM	CONSOLE
	☐	☐	☐	—
	☐	☐	☐	☐

Notes...

FRONT DECK

PULLED	TERMINATED		PATCHED	
	ROOM	CONSOLE	ROOM	CONSOLE
SP ☐ KER	☐	☐	—	—

Notes...

BACK DECK

PULLED	TERMINATED		PATCHED	
	ROOM	CONSOLE	ROOM	CONSOLE
SP ☐ KER	☐	☐	—	—

Notes...

REVERB · EMT PLATE

PULLED	TERMINATED		PATCHED	
	ROOM	CONSOLE	ROOM	CONSOLE
☒ >	☐	☐	—	☐
☒ >	☐	☐	—	☐
☒ >	☐	☐	—	☐
☒ C	☐	☐	—	—

Notes...

SOUNDCRAFT GHOST · CENTRE SECTION REAR

Every jack on the master section's rear panel, in the order the manual lists them - all ¼".
Grey means nothing on the patch bay carries it yet.

INPUTS

tip signal +, ring signal -, sleeve ground

FX 1 L/R
☐ ☐ TRS balanced
Bay 7 · 17–18

FX 2 L/R
☐ ☐ TRS balanced
Bay 7 · 19–20

FX 3 L/R
☐ ☐ TRS balanced
Bay 7 · 21–22

FX 4 L/R
☐ ☐ TRS balanced
Bay 7 · 23–24

2TK A I/P L/R
☐ ☐ TRS balanced
Bay 9 · 17–18

2TK B I/P L/R
☐ ☐ TRS balanced
Bay 9 · 19–20

OUTPUTS

tip signal +, ring ground sense, sleeve ground;
the TS unbalanced ones are tip signal +, ring not
used, sleeve ground

GRP 1-8
☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ TRS ground-comp
Bay 10 · 17–24

AUX 1
☐ TRS ground-comp
Bay 3 · 17

AUX 2
☐ TRS ground-comp
Bay 3 · 18

AUX 3
☐ TRS ground-comp
Bay 3 · 19

AUX 4
☐ TRS ground-comp
Bay 3 · 20

AUX 5 / 6
☐ ☐ TRS ground-comp
Bay 3 · 21–22

AUX 7 L/R
☐ ☐ TRS ground-comp
Bay 3 · 23–24

AUX 8 L/R
☐ ☐ TRS ground-comp
Bay 4 · 17–18

MIX O/P L/R
☐ ☐ TRS ground-comp
Bay 9 · 21–22

MIX B O/P L/R
☐ ☐ TRS ground-comp

INSERTS

tip RETURN, ring SEND, sleeve ground - the
opposite of the usual tip-send wiring

GRP INS 1-8
☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ TRS insert
Bay 2 · 17–24

MIX INS L/R
☐ ☐ TRS insert
Bay 4 · 23–24

Bay 9 · 23–24

CRM O/P L/R



TS unbalanced

Bay 8 · 17–18

ALT O/P L/R



TS unbalanced

Bay 8 · 19

STU O/P A L/R



TRS ground-comp

Bay 8 · 21–22

STU PHNS B L/R




TS unbalanced

Bay 8 · 23–24


SOLDERING · XLR TO TRS

Hot is XLR pin 2 to the tip, cold is pin 3 to the ring, shield is pin 1 to the sleeve. Hold a connector with the two pins up and the single pin down, and read the view that matches what you are looking at - the solder side is the mirror of the front. Every connector has the numbers moulded beside each contact; trust those over any drawing.

- 2 · hot (+)
- 3 · cold (-)
- 1 · shield

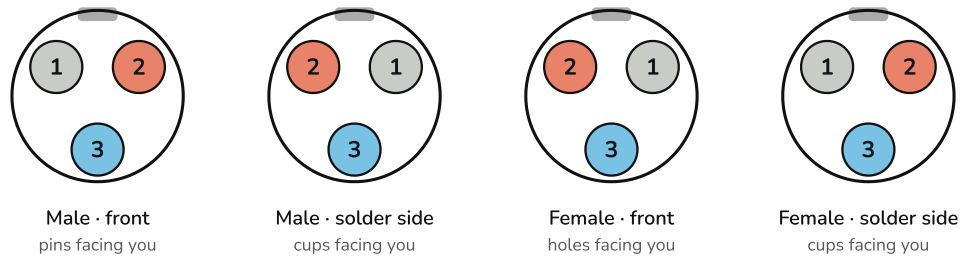

XLR numbering flips left to right between the front of a connector and its solder side.

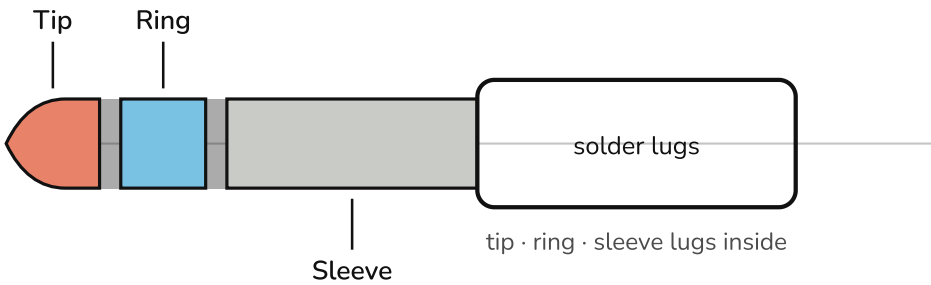

A ¼" TRS plug, tip first. The sleeve lug is the big one nearest the cable clamp.

XLR	SIGNAL	TRS	WIRE
Pin 2	Hot, +	Tip	Usually red or white
Pin 3	Cold, –	Ring	Usually black or blue
Pin 1	Shield	Sleeve	Braid or drain wire

– **Ghost inserts are backwards from most desks:** tip is RETURN and ring is SEND on GRP INS and MIX INS. An insert cable built for another

console will have send and return swapped here.

- **Ghost outputs are ground compensated:** tip signal +, ring ground sense, sleeve ground. Wire them as TRS; a TS plug shorts the ring and throws that away. CRM, ALT and STU PHNS B are the plain unbalanced exceptions.
- **Going unbalanced on purpose?** Leave the ring unconnected at the source end rather than shorting it to sleeve, and keep the shield on sleeve at both ends.
- **Check before you trust it:** buzz tip, ring and sleeve against pins 2, 3 and 1 with a meter once the first cable is done, then build the rest to match.

CONSOLE FAULTS

Running list for the next service session. Tick one when it is sorted.

0 of 1 sorted

☐

Channel 6

noticed 2026-09-25

Intermittent - passes no signal unless the source is hot, and tapping the channel brings it back. Suspect a dry solder joint or dirty contact rather than a dead stage.

IMPERFECT CRIMES

Shortcuts taken during the build, so nobody has to rediscover them with a meter. Ones tied to a port also show as an i on that bay.

Bay 1 • port 19-20 bottom	The D-Comp stereo return is wired unbalanced. No real loss here - the Ghost's insert points are unbalanced anyway (tip return, ring send).
Bay 4 • port 1-16 top	Top row is the worm hole to the left-side bay - not wired yet. The Console Line In jacks below are in use.
Bay 4 • port 17-18 top	Aux 8 is on the bay but not wired to anything yet - stereo send, no destination chosen.
Bay 5 • port 1-16 top	Top row is the worm hole to the left-side bay - not wired yet. The Console Line In jacks below are in use.
Bay 6 • port 17-24 top	Stereo mult: all 8 top jacks joined as the L bus, all 8 bottom jacks as the R bus. Feed Studio A O/P into any one port, the other 7 are outputs. Wire the bus on the REAR jacks and turn those cards, so patching at the front never breaks the chain.
Bay 8 • port 19 bottom	Avantone Active MixCube: the lamp in its rear power switch is dead. The speaker and its supply are fine - the switch just doesn't light up, so don't go chasing a dead unit.
Bay 9 • port 17-18 bottom	Bay to the Ghost 2 Track A input is 2x unshielded TRS cables, about 6 ft, inside the rack.
Bay 10 • port 10 top	Mono line sends, one per porch, feeding the amp that drives the porch speakers.
Room XLR runs	While spooling out the cable, every XLR run from a room to the console is flagged with black tape at BOTH ends - room side and console side - because the parts to finish them aren't here yet. Anything without a black flag was soldered and jacked into the patch bay as it was pulled. So: black flag = still to terminate.

TO DO

0 of 5 done

- ☐ Find the screws for all the cover plates
- ☐ Gather every cover plate in one place
- ☐ Work out which rooms are missing cover plates - Kitchen and Guest Bed are, the rest unknown
- ☐ Go back to every black-flagged XLR run and terminate it once the parts arrive
- ☐ Identify the stray XLR sticking out of the loom behind the desk (Steve found it) - it comes from one of the rooms, but which one is unknown. Tone it out and label both ends

Anything else...

MIDI HOOKUPS

0 of 11 connected

INSTRUMENT		PORT	PRIORITY	MIDI PATCH BAY
☐	Moog Sub 37	MIDI In	Required	Not assigned
		MIDI Out	Required	Not assigned
☐	Waldorf Streichfett	MIDI In	Required	Not assigned
		MIDI Out	Low priority	Not assigned
☐	MFB Tanzbar	MIDI In	Required	Not assigned
		MIDI Out	Low priority	Not assigned
☐	Sim n Tonic	MIDI In	Required	Not assigned
				Check which MIDI ports it has
☐	Oberheim OB-X8	MIDI In	Required	Not assigned
		MIDI Out	Required	Not assigned
☐	Oberheim OB-6	MIDI In	Required	Not assigned
		MIDI Out	Required	Not assigned