

STUDIO CARQUINEZ PATCH BAY

Front view, top of rack first. Left 16 ports: console buckets. Right 8: outboard, FX, monitoring. Generated 2026-09-25 from config.py.

Console core

Room sends

Tie lines

Outboard

Instruments & pedals

Aux sends & FX

Monitoring

2-track

Groups & mix bus

Amp rack

Network

Power

MIDI

Spare

Reserved

Rear not plugged in yet


Normalled

Not normalled

MAIN RACK


1

24 x 2
5 spare
0 normalled
0/37 rear plu

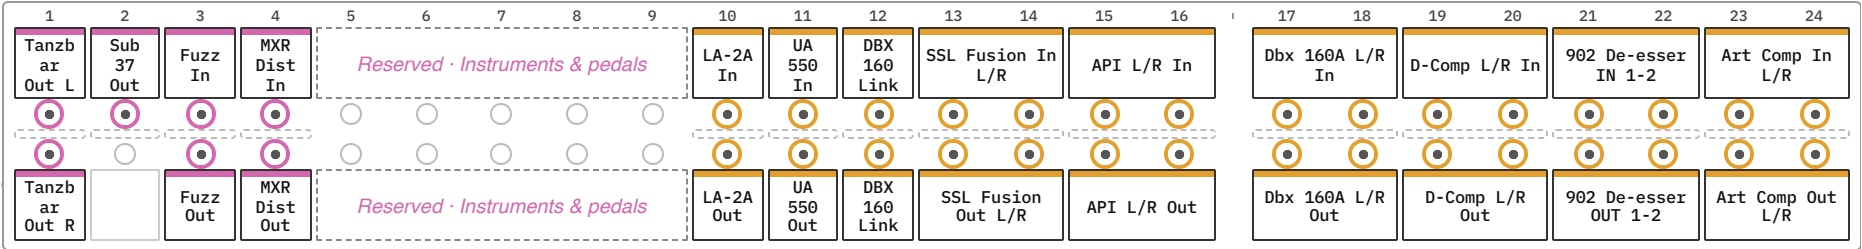


2

24 x 2
0 spare
16 normalled
0/48 rear plu

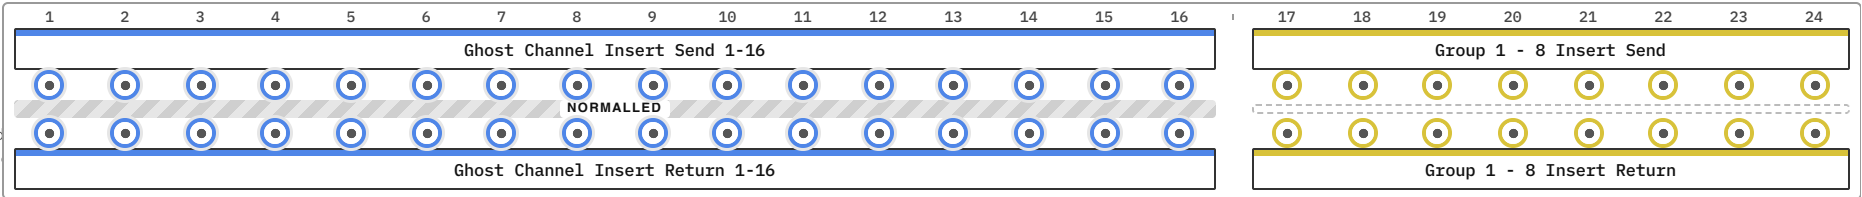


3

24 x 2
0 spare
24 normalled
0/44 rear plu

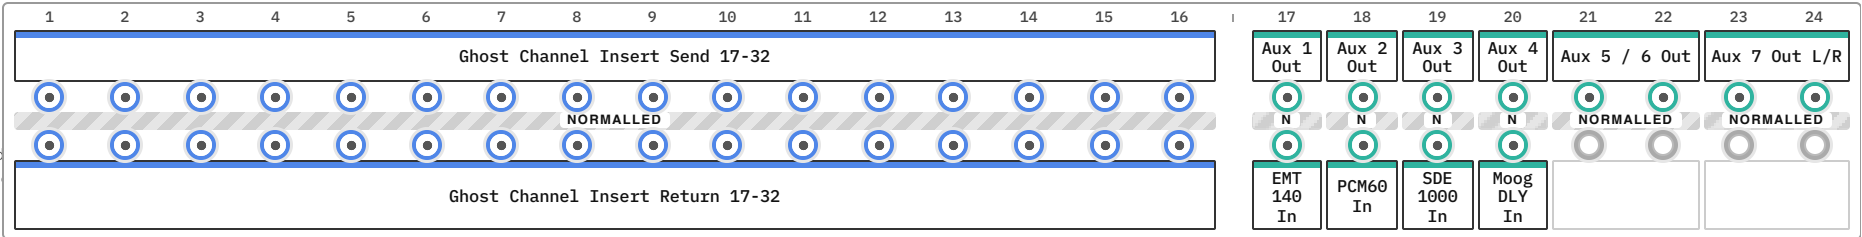


4

24 x 2
3 spare
18 normalled
0/39 rear plu

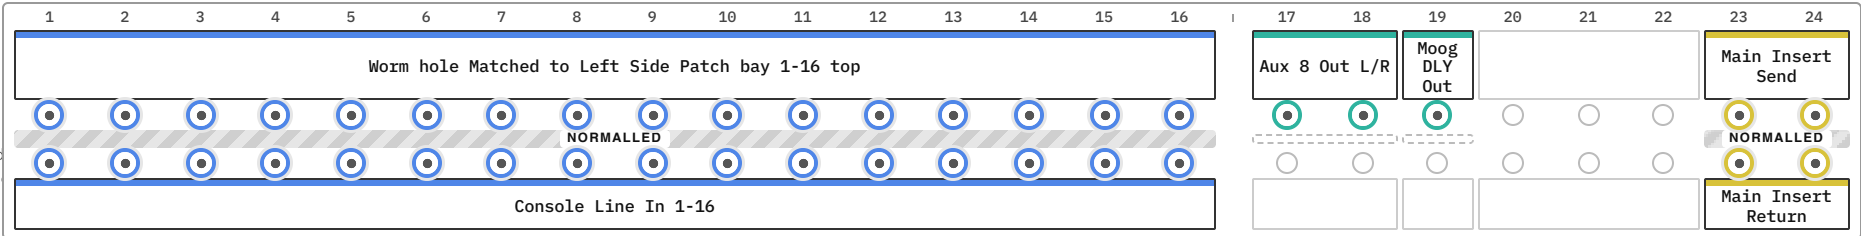



5

24 x 2
8 spare
16 normalled
0/32 rear plu

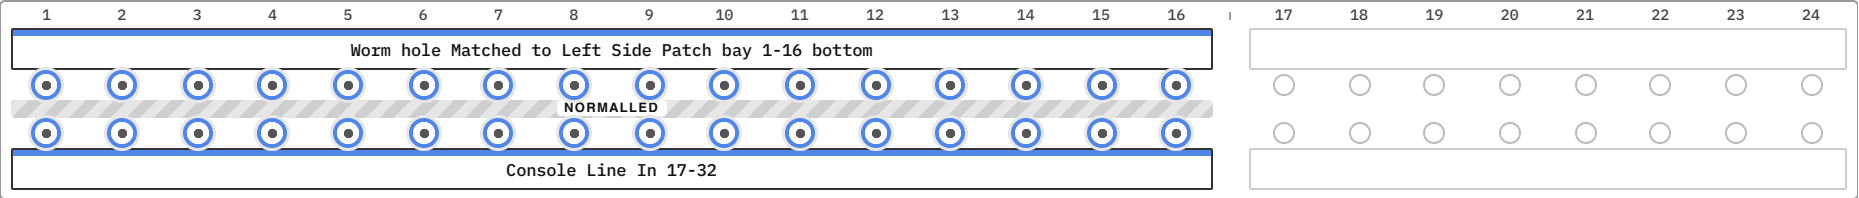



6

24 x 2
8 spare
16 normalled
0/32 rear plu

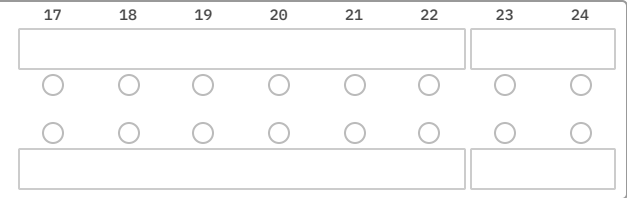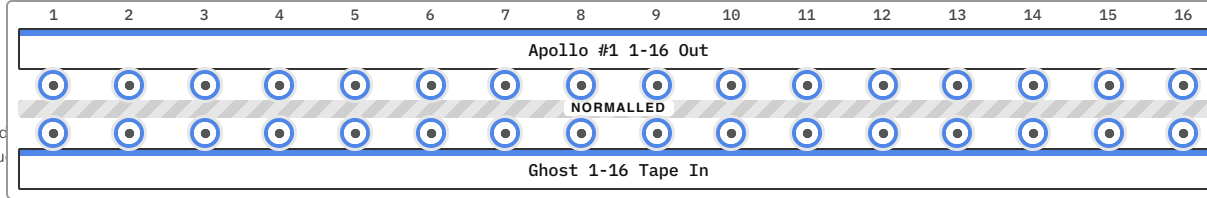



7

24 x 2
0 spare
22 normalled
0/46 rear plu

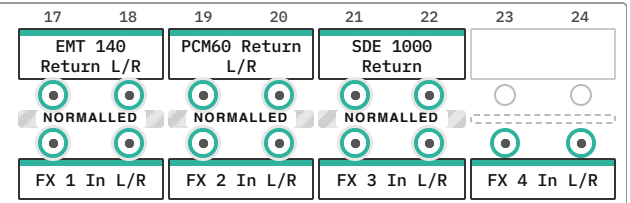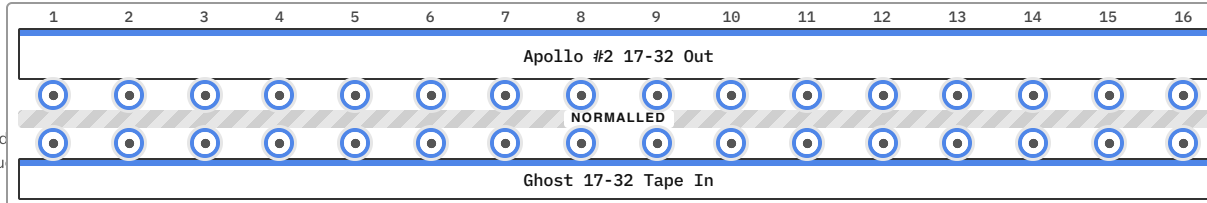



8

24 x 2
0 spare
24 normalled
0/47 rear plu

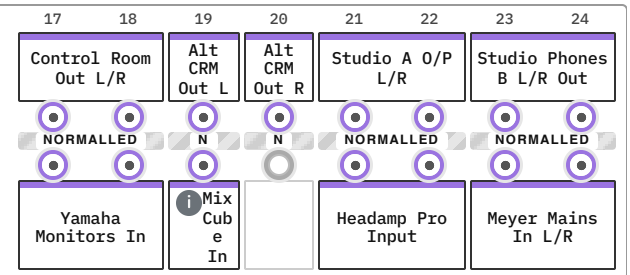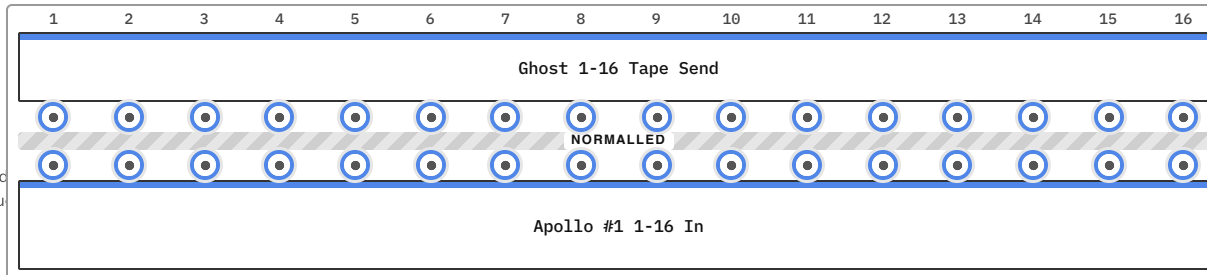



9

24 x 2
0 spare
22 normalled
0/46 rear plu

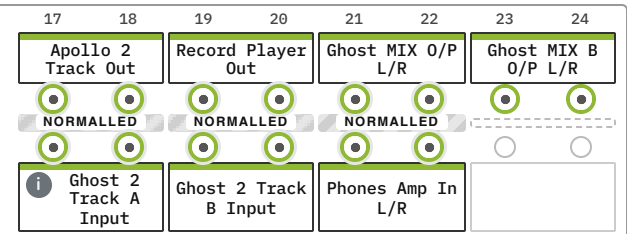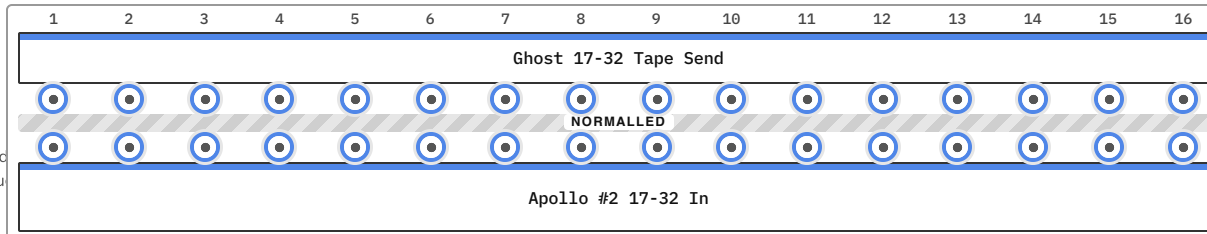


10


24 x 2
2 spare
0 normalled
0/44 rear plu

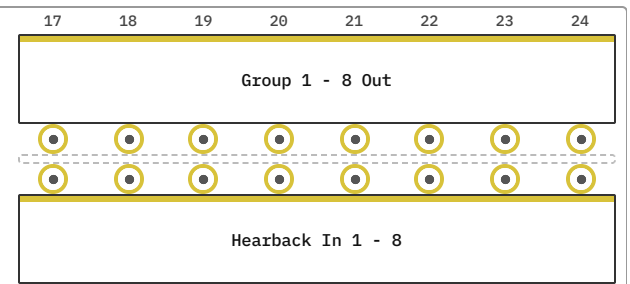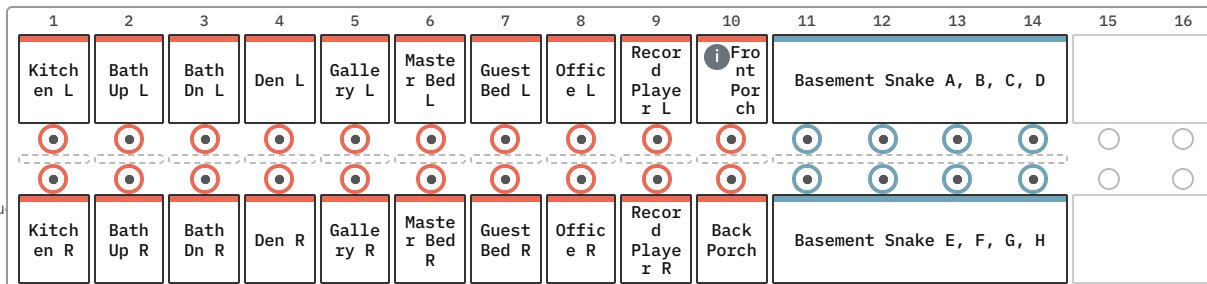


24 x 2
16 spare
8 normalised
0/16 rear plu

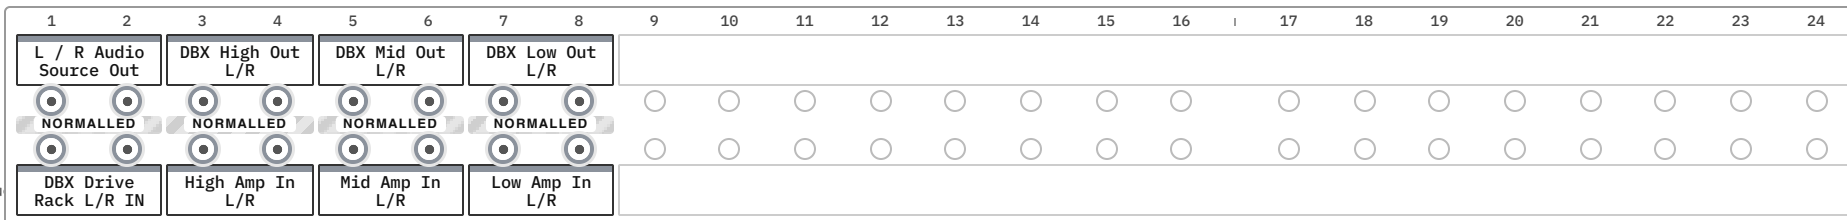


Single row
3 spare
0/8 rear plug

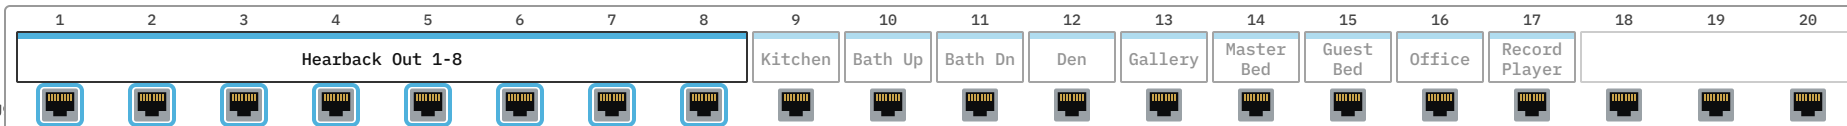

Not in use
Single row
22 spare
0/0 rear plug

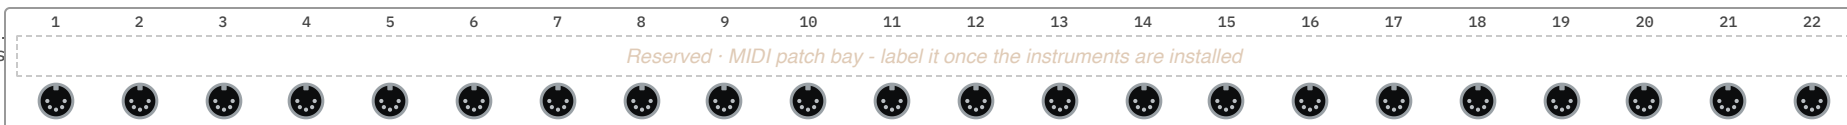

Single row
1 spare
0/9 rear plug

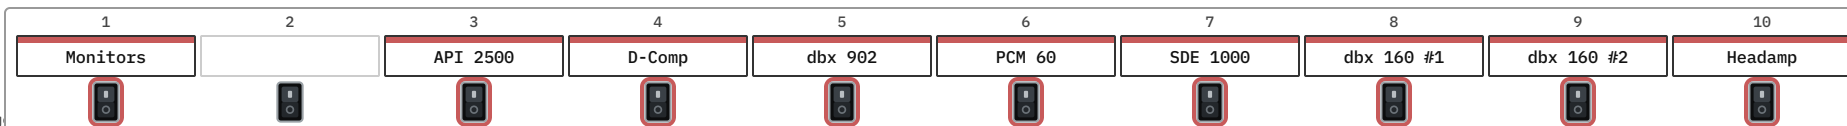

RACK 1 · EQUIPMENT (20U)

U1	POWER CONDITIONER	
U2	SWITCH PANEL	Not on the patch bay
U3	APOLLO 16 #1 Replacing both Apollos with one 1U unit	Patch bay: Bay 6 · 1-16, Bay 8 · 1-16
U4	APOLLO 16 #2 Replacing both Apollos with one 1U unit	Patch bay: Bay 7 · 1-16, Bay 9 · 1-16
U5	API 2500 COMPRESSOR	Patch bay: Bay 1 · 15-16, Power Switches · 3
U6-7	D-COMP	Patch bay: Bay 1 · 19-20, Power Switches · 4
U8	DBX 902 DE-ESSER ×2	Patch bay: Bay 1 · 21-22, Power Switches · 5
U9	LEXICON PCM 60 REVERB	Patch bay: Bay 3 · 18, Bay 7 · 19-20, Power Switches · 6
U10	SDE 1000 DELAY	Patch bay: Bay 3 · 19, Bay 7 · 21-22, Power Switches · 7
U11-12	DBX 160 COMPRESSORS	Patch bay: Bay 1 · 12, 17-18, Power Switches · 8-9
U13	EMT REVERB REMOTE Could move	
U14	HEADPHONE AMP Could move	Patch bay: Bay 9 · 21-22
U15	HEADPHONE POWER SUPPLY	
U16	MIDI PATCH BAY	Patch bay: <u>Midi</u> · 1-22
U17	HEARBACK UNIT	Patch bay: Bay 10 · 17-24, Ethernet · 1-8
U18	ETHERNET PATCH BAY	Patch bay: <u>Ethernet</u> · 1-20
U19-20	SOUNDCRAFT GHOST POWER SUPPLY	

OPEN QUESTIONS

SOUNDCRAFT GHOST · CENTRE SECTION REAR

Every jack on the master section's rear panel, in the order the manual lists them - all ¼".
Grey means nothing on the patch bay carries it yet.

INPUTS

tip signal +, ring signal -, sleeve ground

FX 1 L/R

TRS balanced

Bay 7 · 17–18

FX 2 L/R

TRS balanced

Bay 7 · 19–20

FX 3 L/R

TRS balanced

Bay 7 · 21–22

FX 4 L/R

TRS balanced

Bay 7 · 23–24

2TK A I/P L/R

TRS balanced

Bay 9 · 17–18

2TK B I/P L/R

TRS balanced

Bay 9 · 19–20

OUTPUTS

tip signal +, ring ground sense, sleeve ground;
the TS unbalanced ones are tip signal +, ring not
used, sleeve ground

GRP 1-8

TRS ground-comp

Bay 10 · 17–24

AUX 1

TRS ground-comp

Bay 3 · 17

AUX 2

TRS ground-comp

Bay 3 · 18

AUX 3

TRS ground-comp

Bay 3 · 19

AUX 4

TRS ground-comp

Bay 3 · 20

AUX 5 / 6

TRS ground-comp

Bay 3 · 21–22

AUX 7 L/R

TRS ground-comp

Bay 3 · 23–24

AUX 8 L/R

TRS ground-comp

Bay 4 · 17–18

MIX O/P L/R

TRS ground-comp

Bay 9 · 21–22

MIX B O/P L/R

TRS ground-comp

INSERTS

tip RETURN, ring SEND, sleeve ground - the
opposite of the usual tip-send wiring

GRP INS 1-8

TRS insert

Bay 2 · 17–24

MIX INS L/R

TRS insert

Bay 4 · 23–24

Bay 9 · 23–24

CRM O/P L/R



TS unbalanced

Bay 8 · 17–18

ALT O/P L/R



TS unbalanced

Bay 8 · 19

STU O/P A L/R



TRS ground-comp

Bay 8 · 21–22

STU PHNS B L/R



TS unbalanced

Bay 8 · 23–24

CABLE PULLS TO EACH ROOM

Two XLR sends, one XLR return and one Cat5 per room. Each cable: pull it, terminate both ends onto their connectors, then patch it in at the room plate and at the console - **192** tasks in all. A dash means there is nothing to patch there: the returns live in a floor loom and the deck speaker runs never touch a bay.

KITCHEN

ROOM		PULLED	TERMINATED	TERMINATED	TERMINATED	TERMINATED	TERMINATED
			CONSOLE	CONSOLE	CONSOLE	CONSOLE	CONSOLE
Send L	XLR	☐	☐	☐	☐	☐	☐
Send R	XLR	☐	☐	☐	☐	☐	☐
Return	XLR	☐	☐	☐	☐	☐	—
Network	CAT5	☐	☐	☐	☐	☐	☐
Notes...							

BATH UP

ROOM		PULLED	TERMINATED	TERMINATED	TERMINATED	TERMINATED	TERMINATED
			CONSOLE	CONSOLE	CONSOLE	CONSOLE	CONSOLE
Send L	XLR	☐	☐	☐	☐	☐	☐
Send R	XLR	☐	☐	☐	☐	☐	☐
Return	XLR	☐	☐	☐	☐	☐	—
Network	CAT5	☐	☐	☐	☐	☐	☐
Notes...							

BATH DN

ROOM		PULLED	TERMINATED	TERMINATED	TERMINATED	TERMINATED	TERMINATED
			CONSOLE	CONSOLE	CONSOLE	CONSOLE	CONSOLE
Send L	XLR	☐	☐	☐	☐	☐	☐
Send R	XLR	☐	☐	☐	☐	☐	☐
Return	XLR	☐	☐	☐	☐	☐	—
Network	CAT5	☐	☐	☐	☐	☐	☐
Notes...							

DEN

ROOM		PULLED	TERMINATED	TERMINATED	TERMINATED	TERMINATED	TERMINATED
			CONSOLE	CONSOLE	CONSOLE	CONSOLE	CONSOLE
Send L	XLR	☐	☐	☐	☐	☐	☐
Send R	XLR	☐	☐	☐	☐	☐	☐
Return	XLR	☐	☐	☐	☐	☐	—
Network	CAT5	☐	☐	☐	☐	☐	☐
Notes...							

GALLERY

ROOM		PULLED	TERMINATED	TERMINATED	TERMINATED	TERMINATED	TERMINATED
			CONSOLE	CONSOLE	CONSOLE	CONSOLE	CONSOLE
Send L	XLR	☐	☐	☐	☐	☐	☐
Send R	XLR	☐	☐	☐	☐	☐	☐
Return	XLR	☐	☐	☐	☐	☐	—
Network	CAT5	☐	☐	☐	☐	☐	☐
Notes...							

MASTER BED

ROOM		PULLED	TERMINATED	TERMINATED	TERMINATED	TERMINATED	TERMINATED
			CONSOLE	CONSOLE	CONSOLE	CONSOLE	CONSOLE
Send L	XLR	☐	☐	☐	☐	☐	☐
Send R	XLR	☐	☐	☐	☐	☐	☐
Return	XLR	☐	☐	☐	☐	☐	—
Network	CAT5	☐	☐	☐	☐	☐	☐
Notes...							

GUEST BED

ROOM		PULLED	TERMINATED	TERMINATED	TERMINATED	TERMINATED	TERMINATED
			CONSOLE	CONSOLE	CONSOLE	CONSOLE	CONSOLE
Send L	XLR	☐	☐	☐	☐	☐	☐
Send R	XLR	☐	☐	☐	☐	☐	☐
Return	XLR	☐	☐	☐	☐	☐	—
Network	CAT5	☐	☐	☐	☐	☐	☐
Notes...							

OFFICE

ROOM		PULLED	TERMINATED	TERMINATED	TERMINATED	TERMINATED	TERMINATED
			CONSOLE	CONSOLE	CONSOLE	CONSOLE	CONSOLE
Send L	XLR	☐	☐	☐	☐	☐	☐
Send R	XLR	☐	☐	☐	☐	☐	☐
Return	XLR	☐	☐	☐	☐	☐	—
Network	CAT5	☐	☐	☐	☐	☐	☐
Notes...							

RECORD PLAYER

ROOM		PULLED	TERMINATED	TERMINATED	TERMINATED	TERMINATED	TERMINATED
			CONSOLE	CONSOLE	CONSOLE	CONSOLE	CONSOLE
Send L	XLR	☐	☐	☐	☐	☐	☐
Send R	XLR	☐	☐	☐	☐	☐	☐
Return	XLR	☐	☐	☐	☐	☐	—
Network	CAT5	☐	☐	☐	☐	☐	☐
Notes...							

FRONT DECK

ROOM

PULLED

TERMINATED

NOTCHED

CONSOLE

Speaker

SPEAKER

—

—

Notes...

BACK DECK

ROOM

PULLED

TERMINATED

NOTCHED

CONSOLE

Speaker

SPEAKER

—

—

Notes...

REVERB · EMT PLATE

ROOM

PULLED

TERMINATED

NOTCHED

CONSOLE

Send

XLR

—

Return L

XLR

—

Return R

XLR

—

Motor control · 5-pin

CAT5

—


—

Notes...


SOLDERING · XLR TO TRS

Hot is XLR pin 2 to the tip, cold is pin 3 to the ring, shield is pin 1 to the sleeve. Hold a connector with the two pins up and the single pin down, and read the view that matches what you are looking at - the solder side is the mirror of the front. Every connector has the numbers moulded beside each contact; trust those over any drawing.

- 2 · hot (+)
- 3 · cold (-)
- 1 · shield

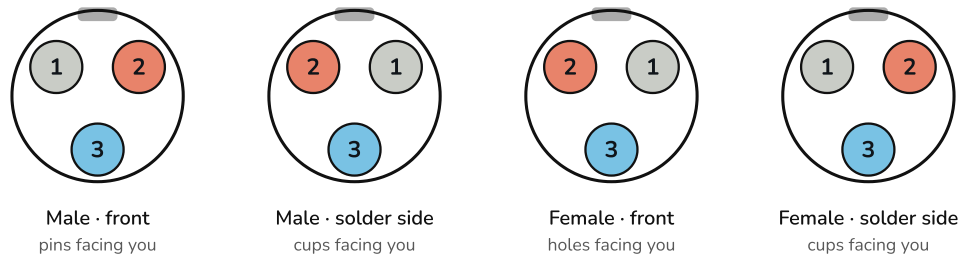

XLR numbering flips left to right between the front of a connector and its solder side.

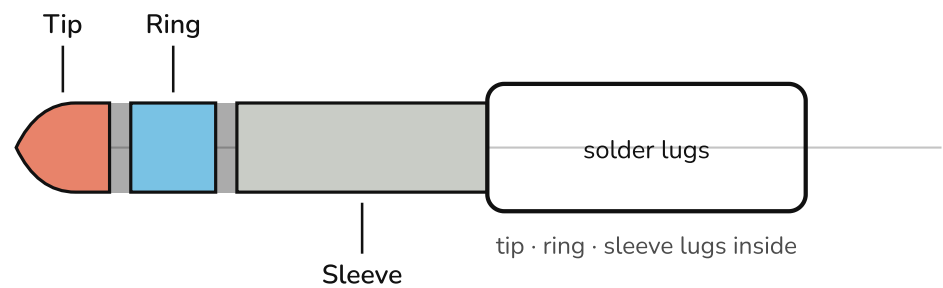

A ¼" TRS plug, tip first. The sleeve lug is the big one nearest the cable clamp.

XLR	SIGNAL	TRS	WIRE
Pin 2	Hot, +	Tip	Usually red or white
Pin 3	Cold, –	Ring	Usually black or blue
Pin 1	Shield	Sleeve	Braid or drain wire

– **Ghost inserts are backwards from most desks:** tip is RETURN and ring is SEND on GRP INS and MIX INS. An insert cable built for another

console will have send and return swapped here.

- **Ghost outputs are ground compensated:** tip signal +, ring ground sense, sleeve ground. Wire them as TRS; a TS plug shorts the ring and throws that away. CRM, ALT and STU PHNS B are the plain unbalanced exceptions.
- **Going unbalanced on purpose?** Leave the ring unconnected at the source end rather than shorting it to sleeve, and keep the shield on sleeve at both ends.
- **Check before you trust it:** buzz tip, ring and sleeve against pins 2, 3 and 1 with a meter once the first cable is done, then build the rest to match.

IMPERFECT CRIMES

Shortcuts taken during the build, so nobody has to rediscover them with a meter. Ones tied to a port also show as an i on that bay.

Bay 8 • port 19 bottom	Avantone Active MixCube: the lamp in its rear power switch is dead. The speaker and its supply are fine - the switch just doesn't light up, so don't go chasing a dead unit.
Bay 9 • port 17-18 bottom	Bay to the Ghost 2 Track A input is 2x unshielded TRS cables, about 6 ft, inside the rack.
Bay 10 • port 10 top	Mono line sends, one per porch, feeding the amp that drives the porch speakers.
Room XLR runs	While spooling out the cable, every XLR run from a room to the console is flagged with black tape at BOTH ends - room side and console side - because the parts to finish them aren't here yet. Anything without a black flag was soldered and jacked into the patch bay as it was pulled. So: black flag = still to terminate.

TO DO

0 of 4 done

- ☐ Find the screws for all the cover plates
- ☐ Gather every cover plate in one place
- ☐ Work out which rooms are missing cover plates - Kitchen and Guest Bed are, the rest unknown
- ☐ Go back to every black-flagged XLR run and terminate it once the parts arrive

Anything else...

MIDI HOOKUPS

0 of 11 connected

INSTRUMENT		PORT	PRIORITY	MIDI PATCH BAY
☐	Moog Sub 37	MIDI In	Required	Not assigned
		MIDI Out	Required	Not assigned
☐	Waldorf Streichfett	MIDI In	Required	Not assigned
		MIDI Out	Low priority	Not assigned
☐	MFB Tanzbar	MIDI In	Required	Not assigned
		MIDI Out	Low priority	Not assigned
☐	Sim n Tonic	MIDI In	Required	Not assigned
		Check which MIDI ports it has		
☐	Oberheim OB-X8	MIDI In	Required	Not assigned
		MIDI Out	Required	Not assigned
☐	Oberheim OB-6	MIDI In	Required	Not assigned
		MIDI Out	Required	Not assigned