

STUDIO CARQUINEZ PATCH BAY

Front view, top of rack first. Left 16 ports: console buckets. Right 8: outboard, FX, monitoring. Generated 2026-09-23 from config.py.

Console core

Room sends

Tie lines

Outboard

Instruments & pedals

Aux sends & FX

Monitoring

2-track

Groups & mix bus

Amp rack

Network

Power

MIDI

Spare

Reserved

Rear not plugged in yet

Normalled

Not normalled

1

24 x 2  
5 spare  
0 normalled  
0/37 rear plu

|                |            |          |              |                                 |   |   |   |   |           |            |              |                    |             |    |    |                  |                |    |                      |    |                  |    |    |
|----------------|------------|----------|--------------|---------------------------------|---|---|---|---|-----------|------------|--------------|--------------------|-------------|----|----|------------------|----------------|----|----------------------|----|------------------|----|----|
| 1              | 2          | 3        | 4            | 5                               | 6 | 7 | 8 | 9 | 10        | 11         | 12           | 13                 | 14          | 15 | 16 | 17               | 18             | 19 | 20                   | 21 | 22               | 23 | 24 |
| Tanzb ar Out L | Sub 37 Out | Fuzz In  | MXR Dist In  | Reserved · Instruments & pedals |   |   |   |   | LA-2A In  | UA 550 In  | DBX 160 Link | SSL Fusion In L/R  | API L/R In  |    |    | Dbx 160A L/R In  | D-Comp L/R In  |    | 902 De-esser IN 1-2  |    | Art Comp In L/R  |    |    |
| Tanzb ar Out R |            | Fuzz Out | MXR Dist Out | Reserved · Instruments & pedals |   |   |   |   | LA-2A Out | UA 550 Out | DBX 160 Link | SSL Fusion Out L/R | API L/R Out |    |    | Dbx 160A L/R Out | D-Comp L/R Out |    | 902 De-esser OUT 1-2 |    | Art Comp Out L/R |    |    |

2

24 x 2  
0 spare  
16 normalled  
0/48 rear plu

|                                  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |                           |  |  |  |  |  |  |  |
|----------------------------------|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|---------------------------|--|--|--|--|--|--|--|
| Ghost Channel Insert Send 1-16   |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  | Group 1 - 8 Insert Send   |  |  |  |  |  |  |  |
| NORMALLED                        |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  | NORMALLED                 |  |  |  |  |  |  |  |
| Ghost Channel Insert Return 1-16 |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  | Group 1 - 8 Insert Return |  |  |  |  |  |  |  |

3

24 x 2  
0 spare  
24 normalled  
0/44 rear plu

|                                   |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |            |  |          |  |             |  |             |  |           |  |           |  |           |  |               |  |               |  |
|-----------------------------------|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|------------|--|----------|--|-------------|--|-------------|--|-----------|--|-----------|--|-----------|--|---------------|--|---------------|--|
| Ghost Channel Insert Send 17-32   |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  | Aux 1 Out  |  |          |  |             |  |             |  | Aux 2 Out |  | Aux 3 Out |  | Aux 4 Out |  | Aux 5 / 6 Out |  | Aux 7 Out L/R |  |
| NORMALLED                         |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  | N          |  | N        |  | N           |  | N           |  | NORMALLED |  | NORMALLED |  |           |  |               |  |               |  |
| Ghost Channel Insert Return 17-32 |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  | EMT 140 In |  | PCM60 In |  | SDE 1000 In |  | Moog DLY In |  |           |  |           |  |           |  |               |  |               |  |

4

24 x 2  
3 spare  
18 normalled  
0/39 rear plu

|                                                   |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |               |  |              |  |           |  |           |  |                    |  |
|---------------------------------------------------|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|---------------|--|--------------|--|-----------|--|-----------|--|--------------------|--|
| Worm hole Matched to Left Side Patch bay 1-16 top |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  | Aux 8 Out L/R |  | Moog DLY Out |  |           |  |           |  | Main Insert Send   |  |
| NORMALLED                                         |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  | NORMALLED     |  | NORMALLED    |  | NORMALLED |  | NORMALLED |  |                    |  |
| Console Line In 1-16                              |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |               |  |              |  |           |  |           |  | Main Insert Return |  |


5

24 x 2  
8 spare  
16 normalled  
0/32 rear plu

|                                                      |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |
|------------------------------------------------------|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|
| Worm hole Matched to Left Side Patch bay 1-16 bottom |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |
| NORMALLED                                            |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |
| Console Line In 17-32                                |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |


6

24 x 2  
8 spare  
16 normalled  
0/32 rear plu

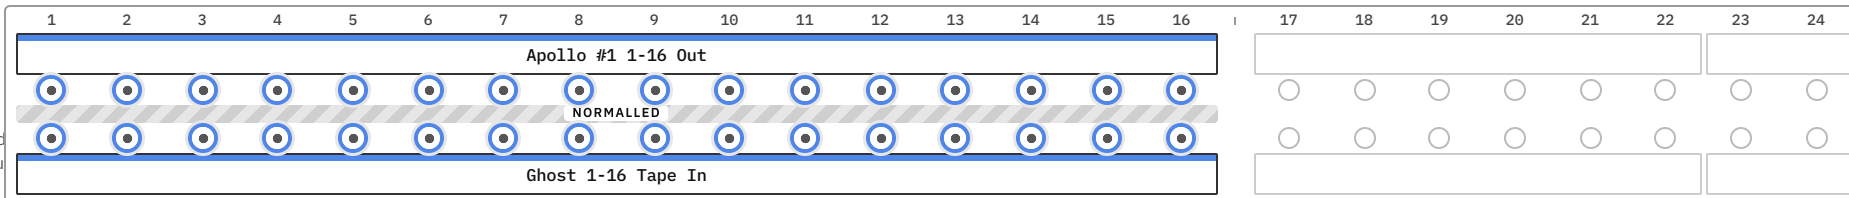


7

24 x 2  
0 spare  
22 normalled  
0/46 rear plu

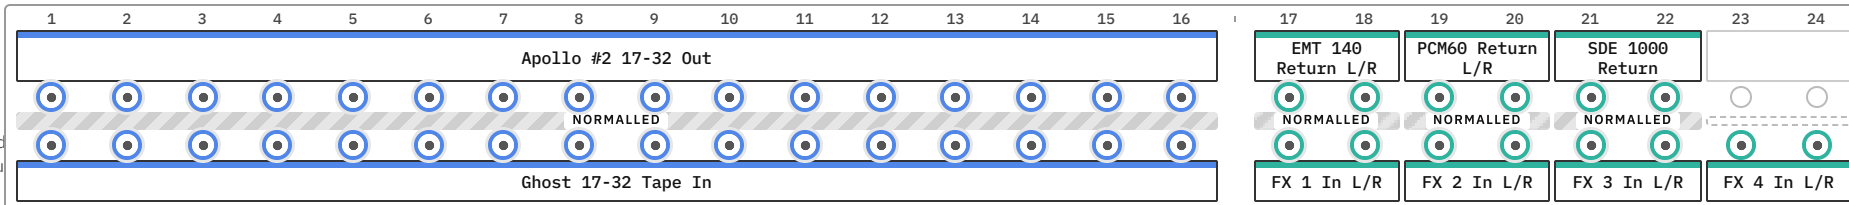


8

24 x 2  
0 spare  
24 normalled  
0/47 rear plu

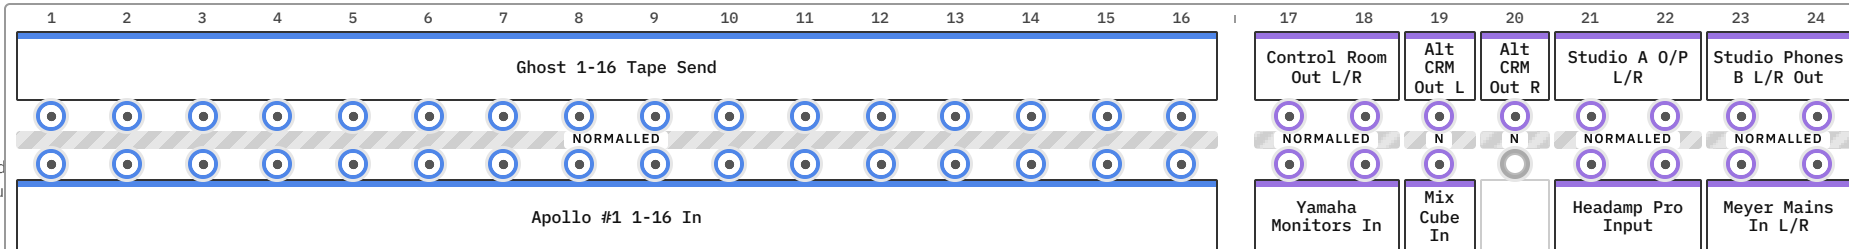


9

24 x 2  
0 spare  
22 normalled  
0/44 rear plu

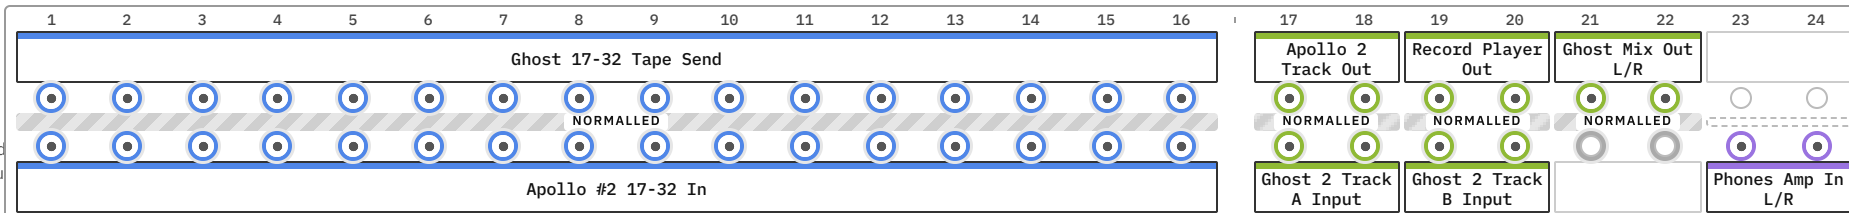

10


24 x 2  
2 spare  
0 normalled  
0/44 rear plu

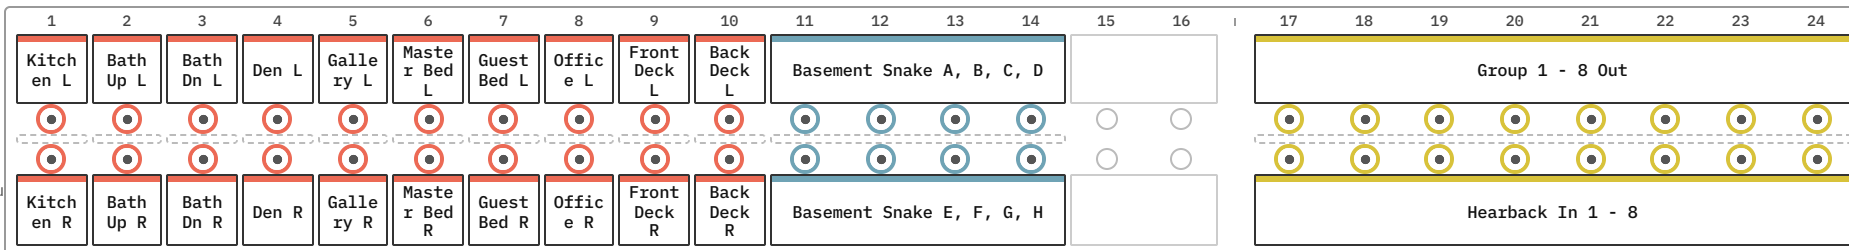

AMP RACK

11 AMP RACK


24 × 2  
16 spare  
8 normalled  
0/16 rear plug

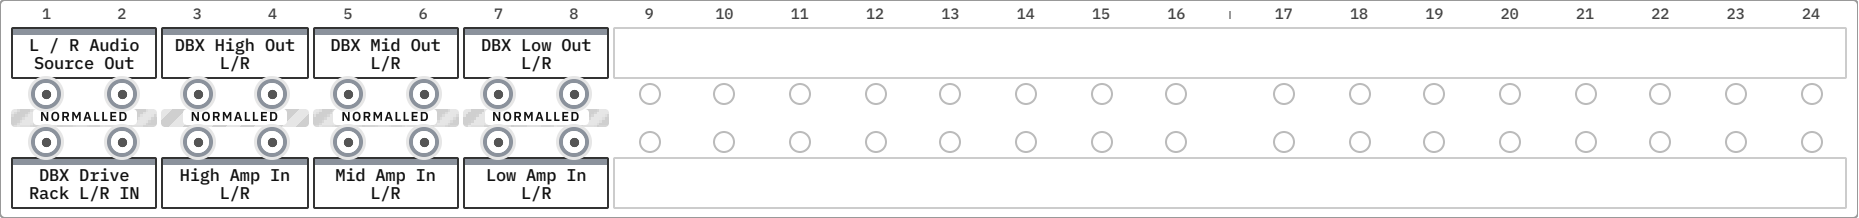

ETHERNET

ETHERNET


Single row  
2 spare  
0/8 rear plug

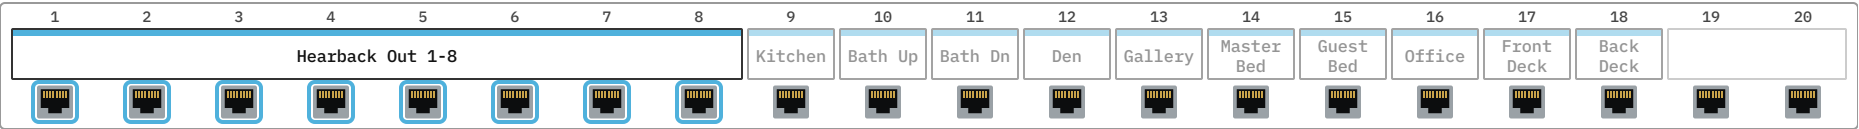

MIDI

MIDI


Not in use  
Single row  
0 spare  
0/22 rear plug

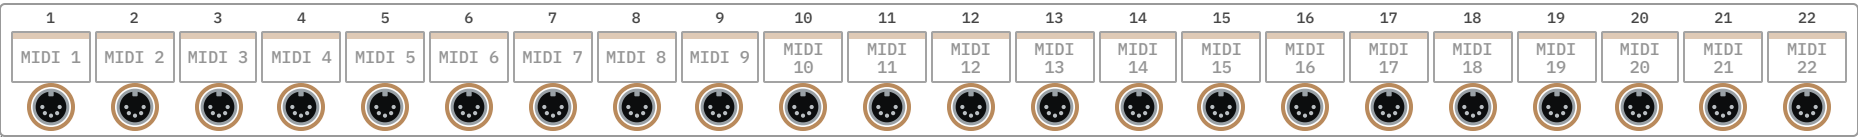

POWER SWITCHES

POWER SWITCHES

Single row  
1 spare  
0/9 rear plug

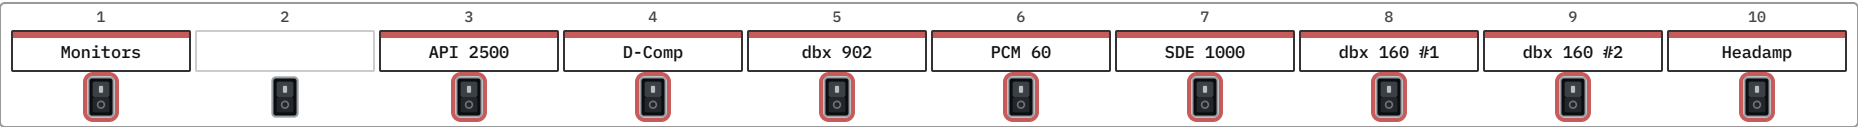

RACK 1 · EQUIPMENT (20U)

|        |                               |                                                                              |
|--------|-------------------------------|------------------------------------------------------------------------------|
| U1     | POWER CONDITIONER             |                                                                              |
| U2     | SWITCH PANEL                  | Not on the patch bay                                                         |
| U3     | APOLLO 16 #1                  | Replacing both Apollos with one 1U unitPatch bay: Bay 6 · 1–16, Bay 8 · 1–16 |
| U4     | APOLLO 16 #2                  | Replacing both Apollos with one 1U unitPatch bay: Bay 7 · 1–16, Bay 9 · 1–16 |
| U5     | API 2500 COMPRESSOR           | Patch bay: Bay 1 · 15–16, Power Switches · 3                                 |
| U6–7   | D-COMP                        | Patch bay: Bay 1 · 19–20, Power Switches · 4                                 |
| U8     | DBX 902 DE-ESSER ×2           | Patch bay: Bay 1 · 21–22, Power Switches · 5                                 |
| U9     | LEXICON PCM 60 REVERB         | Patch bay: Bay 3 · 18, Bay 7 · 19–20, Power Switches · 6                     |
| U10    | SDE 1000 DELAY                | Patch bay: Bay 3 · 19, Bay 7 · 21–22, Power Switches · 7                     |
| U11–12 | DBX 160 COMPRESSORS           | Patch bay: Bay 1 · 12, 17–18, Power Switches · 8–9                           |
| U13    | EMT REVERB REMOTE             | Could move                                                                   |
| U14    | HEADPHONE AMP                 | Could movePatch bay: Bay 9 · 23–24                                           |
| U15    | HEADPHONE POWER SUPPLY        |                                                                              |
| U16    | MIDI PATCH BAY                | Patch bay: <u>Midi</u> · 1–22                                                |
| U17    | HEARBACK UNIT                 | Patch bay: Bay 10 · 17–24, Ethernet · 1–8                                    |
| U18    | ETHERNET PATCH BAY            | Patch bay: <u>Ethernet</u> · 1–20                                            |
| U19–20 | SOUNDCRAFT GHOST POWER SUPPLY |                                                                              |

OPEN QUESTIONS

# CABLE PULLS TO EACH ROOM

Two XLR sends, one XLR return and one Cat5 per room — **40** runs in all. Tick a cable once it is pulled; the destination is where it lands at the rack.

KITCHEN0/4

☐ Send L XLR

Bay 10 · port 1 top

☐ Send R XLR

Bay 10 · port 1 bottom

☐ Return XLR

XLR patch bay (not built yet)

☐ Network CAT5

Ethernet · jack 9

BATH UP0/4

☐ Send L XLR

Bay 10 · port 2 top

☐ Send R XLR

Bay 10 · port 2 bottom

☐ Return XLR

XLR patch bay (not built yet)

☐ Network CAT5

Ethernet · jack 10

BATH DN0/4

☐ Send L XLR

Bay 10 · port 3 top

☐ Send R XLR

Bay 10 · port 3 bottom

☐ Return XLR

XLR patch bay (not built yet)

☐ Network CAT5

Ethernet · jack 11

DEN0/4

☐ Send L XLR

Bay 10 · port 4 top

☐ Send R XLR

Bay 10 · port 4 bottom

☐ Return XLR

XLR patch bay (not built yet)

☐ Network CAT5

Ethernet · jack 12

GALLERY0/4

☐ Send L XLR

Bay 10 · port 5 top

☐ Send R XLR

Bay 10 · port 5 bottom

☐ Return XLR

XLR patch bay (not built yet)

☐ Network CAT5

Ethernet · jack 13

MASTER BED0/4

☐ Send L XLR

Bay 10 · port 6 top

☐ Send R XLR

Bay 10 · port 6 bottom

☐ Return XLR

XLR patch bay (not built yet)

☐ Network CAT5

Ethernet · jack 14

GUEST BED0/4

☐ Send L XLR

Bay 10 · port 7 top

☐ Send R XLR

Bay 10 · port 7 bottom

☐ Return XLR

XLR patch bay (not built yet)

☐ Network CAT5

Ethernet · jack 15

OFFICE0/4

☐ Send L XLR

Bay 10 · port 8 top

☐ Send R XLR

Bay 10 · port 8 bottom

☐ Return XLR

XLR patch bay (not built yet)

☐ Network CAT5

Ethernet · jack 16

FRONT DECK0/4

☐ Send L XLR

Bay 10 · port 9 top

☐ Send R XLR

Bay 10 · port 9 bottom

☐ Return XLR

XLR patch bay (not built yet)

☐ Network CAT5

Ethernet · jack 17

BACK DECK0/4

☐ Send L XLR

Bay 10 · port 10 top

☐ Send R XLR

Bay 10 · port 10 bottom

☐ Return XLR

XLR patch bay (not built yet)

☐ Network CAT5

Ethernet · jack 18

MIDI HOOKUPS

0 of 11 connected

| INSTRUMENT               |                     | PORT     | PRIORITY     | MIDI PATCH BAY                |
|--------------------------|---------------------|----------|--------------|-------------------------------|
| <input type="checkbox"/> | Moog Sub 37         | MIDI In  | Required     | Not assigned                  |
|                          |                     | MIDI Out | Required     | Not assigned                  |
| <input type="checkbox"/> | Waldorf Streichfett | MIDI In  | Required     | Not assigned                  |
|                          |                     | MIDI Out | Low priority | Not assigned                  |
| <input type="checkbox"/> | MFB Tanzbar         | MIDI In  | Required     | Not assigned                  |
|                          |                     | MIDI Out | Low priority | Not assigned                  |
| <input type="checkbox"/> | Sim n Tonic         | MIDI In  | Required     | Not assigned                  |
|                          |                     |          |              | Check which MIDI ports it has |
| <input type="checkbox"/> | Oberheim OB-X8      | MIDI In  | Required     | Not assigned                  |
|                          |                     | MIDI Out | Required     | Not assigned                  |
| <input type="checkbox"/> | Oberheim OB-6       | MIDI In  | Required     | Not assigned                  |
|                          |                     | MIDI Out | Required     | Not assigned                  |