

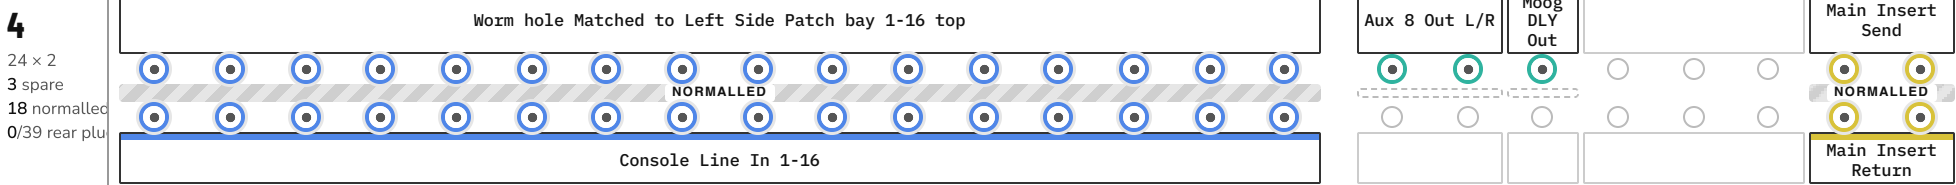
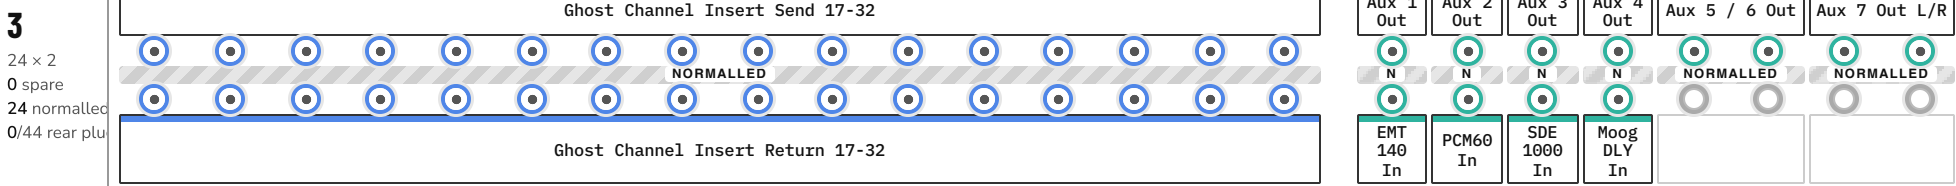


STUDIO CARQUINEZ PATCH BAY

Front view, top of rack first. Left 16 ports: console buckets. Right 8: outboard, FX, monitoring. Generated 2026-09-24 from `config.py`.

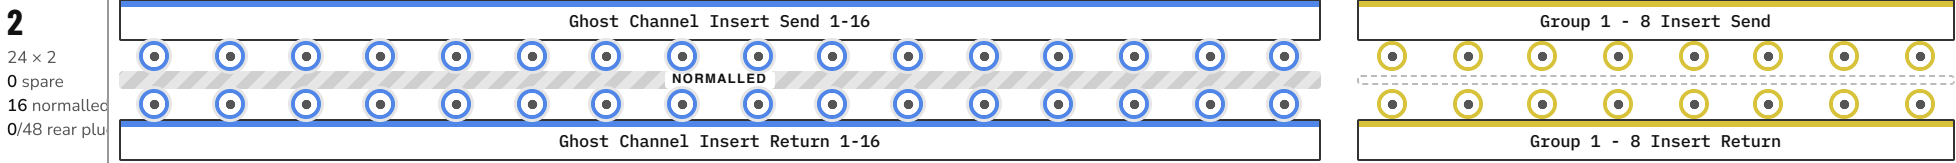


MAIN RACK

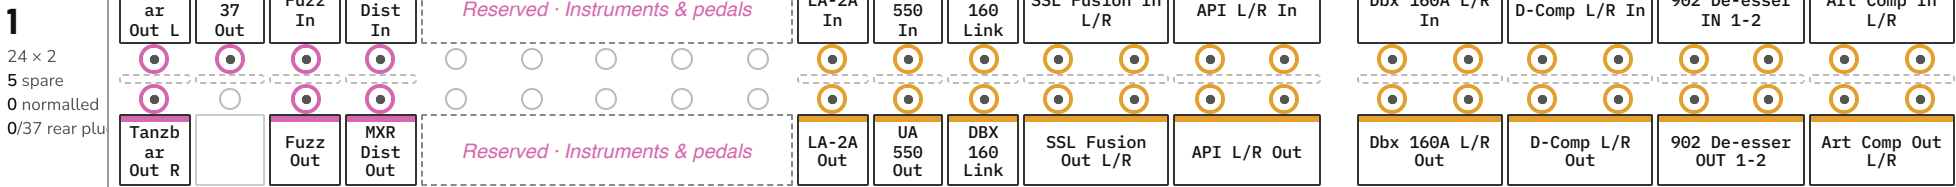


5

24 x 2
8 spare
16 normalled
0/32 rear plu

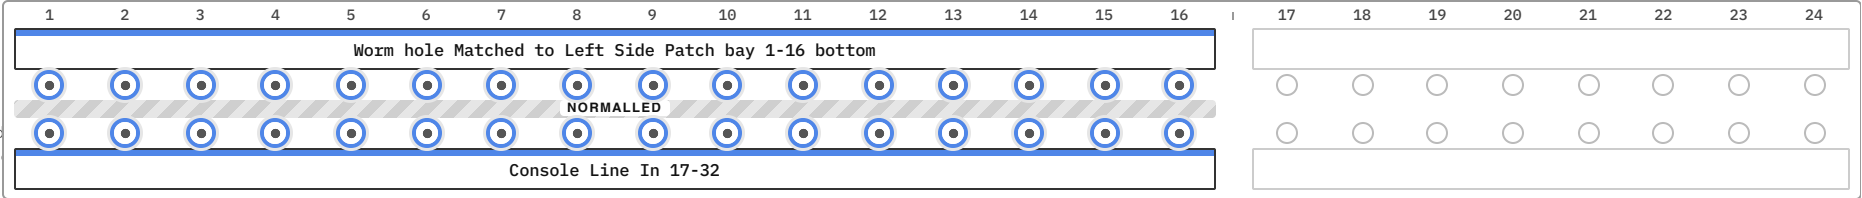


6

24 x 2
8 spare
16 normalled
0/32 rear plu

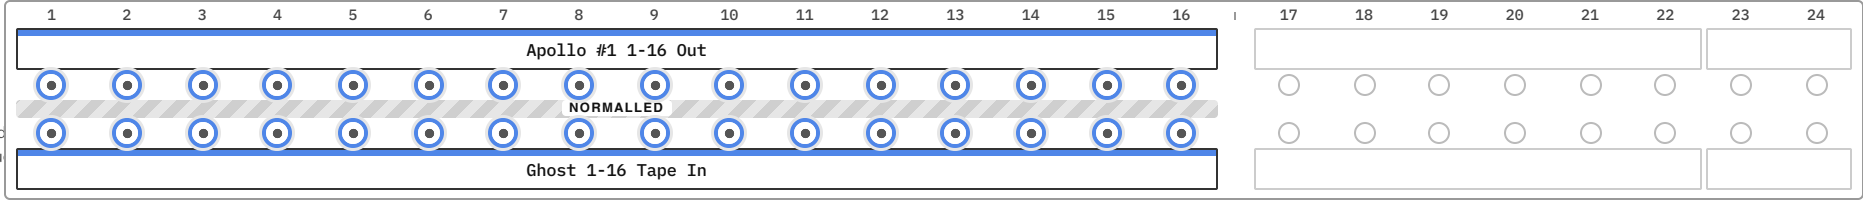


7

24 x 2
0 spare
22 normalled
0/46 rear plu

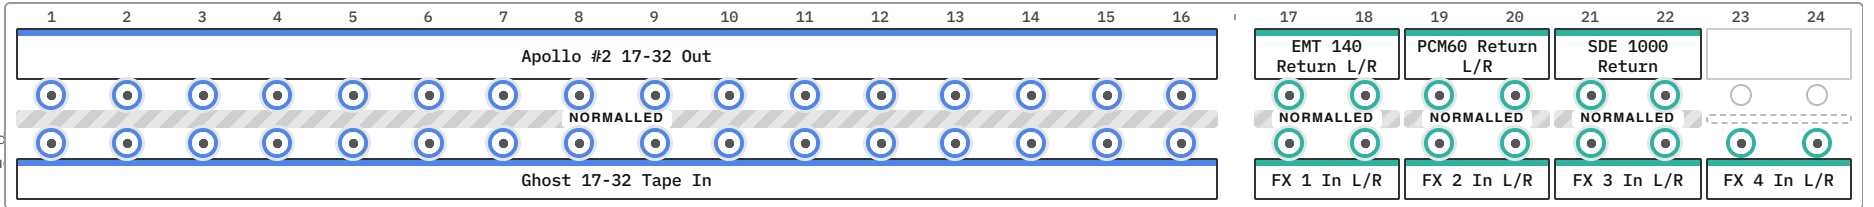


8

24 x 2
0 spare
24 normalled
0/47 rear plu

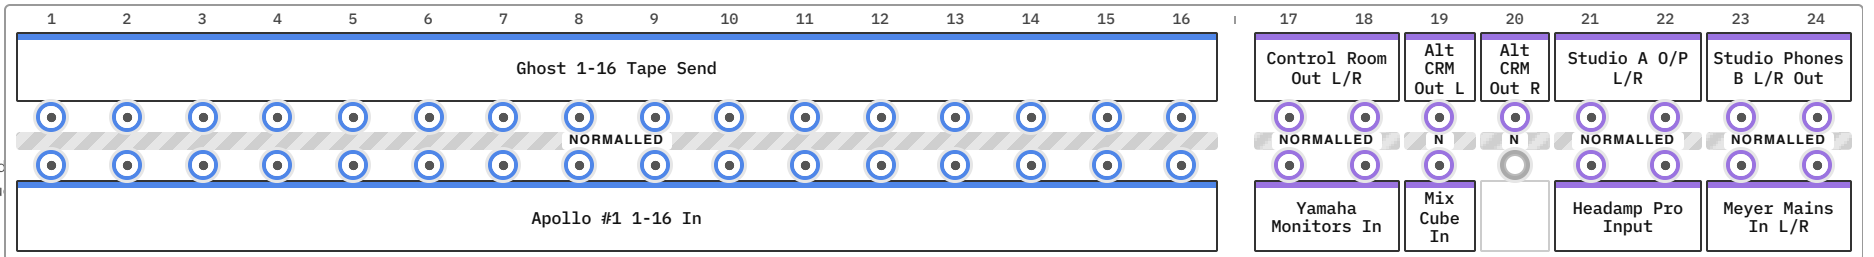


9

24 x 2
0 spare
22 normalled
0/46 rear plu

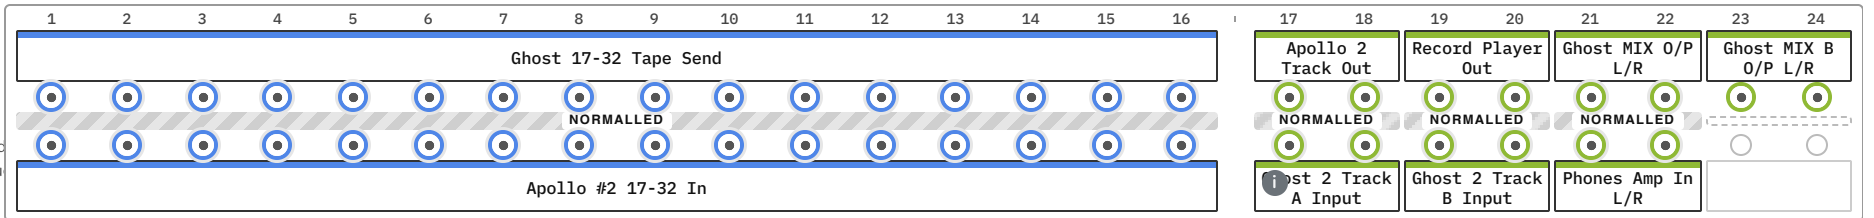

10


24 x 2
3 spare
0 normalled
0/42 rear plu

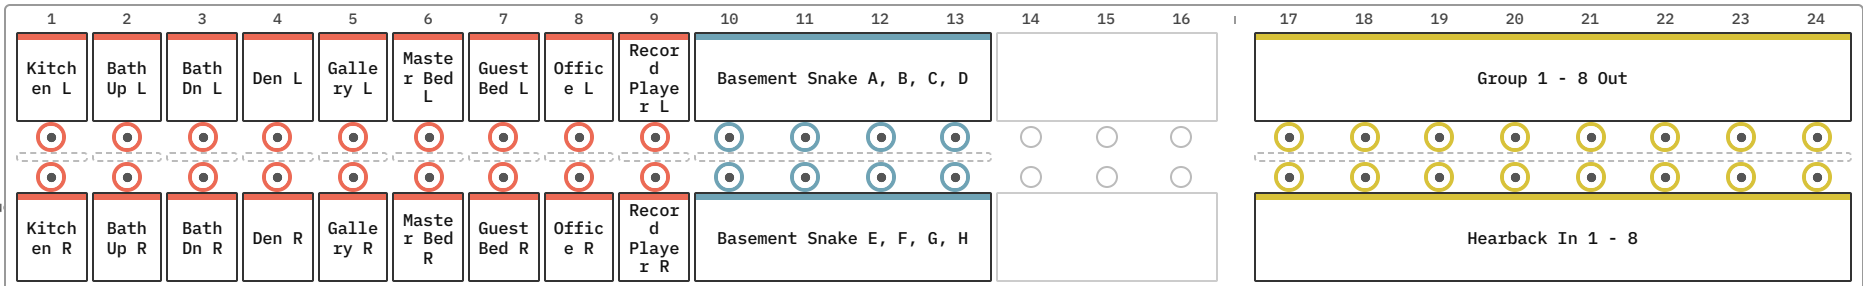

AMP RACK

11 AMP RACK


24 x 2
16 spare
8 normalised
0/16 rear plu

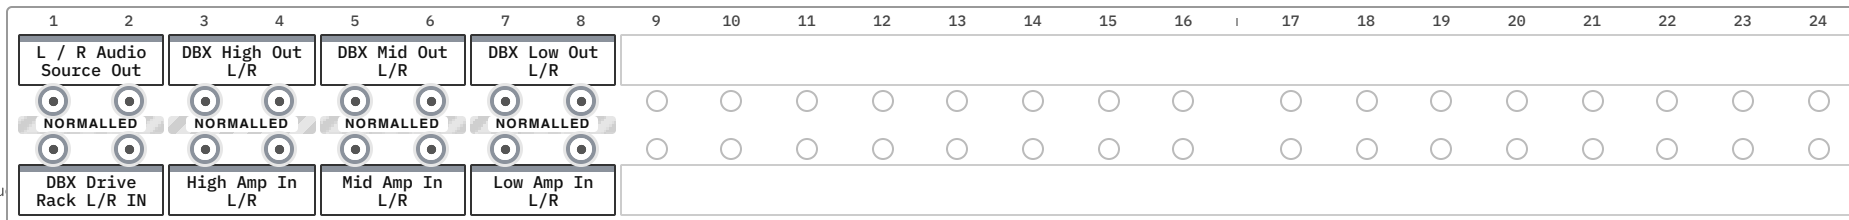

ETHERNET

ETHERNET


Single row
3 spare
0/8 rear plug

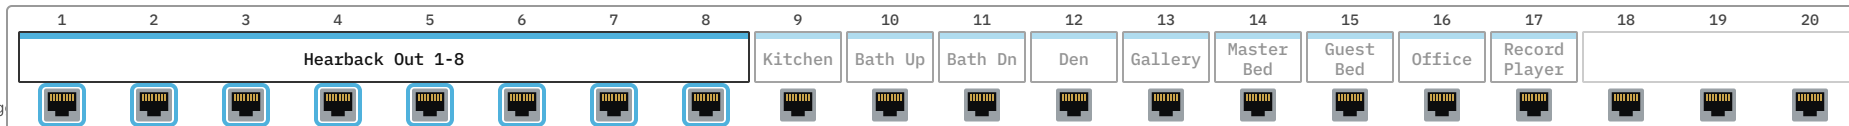

MIDI

MIDI


Not in use
Single row
22 spare
0/0 rear plugged in

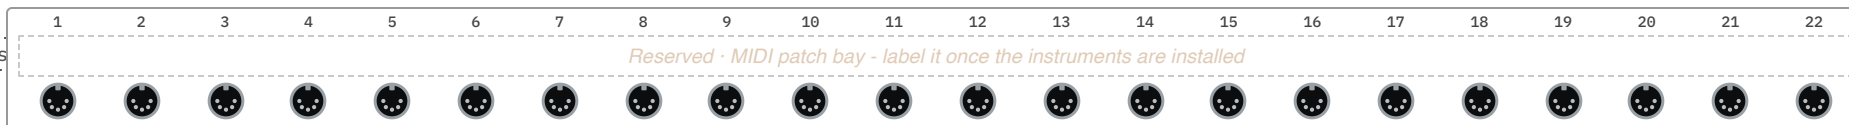

POWER SWITCHES

POWER SWITCHES

Single row
1 spare
0/9 rear plugs

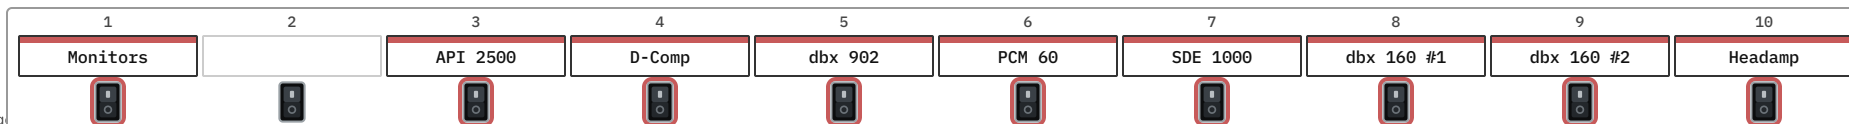

RACK 1 · EQUIPMENT (20U)

U1	POWER CONDITIONER	
U2	SWITCH PANEL	Not on the patch bay
U3	APOLLO 16 #1 Replacing both Apollos with one 1U unit	Patch bay: Bay 6 · 1–16, Bay 8 · 1–16
U4	APOLLO 16 #2 Replacing both Apollos with one 1U unit	Patch bay: Bay 7 · 1–16, Bay 9 · 1–16
U5	API 2500 COMPRESSOR	Patch bay: Bay 1 · 15–16, Power Switches · 3
U6–7	D-COMP	Patch bay: Bay 1 · 19–20, Power Switches · 4
U8	DBX 902 DE-ESSER ×2	Patch bay: Bay 1 · 21–22, Power Switches · 5
U9	LEXICON PCM 60 REVERB	Patch bay: Bay 3 · 18, Bay 7 · 19–20, Power Switches · 6
U10	SDE 1000 DELAY	Patch bay: Bay 3 · 19, Bay 7 · 21–22, Power Switches · 7
U11–12	DBX 160 COMPRESSORS	Patch bay: Bay 1 · 12, 17–18, Power Switches · 8–9
U13	EMT REVERB REMOTE Could move	
U14	HEADPHONE AMP Could move	Patch bay: Bay 9 · 21–22
U15	HEADPHONE POWER SUPPLY	
U16	MIDI PATCH BAY	Patch bay: <u>Midi</u> · 1–22
U17	HEARBACK UNIT	Patch bay: Bay 10 · 17–24, Ethernet · 1–8
U18	ETHERNET PATCH BAY	Patch bay: <u>Ethernet</u> · 1–20
U19–20	SOUNDCRAFT GHOST POWER SUPPLY	

OPEN QUESTIONS

SOUNDCRAFT GHOST · CENTRE SECTION REAR

Every jack on the master section's rear panel, in the order the manual lists them - all ¼".
Grey means nothing on the patch bay carries it yet.

INPUTS

tip signal +, ring signal -, sleeve ground

FX 1 L/R
☐ ☐ TRS balanced
Bay 7 · 17–18

FX 2 L/R
☐ ☐ TRS balanced
Bay 7 · 19–20

FX 3 L/R
☐ ☐ TRS balanced
Bay 7 · 21–22

FX 4 L/R
☐ ☐ TRS balanced
Bay 7 · 23–24

2TK A I/P L/R
☐ ☐ TRS balanced
Bay 9 · 17–18

2TK B I/P L/R
☐ ☐ TRS balanced
Bay 9 · 19–20

OUTPUTS

tip signal +, ring ground sense, sleeve ground;
the TS unbalanced ones are tip signal +, ring not
used, sleeve ground

GRP 1-8
☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ TRS ground-comp
Bay 10 · 17–24

AUX 1
☐ TRS ground-comp
Bay 3 · 17

AUX 2
☐ TRS ground-comp
Bay 3 · 18

AUX 3
☐ TRS ground-comp
Bay 3 · 19

AUX 4
☐ TRS ground-comp
Bay 3 · 20

AUX 5 / 6
☐ ☐ TRS ground-comp
Bay 3 · 21–22

AUX 7 L/R
☐ ☐ TRS ground-comp
Bay 3 · 23–24

AUX 8 L/R
☐ ☐ TRS ground-comp
Bay 4 · 17–18

MIX O/P L/R
☐ ☐ TRS ground-comp
Bay 9 · 21–22

MIX B O/P L/R
☐ ☐ TRS ground-comp

INSERTS

tip RETURN, ring SEND, sleeve ground - the
opposite of the usual tip-send wiring

GRP INS 1-8
☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ TRS insert
Bay 2 · 17–24

MIX INS L/R
☐ ☐ TRS insert
Bay 4 · 23–24

Bay 9 · 23–24

CRM O/P L/R



TS unbalanced

Bay 8 · 17–18

ALT O/P L/R



TS unbalanced

Bay 8 · 19

STU O/P A L/R



TRS ground-comp

Bay 8 · 21–22

STU PHNS B L/R



TS unbalanced

Bay 8 · 23–24

CABLE PULLS TO EACH ROOM

Two XLR sends, one XLR return and one Cat5 per room. Every XLR end is soldered onto its cable: pull it, solder the room end, solder the rack end, then patch it (Cat5 ends are terminated instead). Sends land on the patch bay as TRS; the returns stay in a loom on the floor, so they have nothing to patch — **156** steps in all. The destination is where the cable lands at the rack.

KITCHEN

		PULL	ROOM	CONSOLE	PATCH
Send L	XLR	☐	☐	☐	☐
Send R	XLR	☐	☐	☐	☐
Return	XLR	☐	☐	☐	—
Network	CAT5	☐	☐	☐	☐

Notes...

BATH UP

		PULL	ROOM	CONSOLE	PATCH
Send L	XLR	☐	☐	☐	☐
Send R	XLR	☐	☐	☐	☐
Return	XLR	☐	☐	☐	—
Network	CAT5	☐	☐	☐	☐

Notes...

BATH DN

		PULL	ROOM	CONSOLE	PATCH
Send L	XLR	☐	☐	☐	☐
Send R	XLR	☐	☐	☐	☐
Return	XLR	☐	☐	☐	—
Network	CAT5	☐	☐	☐	☐

Notes...

DEN

		PULL	ROOM	CONSOLE	PATCH
Send L	XLR	☐	☐	☐	☐
Send R	XLR	☐	☐	☐	☐
Return	XLR	☐	☐	☐	—
Network	CAT5	☐	☐	☐	☐

Notes...

GALLERY

		PULL	ROOM	CONSOLE	PATCH
Send L	XLR	☐	☐	☐	☐
Send R	XLR	☐	☐	☐	☐
Return	XLR	☐	☐	☐	—
Network	CAT5	☐	☐	☐	☐

Notes...

MASTER BED

		PULL	ROOM	CONSOLE	PATCH
Send L	XLR	☐	☐	☐	☐
Send R	XLR	☐	☐	☐	☐
Return	XLR	☐	☐	☐	—
Network	CAT5	☐	☐	☐	☐

Notes...

GUEST BED

		PULL	ROOM	CONSOLE	PATCH
Send L	XLR	☐	☐	☐	☐
Send R	XLR	☐	☐	☐	☐
Return	XLR	☐	☐	☐	—
Network	CAT5	☐	☐	☐	☐

Notes...

OFFICE

		PULL	ROOM	CONSOLE	PATCH
Send L	XLR	☐	☐	☐	☐
Send R	XLR	☐	☐	☐	☐
Return	XLR	☐	☐	☐	—
Network	CAT5	☐	☐	☐	☐

Notes...

RECORD PLAYER

		PULL	ROOM	CONSOLE	PATCH
Send L	XLR	☐	☐	☐	☐
Send R	XLR	☐	☐	☐	☐
Return	XLR	☐	☐	☐	—
Network	CAT5	☐	☐	☐	☐

Notes...

FRONT DECK

	PULL	ROOM	CONSOLE	CATCH	
Speaker	SPEAKER	☐	☐	☐	—
Notes...					

BACK DECK

	PULL	ROOM	CONSOLE	CATCH	
Speaker	SPEAKER	☐	☐	☐	—
Notes...					

REVERB · EMT PLATE

	PULL	ROOM	CONSOLE	CATCH	
Send	XLR	☐	☐	☐	☐
Return L	XLR	☐	☐	☐	☐
Return R	XLR	☐	☐	☐	☐
Motor control · 5-pin	CAT5	☐	☐	☐	—
Notes...					

IMPERFECT CRIMES

Shortcuts taken during the build, so nobody has to rediscover them with a meter. Ones tied to a port also show as an i on that bay.

Bay 9 · port 17-18 bottom Bay to the Ghost 2 Track A input is 2x unshielded TRS cables, about 6 ft, inside the rack.

TO DO

0 of 3 done

- ☐ Find the screws for all the cover plates
- ☐ Gather every cover plate in one place
- ☐ Work out which rooms are missing cover plates - Kitchen and Guest Bed are, the rest unknown

Anything else...

MIDI HOOKUPS

0 of 11 connected

INSTRUMENT		PORT	PRIORITY	MIDI PATCH BAY
☐	Moog Sub 37	MIDI In	Required	Not assigned
		MIDI Out	Required	Not assigned
☐	Waldorf Streichfett	MIDI In	Required	Not assigned
		MIDI Out	Low priority	Not assigned
☐	MFB Tanzbar	MIDI In	Required	Not assigned
		MIDI Out	Low priority	Not assigned
☐	Sim n Tonic	MIDI In	Required	Not assigned
				Check which MIDI ports it has
☐	Oberheim OB-X8	MIDI In	Required	Not assigned
		MIDI Out	Required	Not assigned
☐	Oberheim OB-6	MIDI In	Required	Not assigned
		MIDI Out	Required	Not assigned