

STUDIO CARQUINEZ PATCH BAY

Front view, top of rack first. Left 16 ports: console buckets. Right 8: outboard, FX, monitoring. Generated 2026-09-24 from config.py.

Console core

Room sends

Tie lines

Outboard

Instruments & pedals

Aux sends & FX

Monitoring

2-track

Groups & mix bus

Amp rack

Network

Power

MIDI

Spare

Reserved

Rear not plugged in yet


Normalled

Not normalled

MAIN RACK


1

24 x 2
5 spare
0 normalled
0/37 rear plu

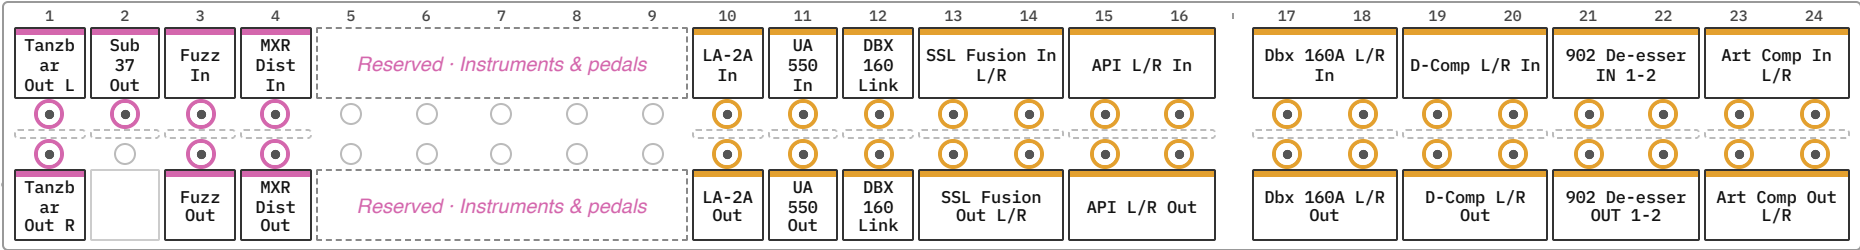


2

24 x 2
0 spare
16 normalled
0/48 rear plu

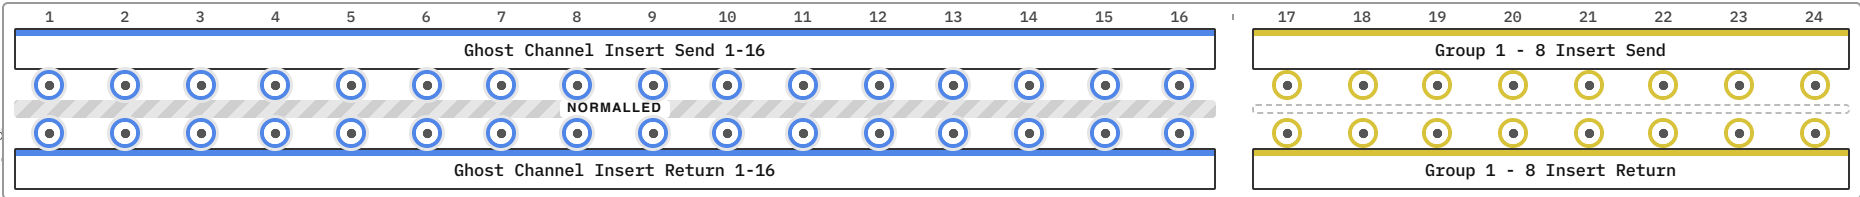


3

24 x 2
0 spare
24 normalled
0/44 rear plu

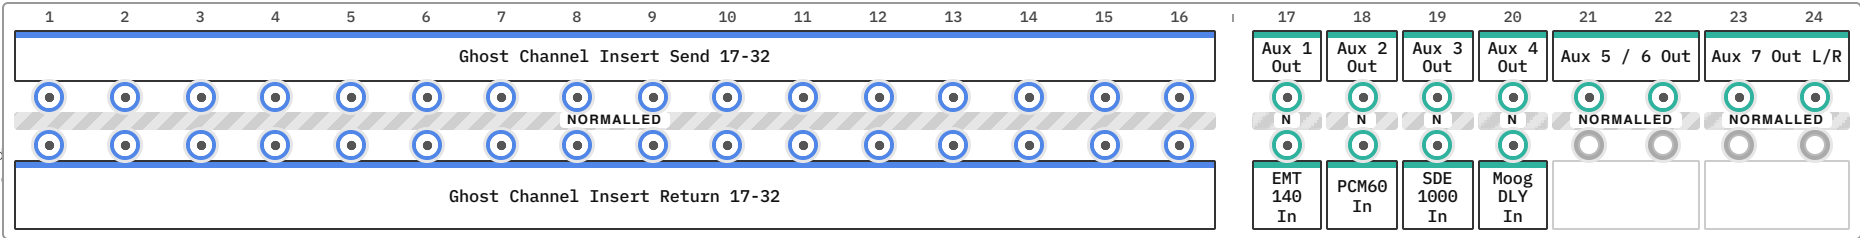


4

24 x 2
3 spare
18 normalled
0/39 rear plu

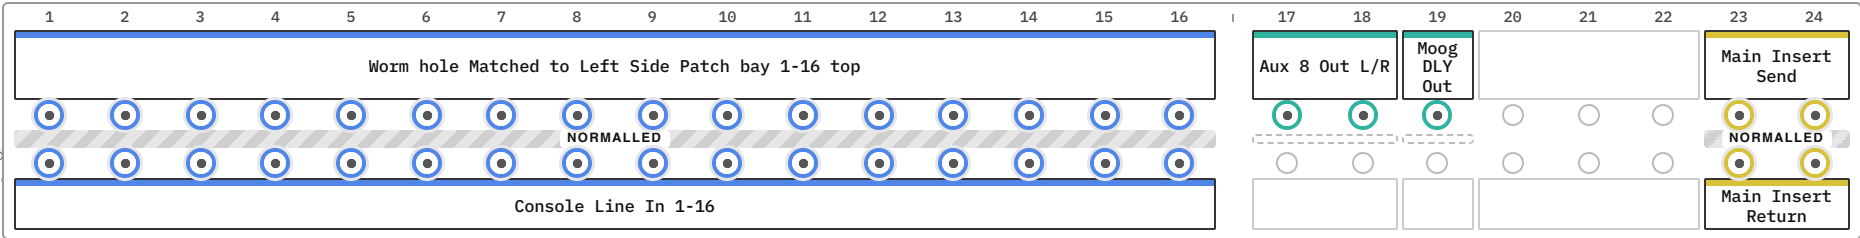

5

24 x 2
8 spare
16 normalled
0/32 rear plu

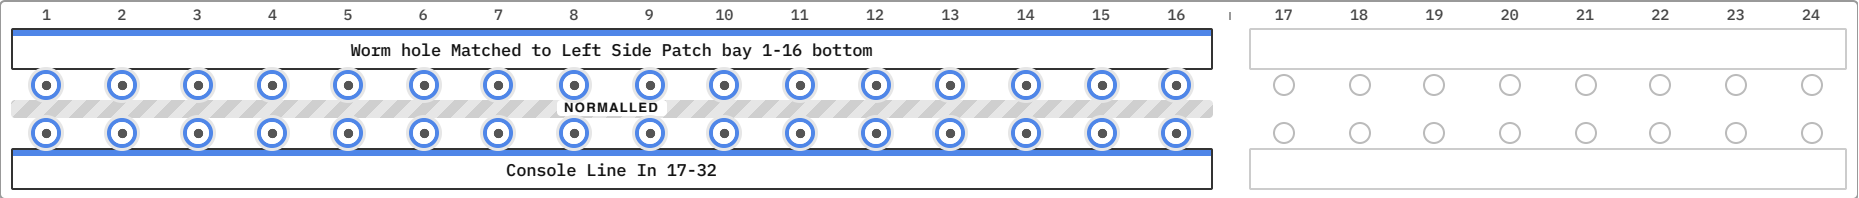


6

24 x 2

8 spare

16 normalled

0/32 rear plu

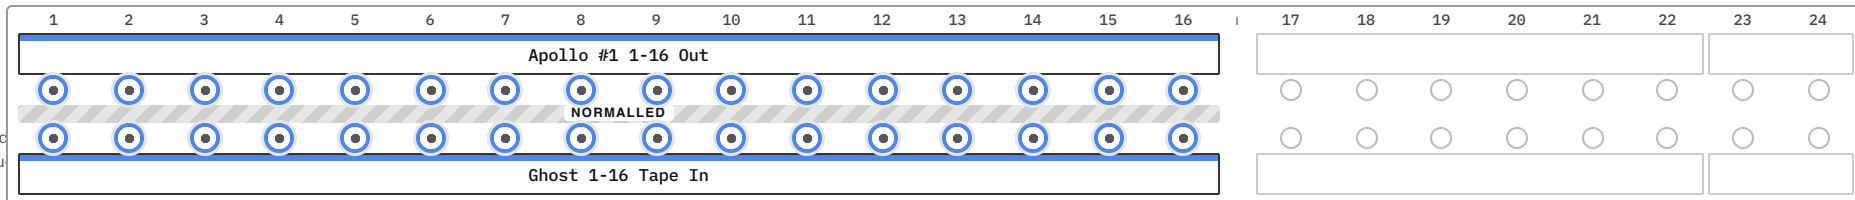


7

24 x 2

0 spare

22 normalled

0/46 rear plu

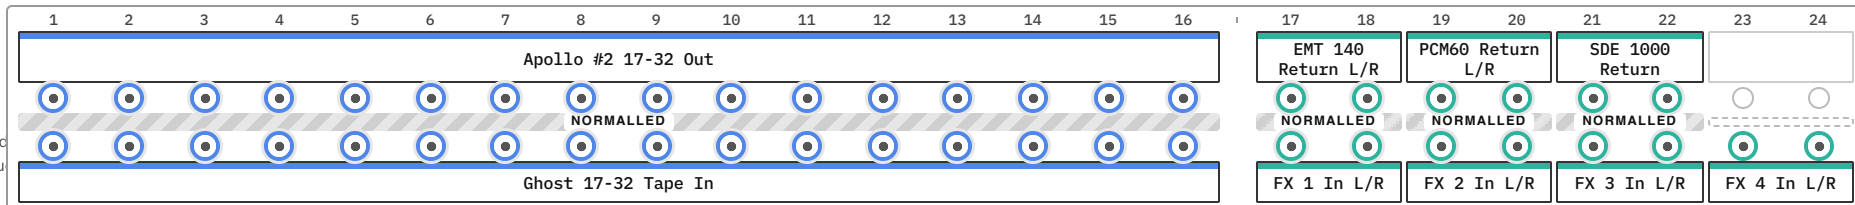


8

24 x 2

0 spare

24 normalled

0/47 rear plu

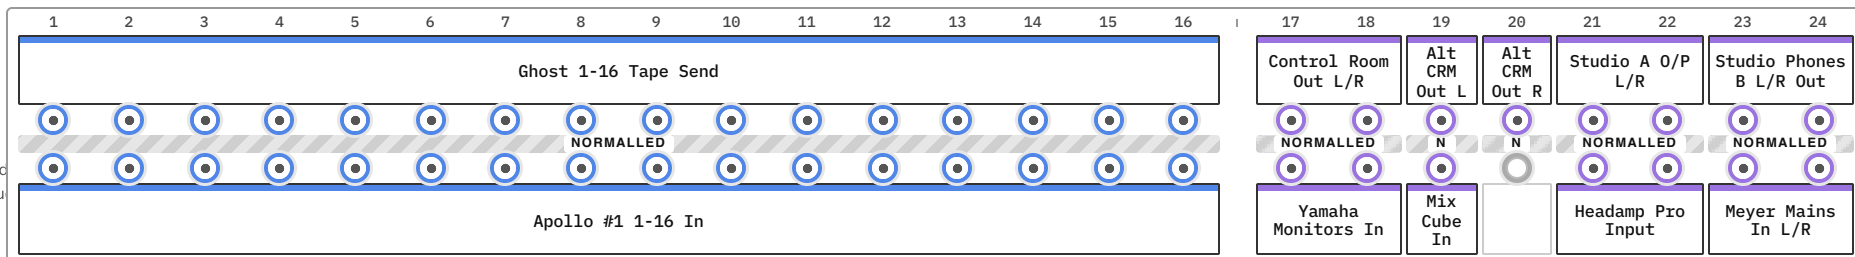


9

24 x 2

0 spare

22 normalled

0/46 rear plu

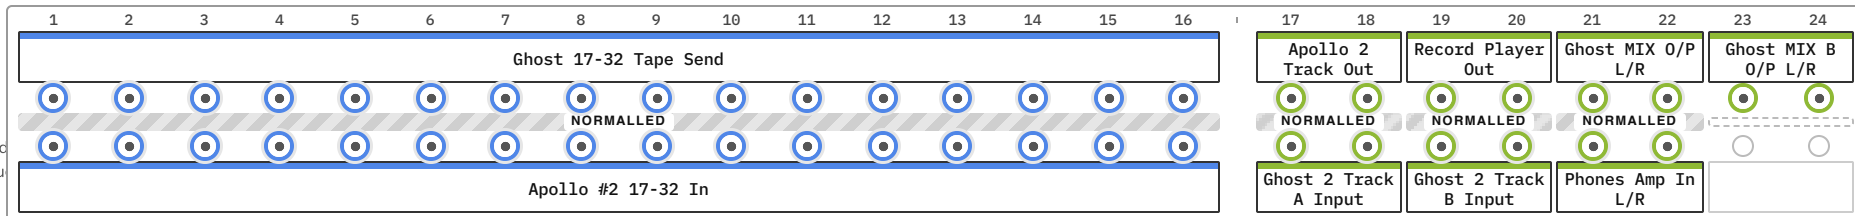


10

24 x 2


3 spare

0 normalled


0/42 rear plu

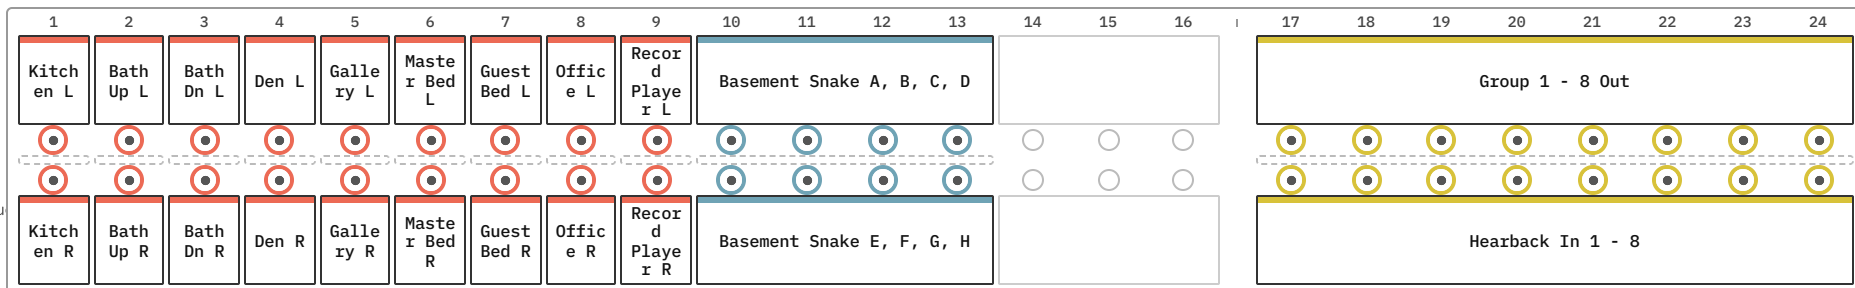


24 x 2
16 spare
8 normalised
0/16 rear plu

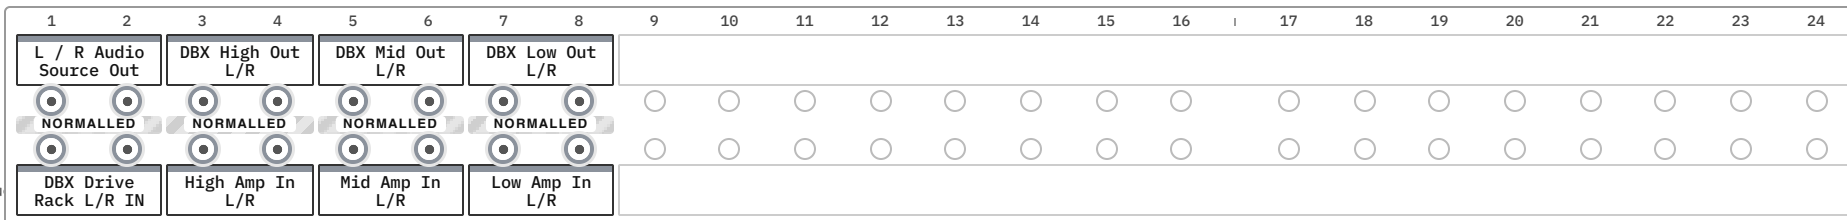


Single row
3 spare
0/8 rear plug

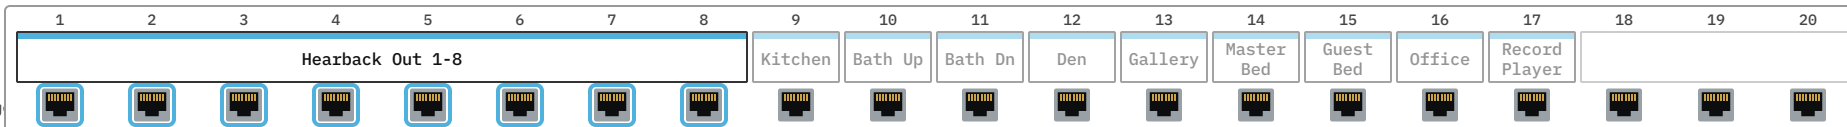

Not in use
Single row
22 spare
0/0 rear plug

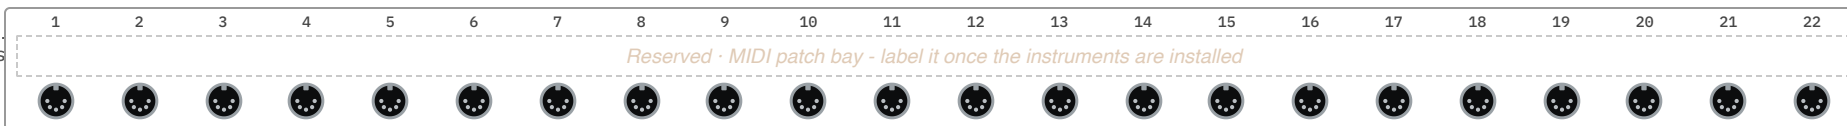

Single row
1 spare
0/9 rear plug

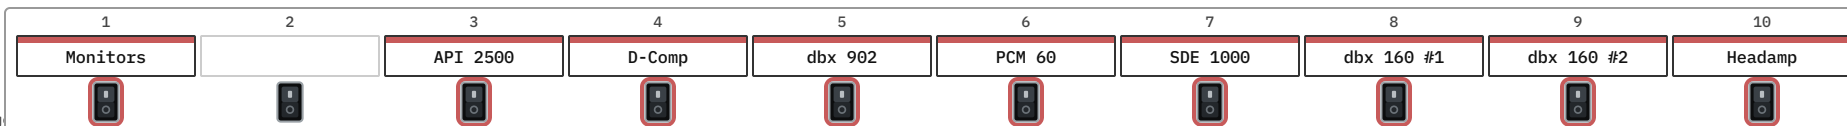

RACK 1 · EQUIPMENT (20U)

U1	POWER CONDITIONER	
U2	SWITCH PANEL	Not on the patch bay
U3	APOLLO 16 #1 Replacing both Apollos with one 1U unit	Patch bay: Bay 6 · 1–16, Bay 8 · 1–16
U4	APOLLO 16 #2 Replacing both Apollos with one 1U unit	Patch bay: Bay 7 · 1–16, Bay 9 · 1–16
U5	API 2500 COMPRESSOR	Patch bay: Bay 1 · 15–16, Power Switches · 3
U6–7	D-COMP	Patch bay: Bay 1 · 19–20, Power Switches · 4
U8	DBX 902 DE-ESSER ×2	Patch bay: Bay 1 · 21–22, Power Switches · 5
U9	LEXICON PCM 60 REVERB	Patch bay: Bay 3 · 18, Bay 7 · 19–20, Power Switches · 6
U10	SDE 1000 DELAY	Patch bay: Bay 3 · 19, Bay 7 · 21–22, Power Switches · 7
U11–12	DBX 160 COMPRESSORS	Patch bay: Bay 1 · 12, 17–18, Power Switches · 8–9
U13	EMT REVERB REMOTE Could move	
U14	HEADPHONE AMP Could move	Patch bay: Bay 9 · 21–22
U15	HEADPHONE POWER SUPPLY	
U16	MIDI PATCH BAY	Patch bay: <u>Midi</u> · 1–22
U17	HEARBACK UNIT	Patch bay: Bay 10 · 17–24, Ethernet · 1–8
U18	ETHERNET PATCH BAY	Patch bay: <u>Ethernet</u> · 1–20
U19–20	SOUNDCRAFT GHOST POWER SUPPLY	

OPEN QUESTIONS

SOUNDCRAFT GHOST · CENTRE SECTION REAR

Every jack on the master section's rear panel, in the order the manual lists them - all ¼".
Grey means nothing on the patch bay carries it yet.

INPUTS

tip signal +, ring signal -, sleeve ground

FX 1 L/R
☐ ☐ TRS balanced
Bay 7 · 17–18

FX 2 L/R
☐ ☐ TRS balanced
Bay 7 · 19–20

FX 3 L/R
☐ ☐ TRS balanced
Bay 7 · 21–22

FX 4 L/R
☐ ☐ TRS balanced
Bay 7 · 23–24

2TK A I/P L/R
☐ ☐ TRS balanced
Bay 9 · 17–18

2TK B I/P L/R
☐ ☐ TRS balanced
Bay 9 · 19–20

OUTPUTS

tip signal +, ring ground sense, sleeve ground;
the TS unbalanced ones are tip signal +, ring not
used, sleeve ground

GRP 1-8
☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ TRS ground-comp
Bay 10 · 17–24

AUX 1
☐ TRS ground-comp
Bay 3 · 17

AUX 2
☐ TRS ground-comp
Bay 3 · 18

AUX 3
☐ TRS ground-comp
Bay 3 · 19

AUX 4
☐ TRS ground-comp
Bay 3 · 20

AUX 5 / 6
☐ ☐ TRS ground-comp
Bay 3 · 21–22

AUX 7 L/R
☐ ☐ TRS ground-comp
Bay 3 · 23–24

AUX 8 L/R
☐ ☐ TRS ground-comp
Bay 4 · 17–18

MIX O/P L/R
☐ ☐ TRS ground-comp
Bay 9 · 21–22

MIX B O/P L/R
☐ ☐ TRS ground-comp

INSERTS

tip RETURN, ring SEND, sleeve ground - the
opposite of the usual tip-send wiring

GRP INS 1-8
☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ TRS insert
Bay 2 · 17–24

MIX INS L/R
☐ ☐ TRS insert
Bay 4 · 23–24

Bay 9 · 23–24

CRM O/P L/R



TS unbalanced

Bay 8 · 17–18

ALT O/P L/R



TS unbalanced

Bay 8 · 19

STU O/P A L/R



TRS ground-comp

Bay 8 · 21–22

STU PHNS B L/R



TS unbalanced

Bay 8 · 23–24

CABLE PULLS TO EACH ROOM

Two XLR sends, one XLR return and one Cat5 per room. Every XLR end is soldered onto its cable: pull it, solder the room end, solder the rack end, then patch it (Cat5 ends are terminated instead). Sends land on the patch bay as TRS; the returns stay in a loom on the floor, so they have nothing to patch — **156** steps in all. The destination is where the cable lands at the rack.

KITCHEN

		PULL	ROOM	CONSOLE	PATCH
Send L	XLR	☐	☐	☐	☐
Send R	XLR	☐	☐	☐	☐
Return	XLR	☐	☐	☐	—
Network	CAT5	☐	☐	☐	☐

Notes...

BATH UP

		PULL	ROOM	CONSOLE	PATCH
Send L	XLR	☐	☐	☐	☐
Send R	XLR	☐	☐	☐	☐
Return	XLR	☐	☐	☐	—
Network	CAT5	☐	☐	☐	☐

Notes...

BATH DN

		PULL	ROOM	CONSOLE	PATCH
Send L	XLR	☐	☐	☐	☐
Send R	XLR	☐	☐	☐	☐
Return	XLR	☐	☐	☐	—
Network	CAT5	☐	☐	☐	☐

Notes...

DEN

		PULL	ROOM	CONSOLE	PATCH
Send L	XLR	☐	☐	☐	☐
Send R	XLR	☐	☐	☐	☐
Return	XLR	☐	☐	☐	—
Network	CAT5	☐	☐	☐	☐

Notes...

GALLERY

		PULL	ROOM	CONSOLE	PATCH
Send L	XLR	☐	☐	☐	☐
Send R	XLR	☐	☐	☐	☐
Return	XLR	☐	☐	☐	—
Network	CAT5	☐	☐	☐	☐

Notes...

MASTER BED

		PULL	ROOM	CONSOLE	PATCH
Send L	XLR	☐	☐	☐	☐
Send R	XLR	☐	☐	☐	☐
Return	XLR	☐	☐	☐	—
Network	CAT5	☐	☐	☐	☐

Notes...

GUEST BED

		PULL	ROOM	CONSOLE	PATCH
Send L	XLR	☐	☐	☐	☐
Send R	XLR	☐	☐	☐	☐
Return	XLR	☐	☐	☐	—
Network	CAT5	☐	☐	☐	☐

Notes...

OFFICE

		PULL	ROOM	CONSOLE	PATCH
Send L	XLR	☐	☐	☐	☐
Send R	XLR	☐	☐	☐	☐
Return	XLR	☐	☐	☐	—
Network	CAT5	☐	☐	☐	☐

Notes...

RECORD PLAYER

		PULL	ROOM	CONSOLE	PATCH
Send L	XLR	☐	☐	☐	☐
Send R	XLR	☐	☐	☐	☐
Return	XLR	☐	☐	☐	—
Network	CAT5	☐	☐	☐	☐

Notes...

FRONT DECK

PULLROOMCONSOLEATCH

Speaker

SPEAKER

—

Notes...

BACK DECK

PULLROOMCONSOLEATCH

Speaker

SPEAKER

—

Notes...

REVERB · EMT PLATE

PULLROOMCONSOLEATCH

Send

XLR

Return L

XLR

Return R

XLR

Motor control · 5-pin

CAT5

—

Notes...

CABLES ON HAND

Type in how many you have; the gap updates as you go. The first three counts come straight from the room runs, so they follow any change to the layout.

CABLE	NEED	HAVE	SHORT
XLR (ROOM SENDS AND RETURNS)	30		—
CAT5E	10		—
SPEAKER CABLE (DECK RUNS)	2		—
TRS PATCH CABLES (BAY TO BAY) SHORT 1/4" TRS, FOR PATCHING AT THE RACK	24		—
TRS-XLR ENDS FOR THE SENDS CONSOLE END OF EACH ROOM SEND	20		—
TRS INSERT CABLES GHOST INSERTS ARE TIP RETURN, RING SEND	4		—

TO DO

0 of 3 done

- Find the screws for all the cover plates
- Gather every cover plate in one place
- Work out which rooms are missing cover plates - Kitchen and Guest Bed are, the rest unknown

Anything else...

MIDI HOOKUPS

0 of 11 connected

INSTRUMENT		PORT	PRIORITY	MIDI PATCH BAY
☐	Moog Sub 37	MIDI In	Required	Not assigned
		MIDI Out	Required	Not assigned
☐	Waldorf Streichfett	MIDI In	Required	Not assigned
		MIDI Out	Low priority	Not assigned
☐	MFB Tanzbar	MIDI In	Required	Not assigned
		MIDI Out	Low priority	Not assigned
☐	Sim n Tonic	MIDI In	Required	Not assigned
				Check which MIDI ports it has
☐	Oberheim OB-X8	MIDI In	Required	Not assigned
		MIDI Out	Required	Not assigned
☐	Oberheim OB-6	MIDI In	Required	Not assigned
		MIDI Out	Required	Not assigned