

STUDIO CARQUINEZ PATCH BAY

Front view, top of rack first. Left 16 ports: console buckets. Right 8: outboard, FX, monitoring. Generated 2026-09-24 from config.py.

Console core

Room sends

Tie lines

Outboard

Instruments & pedals

Aux sends & FX

Monitoring

2-track

Groups & mix bus

Amp rack

Network

Power

MIDI

Spare

Reserved

Rear not plugged in yet

Normalled

Not normalled

1

24 x 2
5 spare
0 normalled
0/37 rear plu

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
Tanzbar Out L	Sub 37 Out	Fuzz In	MXR Dist In	Reserved - Instruments & pedals					LA-2A In	UA 550 In	DBX 160 Link	SSL Fusion In L/R	API L/R In			Dbx 160A L/R In	D-Comp L/R In		902 De-esser IN 1-2		Art Comp In L/R		
Tanzbar Out R		Fuzz Out	MXR Dist Out	Reserved - Instruments & pedals					LA-2A Out	UA 550 Out	DBX 160 Link	SSL Fusion Out L/R	API L/R Out			Dbx 160A L/R Out	D-Comp L/R Out		902 De-esser OUT 1-2		Art Comp Out L/R		

2

24 x 2
0 spare
16 normalled
0/48 rear plu

Ghost Channel Insert Send 1-16																Group 1 - 8 Insert Send							
NORMALLED																							
Ghost Channel Insert Return 1-16																Group 1 - 8 Insert Return							

3

24 x 2
0 spare
24 normalled
0/44 rear plu

Ghost Channel Insert Send 17-32																Aux 1 Out								Aux 2 Out		Aux 3 Out		Aux 4 Out		Aux 5 / 6 Out		Aux 7 Out L/R	
NORMALLED																N		N		N		N		NORMALLED		NORMALLED							
Ghost Channel Insert Return 17-32																EMT 140 In		PCM60 In		SDE 1000 In		Moog DLY In											


4

24 x 2
3 spare
18 normalled
0/39 rear plu

Worm hole Matched to Left Side Patch bay 1-16 top																Aux 8 Out L/R		Moog DLY Out				Main Insert Send	
NORMALLED																						NORMALLED	
Console Line In 1-16																						Main Insert Return	


5

24 x 2
8 spare
16 normalled
0/32 rear plu

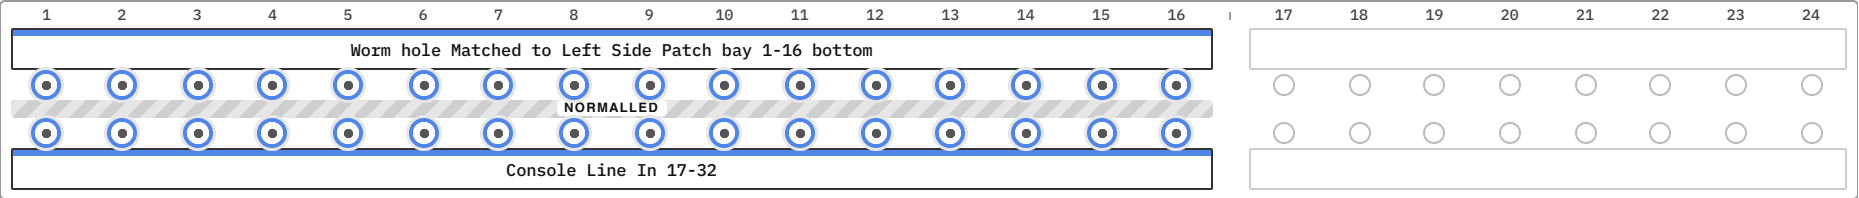


6

24 x 2
8 spare
16 normalled
0/32 rear plu

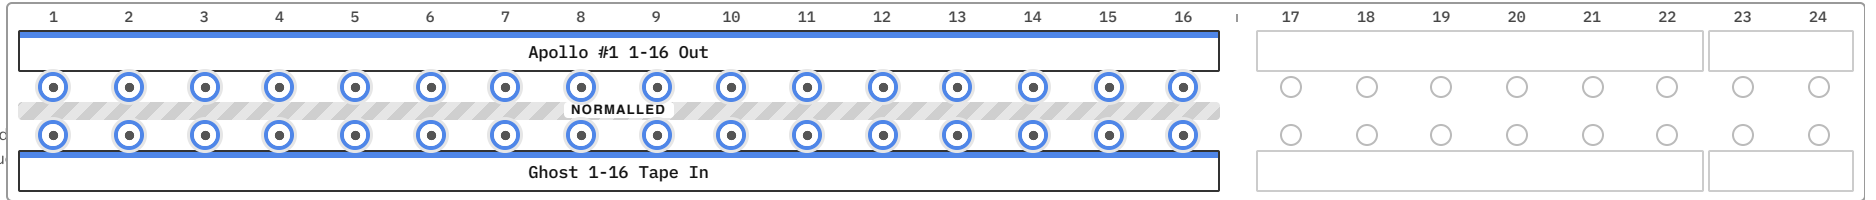


7

24 x 2
0 spare
22 normalled
0/46 rear plu

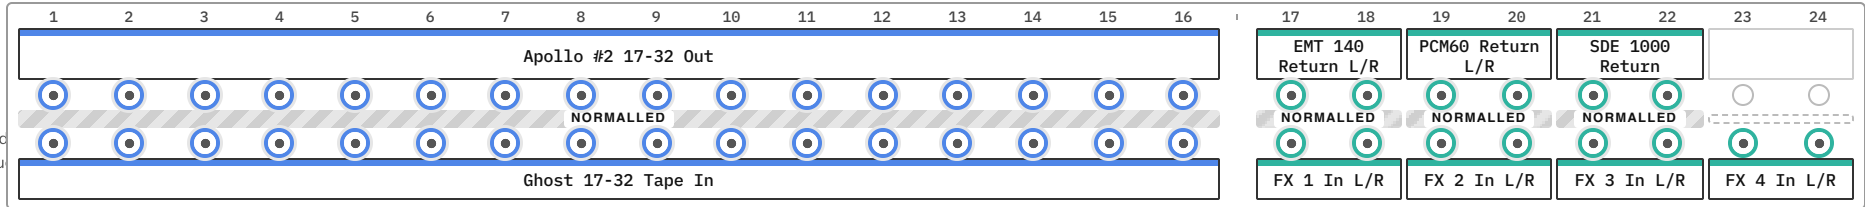


8

24 x 2
0 spare
24 normalled
0/47 rear plu

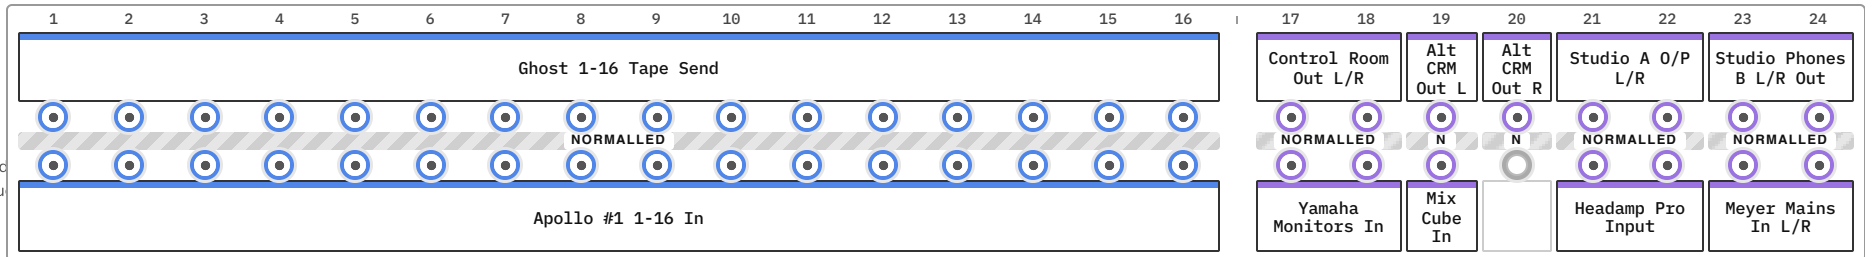


9

24 x 2
0 spare
22 normalled
0/46 rear plu

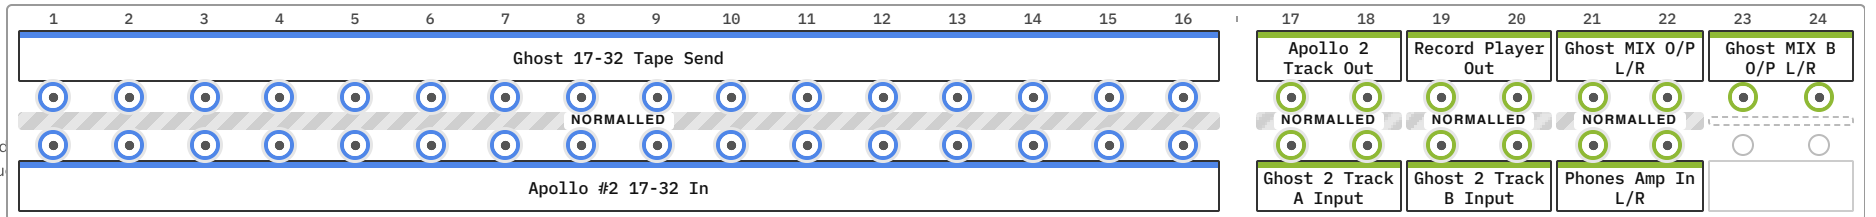


10


24 x 2
3 spare
0 normalled
0/42 rear plu

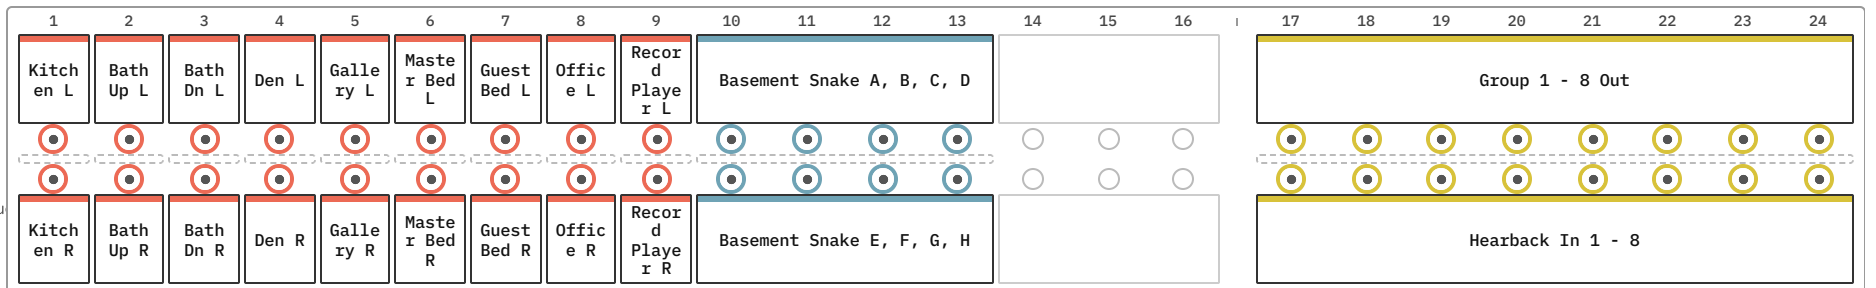


24 x 2
16 spare
8 normalised
0/16 rear plu

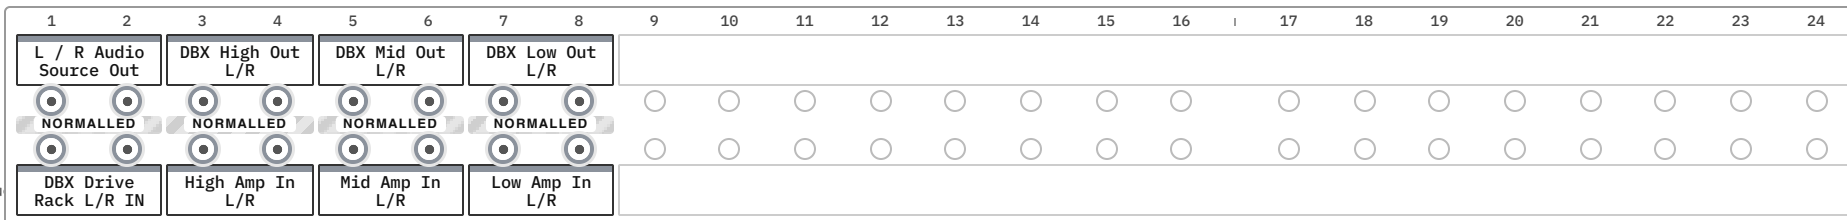


Single row
3 spare
0/8 rear plug

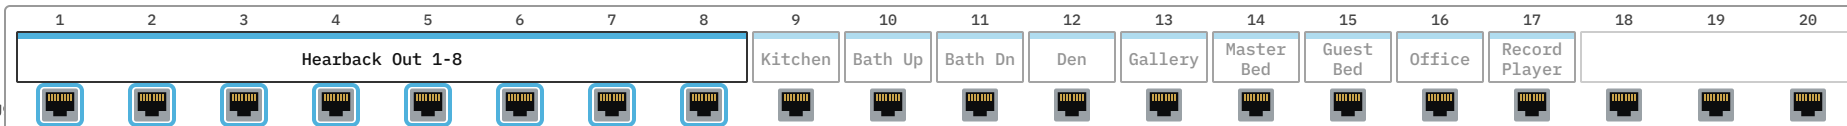

Not in use
Single row
22 spare
0/0 rear plug

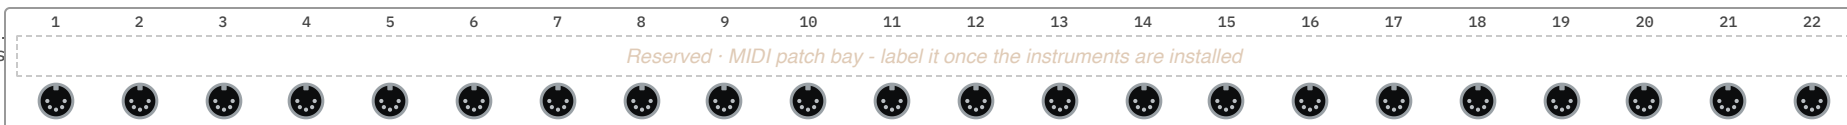

Single row
1 spare
0/9 rear plug

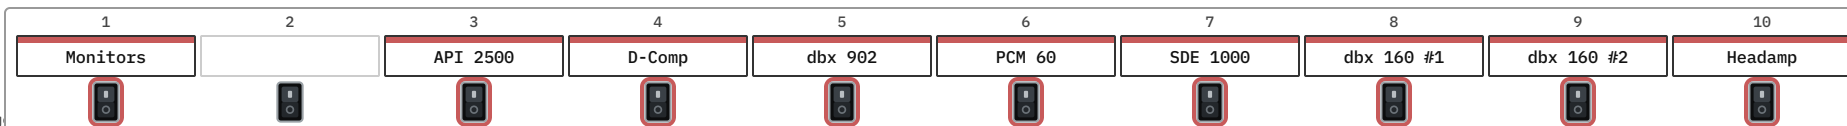

RACK 1 · EQUIPMENT (20U)

U1	POWER CONDITIONER	
U2	SWITCH PANEL	Not on the patch bay
U3	APOLLO 16 #1 Replacing both Apollos with one 1U unit	Patch bay: Bay 6 · 1–16, Bay 8 · 1–16
U4	APOLLO 16 #2 Replacing both Apollos with one 1U unit	Patch bay: Bay 7 · 1–16, Bay 9 · 1–16
U5	API 2500 COMPRESSOR	Patch bay: Bay 1 · 15–16, Power Switches · 3
U6–7	D-COMP	Patch bay: Bay 1 · 19–20, Power Switches · 4
U8	DBX 902 DE-ESSER ×2	Patch bay: Bay 1 · 21–22, Power Switches · 5
U9	LEXICON PCM 60 REVERB	Patch bay: Bay 3 · 18, Bay 7 · 19–20, Power Switches · 6
U10	SDE 1000 DELAY	Patch bay: Bay 3 · 19, Bay 7 · 21–22, Power Switches · 7
U11–12	DBX 160 COMPRESSORS	Patch bay: Bay 1 · 12, 17–18, Power Switches · 8–9
U13	EMT REVERB REMOTE Could move	
U14	HEADPHONE AMP Could move	Patch bay: Bay 9 · 21–22
U15	HEADPHONE POWER SUPPLY	
U16	MIDI PATCH BAY	Patch bay: <u>Midi</u> · 1–22
U17	HEARBACK UNIT	Patch bay: Bay 10 · 17–24, Ethernet · 1–8
U18	ETHERNET PATCH BAY	Patch bay: <u>Ethernet</u> · 1–20
U19–20	SOUNDCRAFT GHOST POWER SUPPLY	

OPEN QUESTIONS

SOUNDCRAFT GHOST · CENTRE SECTION REAR

Every jack on the master section's rear panel, in the order the manual lists them - all ¼".
Grey means nothing on the patch bay carries it yet.

INPUTS

tip signal +, ring signal -, sleeve ground

- ○

TRS balanced

Bay 7 · 17-18
- ○

TRS balanced

Bay 7 · 19-20
- ○

TRS balanced

Bay 7 · 21-22
- ○

TRS balanced

Bay 7 · 23-24
- ○

TRS balanced

Bay 9 · 17-18
- ○

TRS balanced

Bay 9 · 19-20

OUTPUTS

tip signal +, ring ground sense, sleeve ground

- ○ ○ ○ ○ ○ ○ ○

GRP 1-8

TRS ground-comp

Bay 10 · 17-24
- AUX 1

TRS ground-comp

Bay 3 · 17
- AUX 2

TRS ground-comp

Bay 3 · 18
- AUX 3

TRS ground-comp

Bay 3 · 19
- AUX 4

TRS ground-comp

Bay 3 · 20
- ○

AUX 5 / 6

TRS ground-comp

Bay 3 · 21-22
- ○

AUX 7 L/R

TRS ground-comp

Bay 3 · 23-24
- ○

AUX 8 L/R

TRS ground-comp

Bay 4 · 17-18
- ○

MIX O/P L/R

TRS ground-comp

Bay 9 · 21-22
- ○

MIX B O/P L/R

TRS ground-comp

Bay 9 · 23-24

INSERTS

tip RETURN, ring SEND, sleeve ground - the opposite of the usual tip-send wiring

- ○ ○ ○ ○ ○ ○ ○

GRP INS 1-8

TRS insert

Bay 2 · 17-24
- ○

MIX INS L/R

TRS insert

Bay 4 · 23-24

○○ **CRM O/P L/R**
TS unbalanced
Bay 8 · 17–18

○○ **ALT O/P L/R**
TS unbalanced
Bay 8 · 19

○○ **STU O/P A L/R**
TRS ground-comp
Bay 8 · 21–22

○○ **STU PHNS B L/R**
TS unbalanced
Bay 8 · 23–24

CABLE PULLS TO EACH ROOM

Two XLR sends, one XLR return and one Cat5 per room. Every XLR end is soldered onto its cable: pull it, solder the room end, solder the rack end, then patch it (Cat5 ends are terminated instead). Sends land on the patch bay as TRS; the returns stay in a loom on the floor, so they have nothing to patch — **156** steps in all. The destination is where the cable lands at the rack.

KITCHEN

		PULL	ROOM	CONSOLE	PATCH
Send L	XLR	☐	☐	☐	☐
Send R	XLR	☐	☐	☐	☐
Return	XLR	☐	☐	☐	—
Network	CAT5	☐	☐	☐	☐

Notes...

BATH UP

		PULL	ROOM	CONSOLE	PATCH
Send L	XLR	☐	☐	☐	☐
Send R	XLR	☐	☐	☐	☐
Return	XLR	☐	☐	☐	—
Network	CAT5	☐	☐	☐	☐

Notes...

BATH DN

		PULL	ROOM	CONSOLE	PATCH
Send L	XLR	☐	☐	☐	☐
Send R	XLR	☐	☐	☐	☐
Return	XLR	☐	☐	☐	—
Network	CAT5	☐	☐	☐	☐

Notes...

DEN

		PULL	ROOM	CONSOLE	PATCH
Send L	XLR	☐	☐	☐	☐
Send R	XLR	☐	☐	☐	☐
Return	XLR	☐	☐	☐	—
Network	CAT5	☐	☐	☐	☐

Notes...

GALLERY

		PULL	ROOM	CONSOLE	PATCH
Send L	XLR	☐	☐	☐	☐
Send R	XLR	☐	☐	☐	☐
Return	XLR	☐	☐	☐	—
Network	CAT5	☐	☐	☐	☐

Notes...

MASTER BED

		PULL	ROOM	CONSOLE	PATCH
Send L	XLR	☐	☐	☐	☐
Send R	XLR	☐	☐	☐	☐
Return	XLR	☐	☐	☐	—
Network	CAT5	☐	☐	☐	☐

Notes...

GUEST BED

		PULL	ROOM	CONSOLE	PATCH
Send L	XLR	☐	☐	☐	☐
Send R	XLR	☐	☐	☐	☐
Return	XLR	☐	☐	☐	—
Network	CAT5	☐	☐	☐	☐

Notes...

OFFICE

		PULL	ROOM	CONSOLE	PATCH
Send L	XLR	☐	☐	☐	☐
Send R	XLR	☐	☐	☐	☐
Return	XLR	☐	☐	☐	—
Network	CAT5	☐	☐	☐	☐

Notes...

RECORD PLAYER

		PULL	ROOM	CONSOLE	PATCH
Send L	XLR	☐	☐	☐	☐
Send R	XLR	☐	☐	☐	☐
Return	XLR	☐	☐	☐	—
Network	CAT5	☐	☐	☐	☐

Notes...

FRONT DECK

	PULL	ROOM	CONSOLE	CATCH	
Speaker	SPEAKER	☐	☐	☐	—

Notes...

BACK DECK

	PULL	ROOM	CONSOLE	CATCH
Speaker	SPEAKER	☐	☐	☐
				—

Notes...

REVERB · EMT PLATE

		PULL	ROOM	CONSOLE	CATCH
Send	XLR	☐	☐	☐	☐

Return L	XLR	☐	☐	☐	☐
----------	------------	--------------------------	--------------------------	--------------------------	--------------------------

Return R	XLR	☐	☐	☐	☐
----------	------------	--------------------------	--------------------------	--------------------------	--------------------------

Motor control · 5-pin	CAT5	☐	☐	☐	—
-----------------------	-------------	--------------------------	--------------------------	--------------------------	---

Notes...

TO DO

0 of 3 done

- ☐ Find the screws for all the cover plates
- ☐ Gather every cover plate in one place
- ☐ Work out which rooms are missing cover plates - Kitchen and Guest Bed are, the rest unknown

Anything else...

MIDI HOOKUPS

0 of 11 connected

INSTRUMENT		PORT	PRIORITY	MIDI PATCH BAY
☐	Moog Sub 37	MIDI In	Required	Not assigned
		MIDI Out	Required	Not assigned
☐	Waldorf Streichfett	MIDI In	Required	Not assigned
		MIDI Out	Low priority	Not assigned
☐	MFB Tanzbar	MIDI In	Required	Not assigned
		MIDI Out	Low priority	Not assigned
☐	Sim n Tonic	MIDI In	Required	Not assigned
		Check which MIDI ports it has		
☐	Oberheim OB-X8	MIDI In	Required	Not assigned
		MIDI Out	Required	Not assigned
☐	Oberheim OB-6	MIDI In	Required	Not assigned
		MIDI Out	Required	Not assigned