

STUDIO CARQUINEZ PATCH BAY

Front view, top of rack first. Left 16 ports: console buckets. Right 8: outboard, FX, monitoring. Generated 2026-09-29 from config.py.

Console core

Room sends

Tie lines

Outboard

Instruments & pedals

Aux sends & FX

Monitoring

2-track

Groups & mix bus

Amp rack

Network

Power

MIDI

Spare

Reserved

Rear not plugged in yet

Normalled

Not normalled

1

24 x 2
5 spare
0 normalled
0/37 rear plu

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
Tanzb ar Out L	Sub 37 Out	Fuzz In	MXR Dist In	Reserved · Instruments & pedals					LA-2A In	UA 550 In	DBX 160 Link	SSL Fusion In L/R	API L/R In			Dbx 160A L/R In	D-Comp L/R In		902 De-esser IN 1-2		Art Comp In L/R		
Tanzb ar Out R		Fuzz Out	MXR Dist Out	Reserved · Instruments & pedals					LA-2A Out	UA 550 Out	DBX 160 Link	SSL Fusion Out L/R	API L/R Out			Dbx 160A L/R Out	D-Comp L/R Out		902 De-esser OUT 1-2		Art Comp Out L/R		

2

24 x 2
0 spare
16 normalled
0/48 rear plu

Ghost Channel Insert Send 1-16																Group 1 - 8 Insert Send							
NORMALLED																NORMALLED							
Ghost Channel Insert Return 1-16																Group 1 - 8 Insert Return							

3

24 x 2
0 spare
24 normalled
0/44 rear plu

Ghost Channel Insert Send 17-32																Aux 1 Out								Aux 2 Out		Aux 3 Out		Aux 4 Out		Aux 5 / 6 Out		Aux 7 Out L/R	
NORMALLED																N		N		N		N		NORMALLED		NORMALLED							
Ghost Channel Insert Return 17-32																EMT 140 In		PCM60 In		SDE 1000 In		Moog DLY In											


4

24 x 2
2 spare
18 normalled
0/32 rear plu

Worm hole 1-8 top								Worm hole 9-16 top								i Aux 8 Out L/R		SDE 1000 Retur n		Moog DLY Out				Main Insert Send			
NORMALLED								NORMALLED								NORMALLED											
Console Line In 1-8								Console Line In 9-16																		Main Insert Return	



5

24 x 2
8 spare
16 normalled
0/32 rear plu

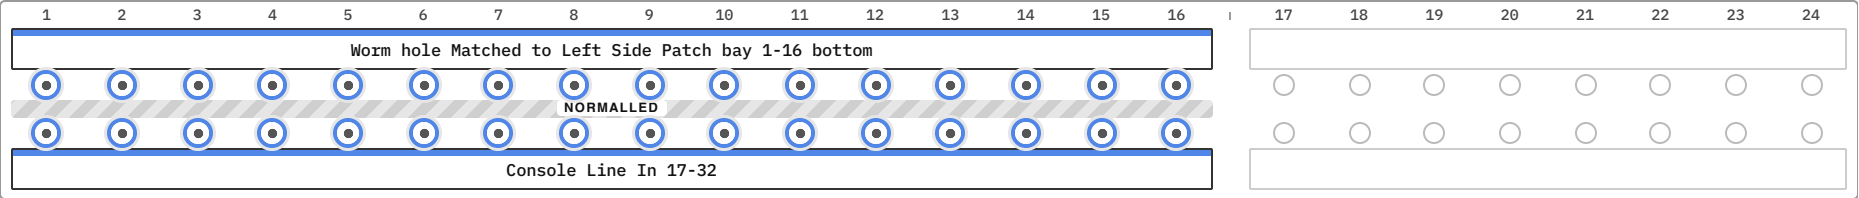



6

24 x 2
0 spare
16 normalled
0/48 rear plu

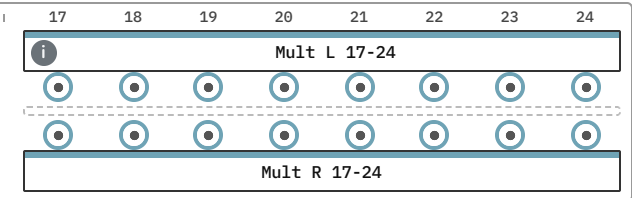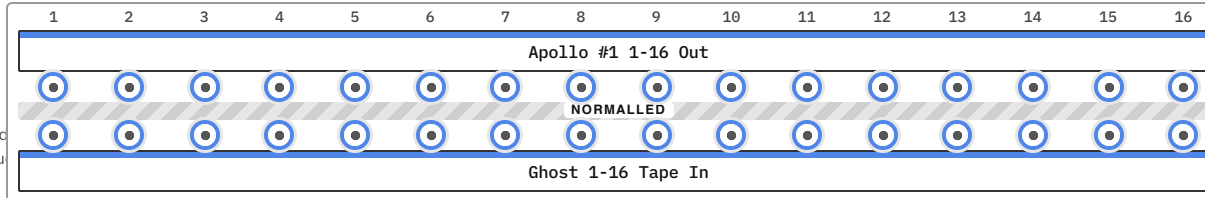



7

24 x 2
0 spare
20 normalled
0/44 rear plu

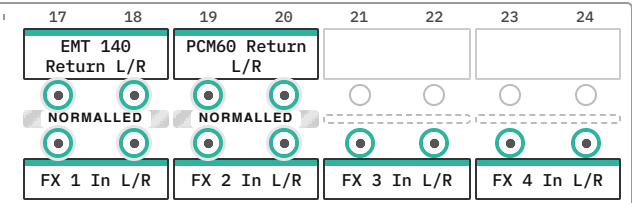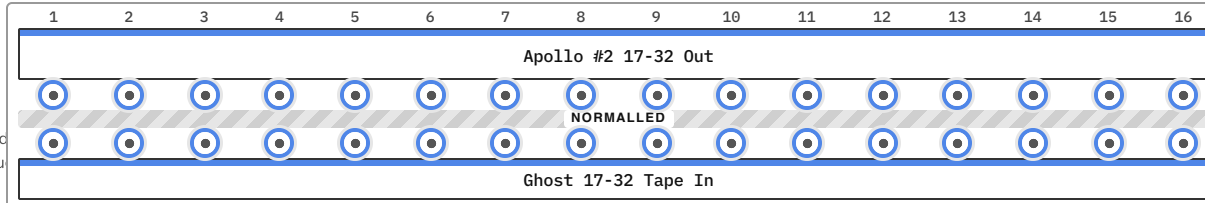



8

24 x 2
0 spare
24 normalled
0/47 rear plu

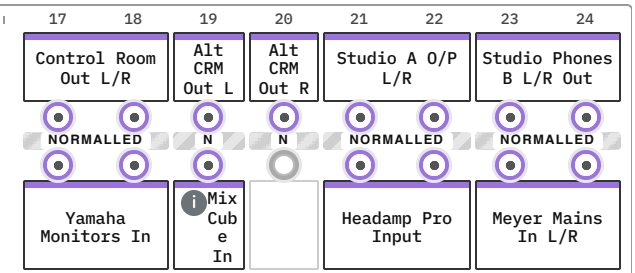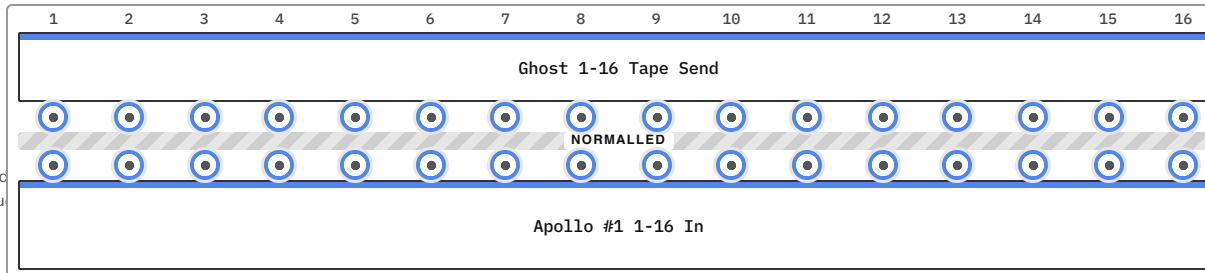



9

24 x 2
0 spare
20 normalled
0/44 rear plu

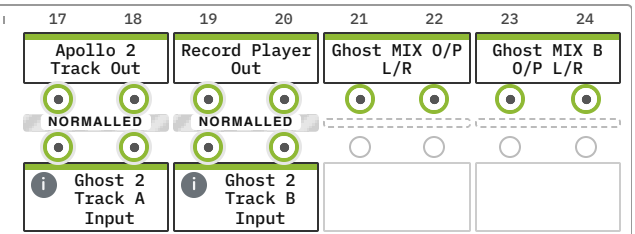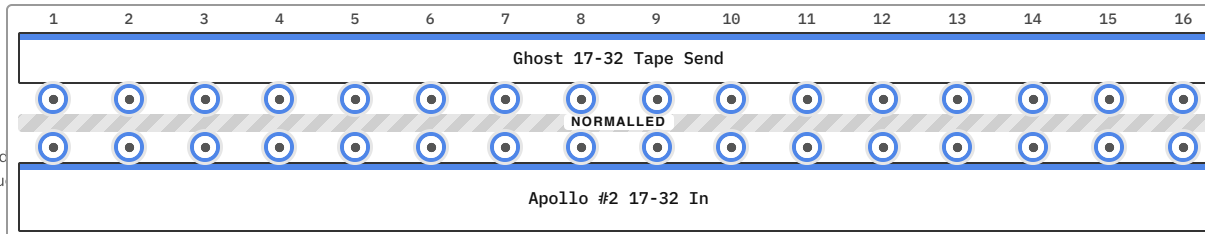


10


24 x 2
3 spare
0 normalled
0/42 rear plu

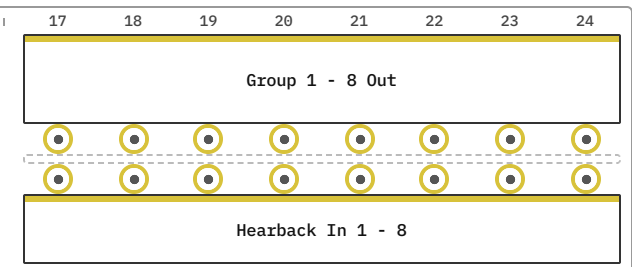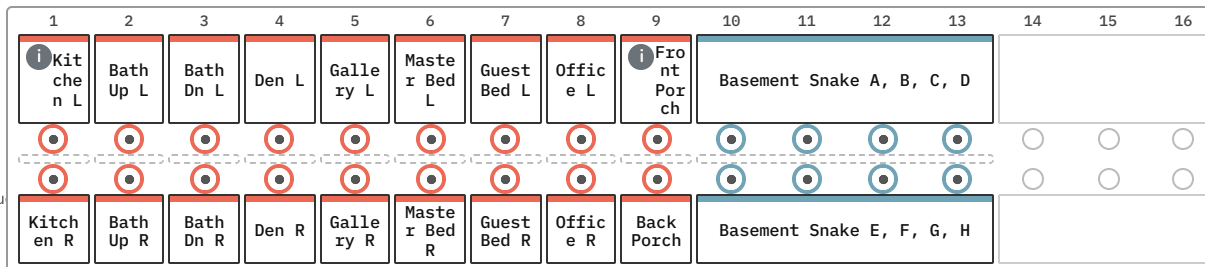


24 x 2
16 spare
8 normalised
0/16 rear plu

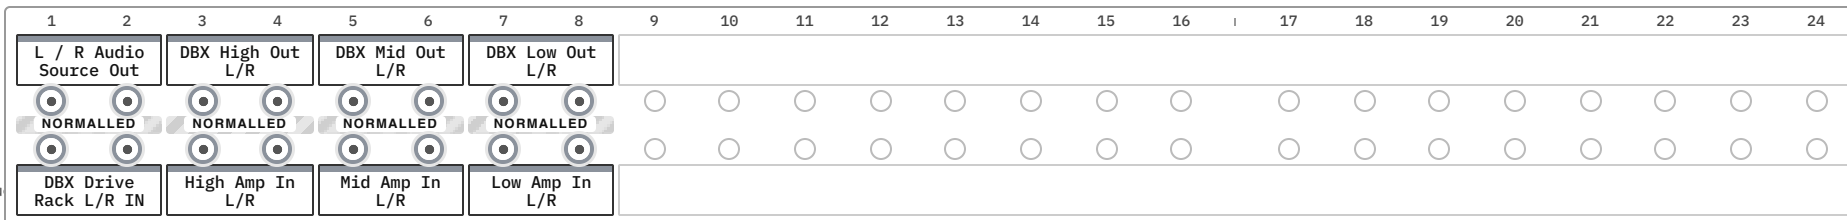


Single row
2 spare
0/18 rear plu

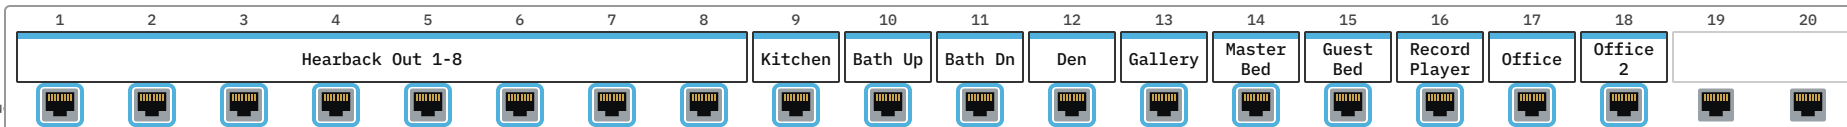

Not in use
Single row
22 spare
0/0 rear plug

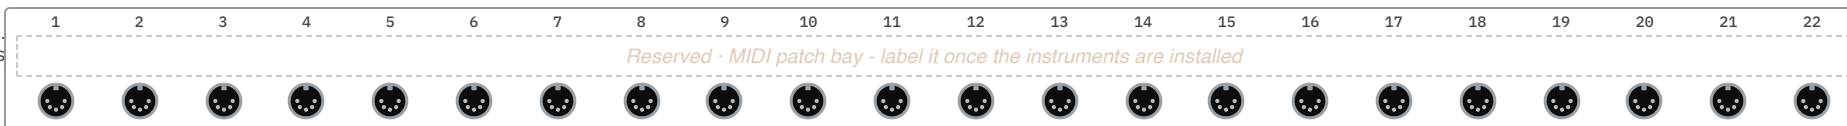

Single row
1 spare
0/9 rear plug

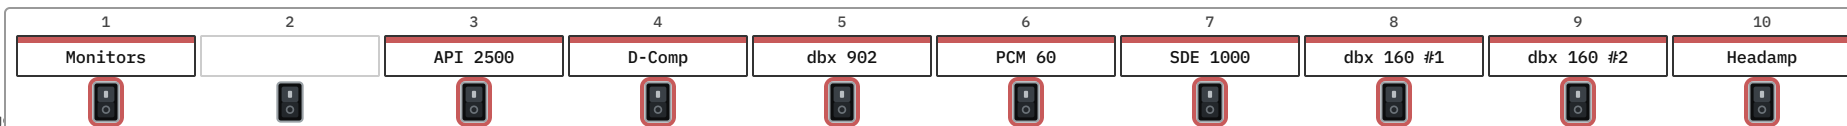

RACK 1 · EQUIPMENT (20U)

U1	POWER CONDITIONER	
U2	SWITCH PANEL	Not on the patch bay
U3	APOLLO 16 #1 Replacing both Apollos with one 1U unit	Patch bay: Bay 6 · 1–16, Bay 8 · 1–16
U4	APOLLO 16 #2 Replacing both Apollos with one 1U unit	Patch bay: Bay 7 · 1–16, Bay 9 · 1–16
U5	API 2500 COMPRESSOR	Patch bay: Bay 1 · 15–16, Power Switches · 3
U6–7	D-COMP	Patch bay: Bay 1 · 19–20, Power Switches · 4
U8	DBX 902 DE-ESSER ×2	Patch bay: Bay 1 · 21–22, Power Switches · 5
U9	LEXICON PCM 60 REVERB	Patch bay: Bay 3 · 18, Bay 7 · 19–20, Power Switches · 6
U10	SDE 1000 DELAY	Patch bay: Bay 3 · 19, Bay 4 · 19, Power Switches · 7
U11–12	DBX 160 COMPRESSORS	Patch bay: Bay 1 · 12, 17–18, Power Switches · 8–9
U13	EMT REVERB REMOTE Could move	
U14	HEADPHONE AMP Could move	Patch bay: Bay 8 · 21–22
U15	HEADPHONE POWER SUPPLY	
U16	MIDI PATCH BAY	Patch bay: <u>Midi</u> · 1–22
U17	HEARBACK UNIT	Patch bay: Bay 10 · 17–24, Ethernet · 1–8
U18	ETHERNET PATCH BAY	Patch bay: <u>Ethernet</u> · 1–20
U19–20	SOUNDCRAFT GHOST POWER SUPPLY	

OPEN QUESTIONS

CABLE PULLS TO EACH ROOM

Two XLR sends, one XLR return and one Cat5 per room. Each cable: pull it, terminate both ends onto their connectors, then patch it in at the room plate and at the console - **182** tasks in all. A dash means there is nothing to patch there: the returns live in a floor loom and the deck speaker runs never touch a bay.

KITCHEN

PULLED	TERMINATED		PATCHED	
	ROOM	CONSOLE	ROOM	CONSOLE
	☐	☐	☐	☐
	☐	☐	☐	☐
	☐	☐	☐	—
	☐	☐	☐	☐

Notes...

BATH UP

PULLED	TERMINATED		PATCHED	
	ROOM	CONSOLE	ROOM	CONSOLE
	☐	☐	☐	☐
	☐	☐	☐	☐
	☐	☐	☐	—
	☐	☐	☐	☐

Notes...

BATH DN

PULLED	TERMINATED		PATCHED	
	ROOM	CONSOLE	ROOM	CONSOLE
	☐	☐	☐	☐
	☐	☐	☐	☐
	☐	☐	☐	—
	☐	☐	☐	☐

Notes...

DEN

PULLED	TERMINATED		PATCHED	
	ROOM	CONSOLE	ROOM	CONSOLE
	☐	☐	☐	☐
	☐	☐	☐	☐
	☐	☐	☐	—
	☐	☐	☐	☐

Notes...

GALLERY

PULLED	TERMINATED		PATCHED	
	ROOM	CONSOLE	ROOM	CONSOLE
	☐	☐	☐	☐
	☐	☐	☐	☐
	☐	☐	☐	—
	☐	☐	☐	☐

Notes...

MASTER BED

PULLED	TERMINATED		PATCHED	
	ROOM	CONSOLE	ROOM	CONSOLE
	☐	☐	☐	☐
	☐	☐	☐	☐
	☐	☐	☐	—
	☐	☐	☐	☐

Notes...

GUEST BED

PULLED	TERMINATED		PATCHED	
	ROOM	CONSOLE	ROOM	CONSOLE
	☐	☐	☐	☐
	☐	☐	☐	☐
	☐	☐	☐	—
	☐	☐	☐	☐

Notes...

OFFICE

PULLED	TERMINATED		PATCHED	
	ROOM	CONSOLE	ROOM	CONSOLE
	☐	☐	☐	☐
	☐	☐	☐	☐
	☐	☐	☐	—
	☐	☐	☐	☐

Notes...

RECORD PLAYER

PULLED	TERMINATED		PATCHED	
	ROOM	CONSOLE	ROOM	CONSOLE
	☐	☐	☐	—
	☐	☐	☐	☐

Notes...

FRONT DECK

PULLED	TERMINATED		PATCHED	
	ROOM	CONSOLE	ROOM	CONSOLE
SP ☐ KER	☐	☐	—	—

Notes...

BACK DECK

PULLED	TERMINATED		PATCHED	
	ROOM	CONSOLE	ROOM	CONSOLE
SP ☐ KER	☐	☐	—	—

Notes...

REVERB · EMT PLATE

PULLED	TERMINATED		PATCHED	
	ROOM	CONSOLE	ROOM	CONSOLE
☒ >	☐	☐	—	☐
☒ >	☐	☐	—	☐
☒ >	☐	☐	—	☐
☒ C	☐	☐	—	—

Notes...

SOUNDCRAFT GHOST · CENTRE SECTION REAR

Every jack on the master section's rear panel, in the order the manual lists them - all ¼".
Grey means nothing on the patch bay carries it yet.

INPUTS

tip signal +, ring signal -, sleeve ground

○ ○

TRS balanced

Bay 7 · 17–18

○ ○

TRS balanced

Bay 7 · 19–20

○ ○

TRS balanced

Bay 7 · 21–22

○ ○

TRS balanced

Bay 7 · 23–24

○ ○

TRS balanced

Bay 9 · 17–18

○ ○

TRS balanced

Bay 9 · 19–20

OUTPUTS

tip signal +, ring ground sense, sleeve ground;
the TS unbalanced ones are tip signal +, ring not
used, sleeve ground

○ ○ ○ ○ ○ ○ ○ ○ ○ ○

GRP 1-8

TRS ground-comp

Bay 10 · 17–24

○

AUX 1

TRS ground-comp

Bay 3 · 17

○

AUX 2

TRS ground-comp

Bay 3 · 18

○

AUX 3

TRS ground-comp

Bay 3 · 19

○

AUX 4

TRS ground-comp

Bay 3 · 20

○ ○

AUX 5 / 6

TRS ground-comp

Bay 3 · 21–22

○ ○

AUX 7 L/R

TRS ground-comp

Bay 3 · 23–24

○ ○

AUX 8 L/R

TRS ground-comp

Bay 4 · 17–18

○ ○

MIX 0/P L/R

TRS ground-comp

Bay 9 · 21–22

○ ○

MIX B 0/P L/R

TRS ground-comp

INSERTS

tip RETURN, ring SEND, sleeve ground - the
opposite of the usual tip-send wiring

○ ○ ○ ○ ○ ○ ○ ○ ○ ○

GRP INS 1-8

TRS insert

Bay 2 · 17–24

○ ○

MIX INS L/R

TRS insert

Bay 4 · 23–24

Bay 9 · 23–24

CRM O/P L/R



TS unbalanced

Bay 8 · 17–18

ALT O/P L/R



TS unbalanced

Bay 8 · 19

STU O/P A L/R



TRS ground-comp

Bay 8 · 21–22

STU PHNS B L/R




TS unbalanced

Bay 8 · 23–24


SOLDERING · XLR TO TRS

Hot is XLR pin 2 to the tip, cold is pin 3 to the ring, shield is pin 1 to the sleeve. Hold a connector with the two pins up and the single pin down, and read the view that matches what you are looking at - the solder side is the mirror of the front. Every connector has the numbers moulded beside each contact; trust those over any drawing.

- 2 · hot (+)
- 3 · cold (-)
- 1 · shield

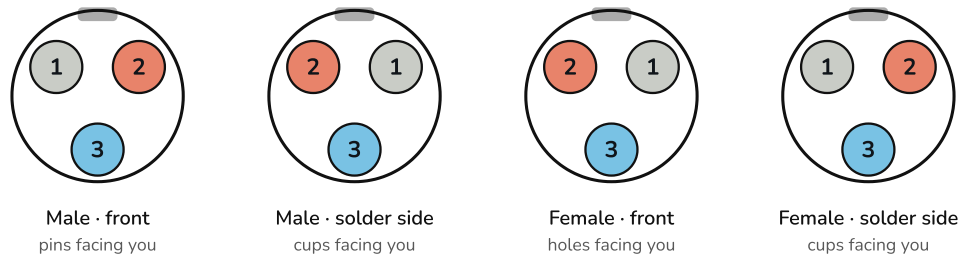

XLR numbering flips left to right between the front of a connector and its solder side.

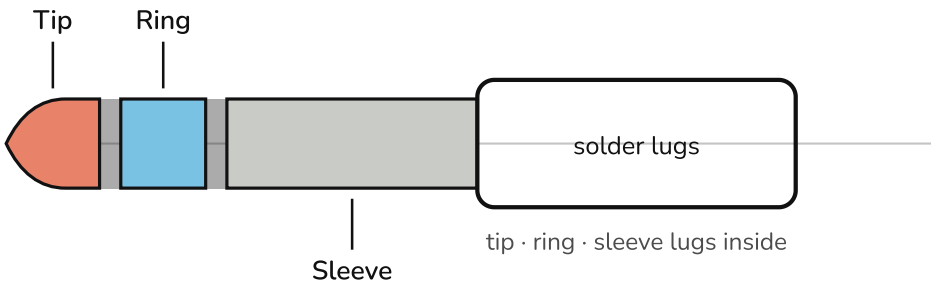

A ¼" TRS plug, tip first. The sleeve lug is the big one nearest the cable clamp.

XLR	SIGNAL	TRS	WIRE
Pin 2	Hot, +	Tip	Usually red or white
Pin 3	Cold, –	Ring	Usually black or blue
Pin 1	Shield	Sleeve	Braid or drain wire

– **Ghost inserts are backwards from most desks:** tip is RETURN and ring is SEND on GRP INS and MIX INS. An insert cable built for another

console will have send and return swapped here.

- **Ghost outputs are ground compensated:** tip signal +, ring ground sense, sleeve ground. Wire them as TRS; a TS plug shorts the ring and throws that away. CRM, ALT and STU PHNS B are the plain unbalanced exceptions.
- **Going unbalanced on purpose?** Leave the ring unconnected at the source end rather than shorting it to sleeve, and keep the shield on sleeve at both ends.
- **Check before you trust it:** buzz tip, ring and sleeve against pins 2, 3 and 1 with a meter once the first cable is done, then build the rest to match.

CONSOLE FAULTS

Running list for the next service session. Tick one when it is sorted.

0 of 1 sorted

☐

Channel 6

noticed 2026-09-25

Intermittent - passes no signal unless the source is hot, and tapping the channel brings it back. Suspect a dry solder joint or dirty contact rather than a dead stage.

IMPERFECT CRIMES

Shortcuts taken during the build, so nobody has to rediscover them with a meter. Ones tied to a port also show as an i on that bay.

Bay 1 • port 19-20 bottom	The D-Comp stereo return is wired unbalanced. No real loss here - the Ghost's insert points are unbalanced anyway (tip return, ring send).
Bay 4 • port 17-18 top	Aux 8 is on the bay but not wired to anything yet - stereo send, no destination chosen.
Bay 6 • port 17-24 top	Stereo mult, installed 2026-09-27: all 8 top jacks joined as the L bus, all 8 bottom jacks as the R bus. Feed Studio A O/P into any one port, the other 7 are outputs. POLARITY IS WRONG on this bus: the cables used to build it have a manufacturing fault (tip and ring swapped on some legs), so feeds come out polarity-inverted against each other and cancel in the rooms. Known and lived with for now - rebuild the bus with cable that has been buzzed out first.
Bay 8 • port 19 bottom	Avantone Active MixCube: the lamp in its rear power switch is dead. The speaker and its supply are fine - the switch just doesn't light up, so don't go chasing a dead unit.
Bay 9 • port 17-18 bottom	Bay to the Ghost 2 Track A input is 2x unshielded TRS cables, about 6 ft, inside the rack. They also pass through a poor junction behind the console that may be flaky - replace it.
Bay 9 • port 19-20 bottom	Runs through the same poor junction behind the console as the 2 Track A feed - suspect it first if this input goes intermittent.
Bay 10 • port 1 top	Both stereo sends to the kitchen run unbalanced for the last stretch: the tail behind the wall plate was too short, so they are extended with unbalanced extenders. To be redone properly with a balanced junction.
Bay 10 • port 9 top	Mono line sends, one per porch, feeding the amp that drives the porch speakers.
Room XLR runs	While spooling out the cable, every XLR run from a room to the console is flagged with black tape at BOTH ends - room side and console side - because the parts to finish them aren't here yet. Anything without a black flag was soldered and jacked into the patch bay as it was pulled. So: black flag = still to terminate.

TO DO

0 of 8 done

- ☐ Find the screws for all the cover plates
- ☐ Gather every cover plate in one place
- ☐ Work out which rooms are missing cover plates - Kitchen and Guest Bed are, the rest unknown
- ☐ Go back to every black-flagged XLR run and terminate it once the parts arrive
- ☐ Identify the stray XLR sticking out of the loom behind the desk (Steve found it) - it comes from one of the rooms, but which one is unknown. Tone it out and label both ends
- ☐ Rebuild the bay 6 mult bus - the jumper cables have tip and ring swapped on some legs, so the room feeds are polarity-inverted against each other
- ☐ Redo the kitchen stereo sends with a balanced junction instead of the unbalanced extenders
- ☐ Replace the flaky junction behind the console that the Ghost 2 Track A and B inputs run through

Anything else...

MIDI HOOKUPS

0 of 11 connected

INSTRUMENT		PORT	PRIORITY	MIDI PATCH BAY
☐	Moog Sub 37	MIDI In	Required	Not assigned
		MIDI Out	Required	Not assigned
☐	Waldorf Streichfett	MIDI In	Required	Not assigned
		MIDI Out	Low priority	Not assigned
☐	MFB Tanzbar	MIDI In	Required	Not assigned
		MIDI Out	Low priority	Not assigned
☐	Sim n Tonic	MIDI In	Required	Not assigned
				Check which MIDI ports it has
☐	Oberheim OB-X8	MIDI In	Required	Not assigned
		MIDI Out	Required	Not assigned
☐	Oberheim OB-6	MIDI In	Required	Not assigned
		MIDI Out	Required	Not assigned