

STUDIO CARQUINEZ PATCH BAY

Front view, top of rack first. Left 16 ports: console buckets. Right 8: outboard, FX, monitoring. Generated 2026-09-24 from config.py.

Console core

Room sends

Tie lines

Outboard

Instruments & pedals

Aux sends & FX

Monitoring

2-track

Groups & mix bus

Amp rack

Network

Power

MIDI

Spare

Reserved

Rear not plugged in yet


Normalled

Not normalled

MAIN RACK


1

24 x 2
5 spare
0 normalled
0/37 rear plu

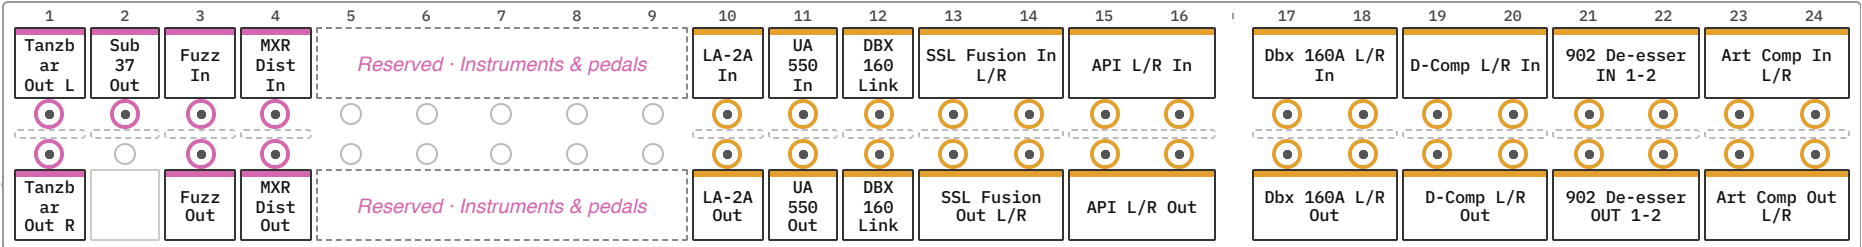


2

24 x 2
0 spare
16 normalled
0/48 rear plu

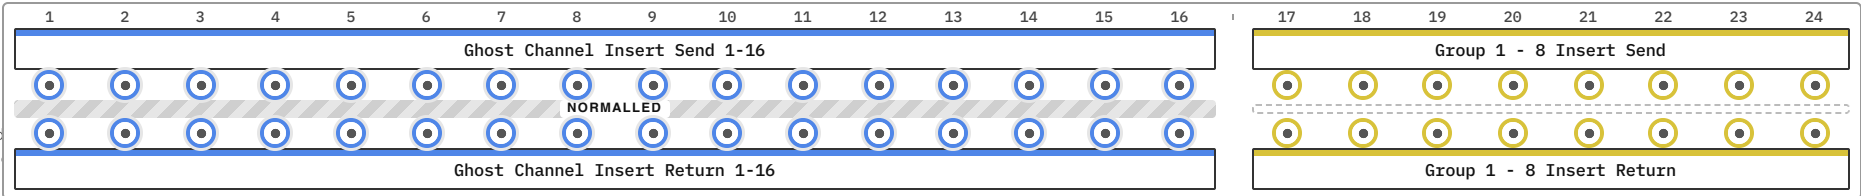


3

24 x 2
0 spare
24 normalled
0/44 rear plu

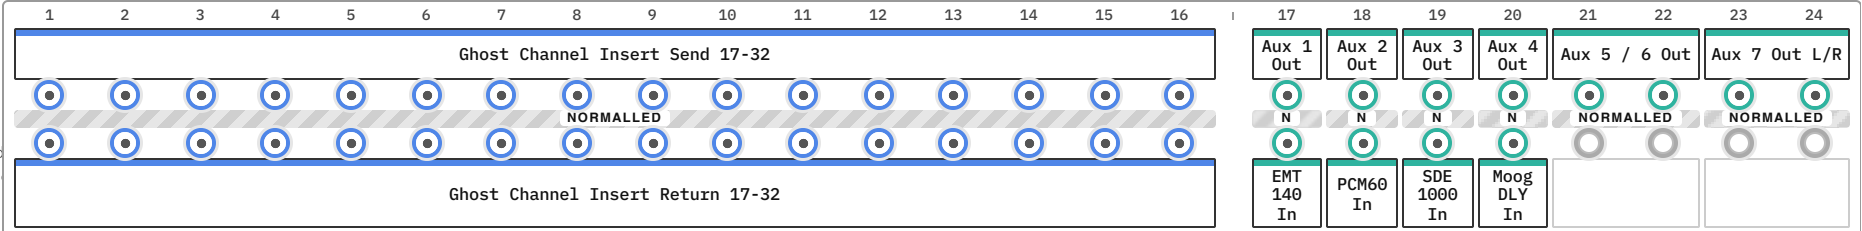


4

24 x 2
3 spare
18 normalled
0/39 rear plu

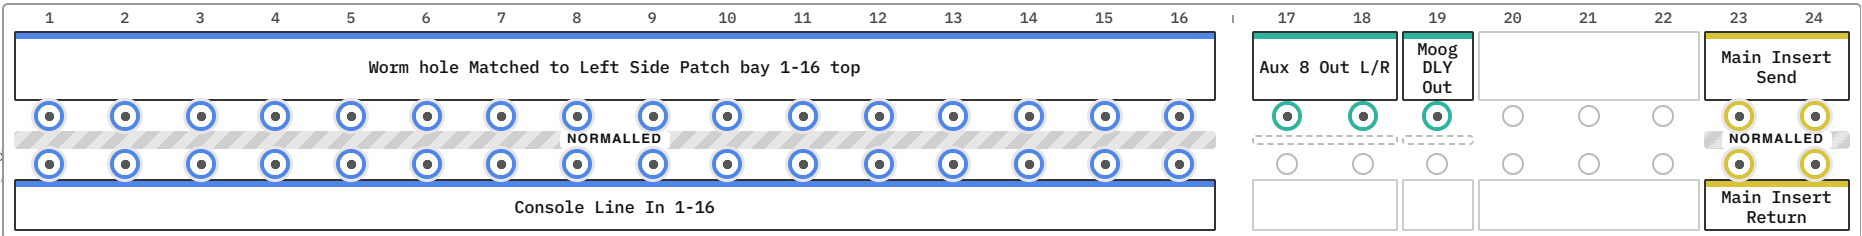


5

24 x 2
8 spare
16 normalled
0/32 rear plu

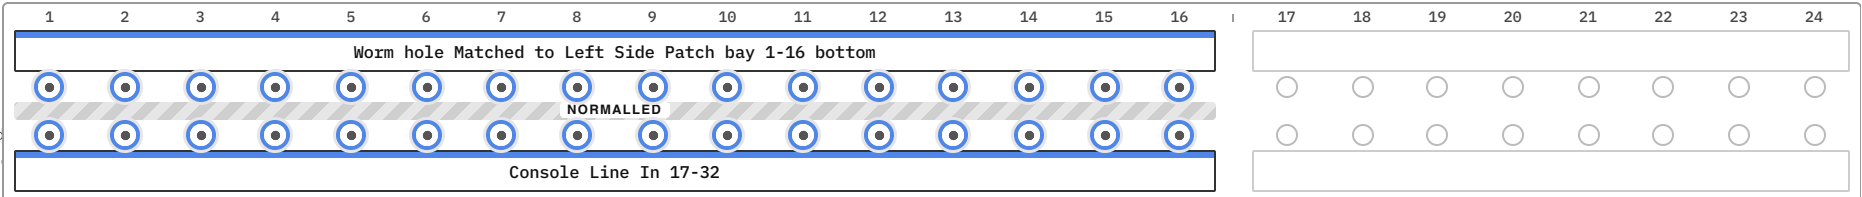


6

24 x 2
8 spare
16 normalled
0/32 rear plu

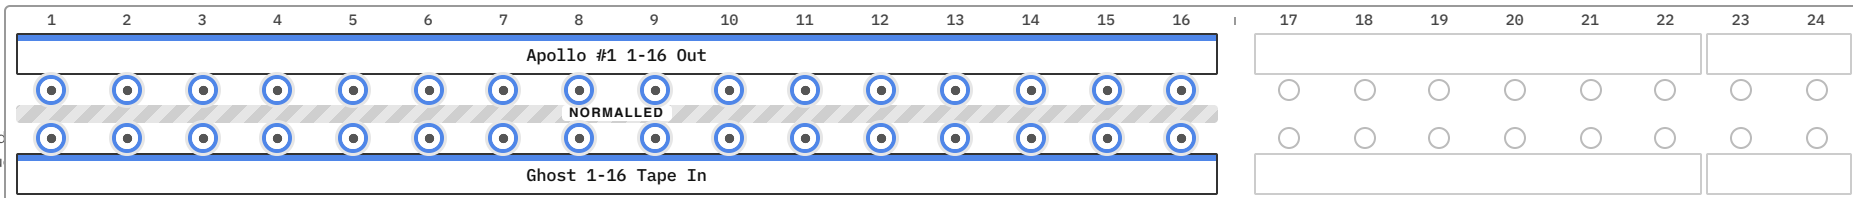


7

24 x 2
0 spare
22 normalled
0/46 rear plu

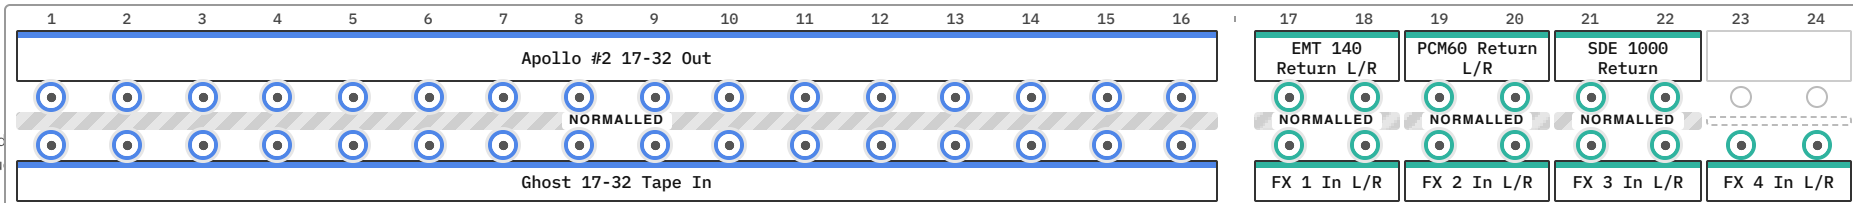


8

24 x 2
0 spare
24 normalled
0/47 rear plu

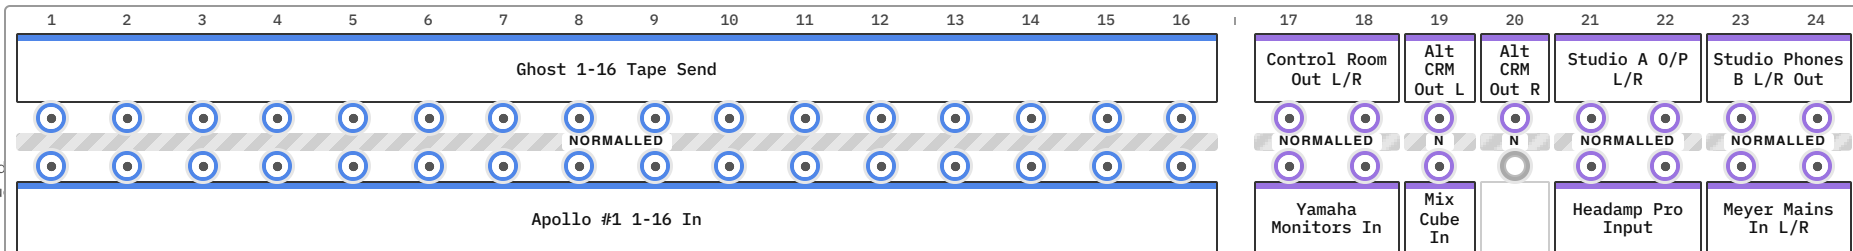


9

24 x 2
0 spare
22 normalled
0/44 rear plu

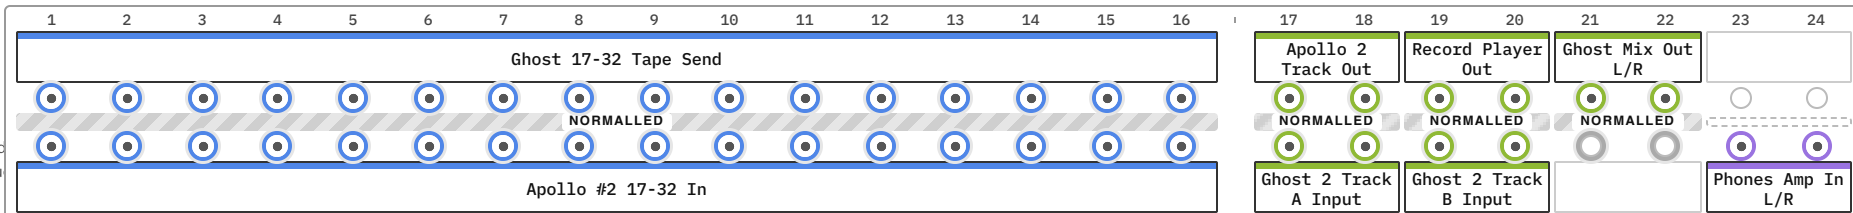

10

24 x 2
3 spare
0 normalled
0/42 rear plu

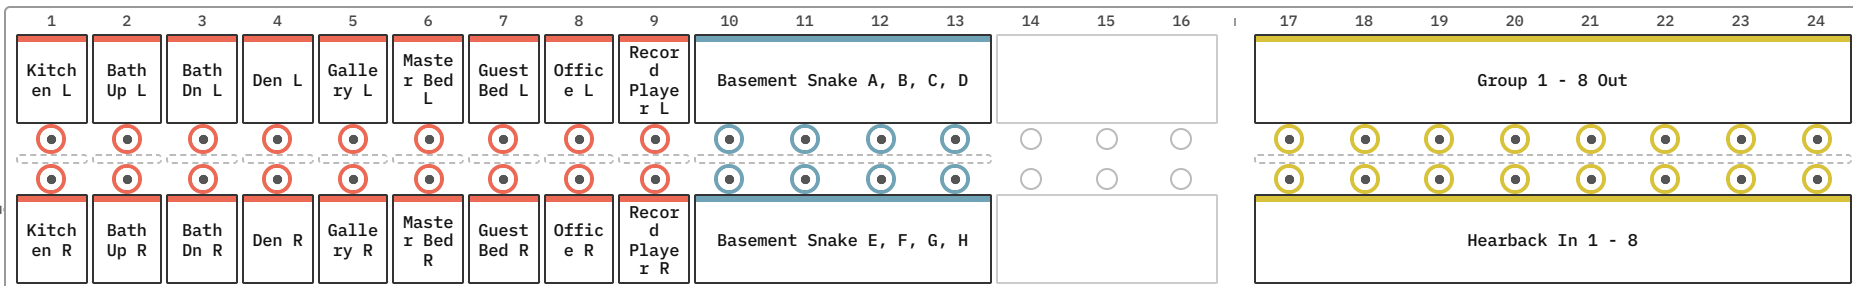

11 AMP RACK

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L / R Audio Source Out		DBX High Out L/R		DBX Mid Out L/R		DBX Low Out L/R																	
																							
NORMALLED		NORMALLED		NORMALLED		NORMALLED																	
																							
DBX Drive Rack L/R IN		High Amp In L/R		Mid Amp In L/R		Low Amp In L/R																	

ETHERNET

Diagram illustrating the network configuration for the 20 ports:

- Ports 1-8: Hearback Out 1-8 (Blue RJ45 ports)
- Port 9: Kitchen (Grey RJ45 port)
- Port 10: Bath Up (Grey RJ45 port)
- Port 11: Bath Dn (Grey RJ45 port)
- Port 12: Den (Grey RJ45 port)
- Port 13: Gallery (Grey RJ45 port)
- Port 14: Master Bed (Grey RJ45 port)
- Port 15: Guest Bed (Grey RJ45 port)
- Port 16: Office (Grey RJ45 port)
- Port 17: Record Player (Grey RJ45 port)
- Ports 18-20: Unlabeled (Grey RJ45 ports)

MIDI

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22

Reserved · MIDI patch bay - label it once the instruments are installed

POWER SWITCHES

Diagram of a 10-bay rack system:

Bay Number	Component
1	Monitors
2	
3	API 2500
4	D-Comp
5	dbx 902
6	PCM 60
7	SDE 1000
8	dbx 160 #1
9	dbx 160 #2
10	Headamp

RACK 1 · EQUIPMENT (20U)

U1	POWER CONDITIONER	
U2	SWITCH PANEL	Not on the patch bay
U3	APOLLO 16 #1 Replacing both Apollos with one 1U unit	Patch bay: Bay 6 · 1–16, Bay 8 · 1–16
U4	APOLLO 16 #2 Replacing both Apollos with one 1U unit	Patch bay: Bay 7 · 1–16, Bay 9 · 1–16
U5	API 2500 COMPRESSOR	Patch bay: Bay 1 · 15–16, Power Switches · 3
U6–7	D-COMP	Patch bay: Bay 1 · 19–20, Power Switches · 4
U8	DBX 902 DE-ESSER ×2	Patch bay: Bay 1 · 21–22, Power Switches · 5
U9	LEXICON PCM 60 REVERB	Patch bay: Bay 3 · 18, Bay 7 · 19–20, Power Switches · 6
U10	SDE 1000 DELAY	Patch bay: Bay 3 · 19, Bay 7 · 21–22, Power Switches · 7
U11–12	DBX 160 COMPRESSORS	Patch bay: Bay 1 · 12, 17–18, Power Switches · 8–9
U13	EMT REVERB REMOTE Could move	
U14	HEADPHONE AMP Could move	Patch bay: Bay 9 · 23–24
U15	HEADPHONE POWER SUPPLY	
U16	MIDI PATCH BAY	Patch bay: <u>Midi</u> · 1–22
U17	HEARBACK UNIT	Patch bay: Bay 10 · 17–24, Ethernet · 1–8
U18	ETHERNET PATCH BAY	Patch bay: <u>Ethernet</u> · 1–20
U19–20	SOUNDCRAFT GHOST POWER SUPPLY	

OPEN QUESTIONS

SOUNDCRAFT GHOST · CENTRE SECTION REAR

Every jack on the master section's rear panel, in the order the manual lists them - all ¼".
Grey means nothing on the patch bay carries it yet.

INPUTS	OUTPUTS	INSERTS
FX 1 L/R Bay 7 · 17–18	GRP 1-8 Bay 10 · 17–24	GRP INS 1-8 Bay 2 · 17–24
FX 2 L/R Bay 7 · 19–20	AUX 1-6 not patched	MIX INS L/R Bay 4 · 23–24
FX 3 L/R Bay 7 · 21–22	AUX 7 L/R not patched	
FX 4 L/R Bay 7 · 23–24	AUX 8 L/R Bay 4 · 17–18	
2TK A I/P L/R Bay 9 · 17–18	MIX O/P L/R Bay 9 · 21–22	
2TK B I/P L/R Bay 9 · 19–20	MIX B O/P L/R not patched	
	CRM O/P L/R Bay 8 · 17–18	
	ALT O/P L/R Bay 8 · 19	
	STU O/P A L/R Bay 8 · 21–22	
	STU PHNS B L/R Bay 8 · 23–24	

CABLE PULLS TO EACH ROOM

Two XLR sends, one XLR return and one Cat5 per room. Every XLR end is soldered onto its cable: pull it, solder the room end, solder the rack end, then patch it (Cat5 ends are terminated instead). Sends land on the patch bay as TRS; the returns stay in a loom on the floor, so they have nothing to patch — **156** steps in all. The destination is where the cable lands at the rack.

KITCHEN

		PULL	ROOM	CONSOLE	PATCH
Send L	XLR	☐	☐	☐	☐
Send R	XLR	☐	☐	☐	☐
Return	XLR	☐	☐	☐	—
Network	CAT5	☐	☐	☐	☐

Notes...

BATH UP

		PULL	ROOM	CONSOLE	PATCH
Send L	XLR	☐	☐	☐	☐
Send R	XLR	☐	☐	☐	☐
Return	XLR	☐	☐	☐	—
Network	CAT5	☐	☐	☐	☐

Notes...

BATH DN

		PULL	ROOM	CONSOLE	PATCH
Send L	XLR	☐	☐	☐	☐
Send R	XLR	☐	☐	☐	☐
Return	XLR	☐	☐	☐	—
Network	CAT5	☐	☐	☐	☐

Notes...

DEN

		PULL	ROOM	CONSOLE	PATCH
Send L	XLR	☐	☐	☐	☐
Send R	XLR	☐	☐	☐	☐
Return	XLR	☐	☐	☐	—
Network	CAT5	☐	☐	☐	☐

Notes...

GALLERY

		PULL	ROOM	CONSOLE	PATCH
Send L	XLR	☐	☐	☐	☐
Send R	XLR	☐	☐	☐	☐
Return	XLR	☐	☐	☐	—
Network	CAT5	☐	☐	☐	☐

Notes...

MASTER BED

		PULL	ROOM	CONSOLE	PATCH
Send L	XLR	☐	☐	☐	☐
Send R	XLR	☐	☐	☐	☐
Return	XLR	☐	☐	☐	—
Network	CAT5	☐	☐	☐	☐

Notes...

GUEST BED

		PULL	ROOM	CONSOLE	PATCH
Send L	XLR	☐	☐	☐	☐
Send R	XLR	☐	☐	☐	☐
Return	XLR	☐	☐	☐	—
Network	CAT5	☐	☐	☐	☐

Notes...

OFFICE

		PULL	ROOM	CONSOLE	PATCH
Send L	XLR	☐	☐	☐	☐
Send R	XLR	☐	☐	☐	☐
Return	XLR	☐	☐	☐	—
Network	CAT5	☐	☐	☐	☐

Notes...

RECORD PLAYER

		PULL	ROOM	CONSOLE	PATCH
Send L	XLR	☐	☐	☐	☐
Send R	XLR	☐	☐	☐	☐
Return	XLR	☐	☐	☐	—
Network	CAT5	☐	☐	☐	☐

Notes...

FRONT DECK

	PULL	ROOM	CONSOLE	CATCH
Speaker	SPEAKER	☐	☐	☐

Notes...

BACK DECK

	PULL	ROOM	CONSOLE	CATCH
Speaker	SPEAKER	☐	☐	☐

Notes...

REVERB · EMT PLATE

	PULL	ROOM	CONSOLE	CATCH
Send	XLR	☐	☐	☐
Return L	XLR	☐	☐	☐
Return R	XLR	☐	☐	☐

Motor control · 5-pin	CAT5	☐	☐	☐
-----------------------	-------------	--------------------------	--------------------------	--------------------------

Notes...

TO DO

0 of 3 done

- ☐ Find the screws for all the cover plates
- ☐ Gather every cover plate in one place
- ☐ Work out which rooms are missing cover plates - Kitchen and Guest Bed are, the rest unknown

Anything else...

MIDI HOOKUPS

0 of 11 connected

INSTRUMENT		PORT	PRIORITY	MIDI PATCH BAY
☐	Moog Sub 37	MIDI In	Required	Not assigned
		MIDI Out	Required	Not assigned
☐	Waldorf Streichfett	MIDI In	Required	Not assigned
		MIDI Out	Low priority	Not assigned
☐	MFB Tanzbar	MIDI In	Required	Not assigned
		MIDI Out	Low priority	Not assigned
☐	Sim n Tonic	MIDI In	Required	Not assigned
				Check which MIDI ports it has
☐	Oberheim OB-X8	MIDI In	Required	Not assigned
		MIDI Out	Required	Not assigned
☐	Oberheim OB-6	MIDI In	Required	Not assigned
		MIDI Out	Required	Not assigned