

STUDIO CARQUINEZ PATCH BAY

Front view, top of rack first. Left 16 ports: console buckets. Right 8: outboard, FX, monitoring. Generated 2026-09-23 from config.py.

Console core

Room sends

Tie lines

Outboard

Instruments & pedals

Aux sends & FX

Monitoring

2-track

Groups & mix bus

Amp rack

Network

Power

MIDI


Spare

Reserved

Rear not plugged in yet


Normalled

Not normalled

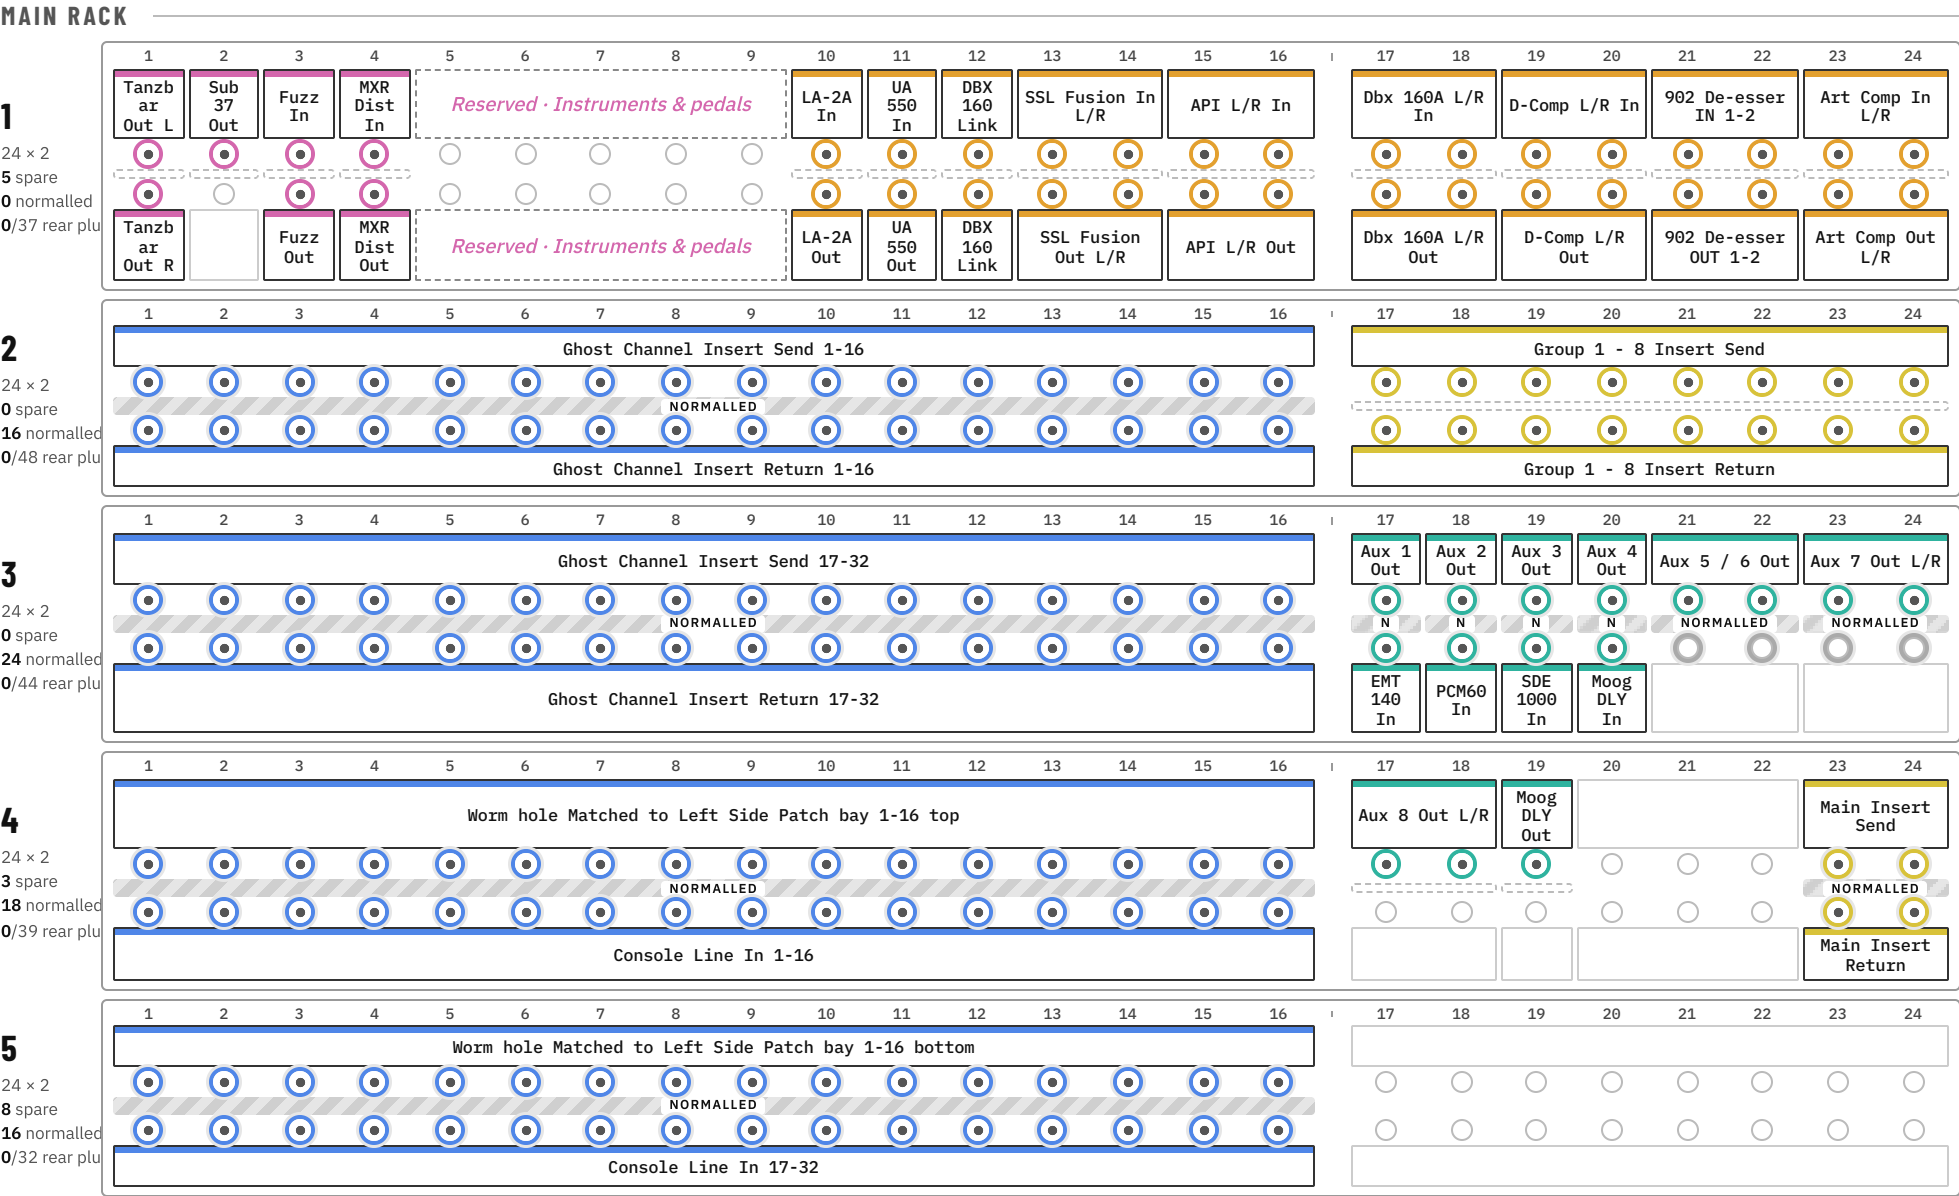


6

24 x 2
8 spare
16 normalled
0/32 rear plu

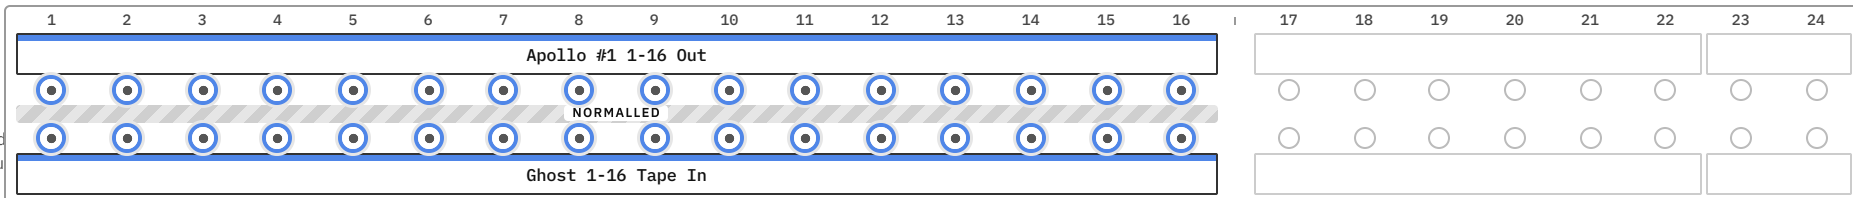


7

24 x 2
0 spare
22 normalled
0/46 rear plu

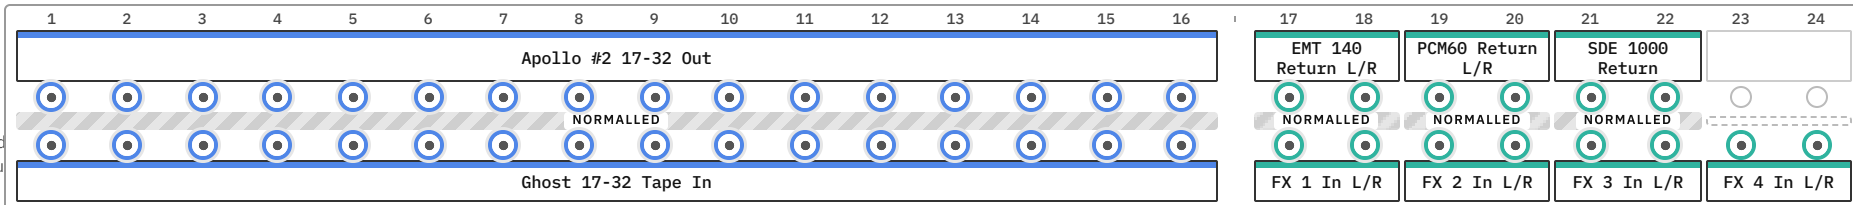


8

24 x 2
0 spare
24 normalled
0/47 rear plu

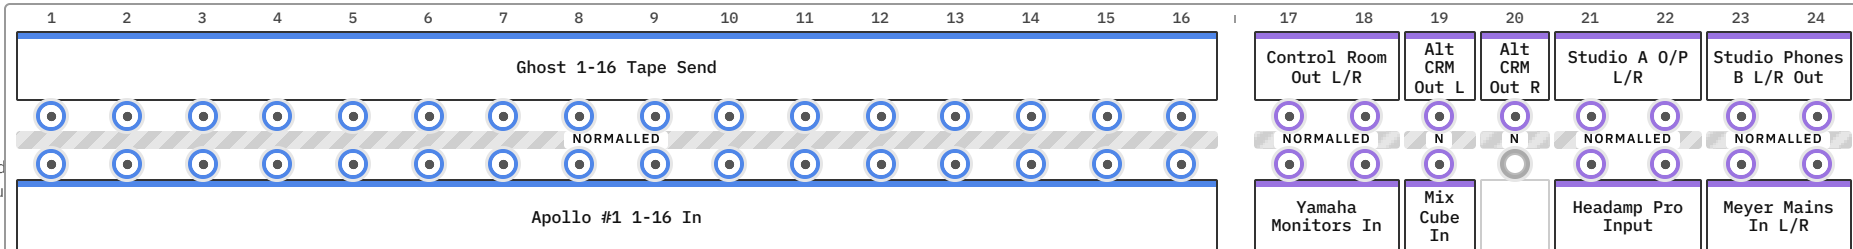


9

24 x 2
0 spare
22 normalled
0/44 rear plu

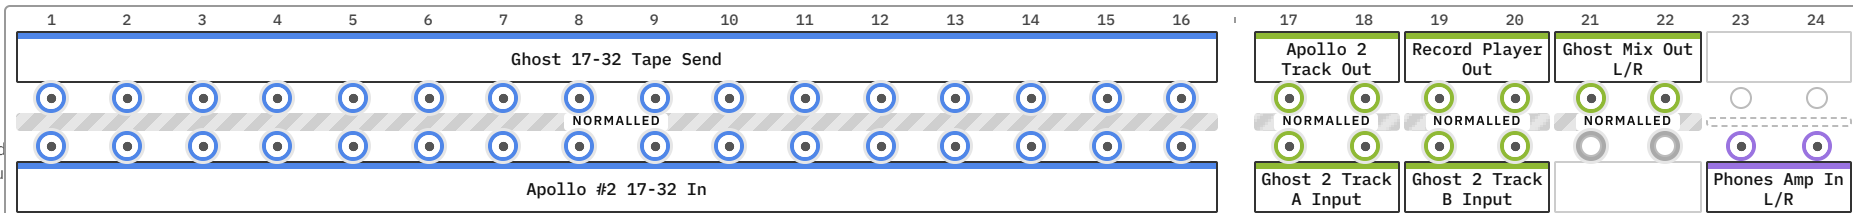


10

24 x 2
3 spare
0 normalled
0/42 rear plu

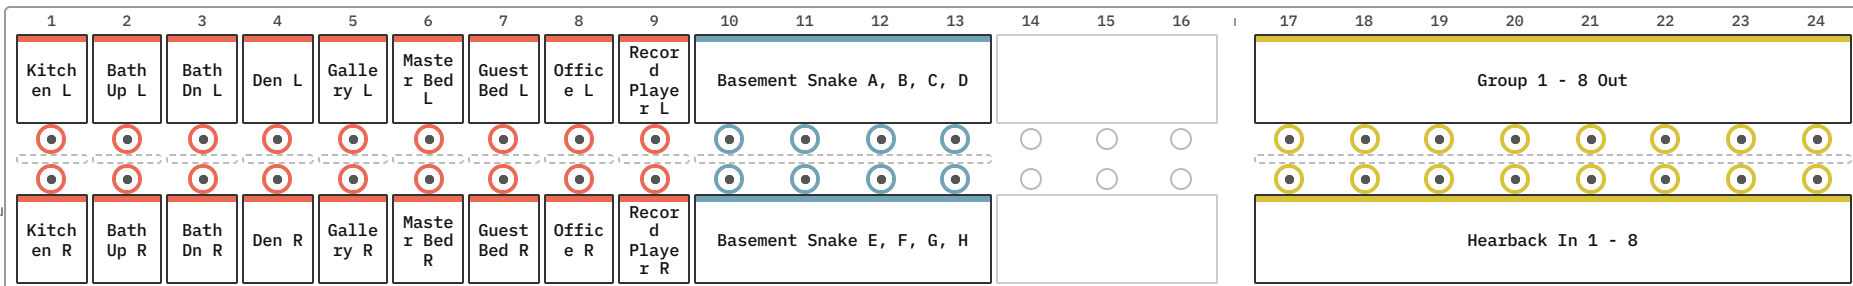


11 AMP RACK

24 x 2
16 spare
8 normalled
0/16 rear plu

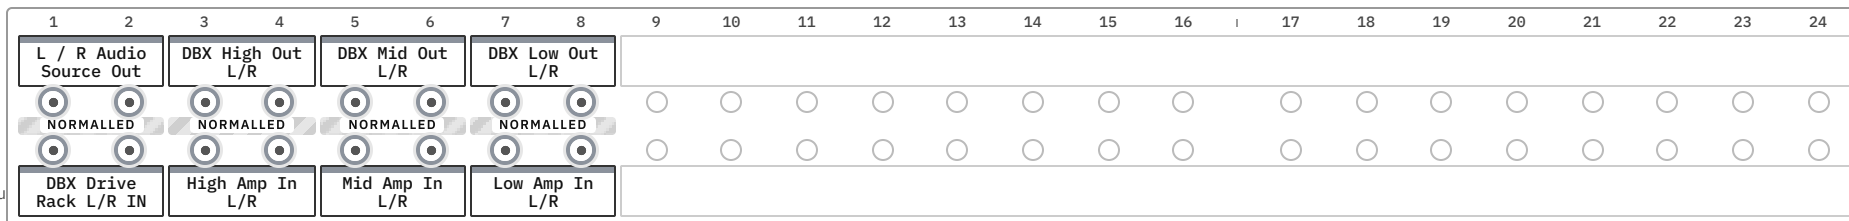

ETHERNET


Single row
2 spare
0/8 rear plug

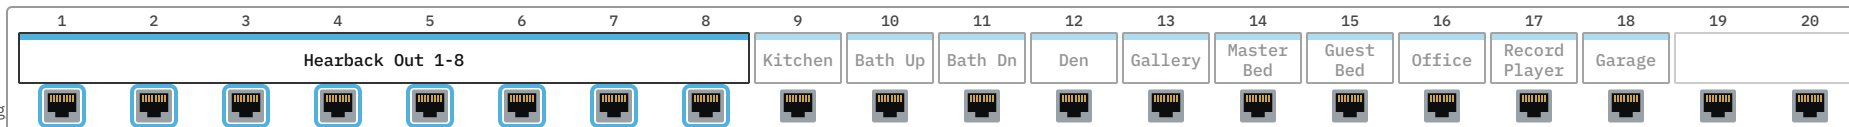

MIDI


Not in use

Single row
0 spare
0/22 rear plug

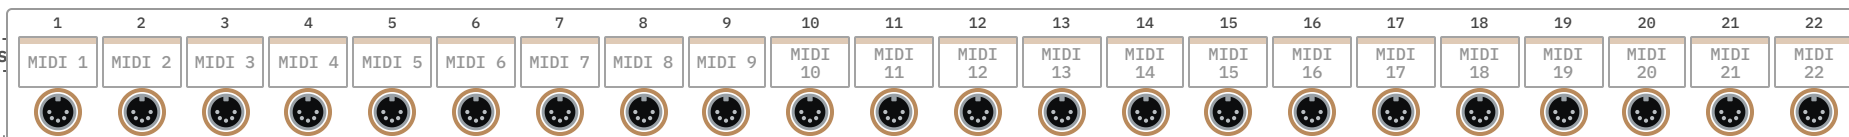

POWER SWITCHES

Single row
1 spare
0/9 rear plug

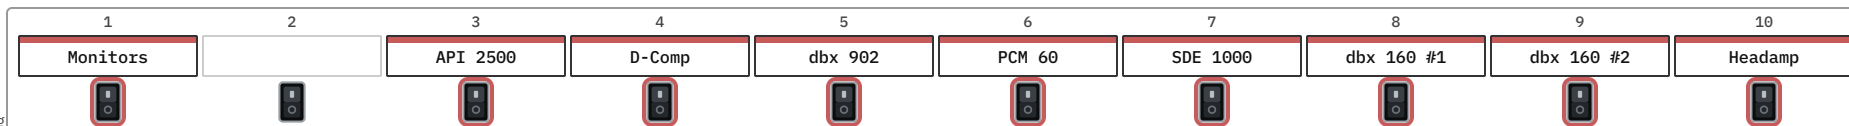

RACK 1 · EQUIPMENT (20U)

U1	POWER CONDITIONER	
U2	SWITCH PANEL	Not on the patch bay
U3	APOLLO 16 #1	Replacing both Apollos with one 1U unitPatch bay: Bay 6 · 1–16, Bay 8 · 1–16
U4	APOLLO 16 #2	Replacing both Apollos with one 1U unitPatch bay: Bay 7 · 1–16, Bay 9 · 1–16
U5	API 2500 COMPRESSOR	Patch bay: Bay 1 · 15–16, Power Switches · 3
U6–7	D-COMP	Patch bay: Bay 1 · 19–20, Power Switches · 4
U8	DBX 902 DE-ESSER ×2	Patch bay: Bay 1 · 21–22, Power Switches · 5
U9	LEXICON PCM 60 REVERB	Patch bay: Bay 3 · 18, Bay 7 · 19–20, Power Switches · 6
U10	SDE 1000 DELAY	Patch bay: Bay 3 · 19, Bay 7 · 21–22, Power Switches · 7
U11–12	DBX 160 COMPRESSORS	Patch bay: Bay 1 · 12, 17–18, Power Switches · 8–9
U13	EMT REVERB REMOTE	Could move
U14	HEADPHONE AMP	Could movePatch bay: Bay 9 · 23–24
U15	HEADPHONE POWER SUPPLY	
U16	MIDI PATCH BAY	Patch bay: <u>Midi</u> · 1–22
U17	HEARBACK UNIT	Patch bay: Bay 10 · 17–24, Ethernet · 1–8
U18	ETHERNET PATCH BAY	Patch bay: <u>Ethernet</u> · 1–20
U19–20	SOUNDCRAFT GHOST POWER SUPPLY	

OPEN QUESTIONS

CABLE PULLS TO EACH ROOM

Two XLR sends, one XLR return and one Cat5 per room. Every XLR end is soldered onto its cable: pull it, solder the room end, solder the rack end, then patch it (Cat5 ends are terminated instead). Sends land on the patch bay as TRS; the returns stay in a loom on the floor, so they have nothing to patch — **160** steps in all. The destination is where the cable lands at the rack.

KITCHEN

0/15

		PULL	ROOM	SOLDERED	PATCH
Send L	XLR	☐	☐	☐	☐
Send R	XLR	☐	☐	☐	☐
Return	XLR	☐	☐	☐	—
Network	CAT5	☐	☐	☐	☐

Notes...

BATH UP

0/15

		PULL	ROOM	SOLDERED	PATCH
Send L	XLR	☐	☐	☐	☐
Send R	XLR	☐	☐	☐	☐
Return	XLR	☐	☐	☐	—
Network	CAT5	☐	☐	☐	☐

Notes...

BATH DN

0/15

		PULL	ROOM	SOLDERED	PATCH
Send L	XLR	☐	☐	☐	☐
Send R	XLR	☐	☐	☐	☐
Return	XLR	☐	☐	☐	—
Network	CAT5	☐	☐	☐	☐

Notes...

DEN

0/15

		PULL	ROOM	SOLDERED	PATCH
Send L	XLR	☐	☐	☐	☐
Send R	XLR	☐	☐	☐	☐
Return	XLR	☐	☐	☐	—
Network	CAT5	☐	☐	☐	☐

Notes...

GALLERY

0/15

		PULL	ROOM	SOLDERED	PATCH
Send L	XLR	☐	☐	☐	☐
Send R	XLR	☐	☐	☐	☐
Return	XLR	☐	☐	☐	—
Network	CAT5	☐	☐	☐	☐

Notes...

MASTER BED

0/15

		PULL	ROOM	SOLDERED	PATCH
Send L	XLR	☐	☐	☐	☐
Send R	XLR	☐	☐	☐	☐
Return	XLR	☐	☐	☐	—
Network	CAT5	☐	☐	☐	☐

Notes...

GUEST BED

0/15

		PULL	ROOM	SOLDERED	PATCH
Send L	XLR	☐	☐	☐	☐
Send R	XLR	☐	☐	☐	☐
Return	XLR	☐	☐	☐	—
Network	CAT5	☐	☐	☐	☐

Notes...

OFFICE

0/15

		PULL	ROOM	SOLDERED	PATCH
Send L	XLR	☐	☐	☐	☐
Send R	XLR	☐	☐	☐	☐
Return	XLR	☐	☐	☐	—
Network	CAT5	☐	☐	☐	☐

Notes...

RECORD PLAYER

0/15

		PULL	ROOM	SOLDERED	PATCH
Send L	XLR	☐	☐	☐	☐
Send R	XLR	☐	☐	☐	☐
Return	XLR	☐	☐	☐	—
Network	CAT5	☐	☐	☐	☐

Notes...

FRONT DECK

0/3

	PULL	ROOM	SOLDERED	PATCH
Speaker	SPEAKER	☐	☐	—
Notes...				

BACK DECK

0/3

	PULL	ROOM	SOLDERED	PATCH
Speaker	SPEAKER	☐	☐	—
Notes...				

GARAGE (G1) · EMT PLATE

0/19

		PULL	ROOM	SOLDERED	PATCH
Send	XLR	☐	☐	☐	☐
Return L	XLR	☐	☐	☐	☐
Return R	XLR	☐	☐	☐	☐
Motor control	7-PIN	☐	☐	☐	—
Network	CAT5	☐	☐	☐	☐
Notes...					

MIDI HOOKUPS

0 of 11 connected

INSTRUMENT		PORT	PRIORITY	MIDI PATCH BAY
☐	Moog Sub 37	MIDI In	Required	Not assigned
		MIDI Out	Required	Not assigned
☐	Waldorf Streichfett	MIDI In	Required	Not assigned
		MIDI Out	Low priority	Not assigned
☐	MFB Tanzbar	MIDI In	Required	Not assigned
		MIDI Out	Low priority	Not assigned
☐	Sim n Tonic	MIDI In	Required	Not assigned
				Check which MIDI ports it has
☐	Oberheim OB-X8	MIDI In	Required	Not assigned
		MIDI Out	Required	Not assigned
☐	Oberheim OB-6	MIDI In	Required	Not assigned
		MIDI Out	Required	Not assigned