

## 1. Russian language pack:


File path: install/

名称	修改日期	类型	大小
rus	2021/8/11 12:59	文件	66 KB
eng	2021/8/11 12:59	文件	66 KB
parse.out	2021/8/11 12:50	PSpice Simulatio...	1,747 KB
pidMonitor.out	2021/8/11 12:50	PSpice Simulatio...	588 KB
msg2	2021/8/11 12:46	文件	18 KB
chs	2021/8/11 12:37	文件	75 KB
msg1	2021/5/17 9:45	文件	18 KB
msg	2021/5/17 7:34	文件	17 KB
testf2.nc	2021/4/30 9:55	Alphacam NC 程...	1 KB
testf5.nc	2021/4/28 11:34	Alphacam NC 程...	2 KB
testf4.nc	2021/4/28 11:33	Alphacam NC 程...	2 KB
slib-m.nc	2021/1/8 14:41	Alphacam NC 程...	31 KB
slib-g.nc	2020/12/24 14:59	Alphacam NC 程...	15 KB
gotozero.nc	2020/12/15 17:16	Alphacam NC 程...	1 KB

rus	Russian parameter configuration file
msg2	Russian interface character display configuration

E.g:

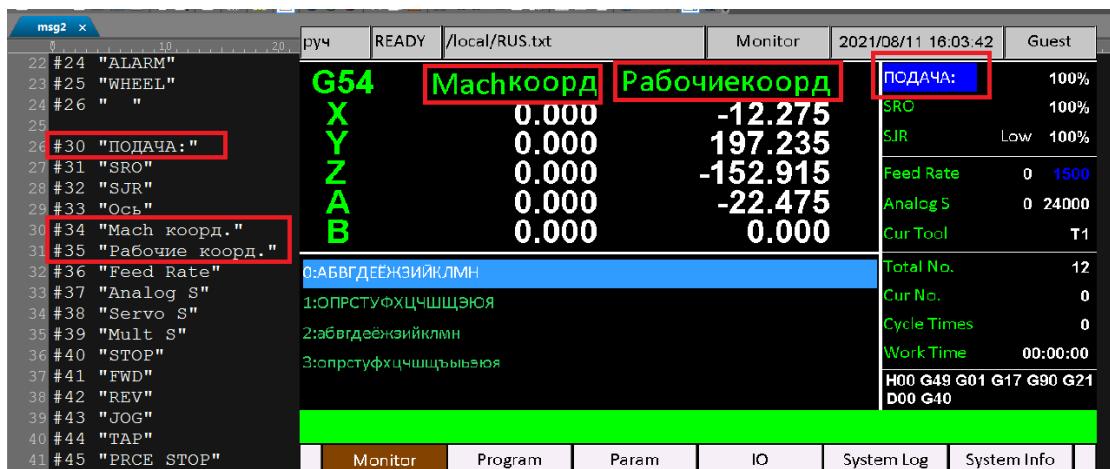

## 2. parameter settings

руч	READY	/local/RUS.txt	Param	2021/08/11 16:04:03	Super
Param List:		No.	Note	Value	
Machine		---	System		
Manual		0240	Language	Рус	
Process		0241	Enable buzzer feedback	Eng	
Spindle		0244	Enable realtime toolpath	中文	
IO		0245	Toolpath mode	Рус	
Home		0247	Interpolation period	B115200	
Probe		0248	LOGO display time	NULL	
Hard Limit		0266	Serial 1 baud rate	No	
Software limit		0267	Serial 1 baud rate	keyboard	
MPG		0268	External keyboard type	Local	
Backlash		0269	Debug printing enable	No	
Tools		0278	USB keyboard type		
System		0279	Barcode file location		
		0283	Barcode scanning processing		
		Range:	[0~2]	Active:	Immediately
		Details:	Reboot to take effect.	User:	Operator
	Param List	Search	Param Backup	Param Restore	